

Operator's manual

TruPunch 3000

Edition: 10/2006

Table of Contents

Chapter 1 Safety

1.	For your safety	1-3
2.	Terminology.....	1-4
3.	Operating safety	1-4
3.1	Use of the system in accordance with the regulations.....	1-5
3.2	Measures to be taken by the owner/operator	1-6
	Warning plates and warning instructions	1-6
	Operator training	1-8
	Care required when working with the system.....	1-8
	Correcting malfunctions during operation.....	1-11
	Use the replacement parts and working materials designed for this purpose	1-11
	Water protection.....	1-12
3.3	Measures to be taken by manufacturer	1-13
	Fuse protection for the danger zone of the system.....	1-13
4.	Overview of hazards	1-15
5.	Notes on laser safety	1-17
6.	Danger due to magnetic fields.....	1-18

Chapter 2 Installation conditions TruPunch 3000

	Who does what?	2-3
1.	Installation site	2-4
1.1	Space requirements	2-4
1.2	Floor requirements	2-4
1.3	Load indications	2-5
1.4	Ambient conditions.....	2-7

1.5	Air purity	2-7
2.	Electrical supply.....	2-8
2.1	Mains supply	2-8
	Isolating transformer	2-9
2.2	Connected loads, current intensity, Frequency	2-11
2.3	Teleservice	2-12
2.4	Network connection.....	2-12
3.	Compressed air supply	2-13
4.	Working materials	2-16
4.1	Working materials for hydraulics	2-16
4.2	Working materials for tool spray lubrication	2-16
4.3	Pallets for the SheetMaster (1303) (optional)	2-17
4.4	Workpieces	2-17
5.	Transport	2-18
5.1	Customer preparations for transporting the machines to the installation site	2-18
5.2	Unloading machine and transporting it to installation site.....	2-19
5.3	Installing machine and fastening it to the foundation.....	2-21
6.	Planning aid.....	2-22

Chapter 3 Description

1.	Machine concept.....	3-4
2.	Technical data	3-5
2.1	Layout.....	3-6
3.	The most important modules.....	3-7
3.1	Machine frame	3-7
3.2	Coordinate guidance with linear magazine	3-8
3.3	Drives	3-9
3.4	Machine table	3-10
3.5	Part removal	3-11
3.6	Punching head	3-12
4.	Tools.....	3-14

4.1	The tool system.....	3-14
4.2	Components of a tool set	3-17
	Punch	3-17
	Punch selection.....	3-18
	Alignment ring	3-20
	Die.....	3-21
	Stripper.....	3-22
	Stripper selection	3-23
4.3	Tool innovations	3-26
	MultiTools.....	3-26
	Tapping tools	3-29
	Clean cutting with MultiShear	3-31
	Press brake bending with MultiBend	3-32
	Quick beading	3-33
	Wheel tools	3-33
5.	Maximum capacity tables.....	3-34
5.1	Calculation formulae.....	3-34
5.2	Influencing factors	3-35
5.3	Punches	3-35
5.4	Dies	3-36
5.5	Stripper.....	3-37
5.6	Tabular overview.....	3-38
6.	Table of stroke rates	3-40
6.1	Influencing factors	3-40
6.2	Table overview: TruPunch 3000 (1300).....	3-41
	Standard tool.....	3-41
	Whisper tool.....	3-42
	Standard tool with active presser foot.....	3-43
	Long standard tool with active presser foot	3-44
	MultiTool.....	3-45
	Forming tool	3-46
6.3	Table overview: TruPunch 3000 (1600).....	3-47
	Standard tool.....	3-47
	Whisper tool	3-48
	Standard tool with active presser foot.....	3-49
	Long standard tool with active presser foot	3-50
	MultiTool.....	3-51
	Forming tool	3-52
7.	The control system technology	3-53
8.	Programming	3-55
8.1	Programming in the office with TruTops Punch.....	3-55
8.2	Programming on the machine using ToPs 2000.....	3-57

9.	The most important options	3-58
10.	Simple automation	3-59
10.1	Technical data	3-60
10.2	The automation components	3-61
	SheetMaster (1303)	3-61
	GripMaster with scissor table	3-65
10.3	Production plans	3-66

Chapter 4 Operation

Part 1: Operating devices	0-6
1. Operating devices not on the operating panel	0-6
2. Operating panel with color display	0-8
2.1 Operating devices for the machine	0-9
2.2 Operating devices for the control system.....	0-14
3. ASCII keyboard.....	0-18
4. Disk drive	0-20
Part 2: User interface	4-22
1. Structure of the user interface.....	4-22
1.1 Menu bar	4-22
1.2 Status bar	4-22
1.3 Message line	4-23
1.4 Softkey bar	4-24
1.5 Display area	4-24
2. Machine submodes.....	4-25
2.1 AUTOMATIC submode	4-25
2.2 MDA submode	4-26
2.3 JOG submode	4-26
3. Control system activity fields	4-27
4. Diagnostics	4-28
5. PRODUCTION activity.....	4-29

5.1	PRODUCTION Single job	4-29
5.2	PRODUCTION Production plan.....	4-34
5.3	NC program management in NC	4-36
5.4	PRODUCTION Machine components.....	4-38
5.5	PRODUCTION Program processing options	4-39
5.6	PRODUCTION Switch elements.....	4-40
	Operation of the switch elements	4-40
	General switch elements.....	4-41
	Switch elements H+L Diagnostics page 1	4-44
	Switch elements H+L Diagnostics page 2	4-45
	Switch elements H+L Diagnostics page 3	4-45
	Switch elements H+L Diagnostics page 4	4-46
	Switch elements GripMaster (optional).....	4-47
	Switch elements SheetMaster axes (optional).....	4-48
	Switch elements SheetMaster General (optional)	4-49
5.7	PRODUCTION Tables	4-51
	Load sheet	4-52
	Unload sheet.....	4-56
	Sheet technology	4-64
	Workpiece removal	4-66
	Repositioning	4-73
	Tool technology - Tapping	4-75
	Tool technology - Marking	4-77
	Tool technology - Forming.....	4-78
	Tool technology - Punching/general.....	4-79
	Tool technology - Quick beading.....	4-82
	Tool technology - Rotation bending	4-83
	Tool technology - MultiShear.....	4-84
	Tool technology - Roller tool.....	4-86
	Tool technology - Engraving.....	4-87
	Sheet lubrication	4-88
6.	SETUP activity	4-90
6.1	SETUP switch elements.....	4-90
	General switch elements.....	4-90
	Switch elements for punching	4-92
	Switch elements H+L Diagnostics page 1	4-93
	Switch elements H+L Diagnostics page 2	4-94
	Switch elements H+L Diagnostics page 3	4-94
	Switch elements H+L Diagnostics page 4	4-95
	GripMaster switch elements (optional)	4-96
	SheetMaster switch elements (optional).....	4-97
	Switch elements for peeling unit (optional)	4-99
6.2	SETUP Jog mode	4-101

6.3	SETUP MDA	4-102
7.	PROGRAMMING activity.....	4-104
7.1	NC Editor.....	4-104
7.2	PROGRAMMING Managing NC programs.....	4-105
7.3	PROGRAMMING File management	4-107
7.4	Send NC programs from program manager	4-110
8.	TOOLING activity	4-112
8.1	TOOLING Tool set-up list (autom.)	4-112
8.2	TOOLING Tool set-up list (manual)	4-113
	Setting up rails	4-113
8.3	Selecting NC programs	4-115
8.4	TOOLING Rail allocation.....	4-116
8.5	TOOLING Tools	4-118
	Required tools	4-118
	Tool change list.....	4-119
	General tool data	4-120
	Tool master data/status data	4-121
8.6	Explanation of the tool data.....	4-123
9.	MAINTENANCE/START-UP activity.....	4-127
9.1	MAINTENANCE/START-UP backup	4-127
9.2	MAINTENANCE / START-UP display.....	4-129
10.	DIAGNOSTICS activity field	4-130
10.1	DIAGNOSTICS fault diagnostics	4-130
10.2	DIAGNOSTICS I/O diagnostics	4-132
10.3	DIAGNOSTICS remote diagnostics	4-133
11.	Integrated MDC activity field (optional)	4-134
11.1	MDC message texts.....	4-134
11.2	Creating and modifying MDC message texts	4-135
11.3	Displaying and processing MDC machine data	4-137
11.4	Creating and modifying MDC interruptions	4-139
11.5	Evaluating MDC machine data	4-140
11.6	MDC display of the times in list form.....	4-142
11.7	Modifying MDC time.....	4-144
	Part 3: Machine operation	4-145
1.	Machine start-up and shutdown.....	4-148
1.1	Machine start-up	4-148
1.2	Switching off machine with malfunctions / in emergencies.....	4-149

1.3	Switching machine off	4-149
2.	Processing a program	4-150
2.1	Executing a program automatically	4-150
2.2	Processing program with softpunch (optional)	4-152
2.3	Releasing single stroke	4-153
2.4	Modifying forming depth	4-154
2.5	Stopping a program while processing	4-156
2.6	Canceling a program	4-157
2.7	Reentering a program	4-158
3.	Working with the production plan	4-160
3.1	Creating a production plan	4-160
3.2	Executing a production plan	4-161
3.3	Restarting execution of the production plan after a program has been canceled	4-163
4.	Moving the axes manually	4-164
5.	Releasing the drive brakes	4-165
5.1	Releasing the X and Y axes drive brakes	4-165
6.	Executing the lubrication cycle manually	4-166
7.	Diagnostic functions	4-167
7.1	Error diagnostics	4-167
7.2	Displaying inputs and outputs of the laser and machine	4-168
7.3	Remote diagnostics via pcANYWHERE	4-170
7.4	Inquiring about software version	4-171
8.	Managing master files	4-172
8.1	Uploading NC programs from disk drive	4-172
8.2	Uploading an NC program from hard disk	4-173
8.3	Outputting NC programs to the disk drive	4-174
8.4	Outputting NC programs to hard disk	4-175
8.5	Downloading a program part to disk drive	4-176
8.6	Deleting NC programs from the program manager	4-177
9.	NC program management	4-178
9.1	Displaying NC text	4-178
9.2	Editing NC text	4-179
	Searching for block in NC text	4-179
	Searching for function in an NC text	4-180
	Searching for and replacing a function in an NC text	4-181

Inserting a line.....	4-182
Copying and inserting a piece of text.....	4-183
Deleting pieces of text.....	4-184
10. Editing tables based on an NC text.....	4-185
11. TOOLING.....	4-187
11.1 Creating automatic tool table and loading tool rail.....	4-187
11.2 Loading and unloading tools manually.....	4-188
11.3 Correcting clamp positions.....	4-189
11.4 Removing active tool.....	4-190
11.5 Removing all tools.....	4-190
12. If problems arise	4-191
12.1 Removing stripper from punching head.....	4-191
Part 4: e-shop: acquiring replacement parts online	0-192
1. Start e-shop	0-192
1.1 Registering	0-192
1.2 Login.....	0-193
1.3 Storing customer data	0-193
2. Ordering replacement parts.....	0-194
2.1 Ordering from the Top Ten list.....	0-194
2.2 Direct ordering.....	0-195
2.3 Editing the shopping cart.....	0-196
2.4 Ordering a shopping cart.....	0-198

Chapter 5 Maintenance - Machine

1.	General guidelines	5-4
2.	Maintenance overview	5-5
3.	Lubrication.....	5-7
3.1	Lubrication chart.....	5-7
3.2	Lubrication agents.....	5-8
3.3	Maintenance guidelines	5-9
	Lengthwise and transverse guide	5-9
	Central lubrication	5-11
	Hydraulics	5-12
	Zero dead stop sensor (only TruPunch 3000 with automation).....	5-17
	Tool spray lubrication.....	5-18
	Spray lubrication die (optional)	5-23
	Lubricating unit - tapping (optional)	5-25
	Die clamping piston clamp.....	5-29
	Rail transverse carrier and table support.....	5-30
	Punch holder.....	5-31
4.	Hydraulic components	5-32
4.1	Overview	5-32
4.2	Depressurize the accumulator	5-33
4.3	Maintenance guidelines	5-35
	Hydraulic accumulator	5-35
	Hydraulic hoses	5-38
	Hydraulic unit	5-40
5.	Pneumatic components.....	5-43
5.1	Overview	5-43
5.2	Maintenance guidelines	5-44
	Air cushions (optional)	5-44
	Compressed air maintenance unit.....	5-45
6.	Mechanical components	5-47
6.1	Overview	5-47
6.2	Maintenance guidelines	5-48
	Punching tool adapter.....	5-48
	Vacuum system: Side channel blower.....	5-48

	Vacuum system: Vacuum pipe	5-50
	Vacuum system: Chip flap	5-52
	Entire vacuum system.....	5-53
	Tool cartridge support slat	5-56
	Clamps	5-57
	Racks and guide rails.....	5-58
	Index pin(s)	5-58
	Brush field segmental table, parts flap and brush table (optional)	5-59
	Brush field segmental tables.....	5-60
7.	Electrical components	5-61
7.1	Overview	5-61
7.2	Maintenance guidelines	5-62
	Switch cabinet.....	5-62
	Light barrier and light barrier parts flap (optional)	5-66
	Inductive proximity switch	5-67
	Sensor system stripper sensor	5-67
	Control panel.....	5-69
8.	What to do when a collision occurs.....	5-70
9.	Handling the setting device	5-71
9.1	Allocation of the punch to the alignment ring.....	5-71
9.2	Determining the tool length	5-73
10.	Regrinding tools.....	5-74
10.1	Compensating the regrinding amount.....	5-75

Chapter 6 Maintenance - Automation

1.	General guidelines	6-3
2.	Maintenance overview.....	6-4
3.	Lubrication.....	6-6
3.1	Lubrication chart for SheetMaster (1303) with GripMaster	6-6
3.2	Lubricant	6-7
3.3	Maintenance instructions	6-8
	X axis guide strip on SheetMaster (1303).....	6-8



	Carrier suction cup support column on SheetMaster (1303)	6-8
	Safety device on the vacuum frame on SheetMaster (1303)	6-9
	Sheet thickness gauge guide rods on SheetMaster (1303)	6-10
	Manual central lubrication of the SheetMaster (1303)	6-11
	X axis feedgear on SheetMaster (1303)	6-13
	Z axis feedgear on SheetMaster (1303)	6-13
	Guide rails on GripMaster	6-14
	Grippers on GripMaster	6-15
4.	Pneumatic components	6-16
4.1	Overview	6-16
4.2	Maintenance instructions	6-17
	Pressure regulator	6-17
	Vacuum hoses in the suction frame	6-19
	Filter in the suction cup vacuum fastenings	6-20
	Pneumatic bellows cylinder on the scissor table	6-21
	Pneumatic hoses on the scissor table	6-21
5.	Mechanical components	6-22
5.1	Overview	6-22
5.2	Maintenance instructions	6-23
	Doweling of SheetMaster (1303) and GripMaster	6-23
	Vacuum cups on SheetMaster (1303)	6-24
6.	Electrical components	6-27
6.1	Overview	6-27
6.2	Maintenance instructions	6-28
	Switch cabinet of SheetMaster (1303)	6-28
	Light barrier on the scissor table	6-30

Chapter 7 Noise level test report, TruPunch 3000

1. Test certificate	7-2
2. Measuring results	7-3
3. Reference work piece	7-4
4. Position of the measuring points	7-5

Chapter 8 Aligning Leuze lumiflex safety light barriers

1. Leuze lumiflex safety light barriers	8-2
2. Installing the deflecting mirror columns	8-3
3. Aligning the deflecting mirror columns	8-5
3.1 Aligning the upper light axis	8-5
3.2 Adjusting the lower light axis	8-8
4. Aligning the receiver	8-8

Supplement to the operating manual

Stripper selection Punch and multi-purpose machines

Table of Contents

1.	Stripper selection.....	6
1.1	Table 1: Short, flat punch.....	9
1.2	Table 2: Long, flat punch.....	10
1.3	Continuation of table 2.....	11
1.4	Table 3: Angle-sheared punch.....	12
2.	Stripper selection examples	13
2.1	Example 1	13
	Steps 1 to 5 for the selection	14
2.2	Example 2	15
	Steps 1 to 5 for the selection	16
2.3	Example 3	17
	Steps 1 to 5 for the selection	18