

CNC LATHE
LH35-N

with OSP5020L/OSP5000L-G CNC SYSTEM

OPERATION & MAINTENANCE MANUAL
(5th Edition)

TABLE OF CONTENTS

	Page
SECTION 1 INTRODUCING YOUR NC LATHE	1
SECTION 2 MACHINE SPECIFICATIONS	2
2—1 Specifications and Accessories	2
2—2 Specifications Diagram	3
SECTION 3 MAKING THE MOST OF YOUR NC LATHE	7
3—1 NC Operation	7
3—2 Machine Operation	8
SECTION 4 MAINTAINING YOUR NC LATHE IN THE BEST CONDITION — REGULAR INSPECTION AND MAINTENANCE OF MACHINE	31
4—1 Lubrication	33
4—2 Cleaning the Filter	41
4—3 Precautions on Using Hydraulic Power Chuck	42
4—4 Hydraulic Power Unit	45
4—5 Belt Tension Adjustment	49
4—6 Levelling DC Motor Base	50
4—7 Other Maintenance Items	50
SECTION 5 HANDLING AND INSTALLATION OF MACHINE	56
5—1 Care in Handling a Precision Machine	56
5—2 Foundation Requirements	61
5—3 General Procedure for Installation	62
5—4 Levelling the Machine	67
5—5 Electric Wiring and Hydraulic Piping	68
SECTION 6 SPARE PARTS LIST	71
6—1 Hydraulics	71
6—2 Electrical (Machine Mounted)	72
6—3 Consumables	73
SECTION 7 TROUBLESHOOTING FOR SIMPLE MECHANICAL FAILURE ...	74
7—1 Headstock	74
7—2 Chuck and Pedal	76
7—3 Carriage	77
7—4 X-and Z-axis Drives	79
7—5 H4 and V6 Turrets	80
7—6 H6 Turret	87
7—7 Coolant Pump Equipment	94
7—8 Repair Procedures	95

	Page
7-9 Correction Method of H4 Turret Accuracy	98
7-10 Correction Method of H6 Turret Accuracy	100
SECTION 8 TOOLING AND TECHNICAL DATA	102