

Σ-II SERIES AC SERVOPACK SGDH INSTRUCTIONS

Type : SGDH- □E

Upon receipt of the product and prior to installing the product, read these instructions thoroughly, and retain for future reference.



YASKAWA

株式会社 安川電機

資料番号 (MANUAL NO.) TOB-S800-32C

CONTENTS

Σ-II SERIES AC SERVOPACK	E - 1
SYMBOLS FOR SAFE OPERATION	E - 4
NOTES FOR SAFE OPERATION	E - 5
1 PARTS	E - 7
2 CHECKING ON DELIVERY	E - 7
2.1 Checking Items	E - 7
2.2 Appearance and Nameplate	E - 8
2.3 Type Designation	E - 8
3 INSTALLATION	E - 9
3.1 Storage	E - 9
3.2 Installation Sites	E - 9
3.3 Orientation	E - 10
3.4 Installation Precautions	E - 10
4 WIRING	E - 11
4.1 Connecting to Peripheral Devices	E - 12
4.2 Grounding Wire	E - 15
4.3 Power Supply	E - 15
4.4 Noise Control	E - 16
5 OPERATION	E - 16
5.1 Precautions at Test Run	E - 16
5.2 Precautions at Operation	E - 17
6 INSPECTION AND MAINTENANCE	E - 17
6.1 SERVOPACK	E - 18
6.2 Replacing Battery for Absolute Encoder	E - 19

7 INSTALLATION CONDITIONS OF EMC DIRECTIVE E - 19

7.1 Installation Conditions under EMC Directive E - 19

7.2 The Core on the Cable and Cable Clamp E - 24

8 PERIPHERAL DEVICE E - 25

8.1 Peripheral Device Types and Capacities E - 25

8.2 Noise filter for brake power supply E - 27

8.3 Cable specifications E - 27

8.4 Recommendable ferrite core types E - 27

8.5 Shield Box E - 27