

LEGACY CNC 88 OPERATOR MANUAL



FADAL MACHINING CENTERS, LLC
support@fadal.com
20701 Plummer Street, Chatsworth, California 91311 USA

TABLE OF CONTENTS

1.0 POWER ON/OFF	1
1.1 PRESTART UP CHECKS	2
1.2 POWER ON	3
1.3 POWER OFF PROCEDURE	4
1.4 AUTOMATIC COLD START	5
1.5 WRONG POWER OFF PROCEDURE	6
1.6 AUTO STARTUP PROGRAM.....	7
2.0 PENDANT/REMOTE	9
2.1 SWITCHES	10
2.1.1 VIDEO SWITCH.....	10
2.1.2 LIGHT SWITCH	10
2.1.3 OPTIONAL STOP SWITCH.....	10
2.1.4 BLOCK SKIP SWITCH.....	11
2.2 EMERGENCY STOP	11
2.3 RAPID TRAVEL SELECTOR.....	13
2.4 FEED RATE OVERRIDE POTENTIOMETER	13
2.5 SPINDLE SPEED OVERRIDE POTENTIOMETER.....	13
2.6 AXIS SELECTOR.....	14
2.7 INCREMENT SELECTOR	14
2.8 KEYBOARD	14
2.8.1 START	14
2.8.2 AUTO	15
2.8.3 MANUAL	15
2.8.4 SHIFT.....	16
2.8.5 SINGLE STEP.....	16
2.8.6 JOG.....	16
2.8.7 SPINDLE ON/OFF	17
2.8.8 SLIDE HOLD.....	17
2.8.9 COOLANT-1 (FLOOD).....	17
2.8.10 COOLANT-2 (MIST).....	17
2.8.11 TOOL IN/OUT	18
2.8.12 TURRET CW.....	18
2.8.13 TURRET CCW.....	18
2.8.14 BACKSPACE	18
2.8.15 ENTER.....	18

2.8.16 DELETE.....	18
2.8.17 SPACEBAR, BACKGROUND EDITING.....	19
2.9 KEY LOCK.....	20
2.10 REMOTE HAND UNIT.....	21
2.10.1 REMOTE EMERGENCY PUSH BUTTON.....	21
2.10.2 REMOTE INCREMENT SELECTOR.....	22
2.10.3 REMOTE AXIS SELECTOR.....	22
2.10.4 TOOL IN/OUT.....	22
2.10.5 REMOTE MPG.....	22
2.11 ALTERNATE NOEDIT FEATURE.....	22
2.12 POSITION READ-OUT DISPLAY.....	22
2.13 AXIS LOAD DISPLAY.....	23
2.14 MANUAL DATA INPUT DISPLAY.....	23
2.15 LARGE FORMAT DISPLAY.....	24
2.16 MODES.....	24
2.17 MENUS.....	24
2.17.1 QUICK KEYS MENU.....	25
2.17.2 EDIT MENU.....	25
2.17.3 FUNCTIONS MENU.....	25
2.18 USING THE COMMAND MODE.....	25
2.19 CURSOR IN THE COMMAND MODE.....	26
2.20 USING THE MENU MODE.....	27
2.20.1 METHOD 1.....	27
2.20.2 METHOD 2.....	27
2.20.3 METHOD 3.....	27
3.0 JOG MODE.....	29
3.1 JOG USING THE MANUAL PULSE GENERATOR.....	30
3.2 JOG USING THE KEYBOARD.....	30
3.3 JOG USING THE REMOTE MANUAL PULSE GENERATOR.....	31
3.4 JOG USING THE VECTOR JOG FOR 5 AXIS HEAD.....	32
3.5 SINGLE STEP, JOG AWAY FROM.....	32
3.6 SLIDE HOLD, JOG AWAY FROM.....	33
3.7 WAITING STAGE, JOG AWAY FROM.....	34
4.0 RUN MODE.....	37
4.1 AUTO, RUNNING A PROGRAM.....	38
4.1.1 FORMAT 1.....	38
4.1.2 FORMAT 2.....	38

4.2 WAITING.....	38
4.3 CHANGING MODES.....	39
4.4 MANUAL PULSE DRY RUN.....	40
4.5 DRY RUN.....	40
4.6 SINGLE STEP.....	41
4.7 SLIDE HOLD.....	42
4.8 MID-TAPE (PROGRAM) START.....	42
5.0 FORMATS	45
5.1 FORMATS.....	46
5.1.1 FORMAT 1.....	46
5.1.2 FORMAT 2.....	46
5.2 CHANGING PARAMETERS.....	47
5.3 SAVING PARAMETERS.....	47
5.4 FORMAT 1 PARAMETER SETTINGS.....	48
5.5 FORMAT 2 PARAMETER SETTINGS.....	49
5.6 FORMAT 1 PROGRAM EXAMPLE #1.....	50
5.7 FORMAT 1 PROGRAM EXAMPLE #2.....	51
5.8 NOTES ON FORMAT 1 STYLE PROGRAMMING:.....	53
5.9 FORMAT 2 PROGRAM EXAMPLE.....	54
5.10 NOTES ON FORMAT 2 STYLE PROGRAMMING:.....	55
5.11 VIEWING THE SOFTWARE ID NUMBER.....	57
6.0 SPINDLE.....	59
6.1 MANUAL OPERATIONS.....	60
6.1.1 MANUALLY LOADING AND UNLOADING A HOLDER.....	60
6.2 SPINDLE, RPM ESTABLISHED FROM MDI.....	60
6.3 USING THE SPINDLE ON/OFF.....	62
6.3.1 SPINDLE ON.....	62
6.3.2 SPINDLE OFF.....	62
6.4 SPINDLE, LOADING A HOLDER FROM THE ATC.....	62
6.5 SPINDLE, UNORIENT TO TURN BY HAND.....	63
6.6 SPINDLE, ORIENT.....	63
6.6.1 METHOD 1.....	63
6.6.2 METHOD 2.....	63
6.6.3 METHOD 3.....	63

6.7 SPINDLE REVERSED WHILE USING JOG	64
7.0 TOOL CHANGER	65
7.1 ATC	66
7.1.1 TURRET (ATC), OPEN FOR LOADING; USING THE TC,1 COMMAND	66
7.1.2 TOOL CHANGER CRASH.....	66
7.1.3 TURRET LOADING, PUTTING TOOLS IN THE TOOL CHANGER.....	66
7.1.4 TURRET (ATC), ESTABLISH TOOL ORDER; USING THE SETTO COMMAND.....	67
7.2 DATC.....	68
7.2.1 SOFTWARE & MECHANICAL TEST	68
7.2.2 SET-UP.....	69
7.2.3 TOOL LOADING PROCEDURES.....	70
7.2.4 OPERATION.....	71
8.0 COOLANT.....	73
8.1 USING THE COOLANT 1 AND COOLANT 2 KEYS.....	74
8.2 COOLANT-THROUGH SPINDLE	74
9.0 COMMANDS.....	75
9.1 COMMAND USE SUMMARY.....	77
9.2 VIEWING ERROR MESSAGES.....	78
9.3 AU COMMAND.....	78
9.4 BL COMMAND	79
9.5 CD COMMAND	80
9.6 CH COMMAND	81
9.7 CO COMMAND	84
9.8 CS COMMAND.....	85
9.8.1 COLD START	85
9.9 DE COMMAND.....	85
9.10 DNC COMMAND	85
9.11 DIRECT NUMERICAL CONTROL, USING A SERVER PROGRAM	86
9.12 FO COMMAND.....	87
9.12.1 FIXTURE OFFSETS, USING THE FO COMMAND	87
9.12.2 FIXTURE OFFSETS, USING THE UT COMMAND.....	89
9.13 VIEWING THE FIXTURE OFFSET TABLE.....	91
9.14 CHANGING THE FIXTURE OFFSET INFORMATION	91
9.15 IN COMMAND	92
9.16 LE COMMAND	94

9.17 LI COMMAND	95
9.18 MD COMMAND.....	96
9.18.1 MANUAL DATA INPUT.....	96
9.18.2 FORMAT 1.....	96
9.18.3 FORMAT 2.....	96
9.19 ME COMMAND.....	97
9.19.1 MEMORY FREE, USING THE ME COMMAND	97
9.20 NE COMMAND	97
9.21 NU COMMAND	98
9.22 PA COMMAND	98
9.23 PROGRAM EDITING USING PA.....	99
9.24 BACKGROUND EDIT	99
9.25 TO LIST THE PROGRAM	100
9.26 TO INSERT BETWEEN LINES	100
9.27 TO SEARCH THE PROGRAM	101
9.28 TO CHANGE A LINE	101
9.29 TO DELETE A LINE.....	102
9.30 TO RUN A SINGLE LINE FROM THE PROGRAM	102
9.31 TO DO A DIRECT MID-PROGRAM START	102
9.32 PR COMMAND	103
9.33 TO USE THE PROGRAM LIBRARY MENU:.....	104
9.34 RI COMMAND.....	104
9.35 USING THE SETTO COMMAND.....	105
9.35.1 TURRET (ATC), ESTABLISH TOOL ORDER; USING THE SETTO COMMAND.....	105
9.36 SETP COMMAND.....	106
9.37 CS COMMAND	106
9.37.1 POSITION (PART), ESTABLISH; USING THE SET(AXIS) COMMAND	106
9.38 ESTABLISHING PART HOME USING AN EDGE FINDER:.....	106
9.39 ESTABLISHING PART HOME USING AN INDICATOR:	107
9.40 SETH COMMAND.....	108
9.41 SL COMMAND.....	109
9.42 TOOL LENGTH OFFSETS, PURPOSE AND USE IN PROGRAM	110
9.43 SP COMMAND	111
9.44 SU COMMAND	112

9.45 TA COMMAND	115
9.46 ADDING A PROGRAM TO THE END OF THE PROGRAM IN MEMORY	116
9.47 OUTPUT, TO TAPE PUNCH OR COMPUTER.....	116
9.48 TC,1 COMMAND.....	117
9.48.1 TURRET (ATC), OPEN FOR LOADING.....	117
9.49 TOOL CHANGER CRASH	118
9.50 TURRET LOADING, PUTTING TOOLS IN THE TOOL CHANGER	118
9.51 TO COMMAND.....	119
9.51.1 TOOL DIAMETER INPUT, USING THE TO COMMAND	119
9.51.2 TO VIEW THE TOOL TABLE	119
9.52 UT COMMAND.....	119
9.52.1 UTILITY OPTION - UT SETTING TOOL LENGTH OFFSETS	119
9.52.2 TO CLEAR THE TOOL TABLE AND ESTABLISH TOOL ORDER.	120
9.53 VT COMMAND	122
9.54 CNC 88HS GRAPHICS MENU	122
9.55 PLOTTING OPTIONS	123