

MESSRS. MATSUSHITA REFRIGERATION
COMPANY (M) SDN, BHD.
2 POINTS CRANK MOTION PRESS
F T 2 - 5 0 0 G
INSTRUCTION MANUAL
(1/4)

DATE 1992. 6.

お使いになる前に必ずこの取扱説明書を読み、正しい
操作を理解し、安全な作業をしていただくことを願って
おります。

Before using the press, please read this Instruction
Manual to familiarize yourself with the correct
operating procedure.

AIDA ENGINEERING, LTD.

CONTENTS

A. SPECIFICATION

1. General	A1
2. Specification	A2
Press General View	A2-13
VF General view	A2-14
3. Diagram	A3
Tonnage curve	A3-1
Timing diagram	A3-2
Interference diagram	A3-3

B. OPERATION

1. Safety operation	B1
2. Working capacity	B2
3. Daily and weekly inspection	B3
4. Lubrication	B4
Lubrication table	B4-3
List of lubrication on the market	B4-4
5. Air supply	B5
6. Operation	B6
6.1 Control enclosure and operating panel	B6-1
6.2 Power source	B6-4
6.3 Lubrication and pneumatic system	B6-6
6.4 Main motor	B6-7
6.5 Prss operation	B6-10
Conditions of press run	B6-13
6.6 Spare number	
6.7 Product counter	B6-17
6.8 Slide adjustment	B6-18
6.9 Guard	B6-20
6.10 Die cushion	B6-21
6.11 Transfer feeder	B6-22
Feed monitor	B6-24

CONTENTS

6.12	Die changing device	B6-35
6.13	Spare number	
6.14	Interlock message on O.D.	B6-38
	Operating panel	B6-42
7.	Adjustment	B7
	Instruction manual for Timing switch	B7-1
	Overload protector	B7-31
	Adjustment of preset stop position	B7-36
8.	Adjusting of Automation equipment	B8
	Feed bar check	B8-1
	Torque releaser	B8-3

C. MAINTENANCE

1.	Installation	C1
2.	Preparation prior to operation	C2
3.	Check points at trial run	C3
4.	Periodical inspection	C4
5.	Construction and maintenance	C5
	Replacement of V belt	C5-1
	Clutch	C5-3
	Brake	C5-10
	Balancer	C5-13
	Slide gib adjustment	C5-18
	Die cushion	C5-21
	Main drive	C5-25
	Flywheel brake	C5-26
	Slide	C5-27
	Slide point	C5-28
	Knockout cylinder	C5-29

CONTENTS

6. Maintenance of Air pressure and	
Oil pressure appliance	C6
SK-214 Lubricationg pump (Manual type)	C6-1
TOTAL LUB	C6-4
Suction filter	C6-12
Auto drain filter	C6-14
Pressure switch	C6-15
Solenoid valve for clutch and brake	C6-16
7. Maintenance of Electric device	C7
8. Spare number	
9. Parts list	C9
10. Spare parts list	C10