

NT20M/NT2000M

Programmable Terminal

OPERATION MANUAL

OMRON

NT20M/NT2000M Programmable Terminal

Operation Manual

Revised September 1993

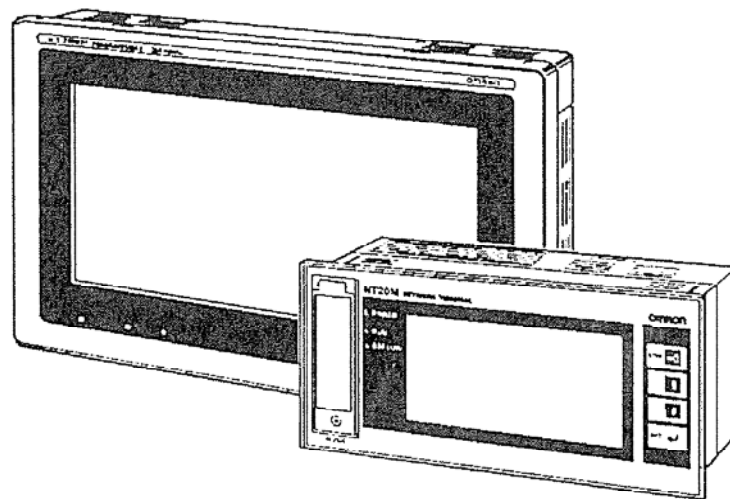


TABLE OF CONTENTS

SECTION 1

Introduction	1
1-1 Introduction	2
1-2 Features	2
1-3 NT-series Terminology	3
1-4 Models	4
1-5 Support Tool	6
1-6 System Configuration	6
1-7 Nomenclature and Functions	8

SECTION 2

Settings and Installation	13
2-1 Switch Settings	14
2-2 Installation Environment	16
2-3 Dimensions	17
2-4 Installing in a Panel	18
2-5 Wiring and Connectors	21
2-6 RS-232C Interface Connector	26
2-7 Mounting Function Key Units (to DN-type PTs)	27

SECTION 3

Initial Operation	29
3-1 Powering Up	30
3-2 Initialization	30
3-3 Transferring Data to and from the Support Tool	32
3-4 Initial Settings	33

SECTION 4

Display Functions	35
4-1 Character Displays on Screen	36
4-2 Normal Screen Changes	36
4-3 Continuous Screens	37
4-4 Overlapping Screens	38
4-5 Numeric Displays	39
4-6 Character Strings	40
4-7 Bar Graphs	41
4-8 Lamps	41
4-9 Graphics Display	42
4-10 Special Controls	42

SECTION 5

Input Functions	45
5-1 On-screen Switch Inputs	46
5-2 Inputting Numeric Settings	47
5-3 Standalone Function	50

SECTION 6

System Menu	51
6-1 Configuration of System Menu	52
6-2 System Menu	53
6-3 Maintenance Mode	53
6-4 Memory Switch Settings	60

SECTION 7

Online Transfer 63

- 7-1 Transferring Screen Data 64
- 7-2 Host to PT 64
- 7-3 PT to Host 64
- 7-4 Online Transmission and Resume Function 65

SECTION 8

Maintenance and Inspection 67

- 8-1 Checking Operation 68
- 8-2 Changing the Lithium Backup Battery 69
- 8-3 Replacing the Backlight 70
- 8-4 Maintenance and Inspection 71

Appendices 73

- A. Standard Models 73
- B. Specifications 75