

# INSTRUCTION MANUAL

OGM-8 SERIES

OGM-12 SERIES

**Okamoto**

TABLE OF CONTENTS

Foreword	ii
<b>1. GENERAL DESCRIPTION</b>	<b>1-1</b>
<b>2. SPECIFICATIONS</b>	<b>2-1</b>
2-1 Specifications - Machine	2-1
2-2 Specifications - NC Unit	2-2
2-3 General Drawing	2-3
2-4 Standard Accessories	2-5
<b>3. NAMES OF PARTS</b>	<b>3-1</b>
<b>4. TRANSPORTATION, INSTALLATION</b>	<b>4-1</b>
4-1 Transporting the Machine	4-1
4-2 Installing the Machine	4-1
4-3 Releasing Clamps	4-5
4-4 Leveling the Machine	4-10
4-5 Electrical Connections	4-11
4-6 Others	4-13
<b>5. LUBRICATION</b>	<b>5-1</b>
5-1 Recommended Oils	5-1
5-2 Lubrication Points and Quantity	5-1
5-3 Lubrication Tank	5-6
<b>6. DESCRIPTION OF PARTS</b>	<b>6-1</b>
6-1 Construction and Operation	6-1
6-2 Control Panel	6-17
<b>7. MACHINE OPERATION</b>	<b>7-1</b>
<b>8. MAINTENANCE OF MACHINE</b>	<b>8-1</b>
8-1 Alarms	8-1
8-2 Service Parts - Machine	8-6
8-3 Service Parts - Electric	8-9
8-4 Lubricating System Diagram	8-16
8-5 NC unit	8-17
<b>9. ATTACHED DRAWINGS</b>	<b>9-1</b>
<b>10. DRAWINGS - ELECTRIC</b>	<b>10-1</b>
<b>11. WHEEL INSTALLATION</b>	<b>11-1</b>
11-1 Notes on Grinding Wheel	11-1
11-2 Balancing the Grinding Wheel	11-4
11-3 Dressing and Truing	11-7

