

A large, stylized white graphic on an orange background, resembling a stylized 'M' or a series of overlapping curved lines.

Mazak


**PARAMETER LIST
ALARM LIST
M-CODE LIST**

for

QUICK TURN NEXUS II Series

MANUAL No. : H311HA0013E

**OPERATING
MANUAL**

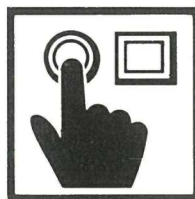

PARAMETER LIST ALARM LIST M-CODE LIST

for

QUICK TURN NEXUS II Series

MANUAL No. : H311HA0013E

Before using this machine and equipment, fully understand the contents of this manual to ensure proper operation. Should any questions arise, please ask the nearest Technical Center or Technology Center.

IMPORTANT NOTICE

1. Be sure to observe the safety precautions described in this manual and the contents of the safety plates on the machine and equipment. Failure may cause serious personal injury or material damage. Please replace any missing safety plates as soon as possible.
2. No modifications are to be performed that will affect operation safety. If such modifications are required, please contact the nearest Technical Center or Technology Center.
3. For the purpose of explaining the operation of the machine and equipment, some illustrations may not include safety features such as covers, doors, etc. Before operation, make sure all such items are in place.
4. This manual was considered complete and accurate at the time of publication, however, due to our desire to constantly improve the quality and specification of all our products, it is subject to change or modification. If you have any questions, please contact the nearest Technical Center or Technology Center.
5. Always keep this manual near the machinery for immediate use.
6. If a new manual is required, please order from the nearest Technical Center or Technology Center with the manual No. or the machine name, serial No. and manual name.

Issued by *Manual Publication Section, Yamazaki Mazak Corporation, Japan*

CONTENTS

Page

1	INTRODUCTION	1-1
2	PARAMETER	2-1
2-1	Outline	2-1
2-1-1	Types of parameters	2-1
2-1-2	Precautions	2-2
2-2	Parameter List	2-3
2-2-1	User parameter	2-3
2-2-2	Machine parameter	2-33
2-2-3	Data I/O parameter	2-63
2-3	Detailed Description	2-68
2-3-1	Structure of the parameter list	2-68
2-3-2	User parameter POINT (D)	2-70
2-3-3	User parameter LINE/FACE/3D (E)	2-92
2-3-4	User parameter EIA/ISO (F)	2-117
2-3-5	User parameter SOFT LIMIT (I)	2-167
2-3-6	User parameter SYSTEM (SU)	2-172
2-3-7	User parameter TURNING (TC)	2-189
2-3-8	User parameter SOLID (SD)	2-231
2-3-9	Machine parameter CALL MACRO (J)	2-234
2-3-10	Machine parameter MEASURE (K)	2-236
2-3-11	Machine parameter TABLE (L)	2-267
2-3-12	Machine parameter FEED VEL. (M)	2-308

2-3-13	Machine parameter	TIME CONST. (N)	2-322
2-3-14	Machine parameter	ANOTHER (S)	2-330
2-3-15	Machine parameter	SPINDLE (SA)	2-338
2-3-16	Machine parameter	BARRIER (BA)	2-356
2-3-17	Data I/O parameter	CMT parameter (CMT)	2-381
2-3-18	Data I/O parameter	TAPE parameter (TAP)	2-384
2-3-19	Data I/O parameter	DNC parameter (DNC)	2-395
2-3-20	Data I/O parameter	OTHER (IOP/DPR/IDD)	2-406
3	ALARM		3-1
3-1	Outline		3-2
3-1-1	Alarm display		3-2
3-1-2	Precautions		3-3
3-2	Detailed Description		3-4
3-2-1	Structure of the alarm list		3-4
3-2-2	No. 1 - No. 99, No. 1000 - No. 1099 (System/Drive error)		3-5
3-2-3	No. 100 - No. 199, No. 1100 - No. 1199 (CNC machine control error)		3-12
3-2-4	No. 200 - No. 399, No. 1200 - No. 1399 (PLC machine control error)		3-24
3-2-5	No. 400 - No. 499, No. 1400 - No. 1499 (CNC screen operation error)		3-33
3-2-6	No. 500 - No. 599, No. 1500 - No. 1599 (I/O error)		3-52
3-2-7	No. 600 - No. 699, No. 1600 - No. 1699 (MAZATROL program error)		3-64
3-2-8	No. 700 - No. 799, No. 1700 - No. 1799 (MAZATROL program error)		3-77
3-2-9	No. 800 - No. 899, No. 1800 - No. 1899 (EIA/ISO program error)		3-89
3-2-10	No. 900 - No. 999, No. 1900 - No. 1999 (EIA/ISO program error)		3-104
3-2-11	No. 2000 - No. 2099 (3D setup error)		3-116

3-2-12 No. 2100 - No. 2199 (Interference error) 3-120

4 M-CODE LIST 4-1