

Operating guide

0. Table of contents

1. User interface

Screen selection keys	6
Function keys	7
Positioning keys	8
Program keys	9
Contour modification indicators	10

2. Programming

Data storage devices	11
Displaying the directory of a diskette	12
Deleting a file from the diskette	13
Copying a file from the diskette to the NC	14
Copying a file from the NC to a diskette	16
Copying a file from an external PC to the NC	17
Copying a file from the NC to an external PC	19
Displaying the list of programs in the NC memory	20
Selecting a program in memory	21
Creating a new program	22
Modifying a program in memory	24
Graphic check of a program	26
Displaying the wire position	28
Deleting a program in the NC memory	30

3. Adjustments and measurements

Wire tension check	32
Taking axis references	33
Setting the threading jet position (UV axes)	35
Setting the position of the upper head for machining (Z axis)	36
Vertical alignment of wire and guides set up	39
Automatic alignment of the wire on the workpiece	42
Manual alignment of the wire on the workpiece	44
Energy saving mode	47
Edge cycle	48
Cent cycle	50
Slit cycle	52
Storing an XY position	54
Horizontal alignment of the part (ISO cycle)	55
Corner cycle (ISO)	58
Alignment + corner cycle (ISO)	60
External centering cycle (ISO)	63

4. Cutting conditions

Automatic threading and rethreading	66
Adjustment options (mirror image, rotation, scale, axis exchange)	69
Selecting a machining setting	70
Selecting a machining sequence	72
Activation of a machining setting	74
Storing a modified machining setting	75
Initializing the cutting time	76

5. Operations

Simulating a program (dry run)	78
Starting machining	79
Machining by means of the Memory Card	79
Monitoring of machining	80
Interrupting machining with Reset	82
Manual utilization of the machine (command MDI)	83
Return to start point	84
• Along the direct path	84
• Along the programmed path	85
Return to hold point	86
• Along the direct path	86
• Along the programmed path	87
Manual rethreading at the breakage point	88
Rethreading at start point	90
Move to a measured point	93
Manual cut of an attachment to remove a slug	94

6. Appendices

ISO – G Codes	98
ISO – M Codes	100
Examples of programs	102
Flushing nozzles	107