

CNC SYSTEMS
OSP7000M
OSP700M

AUTOMATION FUNCTION MANUAL
(6th Edition)

Pub. No. 3756-E-R5 (ME51-047-R6) Dec. 1997

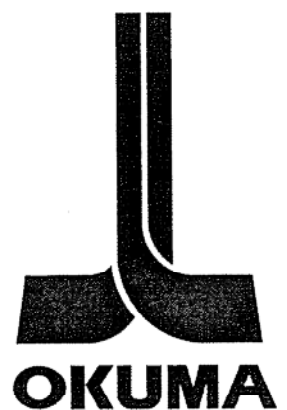


TABLE OF CONTENTS

PAGE

SECTION 1 TOOL MANAGEMENT FUNCTION	1
1. OVERVIEW	1
2. DESCRIPTION OF MANAGEMENT FOR EACH TOOL NUMBER	2
2-1. Tool Offset Number	2
2-2. Group Number (optional)	4
2-3. Tool Management Mode (optional)	4
2-4. OK/NG Evaluation (optional)	5
2-5. Tool Life Management Data (optional)	6
2-6. Distinction between Commanded Tool and Spare Tool (optional)	6
3. CHANGEOVER OF SPARE TOOL (OPTIONAL)	7
3-1. Selection of Spare Tool	7
3-2. Changeover of Tool Offset Number	7
4. ENTRY AND DISPLAY OF TOOL MANAGEMENT DATA	8
4-1. Tool Length Offset and Cutter Radius Compensation	8
4-2. ATC Pot No./Tool No. Table	10
4-3. Tool No./ATC Pot No. Table	11
4-4. Tool Management Function	12
4-5. Tool Group	13
5. RESETTING DEFECTIVE TOOL DATA	14
6. MANAGEMENT OF TOOLS FOR WHICH ATC IS NOT USED	15
6-1. Command Format	15
6-2. Tool Data Setting	16
6-3. Supplements	16
7. ALARM LIST	17
SECTION 2 TOOL LIFE MANAGEMENT FUNCTION	18
1. OVERVIEW	18
2. ENTRY OF TOOL LIFE MANAGEMENT DATA	19
2-1. Setting Tool No. for Pot No.	21
2-1-1. Setting Tool No. for Pot No.	21

	<u>PAGE</u>
2-2. Setting Tool Life Management Data	23
2-2-1. Setting Tool Group	23
2-2-2. Setting Management Mode	25
2-2-3. Setting SET TIME and LEFT TIME Data	27
3. COMMAND FOR ACTIVATING TOOL LIFE MANAGEMENT	29
4. RESETTING TOOL LIFE DATA	31
4-1. For Usable Tools	31
4-2. Changing a Life-expired Tool with New One	32
4-3. Setting LEFT TIME Data to the Same Value as SET TIME Data for All Tools	32
5. PROGRAM EXAMPLES	33
5-1. Tool Life Management by Tool Used Time Data	33
5-2. Tool Life Management by Count Data of Machining Cycles	34
6. ALARM LIST	35
 SECTION 3 AUTOMATIC TOOL LENGTH OFFSET/ TOOL BREAKAGE DETECTION FUNCTION	 36
1. OVERVIEW	36
1-1. Automatic Tool Length Offset	36
1-2. Automatic Tool Breakage Detection	36
2. OPERATIONS	37
2-1. Setting of Toolpost Number/Tool Number Correspondence Table	38
2-2. Operation Mode Designation	39
2-3. Setting of Z-axis Touch Sensor Zero Point	41
2-4. Setting of Y-axis Touch Sensor Zero Point	44
2-5. Z-axis Automatic Tool Length Offset	45
2-6. Y-axis Automatic Tool Length Offset	47
2-7. Z-axis, Y-axis Continuous Automatic Tool Length Offset	48
2-8. Setting of Tool Change Position (Not Required in the Case of the MC-H)	49
2-9. Z-axis Automatic Tool Breakage Detection	49
2-10. Y-axis Automatic Tool Breakage Detection	51
2-11. Z-axis, Y-axis Continuous Automatic Tool Breakage Detection	52
2-12. Judgement of Tool Breakage Absence/Presence	52
2-13. Resetting Broken Tool Registration	52

	<u>PAGE</u>
2-14. Cycle Time Reduction for Automatic Tool Length Offset/Automatic Tool Breakage Detection Cycle	53
2-14-1. New Cycle Time Reduction Function for Automatic Tool Length Offset/Automatic Tool Breakage Detection Cycle	55
3. FOR MCM HORIZONTAL TOOLS	59
3-1. Setting of Z-axis Lowering Position	59
3-2. Designation of Operation Mode	60
3-3. Setting of Horizontal Tool Touch Sensor Zero Point	62
3-4. Automatic Tool Length Offset Cycle for Horizontal Tools	62
3-5. Automatic Tool Breakage Detection Cycle for Horizontal Tools	63
4. OPERATION METHOD FOR AUTOMATIC TOOL LENGTH OFFSET AND AUTOMATIC TOOL BREAKAGE DETECTION ON BC-AXIS, 90° ANGULAR AND EXTENSION ATTACHMENTS (OPTIONAL)	64
4-1. Designation of Operation Mode	67
4-2. Command Format	68
4-3. Designation of Attachment	68
4-4. Operation	68
4-5. Tool Change Position Setting	68
4-6. Setting of Z-axis Lowering Position	69
4-7. Setting of Attachment Swivel Compensation Data	69
4-7-1. Measurement of Attachment Swivel Compensation Data	69
5. OPERATION METHOD FOR AUTOMATIC TOOL LENGTH OFFSET AND AUTOMATIC TOOL BREAKAGE DETECTION ON 30° ANGULAR ATTACHMENT (OPTIONAL)	72
5-1. Relative Offset Value between Reference Tools (VTOFH [320])	73
5-2. Operation Mode Designation (VFST)	74
5-3. Z-axis Lowering Position Setting (OO32)	75
5-4. Touch Sensor Zero Point Setting	76
5-5. Automatic Tool Length Offset	78
5-6. Tool Change Position Setting (OO31)	80
5-7. Automatic Tool Breakage Detection (OO34)	80
5-8. Criteria for Tool Breakage	83
5-9. Broken Tool Reset	83
5-10. Working Variables	83

	<u>PAGE</u>
6. MCM-B/MCR-BII/MCR-A/VH-40 Y-AXIS ESCAPE POSITION	85
6-1. Setting of Y-axis Escape Position	85
6-2. Automatic Tool Length (Dia) Offset/Automatic Tool Breakage Detection Cycle	86
7. MCV-A/MCV-AII SPECIFICATION CHANGE IN AUTOMATIC TOOL LENGTH OFFSET/AUTOMATIC TOOL BREAKAGE DETECTION	87
7-1. Modifications	87
7-1-1. Touch Sensor Operation Interlock	87
7-1-2. Measures against Interference in Automatic Tool Length Offset or Tool Breakage Detection Cycle	87
8. VARIABLES USED IN SUBPROGRAMS	89
8-1. Table of Variables Used in Subprograms	89
8-2. Table of Variables Used in Subprograms for Horizontal Tools	92
8-3. Explanation of Variables	95
9. PRECAUTIONS IN OPERATION	105
10. PROGRAM EXAMPLES	107
10-1. Automatic Tool Length Offset	107
10-2. Tool Breakage Detection	108
11. ALARM LIST	110
SECTION 4 AUTOMATIC MEASUREMENT FUNCTION (DIMENSION CHECK AND AUTOMATIC ZERO OFFSET)	120
1. OVERVIEW	120
1-1. Dimension Check	121
1-2. Automatic Zero Offset	121
2. PATTERNS	122
2-1. Setting of the Datum Hole Zero Point	123
2-2. Touch Probe Radius Compensation Cycle	124
2-3. Touch Probe Length Offset Cycle	127
2-4. Inside Diameter (ID) Gauging Cycle	129
2-5. Outside Diameter (OD) Gauging Cycle	131
2-6. X-axis End Face Gauging Cycle	133
2-7. Y-axis End Face Gauging Cycle	135
2-8. Z-axis End Face Gauging Cycle	136
2-9. Moving of Gauging Cycle Results	137

	<u>PAGE</u>
2-10. Calculation of Center and Distance between Two Set Points	138
2-11. Gauging the Distance between Two Faces	140
2-12. Automatic Zero Offset Cycle	143
2-13. Copy Function for Touch Probe Offset Values	144
3. AUTOMATIC GAUGING FUNCTION FOR BC-AXIS, 90° ANGULAR AND EXTENSION ATTACHMENTS (OPTIONAL)	145
3-1. AutomatiC Gauging	148
3-1-1. Example where 90°AT or B/CAT (PAB = 90°) is Used	148
3-1-2. Example where EXAT or B/CAT (PAB = 0°) is Used	149
4. POWER ON/OFF CYCLE FOR RENISHAW'S OPTICAL TOUCH PROBE (MP7/MP9/MP10)	150
4-1. Commands	150
4-1-1. Power ON Cycle	150
4-1-2. Power OFF Cycle	150
4-2. Operation	151
4-2-1. Power ON cycle	151
4-2-2. Power OFF Cycle	152
4-3. Other	152
5. TOUCH PROBE MOVEMENTS	153
6. APPROACH SPEED TO THE WORKPIECE	156
7. VARIABLES USED IN SUBPROGRAMS	158
7-1. Table of Variables Used in Subprograms	158
7-2. Explanation of Variables	166
7-3. Common Variables for Storing Gauging Cycle Results	174
8. TOUCH PROBE SAFETY FEATURES	175
8-1. Conformation of Operation of Proximity Switch	175
8-2. Battery ReplaCement of Touch Probe	176
9. SUPPLEMENTS IN OPERATION	177
10. PROGRAM EXAMPLES	179
10-1. ID Gauging	179
10-2. OD Gauging	180
10-3. End Face Gauging on Z-axis	181

	<u>PAGE</u>
10-4. DistanCe between End Faces (X-axis direction)	182
10-5. Automatic Zero Offset	183
10-6. Example Program for MCM Horizontal Spindle	184
11. ALARM LIST	186
12. GAUGING IMPOSSIBLE CAUSE CODE CHART	188
13. EXAMPLE OF DISPLAY PAGES	197
14. TOUCH PROBE INSTALLATION ORIENTATION (WHEN FM TYPE TOUCH PROBE IS USED)	200
SECTION 5 MEASUREMENT DATA PRINTOUT FUNCTION	201
1. OVERVIEW	201
2. SETTING	201
2-1. NC Optional Parameter (Bit) No. 2	201
2-2. NC Optional Parameter (Word) No. 46	201
2-3. Parameter Setting for RS-232C Interface	201
3. OPERATIONS	202
4. PROGRAM EXAMPLE	203
5. PRINTOUT EXAMPLE	204
6. PRINTOUT ITEMS	205
7. INTERFACE SPECIFICATIONS TO CONNECT RP-80II	206
7-1. Connection Diagram	206
7-2. Parameter Setting	207
7-3. RP-80 Switch Setting	208
7-3-1. Control PCB	208
7-3-2. RS-232C Interface PCB (#8143)	208
SECTION 6 PALLET POOL LINE CONTROL (PPC)	209
1. OVERVIEW	209
2. OUTLINE OF OPERATION	211
2-1. Pallet Number and Workpiece Number	211
2-2. Machining Program	212
2-3. Pallet Change Program	213

	<u>PAGE</u>
2-4. Setting Correspondence between Pallets and Carriers	213
2-5. Setting Correspondence between Pallets and Workpieces	213
2-6. Correspondence between Pallets and Machining Order	213
2-7. Commencement of Cutting	214
3. PPC OPERATION PANEL AND OPERATIONS IN PPC ON MODE	215
3-1. Correspondence Settings	215
3-2. Automatic Carry In/Out (Loading/Unloading)	219
3-3. Data Display	222
3-4. Machining Sequence Display	223
3-5. Other Operations and Displays	224
4. SYSTEM VARIABLES	226
4-1. VPLNO	226
4-2. VPLDT[1] - VPLDT[12] AND VPPCP	227
5. WHEN PALLET POOL LINE CONTROL IS OFF	232
6. SUPPLEMENTS	233
7. ERROR LIST	234
8. PALLET POOL LINE CONTROL OPERATION PANEL	237
SECTION 7 PPC (PALETTE POOL LINE CONTROL) FOR HORIZONTAL MC MULTI-PLANE APC	238
1. PREFACE	238
2. PPC CYCLE OPERATION PROCEDURES	239
3. CREATING THE MACHINING PROGRAM FOR PPC CYCLE OPERATION	240
3-1. Creating the Pallet Exchange Machining Program	240
3-2. Creating the PPC Cycle Operation Machining Program	240
4. PPC PANEL OPERATION	241
4-1. Touch Panel	242
4-1-1. Status transition using the MENU and PAGE Keys on the Touch Panel	242
4-1-2. Pallet Carry-in Screen	244
4-1-3. Pallet Carry-out Screen	246
4-1-4. Machining Schedule Display Screen	248
4-1-5. Manual Operation Screen	250
4-2. PPC Mode Switch	253

	<u>PAGE</u>
4-3. Schedule Switch	253
4-3-1. Automatic Schedule	253
4-3-2. Waiting Schedule	253
4-3-3. Interrupt Schedule	253
4-3-4. WAITING SCHEDULE STOP Switch	254
4-4. EMPTY PALLET Carry-in Switch	254
4-5. IN Switch	254
4-6. OUT Switch	254
4-7. PPC CYCLE START Switch/CYCLE START Switch	254
4-7-1. PPC CYCLE START Switch on the PPC Panel and the CYCLE START Switch on the Machine Operation Panel in the PPC ON (CONT, ONE CYCLE)	254
4-7-2. PPC CYCLE START Switch on the PPC Panel and the CYCLE START Switch on the Machine Operation Panel in the PPC OFF State	255
4-8. EMG. STOP Switch	255
4-9. RESTART Switch	255
5. CARRYING IN PALLETS	256
5-1. Carry-in by the Automatic and Waiting Schedules	257
5-2. Carry-in by the Interrupt Schedule	259
5-2-1. Machining Schedule in the Interrupt Schedule Mode on PPC Panel	261
5-3. Carrying in the Empty Pallet	263
5-4. Carry-in While the PPC is Off	264
6. CARRYING OUT PALLETS	266
6-1. Carry-out while the PPC is On or Off	266
6-2. Automatic Carrying-out of Processed Pallet when Only Two Pallets Are Used	268
7. ASSIGNING PPC CYCLE OPERATION MACHINING PROGRAMS TO PALLET NUMBERS	269
7-1. Assigning Procedures	269
8. EDITING MACHINING SCHEDULE	272
9. MACHINING PROGRAM AND SYSTEM VARIABLES	276
9-1. VPLDT/VPPCP	276
9-2. VPLNO	279

	<u>PAGE</u>
10. SETTING SYSTEM MAINTENANCE PARAMETERS	280
10-1. Setting Data on the SETUP.WAITING ST/MAC.CIR PNO. SET Screen	280
10-2. Setting Data on the [Pallet Station No.-Pallet No. Table Screen]	281
10-3. Communication Interface between the Touch Panel and NC (RS232C Communication Parameters)	282
11. CHECKING THE PPC SYSTEM CONDITION	283
12. NP COMMAND	284
13. ERRORS DISPLAYED ON THE PPC PANEL	285
13-1. Error at Carry-in Operation	285
13-2. Errors at Carry-out Operation	285
13-3. Other Errors	286
14. GENERATED ALARMS	287
14-1. Alarm B	287
14-2. Alarm D	290