



Operating Manual (T model)

Ref. 0204-ing

FAGOR 

CNC 8055 / CNC 8055i

INDEX

VERSION HISTORY (T)

INTRODUCTION

Safety conditions	3
Material returning terms	5
Fagor documentation for the CNC	6

1. OVERVIEW

1.1	Part-programs	1
1.2	Monitor information layout	4
1.3	Keyboard layout	6
1.3.1	Edit, simul and exec keys	7
1.4	Operator panel layout	9

2. OPERATING MODES

2.1	Help systems	3
2.2	Software Update	5

3. EXECUTE/SIMULATE

3.1	Block selection and stop condition	4
3.2	Display selection	6
3.2.1	Standard display mode	7
3.2.2	Position display mode	8
3.2.3	Part program display mode	9
3.2.4	Subroutine display mode	9
3.2.5	Following error display mode	12
3.2.6	User display mode	12
3.2.7	Execution time display mode	13
3.3	MDI	15
3.4	Tool inspection	16
3.5	Graphics	18
3.5.1	Type of graphics	19
3.5.2	Display area	22
3.5.3	ZOOM	23
3.5.4	Graphic parameters	24
3.5.5	Clear screen	26
3.5.6	Deactivate graphics	26
3.5.7	Measure	27
3.6	Single block	28

4. EDIT

4.1	Edit	2
4.1.1	Editing in CNC language	2
4.1.2	Teach-in editing	3
4.1.3	Interactive editor	4
4.1.4	Profile editor	5
4.1.4.1	Operation with the profile editor	6
4.1.4.2	Profile editing	7
4.1.4.3	Definition of a straight section	8
4.1.4.4	Definition of a circular section	9
4.1.4.5	Corners	10
4.1.4.6	Modify	11
4.1.4.7	Finish	13
4.1.4.8	Examples of profile definition	14
4.2	Modify	16
4.3	Find	17
4.4	Replace	18
4.5	Delete block	19
4.6	Move block	20
4.7	Copy block	21
4.8	Copy a program	22
4.9	Include a program	23
4.10	Editor parameters	24
4.10.1	Autonumbering	24
4.10.2	Axes selection for teach-in editing	25

5. JOG

5.1	Jogging the axes	8
5.1.1	Continuous jog	8
5.1.2	Incremental jog	9
5.1.3	Jogging with electronic handwheel	10
5.1.3.1	Standard handwheel mode	11
5.1.3.2	Path handwheel mode	12
5.1.3.3	Feed handwheel	13
5.2	Manual control of the spindle	14

6. TABLES

6.1	Zero offset table	2
6.2	Tool magazine table	3
6.3	Tool table	4
6.4	Tool offset table	6
6.5	Tool geometry table	10
6.5.1	How to edit the tool geometry table	13
6.6	Global and local parameter tables	14
6.7	How to edit tables	15

7. UTILITIES

7.1	Directory	1
7.1.1	Directory of the external devices	3
7.2	Copy	4
7.3	Delete	5
7.4	Rename	5
7.5	Protections	6
7.6	Change date	8

8. DNC

8.1	CNC	1
8.2	DNC	2
8.3	SERCOS	3
8.4	CAN	3

9. PLC

9.1	Edit	2
9.2	Compile	9
9.3	Monitoring	10
9.3.1	Monitoring with the PLC in operation and with the PLC stopped	17
9.4	Active messages	19
9.5	Active pages (screens)	19
9.6	Save program	19
9.7	Restore program	20
9.8	Resources in use	20
9.9	Statistics	21
9.10	Logic analyzer	23
9.10.1	Description of the work screen	23
9.10.2	Selection of variables and trigger conditions	26
9.10.2.1	Variable selection	26
9.10.2.2	Selection of trigger condition	28
9.10.2.3	Selection of time base	30
9.10.3	Execute trace	31
9.10.3.1	Data capture	32
9.10.3.2	Modes of operation	33
9.10.3.3	Trace representation	34
9.10.4	Analyze trace	35

10. SCREEN EDITOR

10.1	Utilities	3
10.2	Editing custom screens (pages) and symbols	5
10.3	Graphic elements	10
10.4	Texts	15
10.5	Modifications	18

11. MACHINE PARAMETERS

11.1	Machine parameter tables	2
11.2	Miscellaneous function tables	3
11.3	Leadscrew error compensation tables	4
11.4	Cross compensation tables	5
11.5	Operation with parameter tables	6

12. DIAGNOSIS

12.1	Configuration	2
12.1.1	Hardware configuration	2
12.1.2	Software configuration	2
12.2	Hardware test	3
12.3	Tests	4
12.3.1	Memory test	4
12.3.2	Code test	4
12.4	Adjustments	5
12.4.1	Circle geometry (ballbar) test	5
12.5	User	7
12.6	Hard disk	7
12.7	Interesting notes	7