

# KENT

建德工業股份有限公司  
KENT INDUSTRIAL CO., LTD.



## PRECISION SURFACE GRINDER

### Operations & Maintenance Manual

# KGS-63/84WM(A)

Edition One

2006/03

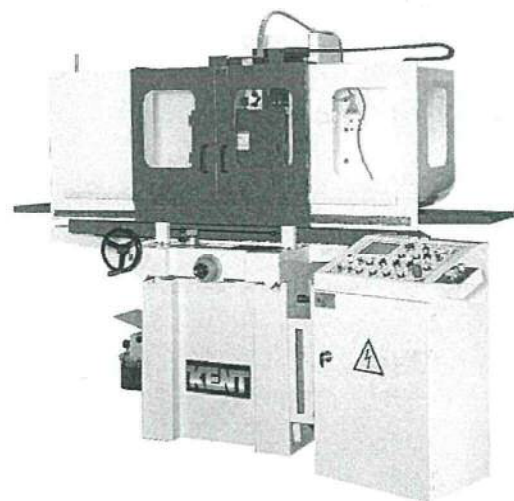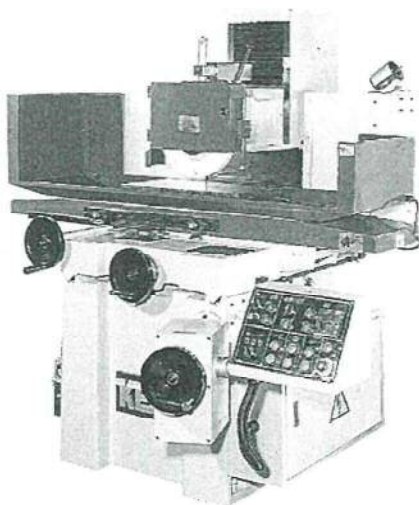

## Table of Contents

<u>Chapter</u>	<u>Contents</u>	<u>Page</u>
1	Installation guidelines	
1.1	General safety rules	1-1
1.2	Safety rules for this machinery	1-2
1.3	Diagram for potential danger area	1-5
1.4	Diagram for marking on the machine	1-6
1.5	Safety device placement diagram	1-7
.....		
2	Summary of the machine	
2.1	Basic description of the machine and noise standards	2-1
2.2	Exterior and part names	2-2
2.3	Working Range	2-3
.....		
3	Preparations before installing the machine	
3.1	Site requirements	3-1
3.2	Power requirements	3-2
.....		
4	Transport and installation	
4.1	Transport before unpacking	4-1
4.2	Unpacking	4-1
4.3	Transport after unpacking	4-2
4.4	Machine installation	4-3
4.5	Remove of positioning plate	4-4
4.6	Level adjustment of work table	4-5
4.7	Hydraulic line layout	4-6
4.8	Electrical connections and earthing	4-6
4.9	Dismantling procedure	4-9
4.10	Schematic drawing for the setup of cooling and dust suction equipment ( Optional equipment )	4-10
.....		
5	Test operation	
5.1	Preparations before test operation	5-1
5.2	Hydraulic tank unit and parts	5-2
5.3	Safety inspection before operation	5-4

<u>Chapter</u>	<u>Contents</u>	<u>Page</u>
6.1	Operation panel KGS-63/84 WM(A)1	6-1
6.1.2	Operation panel layout	6-2
6.1.3	Touch screen	6-3
6.1.4	Machine operation	6-6
6.2	Operation Panel Instructions	6-17
6.2.1	Operation Panel KGS-63/84WM(A)2	6-17
6.2.2	Operation Panel Layout	6-18
6.2.3	Touch Screen	6-19
6.4	Proper use of grinding wheels	6-36

---

7	Daily maintenance for operators	
7.1	Daily maintenance for operators	7-1
7.2	Positions of the lubrication and filling mechanisms	7-4
7.3	Waste oil box	7-5