


TRAINING MANUAL

MODEL: RNC-10 II (#020559 —)
RNC-16 II (#270580 —)
(#000513E —)

SWISS-TYPE AUTOMATIC LATHE
FANUC 18-T + Power Mate

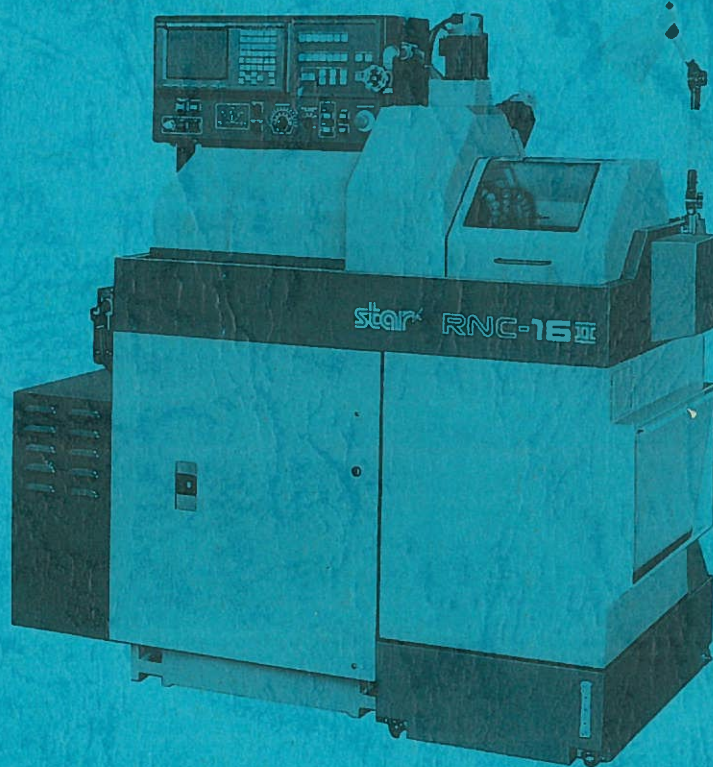

IMPORTANT

THIS MANUAL PROVIDES YOU WITH IMPORTANT INSTRUCTIONS TO MAKE THE MOST OF WHAT THE MACHINE HAS TO OFFER. PRIOR TO STARTING UP THE MACHINE YOU ARE REQUESTED TO GO THROUGH THE MANUAL PAYING SPECIAL ATTENTION TO ANY SECTIONS OF THE MANUAL WHERE CAUTION IS ADVISED.



STAR MICRONICS CO., LTD.

CONTENTS

1.	Tool post	1-1
2.	G code table	2-1
3.	M code table	3-1
4.	Explanation about address	4-1
5.	Dimensional terminology	5-1
6.	Program example	6-1
6-1	Program for start	6-1
6-2	Tool selection	6-3
6-3	Program for barstock absence detection	6-7
6-4	3-spindle endworking attachment	6-8
6-5	Program for drilling	6-10
6-6	Program for tap/die cutting	6-11
6-7	Single point threading program	6-12
6-8	Circular arc interpolation program	6-17
6-9	Sub-program function	6-19
6-10	Sub-program of no barstock absence detection	6-21
6-11	Sub-program for multitudinous production program	6-22
6-12	Simultaneous turning by two tools	6-23
6-13	Synchronous control	6-25
6-14	Main spindle speed fluctuation detection (G25, G26)	6-26
6-15	Constant surface speed control (G96, G97)	6-28
6-16	Tool nose radius compensation	6-29
6-17	Utility program	6-31
6-18	Program example 4	6-35
6-19	Program example 5	6-37
7.	Reference data for programs	7-1
7-1	Surface speed (m/min.)	7-1
7-2	Standard feed rate	7-1
7-3	Speed table for drilling and thread cutting	7-3
7-4	Single point threading dimensions table	7-4
7-5	Tap prepared hole diameter	7-7
7-6	Tool model numbers and dimensions	7-8
7-7	Insert cutting tool	7-16