



OM-359

196 831Q

January 2004

Processes



TIG (GTAW) Welding




Stick (SMAW) Welding

Description



Arc Welding Power Source

Syncrowave® 250 DX

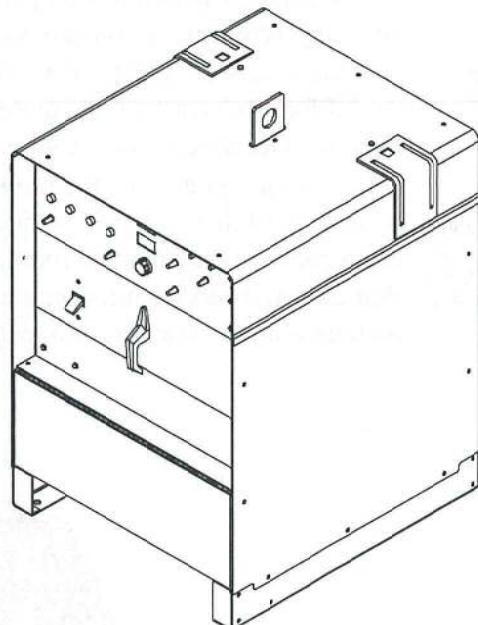

And Non-CE Models



Visit our website at
www.MillerWelds.com

OWNER'S MANUAL

TABLE OF CONTENTS

SECTION 1 - SAFETY PRECAUTIONS - READ BEFORE USING	1
1-1. Symbol Usage	1
1-2. Arc Welding Hazards	1
1-3. Additional Symbols For Installation, Operation, And Maintenance	3
1-4. California Proposition 65 Warnings	3
1-5. Principal Safety Standards	4
1-6. EMF Information	4
SECTION 2 - CONSIGNES DE SÉCURITÉ - À LIRE AVANT UTILISATION	5
2-1. Signification des symboles	5
2-2. Dangers relatifs au soudage à l'arc	5
2-3. Autres symboles relatifs à l'installation, au fonctionnement et à l'entretien de l'appareil	7
2-4. Principales normes de sécurité	8
2-5. Information sur les champs électromagnétiques	8
SECTION 3 - DEFINITIONS	9
3-1. Warning Label Definitions	9
3-2. Torch/Cable Holder Label	10
3-3. Weld Cable Connection Label	10
3-4. Symbols And Definitions	11
SECTION 4 - INSTALLATION	12
4-1. Selecting A Location	12
4-2. Dimensions And Weights	13
4-3. Specifications	13
4-4. Duty Cycle And Overheating	15
4-5. Volt-Ampere Curves	16
4-6. Weld Output Terminals And Selecting Cable Sizes	17
4-7. Remote 14 Receptacle Information	17
4-8. Automation 10-Pin Connection (Optional)	18
4-9. Shielding Gas Connections And 115 Volts AC Duplex Receptacle	19
4-10. TIG Connections	19
4-11. Front Panel Display For TIG HF Impulse DCEN (Direct Current Electrode Negative)	20
4-12. Front Panel Display For TIG AC	22
4-13. Stick Connections	25
4-14. Front Panel Display For Stick DCEP (Direct Current Electrode Positive)	26
4-15. Front Panel Display For Stick AC	28
4-16. Electrical Service Guide	30
4-17. Placing Jumper Links	31
4-18. Connecting Input Power	32
SECTION 5 - OPERATION	33
5-1. Controls	33
5-2. Output Selector Switch	35
5-3. Process Control	35
5-4. Amperage Control	35
5-5. Output Control	36
5-6. 4T, 4T Momentary And Mini Logic Trigger Operation (Requires Optional Sequence Controls)	38
5-7. Reconfiguring Trigger Hold For 4T And Mini Logic Control	40
5-8. Selecting TIG Starting Characteristics	42
5-9. Start Mode	44
5-10. Meters	45
5-11. Amperage Adjustment Control	45
5-12. Balance/DIG Control	46
5-13. Preflow Time Control	48
5-14. Postflow Time Control	50

TABLE OF CONTENTS

5-15. Pulse Controls (Optional)	51
5-16. Sequence Controls (Optional)	52
5-17. Initial Time Control And Initial Amperage Control	53
5-18. Final Slope Control And Final Amperage Control	54
5-19. Spot Time Control	54
5-20. Timer/Cycle Counter	55
5-21. Resetting Unit To Factory Default Settings (All Models)	56
SECTION 6 - MAINTENANCE & TROUBLESHOOTING	58
6-1. Routine Maintenance	58
6-2. Circuit Breaker CB1	58
6-3. Adjusting Spark Gaps	59
6-4. Voltmeter/Ammeter Help Displays	60
6-5. Troubleshooting	61
SECTION 7 - ELECTRICAL DIAGRAM	62
SECTION 8 - HIGH FREQUENCY	63
8-1. Welding Processes Requiring High Frequency	63
8-2. Incorrect Installation	63
8-3. Correct Installation	64
SECTION 9 - SELECTING AND PREPARING TUNGSTEN ELECTRODE FOR DC OR AC WELDING	65
9-1. Selecting Tungsten Electrode (Wear Clean gloves To Prevent Contamination Of Tungsten)	65
9-2. Preparing Tungsten Electrode For Welding	66
SECTION 10 - GUIDELINES FOR TIG WELDING (GTAW)	67
10-1. Positioning The Torch	67
10-2. Torch Movement During Welding	68
10-3. Positioning Torch Tungsten For Various Weld Joints	69
SECTION 11 - STICK WELDING (SMAW) GUIDELINES	70
SECTION 12 - PARTS LIST	78
OPTIONS AND ACCESSORIES	
WARRANTY	