

INSTRUCTION MANUAL
for
SHIMADZU
ELECTRONIC ANALYTICAL BALANCE
LIBROR AEL-200

SHIMADZU

SHIMADZU CORPORATION
KYOTO JAPAN

CONTENTS

1. General	1
2. Installation	1
2.1 Installation Site	1
2.2 Unpacking	1
2.3 Power Voltage	2
2.4 Preparation for Use	3
3. Specifications	4
4. Construction	6
5. Operations	7
5.1 Power Switch	7
5.3 Turn On and Warm-up Procedure	8
5.3 Weighing	9
5.4 Setting of Measuring Conditions	11
5.5 Calibration	13
5.6 Use of the Application Keyboard, AKB-101	15
6. Maintenance	21
6.1 Calibration of Built-in Weight	21
6.2 Replacement of Fuse	23
6.3 Alteration of Power Voltage	23
6.4 Transportation of Balance	24
7. Troubleshooting	26
8. Parts List	28
8.1 Standard Accessory	28
8.2 Special Accessory	28
8.3 Repair Parts	29
9. Input/Output	30
9.1 Connection of the IFB-101 Interface Board	30
9.2 Selection Switch	30
9.3 Baud Rate	31
9.4 Pin Assignment	31
9.5 Data Format	31
9.6 Connection to a Personal Computer	32
9.7 Balance Function Control	35
9.8 PRINT Key, Application Keyboard AKB-101	39