

# DESCRIPTION

**PIPING FEED HEADER:**

The function of the feed header is to distribute the flow of stock to each step diffuser assembly. Clear reinforced hose is attached between header and step diffuser. This enables the operator to observe flow of stock to the cell.

**STEP DIFFUSOR:**

The function of the step diffuser is for the formation of bubbles by the mixing of grey stock and air.

**SHOWER PIPE:**

The function of the shower pipe and foam scraper is to prevent dirt and stock accumulation on interior walls of cell and foam discharge pipe lip.