

FANUC Series 0-MC
FANUC Series 00-MC
FANUC Series 0-Mate MC

OPERATOR'S MANUAL

B-61404E/03

© FANUC LTD, 1988



CONTENTS

I	GENERAL	
1.	GENERAL	1-1
1.1	General Flow of Operation of CNC Machine Tool	1-1
1.2	Notes on Reading This Manual	1-2
II	PROGRAMMING	
1.	INTRODUCTION	1-1
2.	CONTROLLED AXES	2-1
2.1	Controlled Axes	2-1
2.2	Increment System	2-1
2.3	Maximum Stroke	2-1
3.	PREPARATORY FUNCTION (G FUNCTION)	3-1
4.	INTERPOLATION FUNCTIONS	4-1
4.1	Positioning (G00)	4-1
4.2	Single Direction Positioning (G60)	4-1
4.3	Linear Interpolation (G01)	4-2
4.4	Circular Interpolation (G02, G03)	4-3
4.5	Helical Cutting (G02, G03)	4-5
4.6	Equal Lead Thread Cutting (G33)	4-6
5.	FEED FUNCTIONS	5-1
5.1	Rapid Traverse	5-1
5.2	Cutting Feed Rate	5-1
5.2.1	Tangential speed constant control	5-1
5.2.2	Cutting feed rate clamp	5-1
5.2.3	Feed per minute (G94)	5-1
5.2.4	Feed per revolution (G95)	5-2
5.2.5	One-digit F code feed	5-2
5.3	Override	5-3
5.3.1	Feed rate override	5-3
5.3.2	Rapid traverse override	5-3
5.4	Automatic Acceleration/Deceleration	5-3
5.4.1	Automatic acceleration/deceleration after interpolation	5-3
5.5	Speed Control at Corners of Blocks	5-4
5.5.1	Exact stop (G04)	5-5
5.5.2	Exact stop mode (G61)	5-5
5.5.3	Cutting mode (G64)	5-5
5.5.4	Tapping mode (G63)	5-5
5.5.5	Automatic corner override (G62)	5-6
5.6	Dwell (G04)	5-8
6.	REFERENCE POINT	6-1
6.1	Automatic Reference Point Return (G28, G29)	6-1
6.1.1	Automatic return to reference point (G28)	6-1

6.1.2	Automatic return from reference point (G29)	6-1
6.1.3	Example for using G28 and G29	6-2
6.2	Reference Point Return Check (G27)	6-2
6.3	2nd, 3rd, 4th Reference Point Return (G30)	6-2
7.	COORDINATE SYSTEM	7-1
7.1	Machine Coordinate System	7-1
7.1.1	Setting machine coordinate system	7-1
7.1.2	Selection of machine coordinate system (G53)	7-2
7.2	Programming of Work Coordinate System (G92, G54 - G59)	7-2
7.2.1	Setting work coordinate system-Method by G92	7-2
7.2.2	Automatic coordinate system setting	7-3
7.2.3	Setting work coordinate system-method by G54 - G59	7-4
7.2.4	Selecting work coordinate system (G54 - G59)	7-5
7.2.5	Changing work coordinate systems by program command (G54 - G59)	7-5
7.2.6	Setting and display of work zero point offset amount	7-7
7.2.7	System variables	7-7
7.3	Local Coordinate System (G52)	7-8
7.4	Plane Selection	7-9
8.	COORDINATE VALUE AND DIMENSION	8-1
8.1	Absolute and Incremental Programming (G90, G91)	8-1
8.2	Polar Coordinate System Command (G15, G16)	8-1
8.3	Inch/Metric Conversion (G20, G21)	8-3
8.4	Decimal Point Programming/Pocket Calculator type Decimal Point Programming	8-3
9.	SPINDLE SPEED FUNCTION	9-1
9.1	Spindle Speed Command	9-1
9.1.1	S 2-digit code	9-1
9.1.2	S 5-digit code	9-1
9.2	Constant Surface Speed Control (G96, G97)	9-1
9.2.1	Specification method	9-1
9.2.2	Clamp of maximum spindle speed (G92)	9-3
9.2.3	Rapid traverse (G00) in constant surface speed control	9-3
9.2.4	Constant surface speed control axis	9-3
9.2.5	Outputting SF	9-3
10.	TOOL FUNCTION (T FUNCTION)	10-1
10.1	Tool Selection Command	10-1
10.2	Tool Life Management	10-1
11.	MISCELLANEOUS FUNCTION (M, B FUNCTIONS)	11-1
11.1	Miscellaneous Function (M Function)	11-1
11.2	Auxiliary Functions	11-2
12.	PROGRAM CONFIGURATION	12-1
12.1	Tape Start	12-3
12.2	Leader Section and Label Skip	12-3
12.3	Program Start	12-3

12.4 Program Section	12-3
12.4.1 Main program and subprogram	12-4
12.4.2 Program number	12-7
12.4.3 Sequence number and block	12-8
12.4.4 Optional block skip	12-8
12.4.5 Word and address	12-9
12.4.6 Basic addresses and command value range	12-11
12.5 Comment Section	12-12
12.6 Program End	12-14
12.7 Tape End	12-14
12.8 Tape Format	12-14
12.9 Tape Codes	12-14
13. FUNCTIONS TO SIMPLIFY PROGRAMMING	13-1
13.1 Canned Cycles (G73, G74, G76, G80 to G89)	13-1
13.2 Optional Angle Chamfering and Corner Rounding	13-16
13.3 External Motion Function (G80, G81)	13-16
14. COMPENSATION FUNCTION	14-1
14.1 Tool Length Offset (G43, G44, G49)	14-1
14.1.1 Tool length offset A	14-1
14.1.2 Tool length offset B	14-3
14.1.3 Tool Length offset C	14-4
14.2 Tool Offset (G45 - G48)	14-4
14.3 Cutter Compensation B (G39 - G42)	14-9
14.3.1 Cutter compensation function	14-9
14.3.2 Offset amount (H code)	14-9
14.3.3 Offset vector	14-9
14.3.4 Plane selection and vector	14-10
14.3.5 Corner offset circular interpolation (G39)	14-10
14.3.6 Cutter compensation cancel (G40)	14-11
14.3.7 Cutter compensation left (G41)	14-11
14.3.8 Cutter compensation right (G42)	14-12
14.3.9 General notes on offset	14-14
14.3.10 Program example	14-15
14.4 Cutter Compensation C (G40 to G42)	14-16
14.4.1 Cutter compensation function	14-16
14.4.2 Offset amount (H code, D code)	14-16
14.4.3 Offset vector	14-16
14.4.4 Plane selection and vector	14-16
14.4.5 G40, G41, and G42	14-17
14.4.6 Details of cutter compensation C	14-18
14.4.7 Tool compensation memory B	14-41
14.5 Changing of Tool Offset Amount (Programmable Data Input) (G10)	14-42
14.6 Programmable Parameter Entry	14-42
14.7 Scaling (G50, G51)	14-43
14.7.1 Scaling of each axis, Programmable mirror image	14-43

14.8 Coordinate System Rotation (G68, G69)	14-46
14.8.1 Command format	14-46
14.8.2 Relationship to other functions	14-47
15. MEASUREMENT FUNCTIONS	15-1
15.1 Skip Function (G31)	15-1
15.2 Automatic Tool Length Measurement (G37)	15-2
16. CUSTOM MACRO A	16-1
16.1 Custom Macro Command	16-1
16.1.1 M98 (Single call)	16-1
16.1.2 Subprogram call using M code	16-1
16.1.3 Subprogram call using T code	16-2
16.1.4 G66 (Modal call)	16-2
16.1.5 Argument specification	16-2
16.2 Custom Macro Body	16-3
16.2.1 Variables	16-3
16.2.2 Kind of variables	16-4
16.2.3 Macro instructions (G65)	16-7
16.2.4 Notes on custom macro	16-10
16.3 Examples of Custom Macro	16-11
16.3.1 Bolt hole circle	16-11
16.3.2 Pocket machining	16-12
16.3.3 Interface signal	16-13
16.3.4 Shearing machine	16-14
16.3.5 Conversion from cartesian coordinate system (X-Y-Z) into cylindrical coordinate system (r - θ -Z)	16-14
16.4 Pattern Data Input Function	16-15
16.4.1 Pattern menu display	16-15
16.4.2 Pattern data display	16-17
16.4.3 Character-to-codes correspondence table	16-20
17. CUSTOM MACRO B	17-1
17.1 Macro Call Command (Custom Macro Command)	17-2
17.1.1 Simple calls	17-2
17.1.2 Modal call	17-4
17.1.3 Macro call using G codes	17-4
17.1.4 Custom macro call with M code	17-5
17.1.5 Subprogram call with M code	17-5
17.1.6 Subprogram call with T code	17-5
17.1.7 Difference between M98 (subprogram call) and G65 (custom macro body call)	17-6
17.1.8 Multiplex calls	17-6
17.2 Creation of Custom Macro Body	17-7
17.2.1 Custom macro body format	17-7
17.2.2 Variables	17-8
17.2.3 Types of variables	17-9
17.2.4 Arithmetic commands	17-16

17.2.5	Control command	17-19
17.2.6	Macro and CNC statements	17-21
17.2.7	Codes and words used in custom macro	17-23
17.3	Registration of Custom Macro Body	17-23
17.4	Limitations	17-23
17.5	External Output Commands	17-25
17.6	Interruption Type Custom Macro	17-27
17.6.1	Commanding	17-28
17.6.2	Detailed descriptions	17-29
18.	Series 10/11 TAPE FORMAT	18-1
18.1	Difference Points of Tape Format	18-1
18.2	Address and Range of Command Values	18-1
18.3	Key Position	18-1
18.4	Each Address Restrictions	18-1
18.5	Setting of Setting Parameters	18-2
18.6	Cautions of Each Function	18-2
19.	HIGH-SPEED CYCLE MACHINING	19-1
19.1	High-speed Cycle Machining	19-1
III.	OPERATION	
1.	INTRODUCTION	1-1
2.	OPERATIONAL DEVICES	2-1
2.1	CRT/MDI Panel	2-1
2.1.1	Function buttons	2-2
2.1.2	MDI keyboard	2-3
2.2	Machine Operator's Panel	2-4
2.3	Tape Reader	2-6
2.3.1	Portable tape reader	2-6
2.3.2	Note for handling tape reader	2-10
2.4	FANUC CASSETTE B1/B2/F1	2-11
2.5	FANUC PPR	2-11
3.	POWER ON/OFF	3-1
4.	MANUAL OPERATION	4-1
4.1	Manual Reference Point Return	4-1
4.2	Manual Continuous Feed	4-2
4.3	Step Feed	4-3
4.4	Manual Handle Feed	4-3
4.5	Manual Absolute ON and OFF	4-4
5.	AUTOMATIC OPERATION	5-1
5.1	Operation Mode	5-1
5.1.1	Memory operation	5-1
5.1.2	MDI operation	5-1
5.1.3	MDI operation-B	5-2
5.2	Starting Automatic Operation	5-3

5.3	Executing Automatic Operation	5-3
5.4	Stopping Automatic Operation	5-3
5.4.1	Program stop (M00)	5-3
5.4.2	Optional stop (M01)	5-3
5.4.3	Program end (M02, M30)	5-3
5.4.4	Feed Hold	5-4
5.4.5	Reset	5-4
5.5	Program Re-Start	5-4
5.6	Scheduling Function (option)	5-7
5.6.1	General	5-7
5.6.2	Function Details	5-7
5.6.3	Others	5-8
5.7	Subprogram Call Function	5-9
5.7.1	Function Details	5-9
5.7.2	Others	5-9
5.8	Manual Handle Interruption	5-9
5.8.1	Handle interrupt operation	5-9
5.8.2	Movement by handle interrupt	5-9
5.8.3	High-speed reference point return of handle interrupt axis	5-10
6.	TEST OPERATION	6-1
6.1	All Axes Machine Lock	6-1
6.2	Machine Lock on each Axis (Z-axis only)	6-1
6.3	Auxiliary Function Lock	6-1
6.4	Feedrate Override	6-1
6.5	Rapid Traverse Override	6-1
6.6	Dry Run	6-2
6.7	Single Block	6-2
7.	SAFETY FUNCTIONS	7-1
7.1	Emergency Stop	7-1
7.2	Overtravel	7-1
7.3	Stroke Check	7-1
8.	WHEN ALARM ARISES	8-1
9.	PART PROGRAM STORAGE & EDIT (INCLUDING PROGRAM REGISTRATION)	9-1
9.1	Preparation for Part Program Storage and Editing Operation	9-1
9.2	Registering Program to Memory	9-1
9.2.1	Registering with MDI key	9-1
9.2.2	Registering from CNC tape	9-1
9.3	Registering Several Programs on a Tape to Memory	9-1
9.4	Program Number Search	9-1
9.5	Deleting a Program	9-2
9.6	Deleting All Programs	9-2
9.7	Punching a Program	9-2
9.8	Punching All Programs	9-2
9.9	Sequence Number Search	9-3

9.10 Collating Programs in Memory and NC Tape	9-4
9.11 Insertion, Changing and Deleting the Word	9-4
9.11.1 Word search	9-5
9.11.2 Inserting a word	9-7
9.11.3 Changing a word	9-7
9.11.4 Deleting a word	9-8
9.11.5 Deleting up to an EOB	9-8
9.11.6 Deleting blocks	9-8
9.12 Automatic Insertion of Sequence No.	9-8
9.13 Background Editing	9-9
9.13.1 Registration from MDI	9-9
9.13.2 Registration from CNC tape in the background	9-10
9.13.3 CNC tape punch in the background	9-10
9.14 Menu Programming	9-10
9.15 Program Loading by TEACH IN Mode	9-11
9.16 Conversational Programming with Graphic Function	9-13
9.16.1 Programming	9-13
9.16.2 Confirmation of program	9-14
9.16.3 Editing of program	9-15
9.17 Number of Registered Programs	9-16
9.18 Part Program Storage Length	9-16
9.19 Editing Operation Using Full Keys	9-16
9.20 Expanded Part Program Editing	9-18
9.21 Program Copy and Move	9-18
9.21.1 Change in Soft Key at Operation	9-18
9.21.2 Copy and Move to Another Program	9-18
9.22 Program Merge	9-20
9.22.1 Change in Soft Key at Operation	9-20
9.22.2 Marging Program at Specified Position	9-20
9.22.3 Marging Program at the last part	9-20
9.23 WORD/ADDRESS CHANGE	9-21
9.23.1 Change in Soft Key at Operation	9-21
9.23.2 Word Change	9-21
10. SETTING AND DISPLAYING DATA	10-1
10.1 Offset Amount	10-1
10.1.1 Setting and display of tool offset values (function key: 「 OFFSET 」)	10-1
10.2 Setting Parameter (Function key: 「 PARAM 」)	10-1
10.3 Custom Macro Variable	10-3
10.4 System Parameter	10-3
10.4.1 Parameter display	10-3
10.4.2 Parameter setting	10-3
10.5 Pitch Error Compensation Data	10-5
10.6 Data Protection Key	10-5
10.7 Software Operator's Panel	10-5
10.8 Tool Length Measurement	10-6
10.9 Display and modification of tool life data	10-7

10.9.1	Display of tool life data during program execution	10-7
10.9.2	Presetting tool life counters	10-8
11.	DISPLAY	11-1
11.1	Program Display	11-1
11.2	Displaying Program Memory Used	11-1
11.3	Command Value Display (Function key: 「 PRGRM 」)	11-2
11.4	Display for Program Check	11-3
11.5	Current Position Display (Function key: 「 POS 」)	11-3
11.6	Display of Run Time and Parts Count	11-5
11.6.1	Current position screen	11-5
11.6.2	Parameter setting screen	11-5
11.7	Alarm Display (Function key: 「 ALARM 」)	11-6
11.8	Pattern Data and Pattern Menu Display	11-6
11.9	Clock	11-7
12.	DATA OUTPUT	12-1
12.1	Tool Offsets	12-1
12.2	Parameters	12-1
13.	DATA INPUT/OUTPUT TO AND FROM FANUC CASSETTE (B1/B2/F1)	13-1
13.1	What is a File	13-1
13.2	File Heading	13-1
13.3	Data Output Operation	13-2
13.3.1	CNC program output	13-2
13.3.2	Offset data output	13-2
13.3.3	CNC parameter output	13-2
13.4	Data Input Operation	13-3
13.4.1	CNC program input	13-3
13.4.2	Offset data input	13-3
13.4.3	CNC parameter input	13-3
13.5	File Deletion	13-4
13.6	Precautions	13-4
13.6.1	Request for cassette replacement	13-4
13.6.2	Cassette adaptor lamp conditions	13-4
13.6.3	Write-protect key	13-5
13.7	Floppy Cassette Directory Display	13-5
13.7.1	General	13-5
13.7.2	Various functions and software key operation	13-5
13.7.3	Other precautions	13-7
14.	GRAPHIC FUNCTION	14-1
14.1	Drawing Range	14-1
14.2	Setting of Graphic Parameter	14-2
14.2.1	Setting procedure of graphic parameter	14-2
14.2.2	Details of graphic parameter	14-3
14.2.3	Tool path drawing	14-3
14.3	Dynamic Graphic Display	14-4

14.3.1	Outline	14-4
14.3.2	Cautions on Using Dynamic Graphics	14-4
14.3.3	Path Graphic	14-5
14.3.4	Solid Graphics	14-11
15.	MECHANICAL HANDLE FUNCTION	15-1
15.1	Outline	15-1
15.2	Follow-up Signal	15-1
15.3	Input Signal	15-1
15.4	Caution	15-1
16.	DISPLAY AND OPERATION OF 00-MC	16-1
16.1	Display	16-1
16.2	Operation	16-1
IV . MAINTENANCE		
1.	FUSE CHECK AND REPLACEMENT	1-1
1.1	Specification of Fuses	1-1
1.2	Mounting Positions of Fuses	1-1
1.2.1	Power supply unit	1-1
1.2.2	Additional I/O B1	1-1
1.2.3	Input unit	1-2
2.	TROUBLESHOOTING	2-1
2.1	General	2-1
2.2	Checking Input Voltage, Peripheral Conditions, Operation, Programming, Drives, Machine and Interface Control	2-1
2.3	CNC System Check (No tools required)	2-2
2.4	CNC Status Display	2-3
2.5	Display of Position Deviation	2-4
2.6	Display of Machine Position from Reference Point (DGNOS No.820 - 825)	2-5
3.	REPLACING BATTERY	3-1
3.1	To Replace Battery for Control Unit (For Memory Back-Up):	3-1
3.2	To Replace Batteries for Absolute Pulse Coder	3-1
V. APPENDIX		
APPENDIX 1	TAPE CODE LIST	A1-1
APPENDIX 2	FUNCTIONS AND TAPE FORMAT LIST	A2-1
APPENDIX 3	RANGE OF COMMAND VALUE	A3-1
APPENDIX 4	MONOGRAPHS	A4-1
1.	INCORRECT THREADED LENGTH	A4-1
2.	TOOL PATH AT CORNER	A4-3
3.	RADIUS DIRECTION ERROR AT CIRCULAR CUTTING	A4-5
APPENDIX 5	TAPE JOINING	A5-1
APPENDIX 6	STATUS WHEN TURNING THE POWER ON, WHEN RESET	A6-1

APPENDIX 7 RS-232-C/RS-422 INTERFACE	A7-1
1. GENERAL OF SERIAL INTERFACE	A7-1
2. CONNECTOR POSITION AND PIN ARRANGEMENT OF SERIAL INTERFACE .	A7-2
3. SPECIFICATIONS OF RS-232-C INTERFACE	A7-5
4. SPECIFICATIONS OF RS-422 INTERFACE	A7-13
5. SETTING AND PARAMETER RELATED TO SERIAL	A7-17
APPENDIX 8 PARAMETER LIST	A8-1
1. PARAMETER DISPLAY	A8-1
APPENDIX 9 CODES USED IN PROGRAM	A9-1
APPENDIX 10 ERROR CODE LIST	A10-1
APPENDIX 11 LIST OF OPERATION	A11-1
APPENDIX 12 LIST OF SPECIFICATIONS	A12-1