


DR. JOHANNES HEIDENHAIN

Precision Mechanics, Optics and Electronics · Precision Graduations
P.O.Box 1260 · D-8225 Traunreut · Telephone (08669) 31-0
Telex: 5 6831 · Telegramme: DIADUR Traunreut

User Manual

Mounting Instructions and
Interchange Circuit Control-Machine

HEIDENHAIN TNC 145 C
Contouring Control

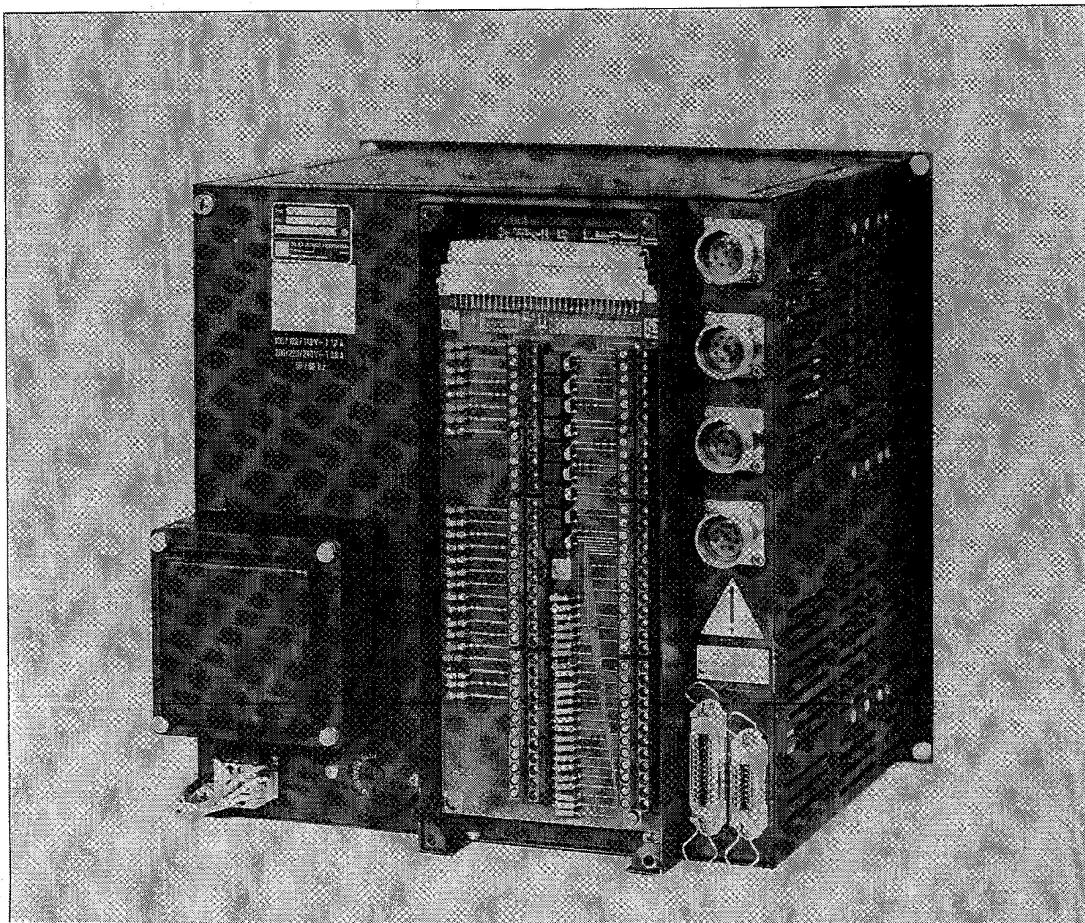

Contents

	page
1. General remarks	4
2. Technical specifications	4
2.1 Control inputs	4
2.2 Control relay outputs	4
2.3 Grounding diagram	4
2.4 Transducers	5
2.4.1 Transducers for TNC 145 CS	5
2.4.2 Transducers for TNC 145 CR	5
3. Functions of control inputs/outputs	6
3.1 External buttons "Start", "Stop" and "Rapid traverse"	6
3.2 External switch "Manual traverse" in conjunction with X, Y, Z-axis-release	6
3.3 Feed rate release	6
3.4 Regulator release	7
3.5 M-, S- and T-functions, Strobe signals and feedback signal: "Auxiliary function completed".	7
3.5.1 Output of M-functions	8
3.5.2 Output of S- and T-functions within Tool Call-block	11
3.6 Emergency Stop	14
3.7 Input "Reference end position" and "Reference pulse inhibit"	16
3.7.1 Location of "Reference end position" -cam when using linear transducers	16
3.7.2 Location of "Reference end position" and "Reference pulse inhibit" cams when using rotary encoders	17
3.7.3 Procedure for traversing over reference mark in an axis	18
3.8 "Software limit switches"	18
3.9 External direction buttons and external feed rate potentiometer	19
3.10 Control in "Automatic" mode	19
3.11 Lock "Spindle on"	19
3.12 Output "Control in operation"	20
3.13 Input for electronic handwheel-servo	20
3.14 Nominal value-outputs	21
4. Clamping and switch-over of axes	22
5. External data input/output	23
5.1 V.24-Interface	23
5.2 Input of the Baud-rate	23
6. HEIDENHAIN ME 101/ME 102 Magnetic tape cassette units	25
6.1 Connection cables	25

7.	Operation set-up	27
7.1	Operation set-up check-list	27
8.	Explanations for operation set-up check-list, section c)	30
8.1	Buffer battery switch-off	30
8.2	"Right-hand-rule"	30
8.3	Input of preliminary machine parameters	30
8.3.1	Entry flow-chart for machine parameters	31
8.3.1.1	Entry/Readout of machine parameters from TNC 145 C via Magnetic tape unit ME 101 or ME 102	32
8.3.2	List of preliminary parameters	34
8.4	Checking and correction of traversing and counting directions of individual axes	37
8.5	Software limit switch range setting	38
8.6	Optimization of machine positioning with speed pre-control	39
8.6.1	Offset adjustment	39
8.6.2	Fine adjustment of trailing error	40
8.6.3	Acceleration (linear and radial)	41
8.6.4	Oscillation upon acceleration	42
8.6.5	Approach speed 1 µm before nominal position	43
8.6.6	Integral factor X, Y, Z	44
8.7	Optimization of machine positioning with trailing error	45
8.7.1	Offset adjustment	45
8.7.2	Fine adjustment, trailing error	45
8.7.3	Acceleration (linear and radial)	46
8.7.4	K _V -factor X, Y, Z	46
8.7.5	Multiplication factor for K _V and ramp kinking point	47
8.7.6	Integral factor X, Y, Z	47
9.	Entry of freely selectable machine parameters	48
10.	List of machine parameters including entry value ranges	56
11.	Dimensions	59
12.	Connections of TNC 145 C	62
12.1	Locations of connections on control	62
12.2	Layout of multipoint terminals	64