PARTS LIST

SH-12/16

SWISS-TYPE CNC AUTOMATIC LATHE



PARTS ORDERING METHOD

When you will order the spare parts, please specify the followings so that you can receive the required ones smoothly.

- (1) The model of your machine.
- (2) Serial number of your machine.
- (3) The part code of required parts.
- (4) The name of required parts.
- (5) Quantity of required parts.



PARTS LIST

03-00400-0015-00

SH12 CNC AUTOMATIC LATHE

LEG COOLANT UNIT EXTERNAL FITTING COOLANT OIL SUPPLY HEADSTOCK BODY SPINDLE CHUCKING UNIT Z AXIS FEEDING UNIT GUIDE BUSH TOOL POST BODY TABLE X AXIS FEEDING UNIT T AXIS FEEDING UNIT TRIPLE SLEEVE HOLDER TOOLING PARTS TOOL HOLDER NC UNIT LUBRICATING UNIT PNEUMATIC UNIT CABLES

NC UNIT