

SPROUT-BAUER V-AUTO™ STRAINER


REPAIR PARTS LIST

The exploded view (Figure 4-2) and parts list below provide for the identification of components of the Element Assembly. The parts list gives the "PC NO" which relates to the callouts of parts on the exploded view. The "Description" column gives the name of the part. The "Qty./Machine" column gives the quantity of that part per machine. Entries in the "Recommended Spares" column indicates the quantity of on-hand spares recommended for that item to insure minimal downtime for anticipated failures.

PC NO	DESCRIPTION	PART NUMBER	QTY./ MACHINE	RECOMMENDED SPARES
01	Screen	D0510-025	1	1
02	Upper drive ring	D0510-040-01	1	
03	O-ring	WA85984	1	1
04	O-ring	WA40631	1	1
05	Screw, hex head	WA47960	16	
06	Washer	WA46506	16	
07	Screw, mach. fl. hd. slotted	WA43955	16	16
08	Scraper post	C0510-039-01	2	
09	Scraper post with circulator	C0510-040-01	2	
10	Internal circulator	C0510-038/01	2	
11	Drive shaft	C0510-035-01	1	
12	Scraper, long	B0510-036/01	8	8
13	Scraper, short	B0510-029/01	24	24
14	Screw, mach. rd. hd. slotted	WA87369	64	64
15	Key	A2375-263/01	1	
16	Lower screen mount	D0510-039-01	1	
17	Upper screen mount	C0510-036-01	1	
18	Shaft collar	WA86401	1	
19	Flanged bushing	B0510-038/01	1	1
20	Bushing	A0510-035/01	1	1
21	Key	A2375-260/15	1	
22	Screw, mach. rd. hd. slotted	WA54938	12	12
23	Retaining ring	WA86404	1	1
24	Washer, tongued	WA05336	1	1
25	Nut, lock	WA05335	2	2
26	Packing	000B42701005	3 ft	

ORDERING INSTRUCTIONS:

When ordering parts, give "Part Number" and "Description" of part desired, along with the Model, Serial Number, and application of your strainer.

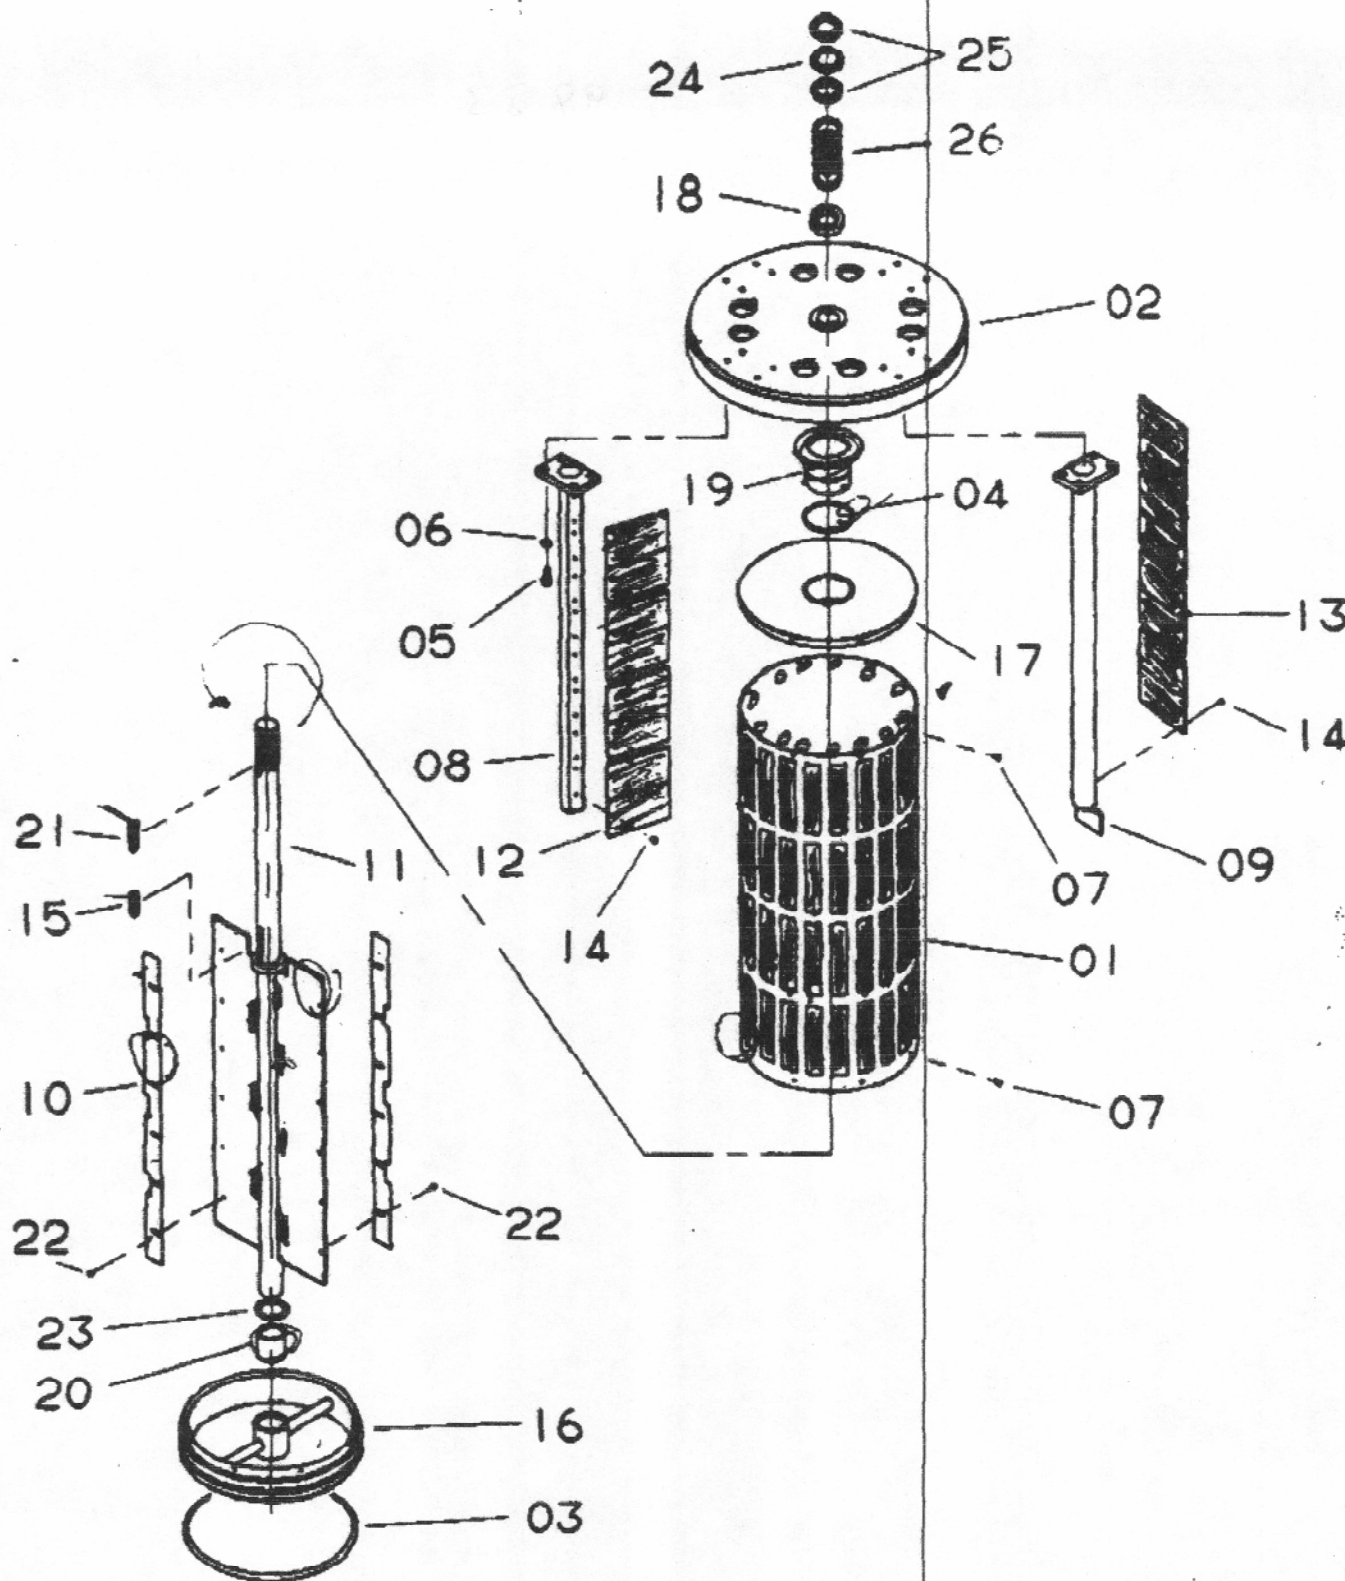

V-AUTO STRAINER.
VA-A-400 GSL II
MAINTENANCE
PAGE D-9
0788

FIGURE 4-2. ELEMENT ASSEMBLY, EXPLODED VIEW