



HOMMA
MACHINERY CO., LTD.

§

OPERATION MANUAL

MODEL: TAC-12

HOMMA MACHINERY CO., LTD.



<u>N O .</u>	<u>I T E M</u>	<u>P A G E</u>
<u>I G E N E R A L</u>		
1.	General	1
1-1.	Machining capacity	1
1-2.	Machining accuracy	1
1-3.	Workability and operability	1
<u>II S P E C I F I C A T I O N</u>		
1.	Basic specification	2
2.	Basic options	10
3.	Additional option	12
<u>III P R O G R A M M I N G</u>		
1.	What is programming	17
2.	Composition of program	18
2.1	Block	19
2.2	Word	19
2.3	Input format	21
2.4	Decimal point programming	22
2.5	Basic Address & commandable range	23
2.6	Program number	24
2.7	Sequence number	25
2.8	Optional block skip	25
3.	Coordinate word	27
3.1	Controlled axis	27
3.2	Increment system	29
3.3	Maximum stroke	30
3.4	Program Zero point and Coordinate system	30
3.5	Coordinate system and start point	31
3.6	Reference point	35
3.7	Absolute and incremental programming	35
3.8	Diameter and radius programming	36
4.	Feed function	38
4.1	Rapid traverse rate	38



4.2. Feed rate	38
4.3 Lead of Thread	39
4.4 Feed rate reduction 1/10	41
4.5 Automatic acceleration and deceleration	41
5. Preparatory function (G function)	43
5.1 Positioning (G00)	45
5.2 Linear interpolation (G01)	46
5.3 Chamfering and Corner R	47
5.4 Circular interpolation (G02, G03)	49
5.5 Thread cutting (G32, G34)	53
5.6 Automatic reference point return (G27 - G29)	58
5.7 Dwell (G04)	61
5.8 Programming of absolute zero point G50 (G92)	61
5.9 Inch/metric conversion (G20, G21)	64
5.10 Switching of feedrate command (G98, G99) (G94, G95)	65
5.11 Constant surface speed control G96, G97	65
6. Compensation function	66
6.1 Tool offset	66
6.2 Tool nose radius compensation	71
6.3 Detailed description of tool nose radius compensation	87
7. Machining cycle function	122
7.1 Canned cycle (G90, G92, G94)	122
7.2 Multiple repetitive cycles (G70, G71, G72, G76)	130
8. Spindle function (S function), Tool function (T function), Miscellaneous function (M function)	144
8.1 Spindle function (S function)	144
8.2 Constant surface speed control	145
8.3 Tool function (T function)	148
8.4 Miscellaneous function (M function)	148
9. Subprogram	156
9.1 Preparation of subprogram	156
9.2 Execution of subprogram	157
9.3 Special uses	158



HOMMA
MACHINERY CO., LTD.

§

10.	Composition of a program tape	160
10.1	The paper tape used for NC control	160
10.2	Tape code	160
10.3	Codes available for programming	161
10.4	Program tape	163
10.5	Block composition	168

III OPERATION

1.	Function of device	171
1.1	Control panel	171
1.2	Operation panel	188
1.3	MPG operation box	206
1.4	NC panel	208
2.	Power source	209
2.1	Supply of power source	209
2.2	Cutting off of power source	209
3.	Emergency stop	210
4.	Manual operation	211
4.1	Table operation	211
4.2	Cross rail operation	212
4.3	Ram head jog feed	212
4.4	Ram head handle feed	213
4.5	Manual absolute	213
4.6	Manual reference point return	221
5.	Operation relative to automatic operation	222
5.1	Start of automatic operation	222
5.2	Halting the automatic operation	223
5.3	Single block	223
5.4	Restart after feed hold	225
5.5	Manual operation during automatic operation	226
5.6	MDI operation during automatic operation	226
5.7	Optional block skip	227
5.8	Feed rate override	227
5.9	Dry run	227
5.10	Machine lock	228



5.11	Display lock	228
5.12	Rapid traverse override	229
6.	Display and operation on the CRT character displayed MDI & DPL panel	230
6.1	Status indication	232
6.2	Keyed data display	232
6.3	Program number and sequence number display	233
6.4	Alarm display	234
6.5	Operator message	235
6.6	Display and reset of a current position	235
6.7	Command value display	237
6.8	Setting	238
6.9	Operation by the MDI	243
6.10	Starting MDI Operation	245
6.11	Reset	245
6.12	Setting and display of tool offset and tool nose radius compensation values	245
6.13	Program display	253
6.14	Program number search	256
6.15	Registering program tape into memory	256
6.16	Registering one tape having programs into memory	257
6.17	Adding a program after an already registered program	257
6.18	Collating programs in memory and those on tape	258
6.19	Input of programs by keys	258
6.20	Deleting a program	260
6.21	Deleting all the programs	260
6.22	Punching a program	260
6.23	Punching all the programs	261
6.24	Sequence number search	262
6.25	Program restart	264
6.26	Entering offset values from tape	267



HOMMA
MACHINERY CO., LTD.

§

6.27	Punching offset values into tape	268
6.28	Parameter display	268
6.29	Program editing	268