


# PRECISION SURFACE GRINDER

## Maintenance Manual

KGS-515/615/620/715AHD.WM1.WMA1

---

Edition Seven

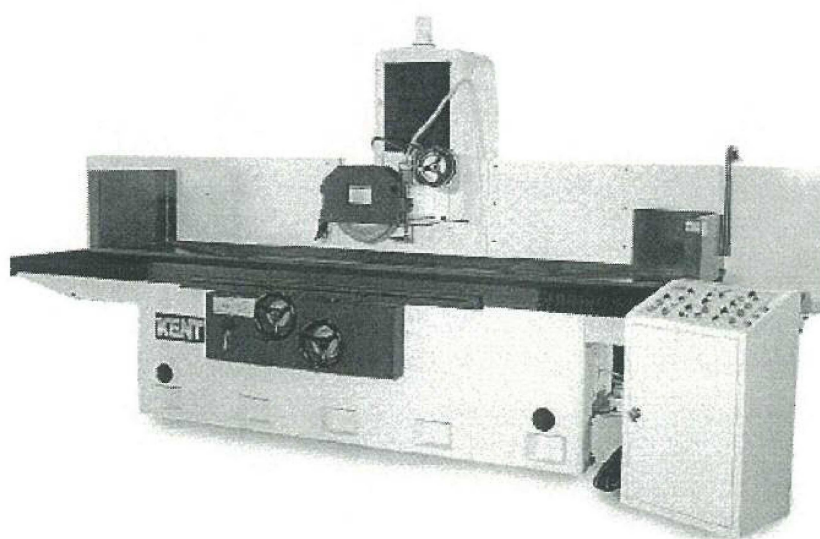

## Table of Contents

| <u>Chapter</u> | <u>Contents</u>   | <u>Page</u> |
|----------------|---|-------------|
| 1              | The setting, adjustments and trouble shooting by the maintenance crew |             |
| 1.1            | shooting by the maintenance crew                                      | 1-1         |
| 1.2            | Parts vulnerable to damage after expire of warranty period            | 1-8         |
| 1.3            | Inspection and Maintenance  | 1-11        |
| 1.3.1          | Visual check of magnet switch actions                                 | 1-11        |
| 1.3.2          | Fuse testing and inspection   | 1-12        |
| 1.3.3          | Testing and inspection of proximity switches                          | 1-12        |
| .....          |   |             |
| 2.             | Electrical facilities and controls                                    |             |
| 2.1            | Safety rules for electric facilities                                  | 2-1         |
| .....          |   |             |
| 3.1            | Longitudinal handwheel assembly                                       | 3-1         |
| 3.1.1          | Parts list of longitudinal handfeed                                   | 3-2         |
| 3.2            | Large rear splash guard assembly                                      | 3-4         |
| 3.2.1          | List of parts the large rear splash guard assembly                    | 3-5         |
| 3.3            | Vertical feed Assembly  | 3-6         |
| 3.3.1          | List of parts for vertical feed Assembly                              | 3-7         |
| 3.4            | Column and the associated components                                  | 3-9         |
| 3.4.1          | Parts for the column  | 3-10        |
| 3.5            | Wheel spindle assembly  | 3-11        |
| 3.5.1          | Parts for the wheel spindle assembly                                  | 3-12        |
| 3.6            | Parts for downfeed assembly   | 3-14        |
| 3.6.1          | List of parts for the downfeed assembly                               | 3-15        |
| 3.7            | Crossfeed assembly  | 3-17        |
| 3.7.1          | List of parts for the cross feed assembly                             | 3-18        |
| 3.8            | Parts for the saddle assembly   | 3-20        |
| 3.8.1          | List of parts for the saddle assembly                                 | 3-21        |
| 3.9            | Proximity switches (left/right)                                       | 3-22        |
| 3.9.1          | List of parts for the (left/right) Proximity switches                 | 3-23        |
| 3.10           | Mechanical-type hydraulic valves assembly                             | 3-24        |
| 3.10.1         | Proximity-type hydraulic valves assembly                              | 3-25        |
| 3.10.2         | List of parts for mechanical/proximity type of hydraulic valves       | 3-26        |
| 3.11           | KGS-515 Hydraulic cylinder assembly                                   | 3-28        |
| 3.12           | 515/615/620AHD Hydraulic cylinder assembly                            | 3-30        |
| 3.13           | 515/615/620WM Hydraulic circuits diagrams                             | 3-31        |