

Cincom A20

(2F7PL)

Operator's Manual

CITIZEN MACHINERY CO., LTD.

Operator's Manual

0. Table of Contents

This contents does not go into details.

Please refer to the table of contents for detailed headline listed on the top of each chapter.

0. Table of Contents	0-1
1. Outline	1-1
1.1 Outline of This Manual	1-3
1.2 Audience.....	1-4
2. Safety Precautions	2-1
2.1 Safety Signs	2-3
2.2 Emergency Stop Button.....	2-7
2.3 Safety Devices.....	2-8
2.4 Specifications for Safe Operation	2-13
2.5 General Precautions During Operation.....	2-14
2.6 Safety During Installing the Machine.....	2-15
2.7 Before Starting the Machine	2-16
2.8 Safety During Setup.....	2-17
2.9 Safety During Automatic Operation	2-18
2.10 Safety During Maintenance.....	2-19
2.11 Safety After Everyday Operation	2-19
2.12 Fire Prevention Practices.....	2-20
2.13 Handling Emergency Situations	2-22
2.13.1 Machine operation at occurrence of an accident.....	2-22
2.13.2 Emergency situations requiring evacuation.....	2-22
2.13.3 Power failure.....	2-22
2.13.4 Resuming work	2-22
2.14 Notes for prevention of machine damage	2-23

Code No.	C-A220PL VII 1E1-0003	MFG No.	A220/0007 ~	Issue Date	2008.7
----------	--------------------------	---------	-------------	------------	--------

3. Machine Specifications.....	3-1
3.1 Names of Machine Components.....	3-3
3.2 Outside Dimensions and Layout of the Machine.....	3-5
3.3 Specifications	3-8
3.3.1 Machine specifications	3-8
3.3.2 NC specifications	3-11
3.3.3 Attachments.....	3-15
3.4 Stroke Diagram.....	3-18
4. Operation Panel and Screen	4-1
4.1 Switches, Lamps, and Keys on Operation Panel	4-3
4.2 Names and Functions of LCD Screen Areas	4-10
4.3 Screen Transition	4-13
4.3.1 Screen transition at power on	4-13
5. Preparation for Operating the Machine	5-1
5.1 Power-on and Power-off.....	5-3
5.1.1 Power-on	5-3
5.1.2 Power-off	5-3
5.1.3 Emergency stop.....	5-3
5.2 Menu Keys.....	5-4
5.2.1 Operating menu keys.....	5-4
5.2.2 Menu selection.....	5-5
5.2.3 Screen selection	5-5
5.2.4 Operation selection	5-8
5.3 Page Keys	5-9
5.4 Setting Data.....	5-10
5.4.1 How to set data.....	5-10
5.4.2 Editing data.....	5-11
5.5 Erasing Screen.....	5-13
5.5.1 Screen erasure (back-light off).....	5-13
5.5.2 Screen redisplay	5-13
6. Machine Operation	6-1
6.1 Selecting Programs	6-5
6.2 Preparing for Operation	6-6
6.2.1 Start point	6-7
6.2.2 Cut-off machining.....	6-9
6.2.3 Tool setting	6-12
6.2.4 Adjustment.....	6-32
6.2.5 Tooling.....	6-40
6.3 Checking Programs	6-42
6.3.1 Operation for program checking in a cycle.....	6-43
6.3.2 Operation for program checking for each block	6-46
6.3.3 Operation for program checking through handle.....	6-49

6.3.4	Modifying the program being executed	6-58
6.4	Automatic Operation.....	6-62
6.4.1	Continuous cycle.....	6-63
6.4.2	One cycle.....	6-66
6.4.3	One block	6-69
6.4.4	Stopping and restarting automatic operation.....	6-72
6.4.5	Skipping blocks.....	6-73
6.4.6	Optional Stop (OPSTOP).....	6-74
6.4.7	Last Program (LAS PR)	6-74
6.4.8	Disconnect Bar Loader (BL DIS).....	6-74
6.5	Manual Operation	6-75
6.5.1	Handle	6-75
6.5.2	MDI.....	6-78
6.6	Maintenance	6-80
6.6.1	Return to zero point	6-80
6.6.2	Mechanical adjustment	6-82
6.6.3	Offset.....	6-86
6.6.4	Operator's panel	6-88
6.7	Creating and Editing Programs.....	6-91
6.7.1	Program list	6-92
6.7.2	Editing programs.....	6-101
6.7.3	Specifying machining data	6-111
6.7.4	Program Conversion	6-113
6.7.5	Program input and output (RS-232C).....	6-116
6.7.6	Input/output through a memory card	6-128
6.8	Tool Life Management I	6-140
6.8.1	Setting count system.....	6-140
6.8.2	Operation procedures for used count system	6-141
6.8.3	Operating procedures for time count system	6-142
6.9	Tool Life Management II	6-143
6.10	Calling User Macro Program by G and M Codes	6-145
7.	Mounting and Adjusting Chuck.....	7-1
7.1	Mounting and Adjusting Chuck	7-3
7.1.1	Mounting and replacing spindle chuck	7-3
7.1.2	Adjusting spindle chucking force.....	7-4
7.1.3	Mounting rego chuck.....	7-7
7.2	Mounting/Adjusting a Guide Bushing Device	7-8
7.2.1	Replacing a synchronous rotary guide bushing device.....	7-8
7.2.2	Replacing fixed type guide bushing device	7-11
7.2.3	Replacing synchronous rotary guide bushing device with fixed guide bushing device.....	7-13
7.2.4	Replacing fixed guide bushing device with synchronous rotary guide bushing device	7-15
7.3	Replacing and Adjusting Guide Bushing	7-17
7.4	Rearrangement of Back Spindle Device	7-19

7.4.1	Mounting and adjusting chuck.....	7-19
7.4.2	Adjusting back spindle chucking force	7-21
7.5	Adjusting knock-out device	7-25
7.5.1	Mounting and replacing knock-out jig.....	7-25
7.5.2	Adjusting protrusion amount of knock-out jig	7-27
7.5.3	Resetting knock-out overload alarm.....	7-28
7.6	Rearrangement of through-hole workpiece	7-29
7.7	Phase Adjustment between Spindle and Guide Bushing (Non-conformed Material)	7-34
7.8	Replacing Belt of Guide Bushing Driving Device.....	7-36
7.9	Mounting and Adjusting Workpiece Separator.....	7-40
7.10	Setting Up and Adjusting the Long Workpiece Device.....	7-47
7.10.1	Mounting stock pipe for long workpiece device	7-48
7.10.2	Mounting workpiece stock pipe	7-51
7.10.3	Mounting the receiver shelf for long workpiece device	7-52
7.10.4	Mounting cap nut and collar for long workpiece device	7-53
7.10.5	Adjusting position of longitudinal adjustment pipe	7-55
7.11	Adjusting the Workpiece Conveyor.....	7-56
7.12	Coolant Flow Detector (U53R)	7-58
7.12.1	Names and functions of components	7-59
7.12.2	Setting	7-60
7.12.3	Operation check / Maintenance	7-62
7.13	Connecting Automatic Bar Loader	7-63
7.14	Adjustment and Handling of Medium Pressure Coolant Device	7-64
7.14.1	Adjusting the nozzle.....	7-64
7.14.2	Notes on using the separate pump unit.....	7-68
8.	Screen Functions	8-1
8.1	Program Selection Screen.....	8-3
8.2	Preparation Screen.....	8-4
8.3	Tooling Pattern Screen	8-6
8.4	Check Screen.....	8-7
8.5	Automatic Operation Screen.....	8-9
8.6	MDI Screen.....	8-11
8.7	Handle Feed Screen.....	8-12
8.8	Zero Return Screen	8-13
8.9	Mechanical Adjustment Screen.....	8-14
8.10	List Screen.....	8-15
8.11	Edit Screen.....	8-16
8.12	Machining Data Screen.....	8-17
8.13	Program Conversion Screen.....	8-19
8.14	In/Out Screen	8-20
8.15	Memory Card Screen.....	8-25
8.16	Operator's Panel Screen.....	8-27
8.17	Offset Screen	8-29
8.18	Machine Structure Screen	8-30

8.19 Size Change Screen.....	8-32
8.20 Code Screen.....	8-33
8.21 Tool Life Management I.....	8-34
8.22 Tool Life Management II	8-36
Appendix. Operating Procedures	App-1
1. Procedure from Power-On to Automatic Operation.....	App-3
2. Procedure from Continuous Operation to Power-Off.....	App-5
3. Procedure for Entering Offset Data.....	App-5
4. Procedure for Clearing Offset Data.....	App-5
5. Procedure for Manual Operation (MDI).....	App-6
6. Procedure for Manual Operation (Pulse Handle).....	App-7
7. Procedure for Entering Program from External Device	App-7
8. Procedure for Outputting Program to External Device	App-8
9. Procedure for Creating New Program.....	App-8
10. Procedure for Calling Program.....	App-9
11. Procedure for Editing Program.....	App-9
12. Deletion Procedure for Program	App-10
13. Procedure for Entering Machining Data	App-10
14. Procedure for Selecting Program to be Executed	App-11
15. Procedure for Setting Counter	App-11
16. Procedure for Setting Tools (T01's, Tool and Rotary Tool)	App-11
16.1 When the material diameter is ϕ 11.0 mm or less:.....	App-11
16.2 When the material diameter exceeds ϕ 11.0 mm:	App-15
17. Procedure for Setting Tools (T11's)	App-18
18. Procedure for Setting Tools (T31's, T51's).....	App-21