

ERGODISC FLEXX 43 (with spray unit)

Preparation



Display 'Caution/Wet Floor' signs. Put on appropriate Personal Protective Equipment (PPE).



Lay the machine down with handle on the floor to fit pad/pad drive or brush.



Remove battery from charger.

Insert battery into battery compartment.



Fit additional weight(s) as required.



If required, fit and secure solution tank.

Fill with water and cleaning solution, as needed.



Insert water tank hose into top of machine and ensure solution feed cord is fitted and working.



If fitted, fill the spray unit with water and cleaning solution.

Test the spray button to ensure it is working.



Lower handle to a comfortable position by squeezing the right lower lever.



Press the correct cleaning speed button for the application.



To activate machine press and hold the orange button while also squeezing the upper lever(s).



Raise the handle to move to the right. Lower handle to move to the left.



First, clean along edges.



Work from side to side with overlapping passes.



When not in use, put the handle in an upright position. Switch battery off if left unsupervised.



Exchange batteries if further work is required.




Switch off battery when application is completed.



Remove battery.



Place the battery on the charger.
Orange = charging
Green = fully charged
Red = fault / error

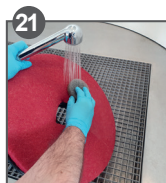

Remove pad/pad drive or brush. Wash and hang to dry.



Wipe machine clean with a damp cloth.



If the foam generator is fitted, empty and rinse thoroughly.



If the solution tank is fitted, empty and check/clean the valve as required.



Empty spray unit and check/clean system as required (flush with clean water). Leave the lid open to facilitate drying.



Do not store the machine with pad/brush fitted.

Maintenance

Speed setting

1. HD
2. Low
3. High

Primary application guidelines

Grinding / Sanding / Crystallization / TWISTER / Stripping
Stripping / Scrubbing / TWISTER / Carpet wet shampooing / Carpet dry foam shampooing / Carpet bonnet cleaning
Spray cleaning / Dry buffing / Carpet bonnet cleaning

ATTENTION!

Do not use the machine before you have read and understood the operating instructions!

Questions: 1-800-558-2332

www.taski.com

TASKI is one of four core areas of the Diversey business | Diversey - A Solenis Company. All logos and trademarks are owned by or licensed to Diversey, Inc.
© 2023 Diversey, Inc. All Rights Reserved. 101353-CHT en (23/342)

