

000 brown & sharpe.

tutor™ for windows™

INSTALLATION MANUAL

M1U039ED

竣業制造私人有限公司
Advanced Manufacturing Tools Pte Ltd
Blk 3016 Bedok North Ave 4 #04-15
EASTech Singapore 489947
Tel(65) 8442117 Fax(65) 8442127
E-mail:sales@amtpl.com.sg

Contents

List of Figures	ix
Introduction	x
Character Conventions	xi
1 Installation Requirements	1-1
Hardware Requirements	1-1
Software Requirements	1-1
2 Installing the Software	2-1
Installation Procedure	2-1
User Licence	2-6
Auxiliary Procedures for Systems with Windows 3.1	2-7
3 The General Setup Program	3-1
The File Menu	3-2
The General Configuration Menu	3-3
The Machine Parameters Window	3-3
The System Parameters Window	3-5
The Init Parameters Window	3-8
Mechanical Offset Window	3-11
Controller Window	3-12
The Element Parameters Menu	3-14
Default number of pts. Window	3-14
The Other Menu	3-15
The Sounds Parameters Window	3-16
The Colors Parameters Window	3-17
The Directories Window	3-18
The Help Menu	3-19
The Zmouse	3-20
4 The Output Setup Program	4-1
Output Devices Window	4-2
Personalization of the Output Format	4-5

The System Variables	4-8
The Measure Interface Window	4-10
Output Colors Window	4-12
5 The Password Manager Program	5-1
Protection Levels	5-1
Password Request	5-2
Using the Password Manager	5-3
The Levels	5-3
The Manager	5-5
A Error Codes	A-1