



OPERATOR'S MANUAL

SE-N2 SERIES

**CNC SURFACE &
FORM GRINDERS**

 **TECNO WASINO** CO.,LTD.

SEN2OP-0593-N

0. CONTENTS

	Page
1. SAFETY	1
1-1 Precautions for Operational Safety	1
1-2 Caution Plates	5
1-2-1 Alert symbol marks	5
1-2-2 Type of caution plates	5
2. OUTLINE	7
2-1 Designations and Functions of Each Parts	7
2-1-1 Major components of the machine	7
2-1-2 Overview of operation panels	11
2-1-3 Descriptions of operation panels	14
2-2 Specifications	33
2-2-1 Machine specifications	33
2-2-2 Standard accessories	35
2-2-3 CNC unit specifications	36
2-2-4 Special specifications	37
2-2-5 Optional devices and equipment	40
2-2-6 Main dimensions	42
3. INSTALLATION	43
3-1 Lifting	43
3-2 Location for Installation	44
3-3 Foundation	45
3-4 Cleaning and Leveling	46
3-5 Checking of Static Accuracy	47
3-6 Removal of Fixtures	48
3-7 Power Connection	50
3-7-1 Power rating	50
3-7-2 How to connect the power cable	50
3-7-3 How to check the power cable connection	53
3-7-4 How to check the transformer tap connection	54
3-7-5 Precautions when using leakage breaker	56

3-8	Preparations for Initial Operation	57
3-8-1	Initial oiling	57
3-8-2	Checking of lubrication state	58
3-8-3	Check list before initial operation	59
4.	BASIC OPERATIONS	60
4-1	Table Traverse Feed Operation	60
4-1-1	Manual traverse feed	60
4-1-2	Hydraulic traverse feed	60
4-1-3	Table stop	62
4-2	Power ON/OFF Operation	63
4-2-1	Turning ON the main power	63
4-2-2	Turning ON the CNC unit power	63
4-2-3	Turning OFF the CNC unit power	64
4-2-4	Turning OFF the main power	64
4-3	Reference Point Return Operation	65
4-3-1	Automatic reference point return	65
4-3-2	X-axis reference point return	66
4-3-3	Y-axis reference point return	66
4-4	Electromagnetic Chuck Operation	68
4-4-1	How to magnetize the chuck	68
4-4-2	Adjustment of magnetic force	68
4-4-3	How to turn off the magnetization	69
4-4-4	How to demagnetize the chuck	69
4-4-5	How to set the demagnetizing time	69
4-5	Manual Vertical(Y)/Cross(X) Feed Operation	71
4-5-1	Jog feed operation	71
4-5-2	Handle feed operation	73
4-6	Operation of Overhead Dresser	75
4-7	Automatic Operation	77
4-7-1	Checkup before automatic operation	77
4-7-2	Execution of CNC programs	78
4-7-3	Independent operation of canned cycles	78
4-8	Resetting of Overtravel Alarms	80
4-8-1	Software overtravel	80
4-8-2	Hardware overtravel	81
4-9	Miscellaneous Functions (M-codes)	83

5.	HANDLING OF GRINDING WHEELS	86
5-1	Checking the Wheel at Setup	86
5-2	Balancing the Wheel	86
5-2-1	How to balance the wheel	87
5-3	Wheel Fitting and Removal	89
5-3-1	How to fit the wheel	89
5-3-2	How to remove the wheel	90
5-4	Maximum Wheel Dimensions	91
5-5	Allowable Surface Speeds of Wheels	91
5-6	Dressing the Wheel	92
5-6-1	Method of dressing	92
5-6-2	Setting of hydraulic overhead dresser	92
5-6-3	Measures for worn diamond tool	94
5-6-4	Setting of bench dresser	94
6.	MAINTENANCE	95
6-1	Cleaning	95
6-2	Hydraulic Oil	96
6-3	Lubricating Oil	97
6-3-1	Lubrication system	97
6-3-2	Adjustment of lubricating oil feed	98
6-3-3	Lubrication of overhead dresser	99
6-4	Adjustment of Hydraulic Pressure	99
6-5	Adjustment of Table Reversing Motions	101
6-6	Start-up Checkups	102
6-7	Hydraulic System	103
6-7-1	Hydraulic circuit diagram	103
6-7-2	Hydraulic components	104
6-8	Electrical System	105
6-8-1	Arrangement of motors	105
6-8-2	Arrangement of solenoid valves	105
6-8-3	Arrangement of proximity/limit switches (1)	106
6-8-4	Arrangement of proximity/limit switches (2)	107
6-9	Setting of Thermal Relays and Timers	108
6-10	Adjustment of Wheel Spindle Inverter (Optional)	108
6-10-1	Setting of inverter parameters	108
6-10-2	Adjustment of wheel SPINDLE SPEED indicator	109

6-10-3 Inverter parameter setting table	111
6-11 NC Parameters	115
6-11-1 General	115
6-11-2 How to set NC parameters	116
6-11-3 NC parameter list	118
6-12 PC Parameters	123
6-12-1 How to set PC parameters	123
6-12-2 Keep Relays	124
6-12-3 Counters	136
6-12-4 Variable timers	138
6-12-5 PC parameter list	140
6-13 Adjustment of Reference Point Return Dogs	142
6-14 Setting of Linear Scales (Optional)	144
6-15 Adjustment of Magnetic Force	145
6-16 Self-Diagnosis by Input/Output Signals	147
6-16-1 Input signals	147
6-16-2 Output signals	154
6-17 Troubleshooting	160
7. REFERENCE MATERIALS	164
7-1 Materials and Optimum TYROLIT Grinding Wheels	164
7-2 Troubleshooting for Grinding Defects (1)	165
7-3 Troubleshooting for Grinding Defects (2)	166
7-4 Remedy for Wheel Trouble	166
8. OPTIONAL DEVICES AND EQUIPMENT	167
8-1 Dust Collector and Coolant Equipment	167
8-1-1 Overview	167
8-1-2 Components	168
8-1-3 Connection of cables and hoses	169
8-1-4 Coolant supply	169
8-1-5 Maintenance	170
8-2 Table Fixed Position Stop Device	172
8-3 On-the-table 3-way Dresser	173
8-4 Table Stopper	174

8-5	Automatic Feedrate Control System	175
8-5-1	Uses	175
8-5-2	Operating section	175
8-5-3	How to set the sensor	176
8-5-4	Adjustment of the sensor sensitivity	176
8-6	Running Operation Timer	178
8-6-1	Uses	178
8-6-2	Operation sequence	178
8-6-3	Operating section	179
8-6-4	Operating methods	181
8-6-5	Selection of running operation modes	185