

FANUC 0iT

ELECTRIC MANUAL

(EDITION: 0iTc-25HV-1A)

 TABLE OF CONTENTS

1. WIRING DIAGRAM

1.1 ELECTRICAL CABINET LAYOUT	A1
1.2 Oi-TC CONTROL UNIT	A3
1.3 8RY-1.PCB, 8RY-2.PCB LAYOUT	A7
1.4 8RY-3.PCB, 8RY-4.PCB LAYOUT	A8
1.5 CB105TB.PCB LAYOUT	A9
1.6 SYMBOL OF CIRCUIT	A10
1.7 POWER CIRCUIT	B1
1.8 POWER CIRCUIT	B2
1.9 POWER CIRCUIT	B3
1.10 POWER CIRCUIT.....	B4
1.11 POWER ON/OFF	C1
1.12 RELAY CIRCUIT.....	D1
1.13 RELAY CIRCUIT.....	D2
1.14 INPUT CIRCUIT.....	E1
1.15 INPUT CIRCUIT.....	E2
1.16 INPUT CIRCUIT.....	E3
1.17 INPUT CIRCUIT.....	E4
1.18 OUTPUT CIRCUIT -SOLENOID.....	F1
1.19 OUTPUT CIRCUIT -SOLENOID.....	F2
1.20 OUTPUT CIRCUIT -SOLENOID.....	F3
1.21 OPERATOR PANEL MODE SELECT.....	G1
1.22 OPERATOR PANEL RAPID SPINDLE OVERRIDE.....	G2
1.23 OPERATOR PANEL FEED RATE OVERRIDE.....	G1
1.23 OPERATOR PANEL PUSH BUTTON SWITCH.....	G5
1.24 OPERATOR PANEL PUSH BUTTON SWITCH.....	G6
1.25 OPERATOR PANEL PUSH BUTTON SWITCH.....	G7
1.26 OPERATOR PANEL PILOT LAMP.....	H1
1.27 OPERATOR PANEL PILOT LAMP.....	H2

2. CABLE & CONNECTOR PIN ASSIGNMENT

2.1 I/O INTERFACE C104 (1-CE56).....	01
2.2 I/O INTERFACE C105 (1-CE57).....	02
2.3 I/O INTERFACE C106 (2-CE56).....	03
2.4 I/O INTERFACE C107 (2-CE57).....	04
2.5 I/O INTERFACE CE56	05
2.6 I/O INTERFACE CE57	06

<u>2.7 CONNECTOR JA3 (MPG),JA7A(SPDL)</u>	<u>07</u>
<u>2.8 CONNECTOR JD1A(I/O link),JD5(RS232)</u>	<u>08</u>
<u>2.9 CONNECTOR JF1 (Feed Back),CP1A,CX2A,CX3,CX4.....</u>	<u>09</u>
<u>2.10 CONNECTOR</u>	<u>10</u>
<u>2.11 CONNECTOR JY1 (Spindle Meter),JYA2 (Spindle Feed back Mi)</u>	<u>11</u>
<u>2.12 CONNECTOR JYA3 (Spindle K16), JYA2 (Spindle Feed back MZi).....</u>	<u>12</u>

3. APPENDIX

<u>3.1 PMC TIMER LIST</u>	<u>TMR01</u>
<u>3.2 KEEP RELAY (K0.0 - K1.7).....</u>	<u>KRY01</u>
<u>3.3 KEEP RELAY (K2.0 - K3.7).....</u>	<u>KRY02</u>
<u>3.4 KEEP RELAY (K4.0 - K5.7).....</u>	<u>KRY03</u>
<u>3.5 M-CODE LIST</u>	<u>MF01</u>
<u>3.6 M-CODE LIST</u>	<u>MF02</u>
<u>3.7 PLC ALARM MESSAGE</u>	<u>ALM1</u>