

*Flash turn*  
*F30/35 Turning center*

*DAINICHI KINZOKU KOGYOU CO. LTD*

*F35 x 1250 S/N 28903 6T*

**BF3-1003AE**

# CONTENTS

	Page
<b>SECTION (A) INTRODUCTION</b> ( 1 ~ 1 )	A-1
<b>SECTION (B) BEFORE INSTALLATION OF MACHINE</b> ( 1 ~ 2 )	B-1
(B-1) ELECTRIC POWER SUPPLY	B-1
(B-2) LUBRICATING OIL AND HYDRAULIC FLUID	B-1
(B-3) COOLANTS	B-1
(B-4) FLOOR SPACE REQUIREMENTS	B-2
(B-5) ENVIRONMENTAL REQUIREMENTS	B-2
<b>SECTION (C) EQUIPMENT SPECIFICATIONS</b> ( 1 ~ 15 )	C-1
(C-1) GENERAL DESCRIPTION OF MACHINE	C-1
(a) CLASSIFICATION	C-1
(b) HEADSTOCK	C-1
(c) BED	C-1
(d) CARRIAGE	C-2
(e) TAILSTOCK	C-2
(f) LUBRICATION	C-2
(g) OPERATOR CONTROL PANEL	C-2
C-1-1-a General Arrangement and Dimensional Drawing (Distance Between Center: 600)	C-3
C-1-1-b General Arrangement and Dimensional Drawing (Distance Between Centers: 1250)	C-4
(C-2) MACHINE SPECIFICATIONS	C-5
(C-3) STANDARD NC SYSTEM SPECIFICATIONS	C-9
(C-4) NC SYSTEM OPTIONS	C-13
(C-5) STANDARD EQUIPMENT AND ACCESSORIES	C-14
(C-6) OPTIONAL EQUIPMENT AND ACCESSORIES	C-15
(C-7) OPTIONAL EQUIPMENT AND ACCESSORIES FOR TOOLING SYSTEM	C-16



## SECTION (D) HANDLING AND INSTALLING INSTRUCTIONS ( 1 ~ 12) D-1

### (D-1) HANDLING OF MACHINE D-1

### (D-2) INSTALLATION D-1

D-1-1-a Machine Lifting Diagram D-3

(Distance Between Center: 600)

D-1-1-b Machine Lifting Diagram D-3

(Distance Between Centers: 1250)

D-2-1-a Floor Space Requirement D-4

(Distance Between Center: 600) unit : mm

D-2-1-b Floor Space Requirement D-4

(Distance Between Center: 600) unit : inch

D-2-1-c Floor Space Requirement D-5

(Distance Between Centers: 1250) unit : mm

D-2-1-d Floor Space Requirement D-5

(Distance Between Centers: 1250) unit : inch

D-3-1-a Installation Drawing D-6

(Distance Between Center: 600) unit : mm

D-3-1-b Installation Drawing D-7

(Distance Between Center: 600) unit : inch

D-3-1-c Installation Drawing D-8

(Distance Between Centers: 1250) unit : mm

D-3-1-d Installation Drawing D-9

(Distance Between Centers: 1250) unit : inch

### (D-3) ELECTRIC POWER SUPPLY AND WIRING D-10

(a) ISOLATING DISCONNECT SWITCH D-10

(b) WIRING FROM ISOLATING DISCONNECT SWITCH TO MACHINE D-10

### (D-4) SWITCHING OF POWER SUPPLY LINES ACCORDING TO SUPPLY VOLTAGE AND CURRENT FREQUENCY D-10

### (D-5) PHASING FOR POWER SUPPLY TO NC SYSTEM D-11

### (D-6) EARTH LEAKAGE BREAKER D-12

## SECTION (E) LUBRICATION INSTRUCTIONS ( 1 ~ 9 ) E-1

### (E-1) GENERAL DESCRIPTION E-1

### (E-2) LUBRICATION UNIT E-2

E-2-1 Lubrication Unit E-3

(a) FLOAT SWITCH E-3

(b) LUBRICATING OIL DISTRIBUTOR E-4

E-2-2-a Lubricating Oil Piping System Diagram (1) E-4

E-2-2-b Lubricating Oil Piping System Diagram (2) E-5

(E-3) HYDRAULIC POWER UNIT	E-6
(E-4) COOLANT SUPPLY EQUIPMENT AND COOLANTS	E-7
(E-5) CHIP CONVEYOR	E-7
(E-6) LUBRICATION CHART	E-8
E-6-1 Lubricating Chart - Servicing Points	E-8
(E-7) RECOMMENDATION LIST	E-9
E-7-1-a Recommendation List (1)	E-9

## SECTION (F) GENERAL DESCRIPTION OF OPERATING INSTRUCTIONS ( 1 ~ 29 )

(F-1) BASIC CONFIGURATION OF CONTROL PANELS	F-1
(F-2) APPEARANCE OF MAIN CONTROL ENCLOSURE	F-2
F-2-1 Devices on Door and Side Panels of Main Control Enclosure (FANUC OT-C/OT-F)	F-2
(F-3) APPEARANCE OF CONTROL PANELS	F-3
F-3-1-a Control Panel with FANUC OT-C Controller	F-3
F-3-1-b Control Panel with FANUC OT-F Controller	F-3
(F-4) LAYOUT DIAGRAM OF NC OPERATION PANEL	F-4
F-4-1-a Layout Diagram of NC Operation Panel for FANUC OT-C	F-4
F-4-1-b Layout Diagram of NC Operation Panel for FANUC OT-F	F-4
(F-5) LAYOUT DIAGRAM OF MAIN OPERATION PANEL (MACHINE PANEL)	F-5
F-5-1 List of Controls and Instruments on Main Operation Panel	F-6
(F-6) LAYOUT DIAGRAM OF OPTION PANELS	F-7
F-6-1-a Layout Diagram of Option Panels (1)	F-7
F-6-1-b Layout Diagram of Option Panels (2)	F-8
(F-7) LAYOUT DIAGRAM OF OTHER PANELS	F-9
F-7-1 Layout Diagram of Data Input/output panel	F-9



(F-8) EXPLANATION OF FUNCTIONS OF OPERATING CONTROLS AND F-10

INDICATING INSTRUMENTS ON CONTROL PANELS

- (a) MAIN CONTROL ENCLOSURE F-10
- (b) NC OPERATION PANEL F-11
- (c) MAIN OPERATION PANEL (MACHINE PANEL) F-12
- (d) OPTION PANELS F-26
- (e) OTHER PANELS F-28

(F-9) GENERAL PRECAUTIONS FOR OPERATION F-29

(F-10) BASIC OPERATING PROCEDURES F-29

SECTION [G] OPERATING INSTRUCTIONS ( 1 ~ 14 ) G-1

(G-1) PREPARATION OF MACHINE AND CONTROL FOR OPERATING G-1

(G-2) MANUAL OPERATION OF MACHINE G-3

- (a) MANUAL CONTROL OF SPINDLE ROTATION G-3
- (b) MANUAL TOOL CHANGE AND SELECTION G-3
- (c) MANUAL POSITION AND FEED OF CARRIAGE G-3
- (d) MANUAL REFERENCE POINT RETURN G-5
- (e) OPERATION OF LUBRICATION UNIT G-6
- (f) OPERATION OF HYDRAULIC POWER CHUCK G-6
- (g) OPERATION OF HYDRAULIC TAILSTOCK G-7
- (h) OPERATION OF HYDRAULIC TAILSTOCK G-8
- (i) OPERATION OF CHIP CONVEYOR G-10
- (j) OPERATION OF PARTS CATCHER G-10
- (k) OPERATION OF AUTOMATIC SPLASH GUARD G-11

(G-3) OPERATION AND DISPLAY OF NC-OPERATION PANEL G-11

(G-4) OPERATION OF MACHINE IN THE "AUTOMATIC" MODE G-12

- (a) START-UP PROCEDURE FOR AUTOMATIC OPERATION G-12
- (b) MANUAL OPERATION DURING AUTOMATIC OPERATION G-13
- (c) OPERATION IN THE "MDI" MODE DURING AUTOMATIC OPERATION G-13

(G-5) EMERGENCY STOP AND RE-START OF OPERATION G-14

SECTION [H] PART PROGRAMMING ( 1 ~ 49 ) H-1

(H-1) FLOW DIAGRAM FOR PART PROGRAMMING PROCEDURE H-1

(H-2) CONTROLLED AXES H-2

(H-3) UNIT SYSTEM (INCREMENT SYSTEM) FOR INPUT DIAGRAM DATA H-2

(H-4) PREPARATORY FUNCTIONS (G FUNCTIONS)	H-3
H-4-1-a A List of G Codes for FANUC NC Controller (1)	H-3
H-4-1-b A List of G Codes for FANUC NC Controller (2)	H-4
H-4-1-c A List of G Codes for FANUC NC Controller (3)	H-5
H-4-1-d A List of G Codes for FANUC NC Controller (4)	H-6
(H-5) FEED FUNCTION (F FUNCTION)	H-7
(H-6) SPINDLE FUNCTION (S FUNCTION)	H-7
(a) CONSTANT SURFACE SPEED CONTROL (G96 and G97)	H-9
(b) CLAMPING OF MAXIMUM SPINDLE SPEED (G50)	H-11
(H-7) TOOL FUNCTION (T FUNCTION)	H-12
(H-8) MISCELLANEOUS FUNCTION (M FUNCTION)	H-15
H-8-1 A List of M Codes	H-15
(a) EXPLANATION OF M FUNCTIONS	H-16
(H-9) MACHINE SLIDE STROKES	H-22
H-9-1 Drawing Related to Swings	H-23
H-9-2-a Machine Travel Ranges (V12 - Distance Between Centers: 600)	H-24
H-9-2-b Machine Travel Ranges (V12 - Distance Between Centers: 1250)	H-24
H-9-2-c Machine Travel Ranges (V10 - Distance Between Centers: 600)	H-25
H-9-2-d Machine Travel Ranges (V10 - Distance Between Centers: 1250)	H-25
H-9-3-a Turret-Head Travel Range (V12 - Distance Between Centers: 600)	H-26
H-9-3-b Turret-Head Travel Range (V12 - Distance Between Centers: 1250)	H-26
H-9-3-c Turret-Head Travel Range (V10 - Distance Between Centers: 600)	H-27
H-9-3-d Turret-Head Travel Range (V10 - Distance Between Centers: 1250)	H-27
H-9-4-a Chucking Work Machineing Range (V12)	H-28
H-9-4-b Chucking Work Machineing Range (V12 - Facing Tool Holder)	H-28
H-9-4-c Chucking Work Machineing Range (V12 - Inside Tool Holder)	H-28
H-9-4-d Chucking Work Machineing Range (V10)	H-29
H-9-4-e Chucking Work Machineing Range (V10 - Facing Tool Holder)	H-29
H-9-4-f Chucking Work Machineing Range (V10 - Inside Tool Holder)	H-29



H-9-5-a	Relationship Between Toolholder (Turret) and Tailstock (V12)	H-30
H-9-5-b	Relationship Between Toolholder (Turret) and Tailstock (V10)	H-30
H-9-6-a	Tool Interference Diagram (V12) unit : mm	H-31
H-9-6-b	Tool Interference Diagram (V12) unit : inch	H-31
H-9-6-c	Tool Interference Diagram (V10) unit : mm	H-32
H-9-6-d	Tool Interference Diagram (V10) unit : inch	H-32

#### (H-10) TOOLING SYSTEM H-33

H-10-1	Tooling System Diagram for Type V12/V10 Turret	H-34
H-10-2	Turret Head, Type V12/V10 Turret	H-35
H-10-2	Turret Head, Type V12/V10 Turret	H-35
H-10-3	Tool Retaining Place for Type V12/V10 Turret	H-36
H-10-4	Facing Tool Holder for Type V12/V10 Turret	H-37
H-10-5-a	Inside Tool Holder for Type V12/V10 Turret	H-37
H-10-5-b	Inside Tool Holder for Type V12/V10 Turret	H-38
H-10-6	U Drill Holder for Type V12/V10 Turret	H-38
H-10-7-a	Boring Bar Sleeve, 32 to 20 mm Diameter, for Type V12/V10 Turret	H-39
H-10-7-b	Boring Bar Sleeve, 16 to 8 mm Diameter, for Type V12/V10 Turret	H-39
H-10-8-a	Drill Sleeve for Type V12/V10 Turret	H-40
H-10-8-b	Drill Sleeve for Type V12/V10 Turret	H-41
H-10-9	U Drill Sleeve for Type V12/V10 Turret	H-42
H-10-10	Availability and Order Number Chart for Tool Holder and Sleeve	H-43

#### (H-11) MACHINING PERFORMANCE CAPABILITIES OF MACHINE H-44

H-11-1	Spindle Speed - Output/Torque Diagram for Model F30 with FANUC OT-C . OT-F	H-45
H-11-2	Spindle Speed - Output/Torque Diagram for Model F35 with FANUC OT-C . OT-F	H-45

(H-12) CUTTING TOOLS AND CUTTING CONDITIONS	H-46
(a) CUTTING CONDITIONS FOR OD ROUGHING OPERATION	H-46
(b) CUTTING CONDITIONS FOR GROOVING OPERATIONS	H-46
(c) CUTTING CONDITIONS FOR THREAD-CUTTING OPERATIONS	H-46
(d) CUTTING CONDITIONS FOR DRILLING OPERATIONS	H-46
(e) CUTTING CONDITIONS FOR ID ROUGHING OPERATIONS	H-47
(f) CUTTING CONDITIONS FOR FINISHING OPERATIONS	H-48
(g) RELATIONSHIP BETWEEN SURFACE ROUGHNESS	H-48
(h) CALCULATION OF MAXIMUM PERMISSIBLE DEPTH OF CUT AND FEEDRATE AND CUTTING FORCE	H-49

SECTION (I) INSPECTION AND MAINTENANCE OF MECHANICAL SYSTEM COMPONENTS ( 1 ~ 87 )	I-1
(I-1) GENERAL INSTALLATION, OPERATION AND MAINTENANCE REQUIREMENTS	I-1
(I-2) TENSIONING OF V BELTS FOR HEADSTOCK DRIVE	I-2
(I-3) BACKLASH COMPENSATION FOR X- AND Z-AXIS MOVEMENTS	I-3
(a) BACKLASH MEASURING PROSEDURE	I-3
(b) CALCULATION OF THE AMOUNT OF BACKLASH COPPENSACTION	I-4
(I-4) RE-ADJUSTMENT OF MACHINE AFTER COLLISION FOR PARALLELISM BETWEEN SPINDLE AXIS AND Z-AXIS MOVEMENT	I-5
(a) ADJUSTMENT OF TURRET FOR PARALLELISM	I-5
(b) RE-ADJUSTMENT OF HEADSTOCK FOR ALIGNMENT	I-7
(c) RE-ADJUSTMENT OF MACHINE ORIGIN	I-9
(d) RE-ADJUSTMENT OF CENTER OF TURRET ROTATION	I-13
(I-5) CHECKING OF MACHONE FOR ACCURACY OF LEVEL	I-16
(I-6) HYDRAULIC SYSTEM AND POWER UNIT	I-17
(a) CONSTRUCTION AND SPECIFICATIONS OF HYDRAULIC POWER UNIT	I-17
(b) CHECKS OF HYDRAULIC POWER UNIT BEFORE OPERATION	I-18
(c) STARTING HYDRAULIC PUMP	I-18
(d) ADJUSTMENTS OF PUMP OUTPUT PRESSURE AND DELIVERY	I-18
(e) ADJUSTMENT OF DAMPENER	I-19
(f) INSPECTION AND MAINTENANCE OF HYDRAULIC POWER UNIT	I-20
(g) SCHEMATIC DIAGRAMS FOR HYDRAULIC SYSTEM	I-22
(h) HYDRAULIC PUMP TROUBLESHOOTING CHART	I-27
(i) HYDRAULIC SYSTEM COMPONENT PART LISTS	I-29



(I-7) HYDRAULIC TAILSTOCK SPINDLE (ON UNIVERSAL TYPE ONLY) I-34

- (a) ADJUSTMENT OF LIMIT-SWITCH AND TRIP-DOG ARRANGEMENT FOR TAILSTOCK SPINDLE TRAVEL I-34
- (b) TAILSTOCK SPINDLE THRUST ADJUSTMENT I-35
- (c) TAILSTOCK SPINDLE SPEED ADJUSTMENT I-36
- (d) ALIGNMENT OF TAILSTOCK (OFFSETTING) I-37

(I-8) HYDRAULIC POWER CHUCKS (OPTIONS) I-38

- (a) HYDRAULIC FLUID PRESSURE ADJUSTMENT I-38
- (b) CONNECTION OF SAFETY INTERLOCK SWITCHES (SENSORS) I-40
- (c) INSTALLATION OF HYDRAULIC POWER CHUCKS I-41
- (d) AVAILABLE TYPES AND SIZES OF HYDRAULIC POWER CHUCK I-44
- (e) INSPECTION AND MAINTENANCE OF HYDRAULIC POWER CHUCKS I-61
- (f) MAINTENANCE OF ROTARY CYLINDER I-67
- (g) LENGTH OF DRAW BAR I-69
- (h) CUTTING OF SOFT JAWS FOR HYDRAULIC POWER CHUCKS OF BOTH SOLID AND HOLLOW TYPES I-79

(I-9) COLLET CHUCKS I-80

- (a) AVAILABLE TYPES AND SIZES OF COLLET CHUCK I-80
- (b) INSTALLATION AND ALIGNMENT I-81
- (c) LUBRICATION I-81
- (d) INSTALLATION AND REMOVAL OF COLLET I-81

(I-10) CHIP CONVEYOR (OPTION) I-84

- (a) INSTALLATION I-84
- (b) OPERATION I-84
- (c) SAFETY DEVICE FOR OVERLOAD PROTECTION I-85
- (d) INSPECTION AND MAINTENANCE I-85
- (e) TROUBLESHOOTING GUIDE I-87

SECTION [J] INSPECTION AND MAINTENANCE FOR ELECTRIC EQUIPMENT (1 ~ 8) J-1

(J-1) INSPECTION AND MAINTENANCE J-1

(J-2) ELECTRICAL SYSTEM COMPONENTS J-2

- (a) ELECTROMAGNETIC SWITCHES J-2
- (b) THERMAL OVERLOAD (OL) RELAYS J-2
- (c) CONTROL RELAYS J-2
- (d) CIRCUIT PROTECTORS J-2
- (e) FUSES J-2

(J-3) MACHINE ALARM J-3

(a) MACHINE ALARM CHECKS THROUGH PC-DIAGNOSIS J-3  
(b) MACHINE ALARM DISPLAY J-3

(J-4) DRY CELLS FOR MEMORY BACKUP J-6

(J-5) PROXIMITY AND LIMIT SWITCHES J-7

SECTION (K) DAILY INSPECTION AND MAINTENANCE ( 1 ~ 2 ) K-1

(a) CHECK POINTS FOR HYDRAULIC AND LUBRICATION SYSTEM K-1  
(b) CHUCK POINTS FOR NC SYSTEM K-2  
(c) OTHER CHECK POINTS FOR MACHINE AND CONTROL SYSTEM K-2

SECTION (L) PERIODIC MAINTENANCE CHECK LIST ( 1 ~ 3 ) L-1

SECTION (M) APPENDICES (DIAGRAM AND DRAWINGS) ( 1 ~ 2 ) M-1

(M-1) LATHE SPINDLE NOSE DIMENSIONS FOR MODEL F30 NC LATHES M-1

(M-2) LATHE SPINDLE NOSE DIMENSIONS FOR MODEL F30 NC LATHES M-2