


## **QUICK START GUIDE**

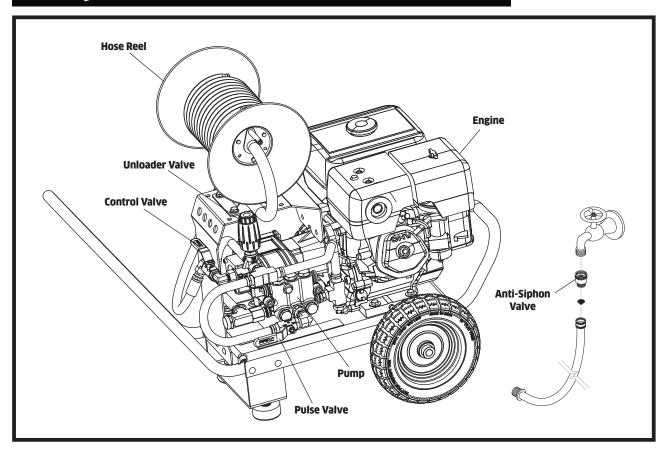



## **ASSEMBLY INSTRUCTIONS/PRESSURE WASHER**




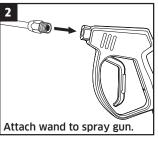


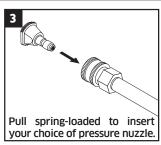

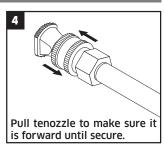

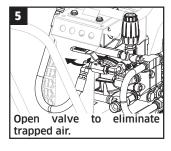


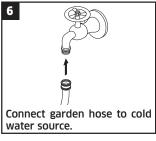


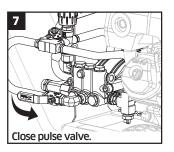


## **QUICK START GUIDE**


## **OPERATING INSTRUCTIONS/JETTER**

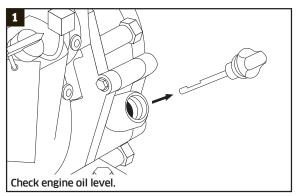


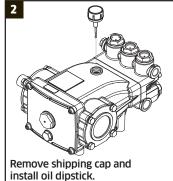





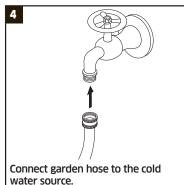


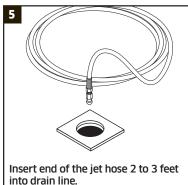


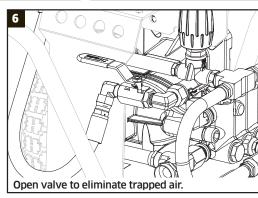

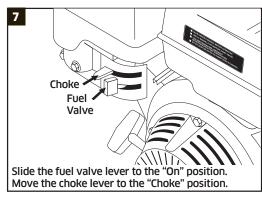


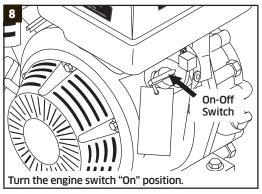

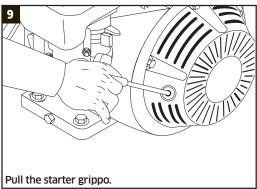

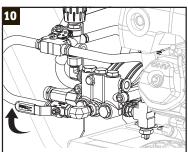

The pulse control valve is located on the front of the pump, turn valve on to engage the pulse.

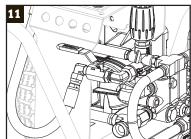

After drain cleaning, run clear water throught the sytem, Always leave ball valve in open position when turning off engine.