




INSTRUCTION

CY-L1630G LATHE

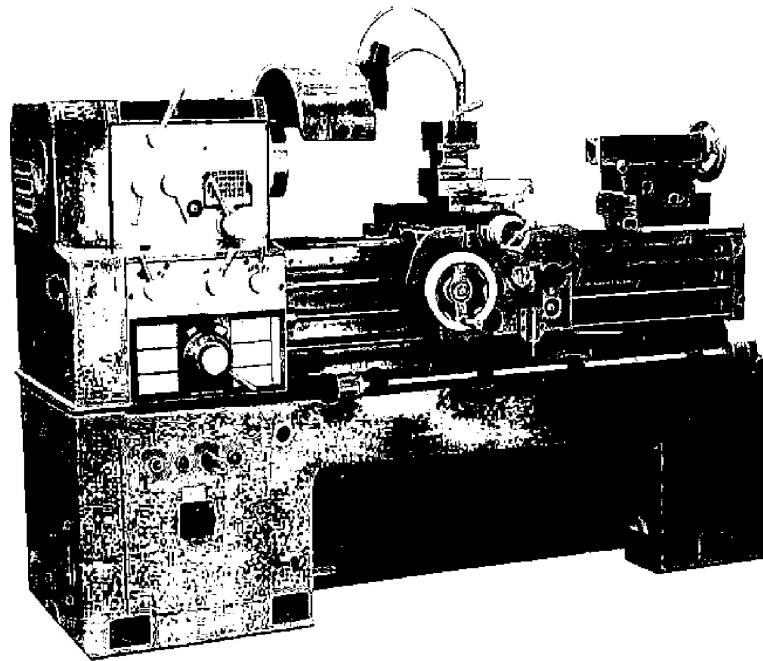

**YUNNAN MACHINE TOOL WORKS
THE PEOPLE'S REPUBLIC OF CHINA**

TABLE OF CONTENTS

1.	SPECIFICATIONS AND ACCESSORIES	1
	1-1 Specifications	1
	1-2 Accessories	2
2.	INSTALLATION OF MACHINE	3
	2-1 Floor space	3
	2-2 Foundation Work and leveling	3
	2-3 Unpacking	5
	2-4 Unloading Points	5
3.	MACHINE NOMENCLATURE	6
4.	PREPARATION FOR OPERATION	7
	4-1 Electrical Wiring	7
	4-2 Pre - Operation Instructions	7
5.	LUBRICATION	8
	5-1 Headstock Lubrication	8
	5-2-1 Feed Box Lubrication	8
	5-2-2 Lubrication for lever change Inch/Metric thread cutting Gear box	9
	5-3 Lubrication Apron	9
	5-4 Miscella	9
6.	EQUIPMENT IN LEG	10
	6-1 Main structure	10
	6-2 Adjusting Tension of The V - blets	10
	6-3 Braking Device	11
7.	HEADSTOCK	11
	7-1 Main Structure	11
	7-2 Main Spindle Speeds	11
	7-3 Adjustment of Main Spindle Bearings	14
	7-4 Chucks and Chuck Mounting	15
8.	FEEDS	17
	8-1 Structure	17
	8-1-2 Feed Gearbox	17
	8-2 Example for Cutting Threads	19
	8-3 Safty Devices	22

9.	APRON	23
	9 - 1 Main Structure	23
	9 - 2 Thread Cutting	23
	9 - 3 Automatic Feed	24
10.	CARRIAGE	24
	10 - 1 Main Structure	24
	10 - 2 Cross Slide and Accessories	24
	10 - 3 Compound Slide	24
	10 - 4 Tool Posts	24
	10 - 5 Adjustment of clearance on cross feed screw	26
11.	TAILSTOCK	27
	11 - 1 Main Structure	27
	11 - 2 Operation	27
	11 - 3 Tailstock Spindle adjustment	28
	11 - 4 Tailstock clamp Foot Adjustment	28
12.	ELECTRICAL SYSTEM	28
	12 - 1 Electrical Supply	28
	12 - 2 Switch and Relay	28
13.	THREAD DLAL	29
14.	ELECTRICAL DIAGRAM	30
15.	CUTTING SPEED DIAGRAM	31