



SHE HONG INDUSTRIAL CO., LTD.

<http://www.hartford.com.tw>

Tel: 886-4-23592747

Fax: 886-4-23503443

Machine Instruction MANUAL

For VMC-560 / HSM-560

Doc. NO.	ME050	Ver. NO.	03	Issued Date.	2007.01
FILE NAME					

INDEX

Chapter 1 FOREWORD	1-1
Chapter 2 SAFETY PRECAUTIONS	
2.1 General Safety Precaution	2-2
2.2 Machine Tool Safety Precautions	2-3
2.3 Illustration of Hazard Region (Including Machinery and Electric)	2-4
2.4 Illustration of Safety Device Position	2-6
2.5 The Position of Warning and Sign	2-7
Chapter 3 OUTLINE OF MACHINE	
3.1 Concept of This Machine and Noise Level	3-2
3.1.1 Conception of This Machine	3-2
3.1.2 Airborne Noise	3-5
3.2 Profile Diagram and Main Part Name	3-6
3.2.1 Profile Drawing (Chip collecting tank type)	3-6
3.2.2 Profile Drawing (Link Type Chip Conveyor)	3-7
3.2.3 Principal Parts Name for VMC-560AH / AP	3-8
3.2.4 Principal Parts Name for HSM-560A	3-9
3.2.5 Principal Parts Name for HSM-560S	3-10
3.3 Maximum Floor Space	3-11
3.3.1 Chip collecting tank type	3-11
3.3.2 Link Type Chip Conveyor	3-12
3.4 Working Range	3-13
3.4.1 Processing range	3-13
3.4.2 Table size & T-slot size	3-13
3.5 Machine Specifications	3-14
3.6 Tool Specification	3-15
3.6.1 Tool Shank and Pull Stud Bolt Drawing for VMC-560AH / AP	3-15
3.6.2 Limitation of Tool Length and weight for VMC-560AH / AP	3-15
3.6.3 Limitation of Tool Length and weight for HSM-560	3-16
3.7 Spindle Speed Output Performance Curve	3-17
3.7.1 VMC-560AH (DDT. Type)	3-17
3.7.2 VMC-560AP (Pulley Type)	3-18
3.7.3 HSM-560 (Built-in Type)	3-21

Chapter 4 PREPARATION BEFORE PACKING UP

4.1 The Requirement of Foundation.....	4-2
4.1.1 Space Limits.....	4-2
4.1.2 Installation Environment.....	4-3
4.1.3 Foundation	4-4
4.1.4 Foundation diagram	4-5
4.1.5 Foundation installation	4-7
4.2 The Requirement of Power Sources	4-9
4.2.1 Power and Grounding	4-9
4.2.2 Compressed Air	4-10
4.3 The Requirement of Transportation Equipment.....	4-11

Chapter 5 TRANSPORTATION AND INSTALLATION

5.1 Precaution on Transportation for the Sealed Package	5-2
5.2 Precaution after Opening Package	5-4
5.3 The Transportation and Storage after Opening Package	5-5
5.3.1 The Suggested Method for Lifting the Machine.....	5-5
5.3.2 Note of Transporting the Machine	5-6
5.3.3 Storage.....	5-6
5.4 Precaution on Installation	5-7
5.5 Leveling Adjusting	5-7

Chapter 6 PREPARATIONS BEFORE TRIAL RUN

6.1 Cleaning.....	6-2
6.2 Removing Protection Attachment.....	6-3
6.3 VMC-560 Combination and start of Balance System	6-4
6.4 Replenishing Lubricant.....	6-5
6.5 Hydraulic and Pneumatic Piping Method	6-7
6.5.1 Air Supply.....	6-7
6.5.2 Coolant Supply.....	6-7
6.6 Electricity Connection and Grounding Method	6-8
6.7 Safety Inspection.....	6-9
6.8 Warming-up Explanation	6-10

Chapter 7 SETTING AND ADJUSTING

7.1 Structural Setting and Adjustment	7-2
7.1.1 Installation Methods of LM Linear Guide Ways	7-2
7.1.2 VMC-560 Identification Marks and Troubleshooting.....	7-4
7.1.3 Leveling Adjustment.....	7-7
7.1.4 VMC-560 Adjustment of Pull Stud Kick-Out Amount	7-8
7.1.5 Adjustment of Tool Change Point (HSM-560S)	7-9
7.1.6 Adjustment of Tool Change Point (ARM TYPE).....	7-10
7.1.7 The Adjustment of the CAM-ATC Mechanism	7-11
7.2 Pressure Adjustment and Setting	7-14
7.2.1 Pneumatic System	7-14
7.2.2 Air Pressure System.....	7-17
7.2.3 Control part	7-19
7.2.4 Oil cooling System	7-22
7.2.5 Hydraulic parts	7-25
7.2.6 The Control Component.....	7-27
7.2.7 Air conditioning unit for linear scale system	7-31
7.3 Lubrication Adjusting and Setting	7-33
7.3.1 The control part.....	7-33
7.3.2 Lubrication circuit	7-35
7.4 Geometric Precision Adjustment	7-36

Chapter 8 MAINTENANCE

8.1 Regular Inspection	8-2
8.1.1 Inspection before Starting, After Starting and End of Daily Operation	8-2
8.1.2 Weekly, Monthly, Seasonal and Annual Inspection	8-4
8.2 Lubrication Method.....	8-5
8.3 Cleaning and Replacement Method	8-10
8.3.1 The Cleaning of the Lubrication Oil Reservoir.....	8-10
8.3.2 Air Filter.....	8-12
8.3.3 Coolant Tank	8-15
8.3.4 Assembly Precautions after Cleaning or Replacing	8-17
8.3.5 The Oil Cooler for the Spindle Cooling	8-18
8.4 The Disposal of Waste Water, Oil, and Waste Material	8-21
8.5 The replacement method of the acrylic window of safety door:.....	8-22

Chapter 9 TROUBLESHOOTING

9.1 Troubleshooting For Circuit Control Parts	9-2
9.2 Pump Installation and Piping And Trouble Shooting.....	9-7
9.2.1 Installation and Piping	9-7
9.2.2 Operation and Important Notes	9-8
9.2.3 Trouble Shooting.....	9-9

Chapter 10 MAINTENANCE INFORMATION

Appendix 1 Assembly drawing