


CNC SYSTEMS


OSP-U100M

OSP-U10M

OPERATION MANUAL

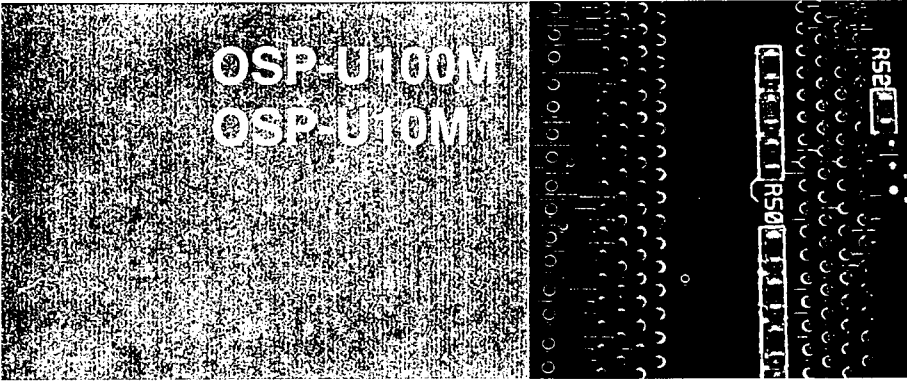

OSP-U100M
OSP-U10M

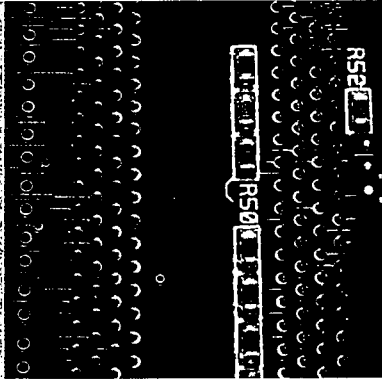

RS232C

TABLE OF CONTENTS

PAGE

I. SPECIFICATIONS

SECTION 1	FOREWORD	1
1.	OSP7030M/730M Specifications	4
2.	Operation Transfer Chart	13

II. OPERATION

SECTION 1	OPERATION	36
1.	Basic Construction of Operation Panels	36
2.	Outline of Controls on Operation Panel	37
2-1.	Operation Mode Selection Keys	37
2-2.	Data Setting Mode Selection Keys	37
2-3.	NC Status Indicating lamps	38
2-4.	Other Controls on NC Operation Panel	39
2-5.	Controls on Machine Operation Panel	41
2-6.	Mode Selection Keys	45
SECTION 2	POWER ON/OFF OPERATION	49
1.	Turning on the Power	49
2.	Turning off the Power	50
3.	Emergency Stop	50
SECTION 3	MANUAL OPERATION FUNCTIONS	51
1.	Manual Axis Feed Functions	51
1-1.	Manual Rapid Feed	51
1-2.	Manual Cutting (Jog) Feed	52
1-3.	Manual Pulse Feed	53

	<u>PAGE</u>
2. Spindle Operation	54
2-1. Spindle Rotation	54
2-2. Spindle Stop	54
2-3. Spindle Release	54
2-4. Spindle Orientation	54
3. Indexing Swivel Head (Indexing Attachment)	55
4. ATC	56
4-1. ATC Operations	56
4-1-1. Establishment of Correspondence between Toolpot Numbers and Tool Numbers by Manual Tool Change Operation	56
4-1-2. Operation on ATC Operation Panel	60
4-2. Manual Tool Change	63
4-3. Manual Magazine Operation	64
4-4. Manual Tool Change in Automatic Mode Operation	66
5. APC	67
5-1. APC Operation	67
5-2. Automatic APC Operations	69
5-3. Manual APC Operations	69
6. Other Functions	71
 SECTION 4 MDI OPERATION	 72
1. Operation Procedure	72
2. Automatic Mode Operation and MDI Mode Operation	74
3. Subprogram Call in the MDI Mode Operation	75
 SECTION 5 AUTOMATIC MODE OPERATION	 76
1. Main Program Selection and Operation	76
2. Schedule Program Selection and Operation	84
2-1. Selection and Operation of Schedule Program	84
3. Cycle Start and Slide Hold	87
4. Resetting NC	90
5. Sequence number Search and Mid-Start	91

	<u>PAGE</u>
6. Return Search and Sequence Restart	93
6-1. Return Search	93
6-2. Sequence Restart	95
7. Sequence Stop (Option)	96
8. Single Block	98
9. Optional Block Skip	98
10. Program Branch	99
11. Optional Stop	99
12. Mirror Image	99
12-1. Mirror Image in the Work Coordinate System	101
13. Override	104
13-1. Feedrate Override	104
13-1-1. Rapid Feedrate Override	104
13-1-2. Cutting Feedrate Override	104
13-2. Spindle Speed Override	104
14. Manual Intervention During Automatic Operation and Restart	105
15. Inserting Pulse Handle Operations	107
16. Lock Functions	107
16-1. Machine Lock	107
16-2. Cancellation of Axis Command	108
16-3. S, T, and M Function Lock	108
17. Dry Run	108
18. Library Program Registration	109
19. Operation End Light (Option)	111
20. Operation End Buzzer (Option)	112
21. Error Light (Option)	112
22. Auto Power Off (Option)	112
23. Work Counter (Option)	112
24. Hour Meter (Option)	113
24-1. POWER ON TIME Hour Meter	113
24-2. NC RUNNING TIME Hour Meter	113
24-3. CUTTING TIME Hour Meter	113
24-4. SPINDLE REVOLUTION TIME Hour Meter	113

SECTION 6	DISPLAY ON NC OPERATION PANEL	114
1.	Status Indicating Lamps	114
2.	Actual Position Display	115
2-1.	Actual Position Display	115
2-2.	RELATIVE ACT POSIT Screen	119
3.	Program Display	126
4.	Block Display	129
5.	ATC Tool Setting Data Display (Memory-Random ATC Specification)	132
6.	Message Display (Option)	133
7.	Check Display	134
7-1.	Display Screen	136
7-1-1.	NC Specification Codes	136
7-1-2.	NC Axis Data	137
7-1-3.	Diagnostics	139
7-1-4.	System Variables	140
7-1-5.	PLC Axis Data	145
7-1-6.	MCS Diagnostics	146
8.	Run Guide Display	147
SECTION 7	HELP FUNCTION	150
1.	Summary	150
2.	Operation Procedure	151
3.	Operation At The Guidance Display Screen	154
4.	Operation At The Alarm History (Log) Display Screen	155
5.	Operation Examples	156

III. DATA OPERATION

SECTION 1	DATA SETTING	157
1.	Mode Selection Keys	157
2.	Data Setting	159

	<u>PAGE</u>
3. Data Set Commands	161
3-1. Commands for Data Setting	161
3-1-1. SET Command	161
3-1-2. ADD Command	161
3-1-3. CAL Command	162
3-2. Commands for Parameter Selection	162
3-2-1. ITEM Command	162
3-2-2. SEARCH Command	163
3-2-3. AXIS CHANGE Command	164
3-2-4. Cursor Keys	164
3-2-5. Page Keys	164
3-2-6. EXTEND Command	165
3-3. Input/Output Commands for Peripherals	166
3-3-1. READ Command	166
3-3-2. PUNCH Command	168
3-3-3. Verify	171
3-3-4. Omitting the File Name and Device Name	171
3-4. Other Commands	172
3-4-1. Back Up Command	172
4. Zero Set Commands	173
4-1. Work Coordinate System Origin	173
5. Tool Data Set Commands	175
5-1. Tool Length Offset and Cutter Radius Compensation	175
5-2. ATC Pot No./Tool No. Table	176
5-2-1. Memory-random ATC Specification	176
5-2-2. Fixed Address ATC Specifications	179
5-2-3. Clearing/Setting Tool Numbers	180
6. Parameter Setting	181
 SECTION 2 PROGRAM OPERATION	 182
1. List of Program Commands	182
2. Date	185
3. Directory	186
4. File Transfer	189
4-1. Read	189
4-2. Punching Out Stored Program Data	193

	<u>PAGE</u>
4-3. Verifying Punched Out Programs	197
4-3-1. Precautions for Tape Reading-in, Punching-out, and Verifying Operations	201
4-4. Duplication of Stored Program	205
4-5. Tape Reader Operation – Fast Forward Feed	208
4-6. Tape Reader Operation – Rewind	209
4-7. PIP Quit	210
5. Program Editing	211
5-1. Commands Used in the Program Edit Mode	213
5-2. Fundamental Operations Necessary for Program Editing	214
5-2-1. Readout of a Program File from the Memory	214
5-2-2. Readout of a Program File from the Memory Using Wild Card (“*”, “*.*)”	216
5-2-3. Cursor Operations	217
5-2-4. Page Down	221
5-2-5. Page Up	221
5-3. One Line Insertion	222
5-4. One Line Deletion	223
5-5. One Character Insertion	224
5-6. One Character Deletion	225
5-7. Deletion	226
5-8. One Line Erasing	228
5-9. Find	230
5-10. Change	233
5-11. Copy, Move, and Extract	235
5-11-1. Copy	236
5-11-2. Move	238
5-11-3. Extract	240
5-12. Page Mode	242
5-13. Insert Mode	243
5-14. Power Failure/Shutdown during Editing	244
5-14-1. In-editing Comment	244
5-14-2. Alarm	245
5-14-3. Not-guaranteed Area Indicating Symbol	246
5-14-4. File Edit Starting Processing	247
6. Multi-file Transfer (MPIP)	248
6-1. Multi-file Read	248
6-2. Multi-file Punch	251
6-3. Multi-file Verify	254
6-4. Quitting Multi-file Transfer	258
6-5. Notes on Using Multi-file Transfer Sub Commands	259

	<u>PAGE</u>
7. List	262
8. Data Arrangement in Memory	266
9. Time	267
10. Initializing	268
11. Deletion	269
12. Rename	271
13. Free	273
14. Protect	275
15. Directory-selection-based File Operation Function	277
15-1. File Processing	277
15-1-1. Procedure for Executing File Processing	277
15-1-2. Method for Creating Commands	279
15-1-3. Command Execution	282
15-1-4. Operation Transition	283
15-2. Creating and Editing Commands	284
15-2-1. Command Creation Screen	284
15-2-2. Operation of the Edit Pointer	285
15-2-3. Editing Modes	286
15-2-4. Deleting Characters	287
15-2-5. Notes on Creating and Editing Commands	288
15-3. Use of the Command History	290
15-4. Selecting Files From Directories (OSP Format)	291
15-4-1. Procedure for Selecting Files from Directories	291
15-4-2. Directory Selection Screen	292
15-4-3. Cursor and Page Operations	293
15-4-4. Function Key [F6] (RETURN), [F7] (CANCEL) and Cancel Key	294
15-4-5. Effects of the Editing Modes	295
15-4-6. Directory Display Method	296
15-5. Selecting Files From Directories (MS-DOS Format)	299
15-5-1. Procedure for Selecting Files from Directories	299
15-5-2. Directory Selection Screen (for MS-DOS Format Devices)	300
15-5-3. Changing the Directory	301
15-5-4. Function Key [F6] (RETURN), [F7] (CANCEL) and Cancel Key	302
15-5-5. Directory Display Method	303

	<u>PAGE</u>
SECTION 3 DATA INPUT/OUTPUT OPERATION	304
1. NC Program Input/Output Function Using MS-DOS Format Floppy Disk	304
1-1. Operation Overview	304
1-2. Specifying MS-DOS File Names	304
1-3. Command List	305
1-4. DIR (directory)	307
1-5. COPY (copying)	308
1-6. RENAME (renaming)	311
1-7. DELETE (delete)	313
1-8. FREE (free)	314
1-9. PROTECT (protect)	316
1-10. Special Input/Output Function For Work Program Files	318
1-10-1. Program Input	318
1-10-2. Program output	319
1-11. Quitting MS-DOS	321
1-12. Character Codes	322
1-13. Miscellaneous Cautions	322
2. OSP Format I/O Function	324
2-1. Operation Overview	324
2-2. Operation Commands	325
2-3. Types of Floppy Disk	326
3. Tape Punch Interface	327
3-1. Operation Commands	327
3-2. Parameter Settings	329
3-3. Tape Format	337
3-3-1. Input Format	337
3-3-2. Output Format	338
3-3-3. EIA Special Codes	339
3-4. Specifications	340
3-4-1. RS232C Interface	340
3-5. Connection to Peripheral Devices	343
3-5-1. BTR System (No DC Codes)	343
3-5-2. DC Code Control	346
3-5-3. DC Code Control TYPE2	349
3-5-4. Slave Station Function	352

IV. PARAMETER

SECTION 1	KINDS OF PARAMETERS	356
SECTION 2	PARAMETER TABLE BY FUNCTION	357
SECTION 3	DESCRIPTION OF PARAMETER AND SETTING PROCEDURE	361
1.	Display Select Screen (Selection for Display and Not-display of Parameter Setting Screens)	364
2.	Common Variables	366
3.	User Parameters	368
4.	G/M Code Macro	370
5.	NC Optional Parameter (Long Word)	371
6.	NC Optional Parameter (Word)	378
7.	NC Optional Parameter (Bit)	388
8.	Unit Systems for Programming	411
9.	NC Optional Parameter RS232C (CN0:)	413
10.	NC Optional Parameter SPINDLE (OKUMA VAC)	416
11.	System Parameter	419
12.	Pitch Error Compensation	425
13.	Machine Axis Parameter	428
14.	Machine User Parameters	435
14-1.	Coolant Parameters	435
14-2.	Power Save/Shutdown Parameters	437
14-3.	Timers	438
14-4.	Indicating Lamp Parameters	438
14-5.	Buzzer Parameters	439
14-6.	Spindle	440
14-7.	ATC/Tool Exchange	441
14-8.	Magazine Parameters	441
14-9.	External M Command Parameters	442
14-10.	External Hour Meter Parameters	442

	<u>PAGE</u>
14-11. Door Interlock Parameters	443
14-12. Axis Lubrication Parameters	443
14-13. System Check Mode	444
14-14. External Program Selection Parameters	444
14-15. Chuck	444
15. Machine System Parameters	454
15-1. Spindle Parameters	454
15-2. ATC Parameters	455
15-3. APC Parameters	455
15-4. AAC Parameters	455
15-5. Home Position Parameters	456
15-6. MCS Parameters	457
15-7. Power Sequence Parameters	457
15-8. Axis Exchange Parameters	457
15-9. ATC Arm Parameters	458
15-10. ATC Arm Torque Limiter Parameters	458

V. APPENDIX

SECTION 1 APPENDED FIGURES	464
1. NC Operation Panel	464
2. Machine Operation Panel	465
3. Option Panel	466
4. Manual Tool Change Operation Panel for OSP	467
4-1. Manual Tool Change Operation Panel (Vertical Machining Centers)	467
4-2. Manual Tool Change Operation Panel (Horizontal Machining Centers)	467
4-3. Manual Tool Change Operation Panel (MDB-A/B, MCV-A/B)	468
4-4. Manual Tool Change Operation Panel (MDB-A/B, MCV-A/B)	468
5. Magazine Manual Operation Panel	469
5-1. Magazine Manual Operation Panel (Vertical Machining Centers)	469
5-2. Magazine Manual Operation Panel (Horizontal Machining Centers)	470
5-3. Magazine Manual Operation Panel (Double Column)	471
6. Parallel Type 2-Pallet APC Operation Panel	472
6-1. Parallel Type 2-Pallet APC Operation Panel (Vertical Machining Centers)	472
6-2. Parallel Type 2-Pallet APC Operation Panel (Horizontal Machining Centers)	472
7. Rotary Type 2-Pallet APC Operation Panel	473

	<u>PAGE</u>
8. Attachment Operation Panel	474
SECTION 2 TABLES OF COMMAND CODES	475
1. List of G Codes	475
2. List of Mnemonic Codes	480
3. List of M Codes	481