

# **Operation of Metrosoft CM**

**Version 2.3**








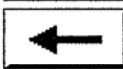







**Metromec Software AG**  
**Comercialstrasse 20**  
**CH-7007 Chur**  
**Tel. +41-81-257 07 00**  
**Fax +41-81-257 07 01**

# ***CONTENTS***

- 1. General operation**
- 2. Measurement of ruled surfaces**
- 3. Measurement of Free-Form Surfaces**
- 4. Element Construction**
- 5. Coordinate and Probe Systems**
- 6. Features**
- 7. Inspection Reports**
- 8. Part Inspection Programming**
- 9. Data base**
- 10. Construction tables**
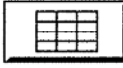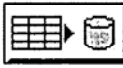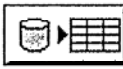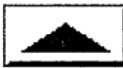
# 1. General operation
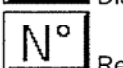
## CONTENTS

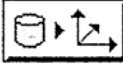1. GENERAL OPERATION	1-1
Metrosoft CM Help System	1-3
Screen layout	1-3
Dialogue window	1-5
Operation of Metrosoft CM	1-6
Management functions	1-7
 Activate or configuration of a Quick selection table	1-7
 Configuration of a Quick selection table	1-7
 Load a Quick selection table	1-8
 Next Quick selection table	1-8
 Previous Quick selection table	1-8
 Abort current function or undo last function	1-8
 Display next element in left window	1-9
 Display previous element in left window	1-9
 Recall element from data base to left window	1-9
 Select elements from element list	1-10
 Lock element in the right window	1-10
Screen clicks	1-10
Exchange left and right element window content	1-10
Select stylus	1-11
Show/define position of motorized probe head (MPH)	1-11
Load current probe system from data base	1-12
Activate/deactivate fixed probe	1-12
 Load new coordinate system from data base	1-12
 Switch between the PIP operating modes	1-13
Data record display window wide/narrow	1-13
Switch display with right mouse button (selection menu)	1-14
Text menu line	1-22
System selection menu	1-22
Selection menu for data base	1-26
Selection menu for measuring machine	1-26
Selection menu for probe	1-37



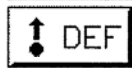





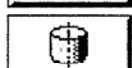
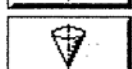
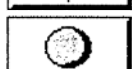
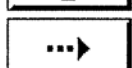
Selection menu for output to printer or plotter	1-43
Selection menu for special functions	1-52
DMIS	1-53
CAA Computer Aided Accuracy	1-56
Position errors	1-56
Perpendicularity deviations	1-57
Linearity deviations	1-57
Rolling, yaw and pitch deviations	1-57

## 2. Measurement of geometrical elements (plane, cylinder, cone, sphere, ...)






### CONTENTS

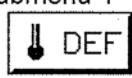


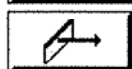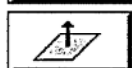



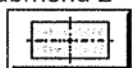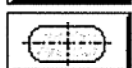

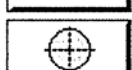

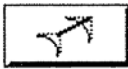

#### 1. MEASUREMENT OF GEOMETRICAL ELEMENTS (PLANE, CYLINDER, CONE, SPHERE, ...) 2-1

##### Submenu 1 2-3

	DEF Specification of terminate conditions for measured elements 2-3
	DEF Specifications for element measurement and storage 2-4
	DEF Specifications for surface point 2-6
	Measure a point / plane 2-7
	Measure a surface point 2-7
	Measure a line/plane 2-8
	Measure a plane 2-8
	Measure a circle/cylinder 2-9
	Measure a cylinder 2-10
	Measure a cone 2-11
	Measure a sphere 2-11
	Switch to measurement of 2D or theoretical elements 2-12
	Automatic measurement of planes, surfaces and surface points. 2-12
	Automatic recording of straight lines or plane curves 2-13
	Automatic recording of circles 2-14
	Automatic corner points 2-14
	Automatic measurement of cylinders 2-15





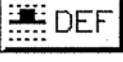

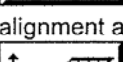

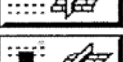

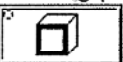




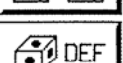


##### Submenu 2 2-15

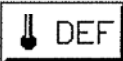



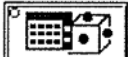
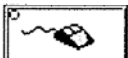







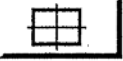










	Measure a rectangle 2-15
	Measure a slot 2-16
	Measure a point 2-16
	Measure a line 2-16
	Measure a circle 2-16

	Enter a theoretical element	2-17
	Switch to measurement of 3D elements	2-21
Function keys		2-21
	[F2] Accept current point from measuring machine	2-21
	[F3] Delete last measured point	2-21
IP 	[F4] Set intermediate point at current position of measuring machine	2-21
	[F5] Terminate element measurement and store element	2-22
	[F6] Continue current element measurement (additional points)	2-22
	[F7] Activate/deactivate automatic element repetition	2-22
	[F8] Activate/deactivate automatic measurement, calibration, digitizing	2-23
	[F9] Measurement of secondary elements	2-23
	[F10] Measurement of primary elements	2-24
	[F11] Measurement of reference elements	2-24
	[F12] Switch between the PIP operating modes	2-25


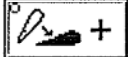

















### 3. Measurement of free-form surfaces ( profile, point surface, free-form surface ...)

#### CONTENTS

1. MEASUREMENT OF FREE-FORM SURFACES ( PROFILE, POINT SURFACE, FREE-FORM SURFACE ...)	3-1
Submenu	3-4
 DEF	3-4
Specification of terminate conditions for measured elements	3-4
 DEF	3-5
Specifications for measuring free-form surfaces	3-5
 DEF	3-5
Measure a profile	3-5
 DEF	3-6
Measure a point surface	3-6
 DEF	3-8
Specifications for measuring free-form surfaces with on-line nominal/actual comparison	3-8
 DEF	3-10
Measurement preparation (selecting element, specifying points for approximate alignment and CNC...)	3-10
 DEF	3-12
Approximate alignment	3-12
 DEF	3-13
Measure a profile with on-line nominal/actual comparison	3-13
 DEF	3-14
Measure a profile with on-line nominal/actual comparison	3-14
 DEF	3-15
Measurement of free-form surfaces with on-line nominal/actual comparison	3-15
Function keys	3-16
Measuring preparation function keys (supplementary)	3-16
 [F2]	3-16
Select nominal elements for calculation and graphical representation	3-16
 [F3]	3-16
Select points for approximate alignment	3-16
 [F4]	3-17
Select CNC points	3-17
 [F5]	3-17
Select elements, approximate alignment or CNC points by use of the mouse pointer	3-17
 [F6]	3-17
Select elements, accept approximate alignment or CNC points	3-17
 [F7]	3-17
Enter or calculate points for approximate alignment or CNC	3-17
 [F8]	3-18
Mirroring surface data and store it in IFM format	3-18
 [F9]	3-19
Load additional IFM files to the current graphic	3-19











	[F10] Store selected elements as new IFM file	3-20
	[F11] Fast switch between graphic and measurement preparation symbol bar	3-20
Measuring and rough alignment function keys (supplementary)		3-20
	[F6] Select points for surface bestfit	3-20
	[F7] Surface bestfit or approximate alignment with 3 points	3-21
	[F9] Check several solutions, interactive selection using list	3-22
	[F11] Fast switch between graphic and measurement symbol bar	3-22
Symbol bar for measurement : functions for measuring free-form surfaces		3-22
	Kink <i>rate</i>	3-22
	Displacement	3-22
	Interrupt	3-22
	Surface point	3-22
	Border point perpendicular to reference surface	3-23
	Border point with any angle to reference surface	3-23
	Measure circle on CAD model	3-24
	Surround. points switch	3-25
	Specifications for measuring free-form surfaces	3-25
	Load new coordinate system from data base	3-26
	Save current coordinate system to data base	3-26
	Import surface data and store it as CM element	3-27
	Point information	3-27
	Show or modify probe system	3-28
Symbol bar for graphics : functions for representing free-form surfaces		3-28
	Undo graphics function	3-28
	Draw graphics again	3-28
	Shift view	3-28
	Reduce view (half size)	3-28



	Magnify view (zoom)	3-28
	Show view in original size again	3-29
	Switch between body and wire model representation	3-29
	Activate/deactivate window for view rotation	3-29
	Recall or store view (displacement, rotation, section)	3-30
	Activate/deactivate point numeration	3-31
	Activate/deactivate current probe position	3-31
	Switch between page view (on) and graphics (off)	3-31
	Modify (on) or shift (off) selected point markings	3-32
	Select points and/or marking boxes	3-32
Symbol bar for measurement preparation : functions for preparing free-form measurements (supplementary)		3-33
	Selection of all elements within the selection box	3-33
	Deactivate selection of all elements within the selection box	3-33
	Selection of all elements being completely within the selection box	3-33
	Deactivate selection of all elements being completely within the selection box	3-33
	Select elements, approximate alignment or CNC points by use of the mouse pointer	3-33
	Select elements, accept approximate alignment or CNC points	3-34
	Generate circle on CAD model : by converting from existing curves in CIRCLES	3-34
	Generate circle on CAD model: by entering theoretical values	3-35
	Rotation of angle vectors for surfaces by 180°	3-35
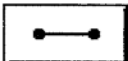
## 4. Processing (intersection, symmetry, connection, perpendicular line, free-form elements, ...)








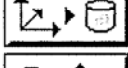
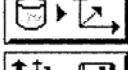



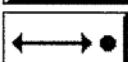
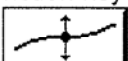
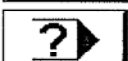

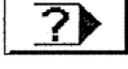
### CONTENTS

1. PROCESSING (INTERSECTION, SYMMETRY, CONNECTION, PERPENDICULAR LINE, FREE-FORM ELEMENTS, ...)	4-1
Submenu	4-2
 Create an intersection between two elements	4-2
 Create a symmetry between two elements	4-2
 Create a connection of two elements or a perpendicular to an element	4-3
 Create a projection element	4-4
 Create a construction element using several elements	4-5
 Calculate a plane by use of points with a known distance (offset plane)	4-6
 Calculate a line by use of points with a known distance (offset line)	4-8
 Move point	4-9
Function keys	4-10
 [F5] Invert normal directions of free-form elements	4-10
 [F12] Switch between the PIP operating modes	4-10

## 5. Coordinate systems (primary, secondary direction, origin...)



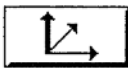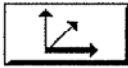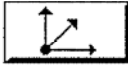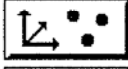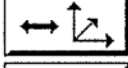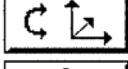

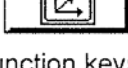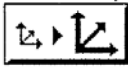
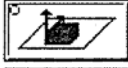
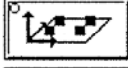

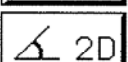
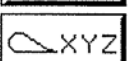
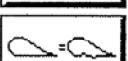
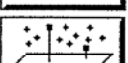

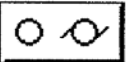
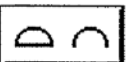
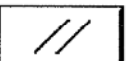
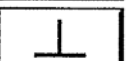
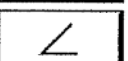
### CONTENTS














#### 1. COORDINATE SYSTEMS (PRIMARY, SECONDARY DIRECTION, ORIGIN...) 5-1

Submenu		5-2
	Define primary direction for coordinate system	5-2
	Define secondary direction for coordinate system	5-3
	Define origin for coordinate system	5-5
	Define coordinate system alignment in grid with 3 points	5-6
	Coordinate system translation	5-8
	Coordinate system rotation	5-9
	Delete coordinate system	5-14
	Save current coordinate system to data base	5-14
	Load new coordinate system from data base	5-15
	Export difference between 2 coordinate systems	5-16
	3D bestfit for CS optimisation	5-17
	Activate graphic display of part coordinate system	5-19
Function keys		5-21
	[F2] Set factors for coordinate system	5-21
	[F5] Part coordinate system on	5-22
	[F6] Pallet coordinate system on	5-23
	[F7] Rotary table coordinate system on	5-24
	[F12] Switch between the PIP operating modes	5-25
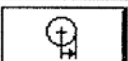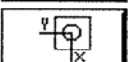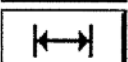
## 6. Feature determination (size, form, location, nominal/actual comparison, ISO1101, ...)

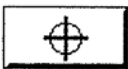

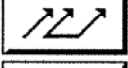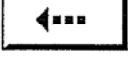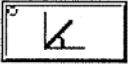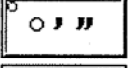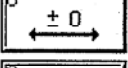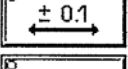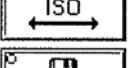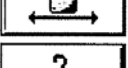





### CONTENTS

1. FEATURE DETERMINATION (SIZE, FORM, LOCATION, NOMINAL/ACTUAL COMPARISON, ISO1101, ...)	6-1
Submenu 1	6-3
 Output of element	6-3
 Graphical representation of element	6-3
 Form deviation of an element	6-3
 Size of an element (e.g. diameter)	6-4
 Size/2 (e.g. radius) of an element	6-6
 Position of an element	6-8
 Distance between elements	6-10
 Angle between elements	6-12
 Projection angle between elements	6-13
 Position of a surface point	6-15
 Nominal/actual comparison between elements	6-17
 Min. and max. point spacing as well as span of the element	6-19
ISO 1101	6-20
Submenu 2 (ISO 1101)	6-21
 ISO1101 : Straightness/flatness	6-21
 ISO1101 : Circularity / cylindricity	6-23
 ISO1101 : Profile of any line / surface	6-25
 ISO1101 : Parallelism	6-27
 ISO1101 : Perpendicularity	6-29
 ISO1101 : Angularity	6-31

	ISO1101 : Position tolerance	6-33
	ISO1101 : Concentricity / coaxiality	6-36
	ISO1101 : Symmetry tolerance	6-38
	ISO1101 : Radial / axial runout (radial, axial runout tolerance)	6-40
	Switch to CM standard features	6-42
Function keys		6-42
	[F2] Activate/deactivate polar coordinates	6-42
	[F3] Activate/deactivate angle indication in degrees, minutes, seconds	6-42
	[F5] Deactivate tolerance monitoring	6-42
	[F6] Specify standard tolerances for length and angle measurements	6-43
	[F7] Specify general ISO or DIN tolerances	6-43
	[F8] Recall company-specified tolerances from file and specify them	6-44
	[F11] Enter user-specified feature	6-44
	[F12] Switch between the PIP operating modes	6-45






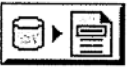








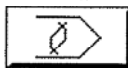




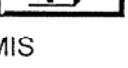
## 7. Inspection reports (outputs to printer)
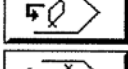
### CONTENTS

1. INSPECTION REPORTS (OUTPUTS TO PRINTER)	7-1
Submenu	7-2
 Print out report header	7-2
 Print out report line	7-2
 Output of text	7-2
 VDA report (initial sample report)	7-3
 Export measurement results as DMIS file	7-3
Function keys	7-4
 [F2] Load protocol header	7-4
 [F3] Load protocol line	7-7
 [F4] Log left element window	7-8

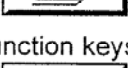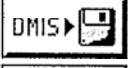
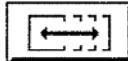

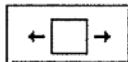


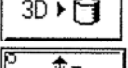
## 8. Part inspection programming, DMIS
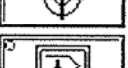
### CONTENTS

1. PART INSPECTION PROGRAMMING, DMIS	8-1
Submenu	8-2
 Create or edit a part inspection program	8-2
 Execute a part inspection program	8-3
 Execute a part inspection program with parameter modification	8-5
 Terminate part inspection program or part inspection programming	8-6
 Show or print a part inspection program	8-6
 Go to line when modifying the part inspection program	8-7
 Measurement according to model	8-7
 Recall part inspection program for use as a subroutine	8-8
 GOTO or loop within part inspection program	8-9
 Insert dialogue or comments into the part inspection program	8-11
 Graphical user support in a part inspection program (display image)	8-12
Function keys	8-13
 [F2] Export part inspection program to DMIS file	8-13
 [F3] Import part inspection program from DMIS file	8-13
 [F4] Part inspection program mirror	8-14
 [F5] Import part inspection program from 3D-file	8-16
 [F6] Activate/deactivate automatic correction of measurement direction	8-19
 [F9] Activate/deactivate output of part inspection program in DMIS format	8-20
 [F10] Activate/deactivate positioning help for measured points	8-20
 [F11] Activate/deactivate output of part inspection program without point coordinates	8-20
 [F12] Switch between the PIP operating modes	8-23
DMIS	8-23

## 9. Data base

### CONTENTS

1. DATA BASE	9-1
Data Base	9-2
Selection menu for data base	9-3
Show, modify, delete, output, export, import etc. data base entries	9-3
Select new workpiece and/or measurement, Open new measurement for current workpiece,	
Select current workpiece and current measurement	9-3
Change to other CM data base	9-4
Copy data from external CM data base, Copy data to external CM data base	9-5
Export data for external programs	9-6
Import data from external programs	9-10
Statistical evaluation of features	9-12
Settings for statistics	9-14
Selection and settings for statistic diagrams	9-14
Function keys	9-16
 [F2] Mark/unmark all data records, Mark / demark individual data records	9-16
 [F3] Specify sorting for data records	9-17
 [F4] Filter data records (display of specific data records only)	9-18
 [F5] Display/edit all marked data records	9-19
 [F6] Delete all marked data records	9-19
 [F11] Print all marked data records	9-19
 [F11] Store list as a text file	9-20



## 10. Construction tables

1. CONSTRUCTION TABLES	10-1
Intersection default	10-2
Intersection alternative	10-3
Projection default	10-4
Projection alternative	10-5
Symmetry default	10-6
Symmetry alternative	10-7
Connection (Perpendicular) default	10-8
Connection (Perpendicular) alternative	10-9