User's manual



VERSION 3.2

MEGA TECH SOFTWARE GMBH · BERLIN

Contents

Introduction 1.1

Entering Data and Commands 1.2

Installation 2.1
System Requirements 2.1
Backup Copies 2.1
Installation and Configuration 2.1
Initial Installation 2.2
Installing the Mouse and Digitiser 2.3
Installing the Graphics Card 2.3
BIOS Call: 2.4
Text Matrix: 2.4
Installing the Screen 2.4
Installing the Plotter 2.4
Installing the Printer 2.5
Installing the Drawing and Symbol Path 2.5
Start Installation and Save Modifications 2.6
End Installation 2.7
Subsequent Amendments to the Configuration 2.7
Starting the Installation Program 2.7
Starting via the Menu System 2.8
Starting from the Operating System 2.8
Amend Configuration 2.8
Screen Page Proportions 2.8

The Menu System 3.1

General 3.1
Starting the Menu System 3.1
The Menus 3.2
Executing a Program 3.4
Setting up a Sub-Menu 3.4
Deleting a Sub-Menu 3.4
Entering a Program Call 3.5
Deleting a Program Call 3.7

The MEGACAD Design Drafting Program 4.1

General 4.1
Starting the Design Drafting Program 4.1
Starting via the Menu System 4.1
Starting from the Operating System 4.1
Basic Operating Principles 4.2
The Mouse 4.2

Operating MegaCAD with a Digitiser.....4.4
The Drawing Area.....4.4
The Status Area.....4.5
Windows.....4.5
The Calculator.....4.8
Entities.....4.9
The Main Menu.....4.10
The Mode Menu.....4.12
Attribute Definition.....4.13
The SEGMENT Function.....4.16
Set colour.....4.17
Setting Attributes Interactively.....4.18
Drawing Mode.....4.19
Free.....4.20
Grid Point.....4.21
Point.....4.21
Mid-point.....4.21
End-point.....4.22
End-point Distance.....4.22
Entity.....4.23
Segment Entity Proportionately.....4.23
Intersection Point (Simple).....4.24
Intersection Point (1/2).....4.25
Tangent Point (Simple).....4.25
Tangent Point (1/2).....4.26
Keyboard.....4.26
Multiple Entities.....4.28
Digitiser.....4.29
Entity Selection Mode.....4.30
Selecting Entities by Type.....4.31
Single.....4.31
Display.....4.31
Window.....4.31
Group.....4.32
Layer.....4.33
Colour.....4.33
Profile.....4.34
Polyline.....4.35
Undelete.....4.36
Incremental Reference Point.....4.36

Draw Points.....5.1

The function "Draw points".....5.1
Free Points.....5.2
Equally Spaced Points.....5.2

Point on a Circle.....5.5
Star Pattern.....5.6
Polygon.....5.8
Point Mesh.....5.9

Draw Lines.....6.1

The Function "Draw Lines".....6.1
Free Lines.....6.2
Tangent to a Circle.....6.3
Tangent to Two Circles.....6.4
Tangent to a Circle at a Specified Angle.....6.5
Orthogonal Lines.....6.7
Specify Line by an Angle and Length.....6.8
Horizontal/Vertical Lines.....6.10
Horizontal Lines.....6.11
Vertical Lines.....6.12
Horizontal and Vertical Lines.....6.13
Rectangles.....6.14
Bisector.....6.14
Rotate Line.....6.16
Parallels.....6.17
Perpendicular to a Line.....6.20
Line Mesh.....6.22
Freehand Line.....6.24
Polygon.....6.25
Splines.....6.27
Bezier Statistic Spline.....6.28
Bezier Cubic Spline.....6.30
Modified Bezier Spline.....6.31
Natural Parametric Spline.....6.32
Periodical Parametric Spline.....6.33

3D Views.....6.36

Display box showing type of view selected....6.38
Rotate X, Y and Z axes in space.....6.38
Input field for altering angle of view rotation.....6.39
Selectable projections: Isometric, Dimetric, Cabinet and Cavalier.....6.39
Isometric.....6.39
Dimetric.....6.40
Cabinet.....6.40
Cavalier.....6.40

Object depth specification (thickness, or Z value).....6.41
3D view for specified depth.....6.43
Connecting lines in the 3D view.....6.43
3D view from elevations, not using depth specification.....6.45
Switch the Selection of Drawing Entities ON/OFF.....6.53
Final Remarks.....6.54
A further example:.....6.54

Draw Circles.....7.1

The Function "Draw Circles".....7.1
Centre Point and Radius.....7.2
Radius and two Points.....7.3
Centre Point and Point on Circumference.....7.4
Centre Point and Tangent.....7.5
Three Points.....7.6
Tangent Point and Point on Circumference.....7.6
Two Points.....7.7
Tangent Point (with Circle) and Point on Circumference.....7.7
Radius and two Tangents.....7.8
Three Tangents.....7.10
Tangents and Point.....7.11
Concentric Circles.....7.12
Tangent and two Points.....7.12
Centre Point (Cartesian Co-ordinates) and Radius.....7.13
Radius, Tangent and Point.....7.14
Centre Point (Polar Co-ordinates) and Radius.7.15

Draw Arcs.....8.1

The Function "Draw Arcs".....8.1
Centre Point, Radius, Start and End Angles...8.2
Radius and Two Points.....8.4
Centre Point, Diameter, Start and End Angles.8.5
Radius, Tangential Entities, Start and End Angles.....8.6
Start Point, End Point and Angle.....8.8
Concentric Arcs.....8.10
Arc Through Three Points.....8.11
Extend Arc/Line to a Point.....8.12

Centre Point and Two Points.....8.12
Three Tangents.....8.13
Extend Arc/Line with Specified Radius.....8.15
Two Tangents and a Point.....8.16
Centre Point (Polar Co-ordinates), Radius,
Start and End Angles.....8.18
Centre Point (Cartesian Co-ordinates),
Radius, Start and End-Angles.....8.20
The Function "Draw Ellipses".....8.21

Draw Ellipses.....8.22

Centre Point and A-B Axes of the Ellipse.....8.22
Elliptical Arc, Centre Point and A-B Axes
of the Ellipse.....8.23
Ellipse Bounded by a Rectangle.....8.24
Elliptical Arc Bounded by a Rectangle.....8.26
Concentric Ellipses.....8.26
Concentric Elliptical Arcs.....8.27
Ellipse Defined by Half-axes and Angle.....8.29
Elliptical Arc Defined by Half-axes
and Angle.....8.30
Ellipse Defined by its Foci and a Point
on the Circumference.....8.32
Elliptical Arc Defined by its Foci and
a Point on the Circumference.....8.32
Ellipse Defined by two Tangents.....8.33
Elliptical Arc Defined by Two Tangents.....8.34
Ellipse Defined by a Rectangle and an Angle..8.35
Elliptical Arc Defined by a Rectangle
and an Angle.....8.37
Ellipse by Keyboard Entry of Data.....8.38
Elliptical Arc by Keyboard Entry of Data.....8.39

Draw Text.....9.1

The Function "Draw Text".....9.1
Text Parameters.....9.1
Font - No.....9.2
Character Height.....9.2
Character Width.....9.3
Character Angle.....9.3
Distance X.....9.3
Distance Y.....9.4
Line Angle.....9.4

Line Spacing.....9.5
Menu Fields.....9.5
BOX.....9.5
Single Line.....9.5
Block of Text.....9.7
Search.....9.8
Replace.....9.9
Merge File.....9.11
Undo.....9.11
Block of Text.....9.12
Function Keys in the Text Editor.....9.12
Position Text Item.....9.16

Dimensioning.....10.1

The Function "Dimensioning".....10.1
Methods of Dimensioning.....10.2
Horizontal Linear Dimensioning.....10.3
Vertical Linear Dimensioning.....10.5
Oblique Linear Dimensioning.....10.6
Angle Dimensioning.....10.7
Diameter Dimensioning.....10.8
Radius Dimensioning.....10.9
Geometric Tolerances.....10.10
Co-ordinate Dimensioning.....10.11
Setting Dimensional Entity Attributes.....10.13
Dimensioning Text Above, Below or On the Dimension Line.....10.16
Dimensioning Text Horizontal or Parallel to Dimension Line.....10.17
Text Position.....10.18
External or Internal Terminations.....10.19
Projection Lines.....10.20
Dimension Line Terminations.....10.21
Tolerance Dimensioning.....10.22
Diameter and Radius Symbols.....10.23
Scale Factor.....10.24
BOX.....10.25
Projection Line Extension.....10.25
Projection Line Depth.....10.26
Edit Dimensioning Entity.....10.27
Change Position.....10.27
Edit Dimensioning Attributes.....10.28
Projection Line Extension.....10.29
Output Trailing Zeroes.....10.30
Full Length Dimension Line.....10.30

Fill in Arrowheads.....10.30
Set Attributes of Dimension Line Terminations.....10.30
Setting Dimensioning Text Attributes.....10.32
Amending Dimensioning Text.....10.32

Hatch.....11.1

The Function "Hatch".....11.1
Selecting Individual Boundaries for the Hatching.....11.3
Automatic Profile Definition.....11.3
Hatching Boundary Defined as an Area.....11.5
Hatching Boundary Defined by a Polyline.....11.6
Selection of an Existing Hatched Profile.....11.7
Aligning the Hatching.....11.8
Spacing of the Hatching.....11.9
Edit Hatching.....11.9
Note !.....11.10
Hatching patterns Application.....11.11

Creating New User-specific Hatching Patterns.11.16
*NAME.....11.16
Angle.....11.17
Start Point.....11.17
Spacing, Offset.....11.17
Line Style.....11.17
EXAMPLE 1 :.....11.18
EXAMPLE 2 :.....11.19
EXAMPLE 3 :.....11.21

Macro Management.....12.1

Symbol Management.....12.1
Path.....12.2
Set Window.....12.3
Keyboard.....12.4
Window.....12.4
File List.....12.4
View.....12.5
Edit.....12.6
Insert.....12.7
DB Info.....12.11
Exclusive.....12.12
Save.....12.12

Delete.....12.15
Print.....12.15
Extract.....12.16
DOS.....12.16

Drawing Management.....13.1

Drawing Management.....13.1
Path.....13.2
Set Window.....13.3
Keyboard.....13.3
Window.....13.4
File List.....13.4
View.....13.5
Edit.....13.6
Insert.....13.8
Save.....13.8
Delete.....13.8
Print.....13.9
Extract.....13.9
DOS.....13.10

Grid.....14.1

The Function "Grid".....14.1
The Grid Options.....14.2
The Screen Grid.....14.2
The Snap Grid.....14.3
Set Identical Grids.....14.3
Angular Grid and Radial Grid.....14.4
Grid Origin.....14.5
Drawing Origin.....14.5
Drawing Sheet Size.....14.5
Units of Measurement.....14.6

Delete.....15.1

The Function "Delete".....15.1
Deleting Single Drawing Entities.....15.3
Deleting all Entities on the Display.....15.3
Deleting all Entities in a Window.....15.3
Deleting all Entities in a Group.....15.4
Deleting all Entities on a Layer.....15.4
Deleting all Entities of a Particular Colour.15.5

Undoing a Deletion.....15.5
Function Key Call.....15.5

The Function Redraw.....16.1

Zoom.....17.1

The Function "Zoom".....17.1
Half Scale.....17.2
Auto.....17.2
Default.....17.2
Window.....17.2
Pan.....17.3
User-defined Zoom Windows.....17.3
Defining a Window.....17.3
Displaying a Window.....17.4
Calling up a Window.....17.4

Edit.....18.1

Editing Drawings.....18.1
Edit Text.....18.2
Convert Single Line of Text to Block of Text.....18.2
Parts Lists and Database Information.....18.3
Show Symbol.....18.4
DB Info.....18.4
Exchange.....18.4
Exclusive.....18.5
All/Single.....18.5
Database and Parts List Outputs.....18.6
Keywords.....18.6
Alter Group Membership.....18.12
Alter Layer Membership.....18.13
Move and Copy.....18.13
Scale and Copy.....18.15
Mirror.....18.17
Rotate and Copy.....18.18
INFO.....18.20
Individual Entity.....18.21
Co-ordinates.....18.22
Distance to Entity.....18.23
Distance between Positions.....18.23
Angle - between Lines.....18.23

Angle - Free Choice.....18.24
Length.....18.25
Perimeter.....18.25
Area.....18.25
Centroid.....18.26
Co-ordinate Interface.....18.26
Comments.....18.29
Select Drawing Entities.....18.30
Point Co-ordinates.....18.30
Copy to File.....18.30
Read from File.....18.31
Read HPGL Data.....18.32
Fillet.....18.32
Chamfer.....18.34
Trim.....18.35
Trim Single Entity.....18.35
Trim Two Entities.....18.36
Trim Multiple Entities.....18.37
Amend Attributes.....18.38
Stretch.....18.40
The Function "Cut".....18.41
Break.....18.43

Fix.....19.1

FIX (Saving Parameter Settings).....19.1
Saving the Current Parameters:.....19.2
Load digitiser menu:.....19.2
Redefine keys:.....19.4
Load hotkey file:.....19.4
Small cross hair cursor:.....19.6
Multi-Window:.....19.6

Layer.....20.1

The Function "Layer".....20.1
Layers and Groups.....20.1
Assignment of Drawing Entities to Layers.....20.2
Switching Layers On and Off.....20.2
Processing All the Entities on a Layer Together.....20.4

Group.....21.1

The Function "Group".....21.1
Groups and Layers.....21.1
Assignment of Drawing Entities to Groups.....21.1
Switching Groups On and Off.....21.2
Processing All the Entities in a Group Together.....21.3

Exiting from the Design Program.....22.1

The Function UNDO/REDO.....23.1

The Plot Program.....A-1.1

The Plot Program.....A-1.1
General.....A-1.1
Starting the Plot Program.....A-1.1
Starting via the Menu System.....A-1.2
Starting from the Operating System.....A-1.2
The Main Menu.....A-1.3
Load Drawing.....A-1.5
Keyboard Selection.....A-1.6
Select from List.....A-1.6
Position Drawing.....A-1.8
Move Drawing.....A-1.9
Delete.....A-1.10
Redraw.....A-1.10
Define Extract.....A-1.10
Plot Drawing.....A-1.11
Create HPGL File.....A-1.14
Save Composite Drawing.....A-1.15
Print Drawing.....A-1.16
Menu Continuation.....A-1.16
Start of Menu.....A-1.16
Calibrate Plotter.....A-1.16
Example:.....A-1.17
Layer.....A-1.18
Enter Text.....A-1.18
Zoom.....A-1.20
Zoom to Page Size.....A-1.20
Reconfigure to Install Printer or Plotter.A-1.20
DOS.....A-1.22
END.....A-1.22

Customizing Keyboard and Digitizer.....B-1.1

Customizing Keyboard and Digitizer with the Program MCONFIG.....B-1.1
The Main Menu.....B-1.1
Define a keyboard configuration.....B-1.2
Load a Keyboard Configuration (Create).....B-1.3
Assign Keys.....B-1.4
Assigning Mode Functions to Keys.....B-1.8
Save a Keyboard Configuration.....B-1.9
Activating a keyboard configuration.....B-1.10
Print a Keyboard Configuration.....B-1.10
The Option "Draw".....B-1.10
Terminate Program with Exit.....B-1.10
Loading a Keyboard Configuration in MegaCAD..B-1.10
Creating a Digitizer Configuration.....B-1.11
Load a digitizer configuration (create).....B-1.11
Assigning Digitizer fields.....B-1.12
Assigning Mode Functions to Digitizer Fields B-1.14
Save a Digitizer Configuration.....B-1.14
Printing a Digitizer Configuration.....B-1.15
The Option Draw.....B-1.16
The Main Menu in DRAW.....B-1.16
The Option Format.....B-1.17
Define the Mouse Area.....B-1.18
Draw a Digitizer Field with the Option FIELD.....B-1.18
Separate a field.....B-1.19
The Option Net.....B-1.20
Deleting a Field with the Option Delete1...B-1.20
Deleting Several Fields with the Option Delete2.....B-1.21
The Redraw Option.....B-1.21
Pass a Digitizer Configuration to MegaCAD.B-1.21
Load a Digitizer Configuration.....B-1.21
Save a Digitizer Configuration.....B-1.21
Terminate with Escape.....B-1.22
Load a Digitizer Configuration in MegaCAD..B-1.22

To run MEGACAD under Windows 3.0.....C-1.1

DXF Interface.....D-1.1

Use of DXF Files for Data Interchange.....D-1.1
General.....D-1.1
Copying DXF files into MegaCAD.....D-1.1
Copying from MegaCAD to AutoCAD.....D-1.2
The CONVDXF Program.....D-1.2
Starting via the Menu System.....D-1.3
Starting from the Operating System.....D-1.3
Set up DXF File.....D-1.4
Set up PRT File.....D-1.6
Suppress Drawing Entities.....D-1.7
Terminate Program.....D-1.8

The Font Editor.....F-1.1

The Font Editor.....F-1.1
General.....F-1.1
MegaCAD Typefaces.....F-1.1
Starting the Font Editor.....F-1.3
Starting via the Menu System.....F-1.3
Starting from the Operating System.....F-1.3
The Initial Menu.....F-1.4
Keyboard Selection of a Font.....F-1.4
Using the File List to Select a Font.....F-1.5
The Main Menu.....F-1.6
Inspecting Characters.....F-1.7
Display Complete Font.....F-1.7
Display Enlarged Characters.....F-1.7
Select Character.....F-1.8
Select Window.....F-1.8
Keyboard Selection.....F-1.8
Select from ASCII Table.....F-1.9
Edit Character.....F-1.10
Draw Lines.....F-1.11
Draw Circles.....F-1.12
Draw Arcs.....F-1.12
Delete Entity.....F-1.13
Delete One Entity.....F-1.14
Delete Window.....F-1.14
End Delete.....F-1.14
Redraw.....F-1.15
End Editing.....F-1.15
Create New Character.....F-1.15
Select AnotherFont.....F-1.15
Terminating the Font Editor.....F-1.16

Appendix G:.....G-1.1

Assignment of Functions to Keys in the MegaCAD Design Program.....G-1.1

Appendix H:.....H-1.1

MegaCAD-Interna.....H-1.1

MegaCAD File Structure.....H-1.1
The \MENU Directory.....H-1.1
The \MEGACAD Directory.....H-1.1
The \PLOT Directory.....H-1.2
The \FONT Directory.....H-1.3


Appendix I:.....I-1.1

Recommended References.....I-1.1

Appendix J:.....J-1.1

Plotter Types Supported.....J-1.1
Cable Wire Dedications for V24 Interface.....J-1.2
Setting the Page Formats.....J-1.3
Amending the Page Format.....J-1.4
Step Size.....J-1.5

Wirecut Technology
Reference Manual and User Guide

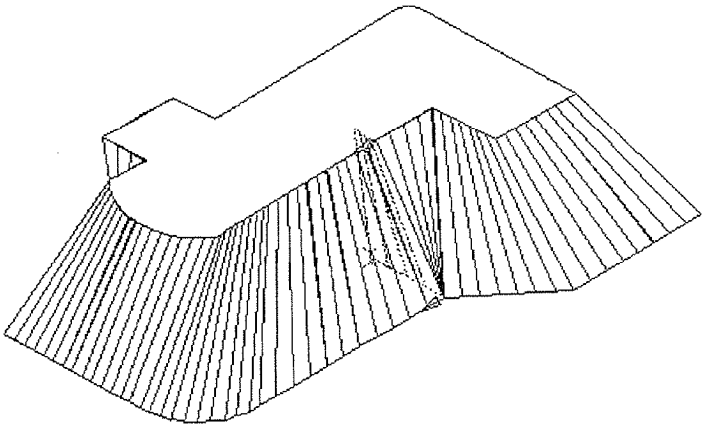

Copyright by MegaTech Software GmbH Berlin 1996

Contents

Chapter			Page
1. Introduction			1
1.1	NC control selection		2
1.2	The Cam menu icons		3
2. CAD and CAM Macro Management			4
2.1	Path		5
2.2	Delete		5
2.3	New		6
2.4	Open		6
	2.4.1	Drive and directory selection	6
	2.4.2	File selection with the file list	7
	2.4.3	The file name input via keyboard	7
	2.4.4	File selection with view	8
2.5	Insert		8
2.6	Save		9
2.7	Save as		9
2.8	Extract		9
2.9	View		10
3. The Cam Macro Management			10
3.1	Path		10
3.2	Delete		11
3.3	New		11
3.4	Open		11
	3.4.1	Drive and directory selection	12
	3.4.2	Macro selection with the filelist	12
	3.4.3	The macro name input via keyboard	13
3.5	Insert		13
3.6	Save		14
3.7	Save as		14
3.8	Extract		14
3.9	View		14
4. Cam Profiles			15

5. The 2 Axis Mode 17
5.1 The 2 Axis technology icons 20
5.2 Approach/retract 22
5.3 The 2 Axis edit mode 25
5.4 The 2 Axis geometry icons 29
5.4.1 Single geometry 29
5.4.2 Predefined profiles 32
5.4.2.1 Rectangular profile 33
5.4.2.2 Rectangular profile w. fillet 33
5.4.2.3 Slot 34
5.4.2.4 Circle 35
5.4.2.5 Polygon 36
5.4.2.6 Gear 37
5.4.3 Contour windows 38
5.4.3.1 Contour selection edit mode 38
5.4.4 Screen select 40
5.4.5 Circle detect 41
5.5 Optional command 41
5.6 Others 42

6. The 2 Axis Multiple Cut Mode 43
6.1 Multiple cut technology icons 48
6.2 Multiple cuts/cutting data 51
6.3 End point/part-off 52
6.4 Approach/retract 53
6.5 The multiple cut edit mode 57
6.6 The 2 axis multiple cut geometry icons 62
6.6.1 Single geometry 62
6.6.2 Predefined profiles 66
6.6.2.1 Rectangular profile 66
6.6.2.2 Rectangular profile w. fillet 67
6.6.2.3 Slot 68
6.6.2.4 Circle 69
6.6.2.5 Polygon 69
6.6.2.6 Gear 71
6.6.3 Contour windows 72
6.6.3.1 The contour selection edit mode 72
6.6.4 Screen select 74
6.6.5 Circle detect 75
6.5 Optional command 76
6.6 Others 76

7. The 4 Axis Mode 77
7.1 Differences 4 axis cut/2 axis cut 80
7.1.1 Geometry definition 80
7.1.2 Approach/retract 81
7.1.3 Edit mode 82

8. The 4 axis Mode/multiple cuts 85
8.1 Differences 4 multi axis cut/2 axis mult. cut 88
8.1.1 Geometry definition 89
8.1.2 Approach/retract 90
8.1.3 Edit mode 90

9. Pocketing mode 93
9.1 Pocketing mode icons 95
9.2 Menu buttons 95
9.2.1 Largest starthole 95
9.2.2 Approach retract 96
9.2.3 Finishing cuts 99
9.2.3.1 Icons finishing cuts 100
9.2.3.2 Other icons 102
9.2.3.3 Menu buttons 102
9.2.3.4 Cutting data 102
9.2.3.5 Approach/retract 103
9.2.3.6 Edit mode 103
9.3 Edit mode pocketing cuts 104
9.4 Geometry icons pocketing cut 104
9.4.1 Single contour 104
9.4.2 Predefined profiles 105
9.4.3 Contour selection list 105
9.4.4 Screen selection 105
9.4.5 Circle detect 105
9.5 Others 106
9.6 The optional command 107

10. The Twist mode 108
10.1 Differences 2 axis/twist mode 110
10.1.1 The twist edit mode 110
10.1.2 Approach/retract 112

11. The Twist mode/multiple cuts 113
11.1 Differences twist mode/2 axis mode 117
11.1.1 The twist edit mode 118
11.1.2 Approach/retract 119

12. The Simulation Manager 120
12.1 3D Simulation 122

13. The Sequence Manager 125

14. Finishing Cuts 128

15. Part-off cuts 129

16. G00 Movements 130

17. Subroutine 131

18. CAM Settings 133
18.1 Select machine tool 135
18.2 Machine settings 136
18.3 Program Settings 137
18.4 NC Settings 139

19. Program Settings 152

20. NC Backplot 154

21. NC Code Generation 158

Tutorial T-1
NC-Editor E-1