
Operator's Manual

Machine & Control Unit

This folder contains all the information you need to operate your machine.

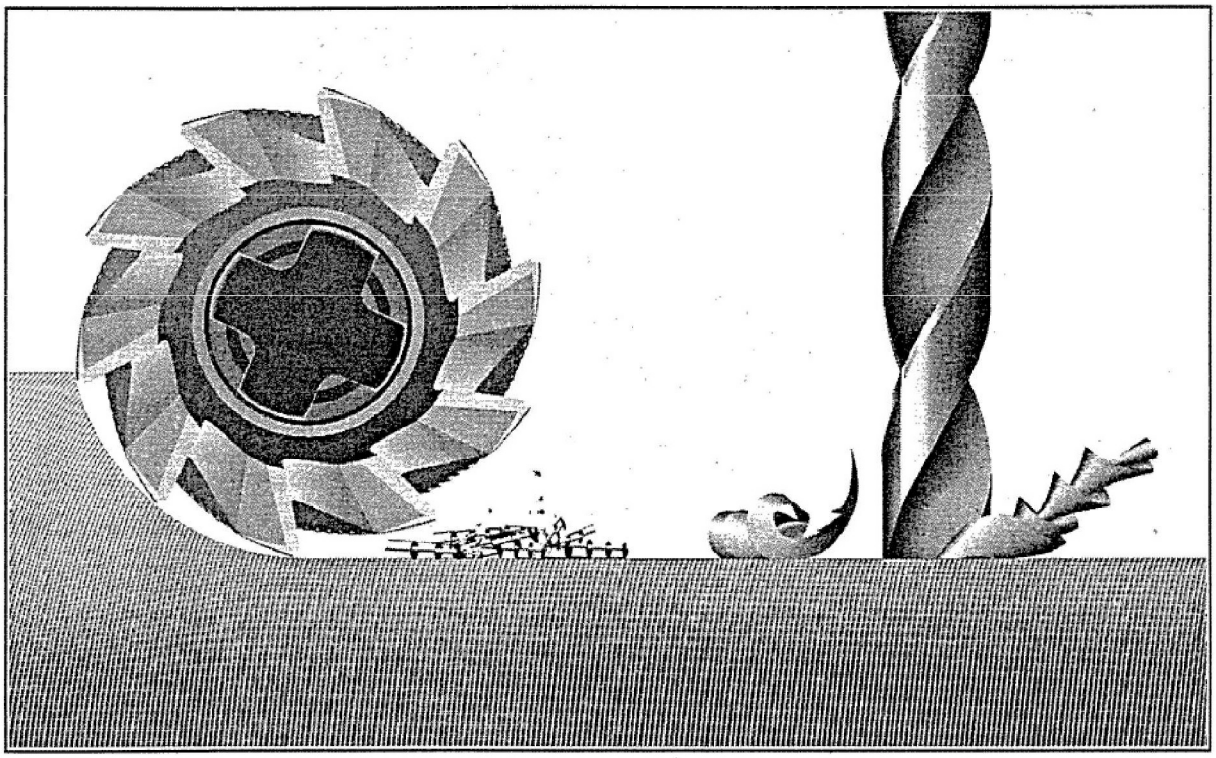


DMC 63 H

SINUMERIK 840D

DECKEL MAHO


Geretsried GmbH

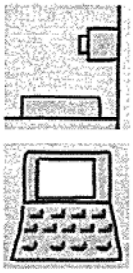

Machine Manual 1

Technical Fundamentals

All about technical data, transport, installation, operation and maintenance.

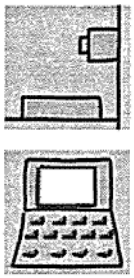

Machine Manual 2

Attachments & Accessories


All about our range of attachments and accessories you can use on your machine.



Control Unit Manual

Supplement

Supplementary information on the operation of the machine and control unit.

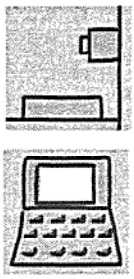

Parts Manual


Spare Parts Catalogue

This manual will help you to get speedy service when ordering spare and replacement parts.

Machine Manual 1

Technical Fundamentals

All about technical data, transport, installation, operation and maintenance.

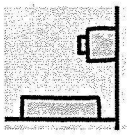

DMC 63 H



SINUMERIK 840D

DECKEL MAHO

Contents

1. Machine specification	Main assemblies	1-2
	Enclosure and controls	1-3
	Machine axes	1-4
	Control console	1-5
	Tool magazine control panel	1-11
	Pallet changer control panel (option)	1-12
	Safety features	1-13
2. Technical data	Main drive 12,000 rpm	2-2
	Main drive 20,000 rpm	2-3
	Data sheet	2-4
	Installation diagram, machine with carousel magazine	2-12
	Installation diagram, machine with chain magazine	2-13
	Working range	2-14
	Collision range	2-15
	Collision diagram, machine with carousel magazine	2-17
	Collision diagram, machine with chain magazine	2-18
3. Operation	To switch machine on	3-2
	To switch machine off	3-3
	Emergency stop	3-4
	To move to reference point	3-5
	Operating modes	3-6
	Door to working area	3-16
	To move machine slides manually	3-18
	To change tools manually	3-20
	Re-entry after tool breakage	3-22
	Spindle	3-25
	Lubricoolant	3-28
	Manual lubrication of slideways	3-29
4. Tool magazine	To load and unload tool magazine	4-2
	To enter tool in tool list	4-8
	To reset tool changer	4-10
	To rotate tool magazine manually	4-11

Contents

5. Pallet changer	To load and unload pallet	5-2
	To remove and mount pallet	5-5
	To reset pallet changer	5-7
	To change pallets manually	5-7
	To change pallets via M function	5-8
	Pallet management	5-9
	Automatic program selection	5-12
	To set pressure for hydraulic work clamp (option)	5-13
6. Maintenance, lubrication	General information	6-2
	Lubricoolant	6-4
	Table of lubricants	6-6
	Maintenance and lubrication schedule	6-7
	Maintenance and lubrication – overview	6-9
	Other maintenance and servicing work	6-12
	Centralized lubricating unit for slideways	6-15
	Spindle lubricating unit	6-16
	Hydraulic unit	6-17
	Cooling unit for motor spindle and drive elements	6-19
	High-pressure hydraulic unit for work clamping (option)	6-21
	Lubricoolant unit	6-22
	Filter/regulator unit for pneumatic system	6-24
	Filter/regulator unit for spindle lubrication	6-25
	Filter/regulator unit for tool breakage detector	6-26
	Weight compensation system for vertical slide	6-27
	Covers and slideways	6-29
	Carousel magazine	6-34
	Chain magazine	6-35
	Pallet changer, NC rotary table	6-37
	Spindle, tool clamping system	6-39
	Control cabinet	6-40
	Collision	6-42
	Toothed drive belts	6-43
7. Transport	General information	7-2
	Required equipment	7-3
	Delivery of machine	7-4
	To move machine in crate/on pallet	7-5
	To move unpacked machine	7-6
	Shipment	7-9
	To prepare machine for transport	7-11
	Transport and shipping fixtures	7-14

Contents

8. Installation	General information	8-2
	Installation site	8-3
	To install, anchor and level machine	8-5
	Foundation diagram	8-8
9. Connection, assembly	General information	9-2
	Control console	9-3
	To connect machine to control cabinet	9-4
	To connect control cabinet to mains	9-5
	To check electrical connection	9-8
	Lubricoolant unit	9-9
	Compressed air	9-9
	Final inspection	9-10

Machine Manual 2

Attachments & Accessories

All about our range of attachments and accessories you can use on your machine.



DMC 63 H



SINUMERIK 840D

DECKEL MAHO

Contents

1. Swarf conveyor	Data sheet	1-2
	Operation	1-4
	Maintenance	1-6
	Transport, assembly, connection	1-11
2. Lubricoolant supply through tool	Data sheet	2-2
	Operation, swarf conveyor	2-6
	Operation, lubricoolant supply through tool	2-8
	Maintenance	2-9
	Transport, assembly, connection	2-10
3. VRF 250 lubricoolant cleaning unit	Data sheet	3-2
	Operation, swarf conveyor	3-5
	Operation, lubricoolant supply through tool	3-7
	Operation, VRF 250 lubricoolant cleaning unit	3-8
	Maintenance, VRF 250 lubricoolant cleaning unit	3-12
	Transport, assembly, connection	3-14
4. Flush-cleaning unit	Flush-cleaning	4-2
	Flush gun	4-3
5. Rotoclear inspection window	Data sheet	5-2
	Operation	5-2
	Maintenance	5-3
6. Oil mist separator	Data sheet	6-2
	Operation	6-2
	Maintenance	6-3

Contents

7. Pallet	Data sheet	7-2
	Locating mechanism on pallets without hydraulic oil supply	7-2
	Locating mechanism on pallets with hydraulic oil supply	7-3
	Pallet 400 x 500 mm (16 x 20 in) DIN 55201 A2	7-4
	Pallet 400 x 500 mm (16 x 20 in) DIN 55201 A1	7-5
	Pallet 400 x 500 mm (16 x 20 in) DIN 55201 A2 with oil supply	7-6
	Pallet 400 x 500 mm (16 x 20 in) DIN 55201 A1 with oil supply	7-7
	Pallet 500 x 500 mm (20 x 20 in) DIN 55201 A2	7-8
	Pallet 500 x 500 mm (20 x 20 in) DIN 55201 A1	7-9
	Pallet 500 x 500 mm (20 x 20 in) DIN 55201 A2 with oil supply	7-10
	Pallet 500 x 500 mm (20 x 20 in) DIN 55201 A1 with oil supply	7-11
8. MP 10 measuring probe	Data sheet	8-2
	Operation	8-3
	Maintenance	8-4
9. Tool breakage detector	Data sheet	9-2
	Notes on safety	9-2
	Collision range	9-3
	To calibrate light barrier	9-4
	To use tool breakage detector	9-6
	Unsupervised operation	9-9
	To reset tool breakage detector	9-10
10. Tool scanner	Data sheet	10-2
	Notes on safety	10-3
	Collision range	10-4
	To calibrate light barrier	10-5
	To use tool scanner	10-7
	To reset tool scanner	10-9

Contents

11. Torque bracket	Data sheet	11-2
12. Portable control	Controls	12-2
	Operation	12-4
	Connection	12-6
13. Supplementary tool magazine control panel	Data sheet	13-2
	To load/unload tool magazine	13-3
14. 4-side machining	Operation	14-2

Control Unit Manual

Supplement

Supplementary information on the operation of the machine and control unit.

DECKEL MAHO



SINUMERIK 810D

SINUMERIK 840D


Contents

1. Operating modes	Mode structure, range structure	1-2
	DECKEL MAHO operating range	1-4
2. Zero point	Program zero offset	2-2
	Determine zero point by hand	2-4
3. M functions	Description	3-2
4. Cycles	Basic information	4-2
	Procedure	4-2
	Programming	4-3
	Centring and simple drilling operations G81	4-5
	Spotfacing, boring G82	4-6
	Deep drilling G83	4-7
	Tapping G84	4-8
	Boring G85	4-9
	Single-tip/two-tip boring bars G86	4-10
	Single-tip boring bars G87	4-11
	Free cycle G88	4-12
	Counterboring G89	4-13
	CONFIG	4-14
5. Auxiliary programs	Calibrate measuring probe	5-2
	Tool loading program	5-3

Parts Manual

Spare Parts Catalogue

This manual will help you to get speedy service when ordering spare and replacement parts.

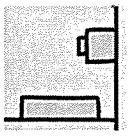

DMC 63 H



SINUMERIK 840D

DECKEL MAHO

Contents

Machine	3D view	1
	Side view	2
	Front view	3
Drives	X-axis	37
	Y-axis	38
	Z-axis	36
Slideways/ Measuring system	X-axis	4
	Y-axis	5
	Z-axis	8
Distributor strips	X-axis	7, 32, 33
	Y-axis	6, 7, 33
	Z-axis	6
	Pallet changer	15
Spindle n=12.000 min^{-1}	SK40	9
	HSK-A63	10
Spindle n=20.000 min^{-1}	HSK-A63	11
NC rotary table	Side view	12
Swarf conveyor	Side view	13
Pallet changer set-up station	Side view	14
	Lifting and swivel drive	16
	Plan view	17
	Pallet rest	18
	Rotary pallet rest with clamping cone	19
	Rotary pallet rest with clamping cone and pallet lock	20
Pallet 500x500	Plan view	21
	Collet	22
Pallet 500x400	Plan view	23
	Collet	24
Carrousel magazine	Front view	25
	Tool locking system	26
	Side view	27

Inhaltsverzeichnis

	Drives	28
	Tool holder SK40	29
	Tool holder HSK-A63	30
	taper cleaning HSK-A63	31
Cooling	motor and spindle cooling	34
Lubrication/ Pneumatic system	Centralised lubrication system and pneumatic system	35
NC rotary table with hydraulic clamping system	Side view	39
Pallet changer set-up station with hydraulic clamping system	Plan view	40
	Rotary pallet rest with collet	41
	Hydraulic oil lines	42
Pallet 500x500 with hydraulic clamping system	Plan view	43
	Collet; hydraulic oil supply	44
Pallet 500x400 with hydraulic clamping system	Plan view	45
	Collet; hydraulic oil supply	46
Swarf conveyor for lubricoolant supply through tool	Side view	47
Lubrication for lubricoolant supply through tool	Lubricant tank	48
Chain magazine SK40	Front view	49
	Drive and reversing sprocket	50
	Clamping sprocket and chain links	51
	Tool locking system	52
Chain magazine HSK-A63	Front view	53
	Clamping sprocket and chain links	54
	taper cleaning	55
Tool changer	Side view	56
	Plan view	57
	Tool gripper	58
	Hydraulic control block	59
	Swivel drive	60