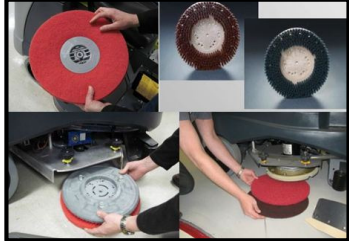
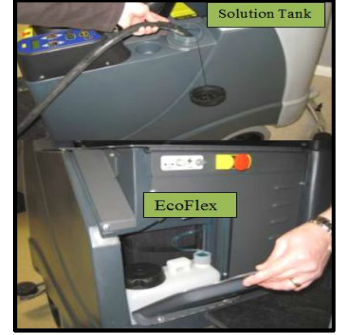


Advenger How To

Prepare for Use



1	 This is how the machine should look when you enter the room.	2	 Disconnect battery charger, store onboard charger cord and lower the seat.	3	 Inspect and Install proper pad or brush.
4	 Inspect and install vacuum fan pre-filter.	5	 Inspect ball float cage to ensure it is clean and the ball moves freely.	6	 Inspect the debris catch cage (if applicable). Empty if needed.
7	 Remove and inspect rear squeegee and blades.	8	 Install squeegee (do not over tighten thumb nuts) then attach hose.	9	 Fill machine with water (add detergent as required). Fill with water only if using EcoFlex (refer to owner's manual).

Advenger How To

Store the Machine (Daily Maintenance)

1	 Empty the recovery tank. Drain water into an open drain.	2	 Rinse recovery tank and ball float cage.	3	 Remove and rinse debris catch cage.
4	 Remove and clean the vacuum fan filter.	5	 Remove, rinse and inspect the squeegee and blades.	6	 Hang the squeegee on the back of the machine.
7	 Remove and inspect brushes and pads.	8	 Remove and clean the hopper (<i>cylindrical models</i>).	9	 Open seat compartment.
10	 Charge the batteries.	11	 Clean the exterior of the machine.	12	 Remember to turn off the light when leaving the room.

Advenger How To

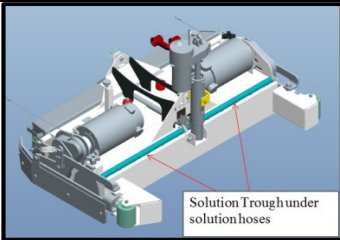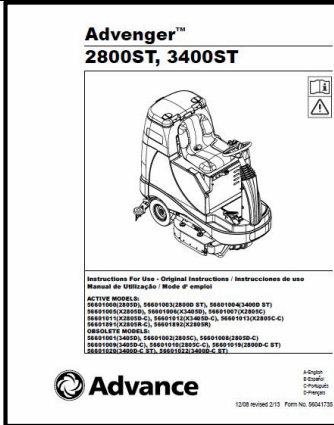Weekly Maintenance					
1	 Check water level in the batteries. Add distilled water if needed (<i>do not overfill</i>).	2	Solution/Clean water filter  Inspect deck skirts.	3	 Clean the solution filter.
4	 Clean the solution trough (<i>cylindrical models</i>).	5	 Purge EcoFlex system with warm water (<i>if applicable</i>).	Monthly Maintenance Once a month, apply light machine oil to lubricate the: - Steering Chain - General Pivot Points for the Squeegee and Scrub Deck Linkage - Side Skirt Height Adjustment Knobs - Steering Wheel Shaft Universal joint - Front Roller Bumper	
Monthly Maintenance Equalize the Batteries - Fully charge the machine - Unplug machine - Recharge the machine two more times		Annual Maintenance These procedures must be performed by an Authorized Advance Service Center - inspect carbon brushes on the vacuum motor (<i>after 300 hours of use</i>) - inspect carbon brushes on the drive and brush motors (<i>after 500 hours of use</i>)			
 Refer to owner's manual for additional instructions on how to use and care for this machine.					