


SE 4 Select

English
العربية

6
20

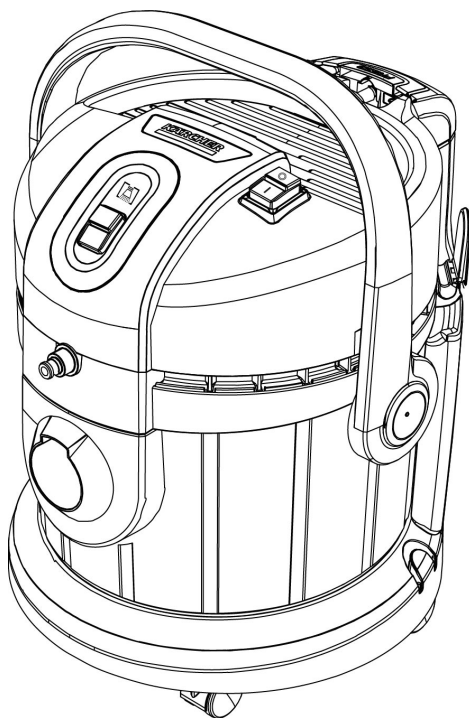



Read Online


























**Register
your product**
www.kaercher.com/register










59515540 (09/26)

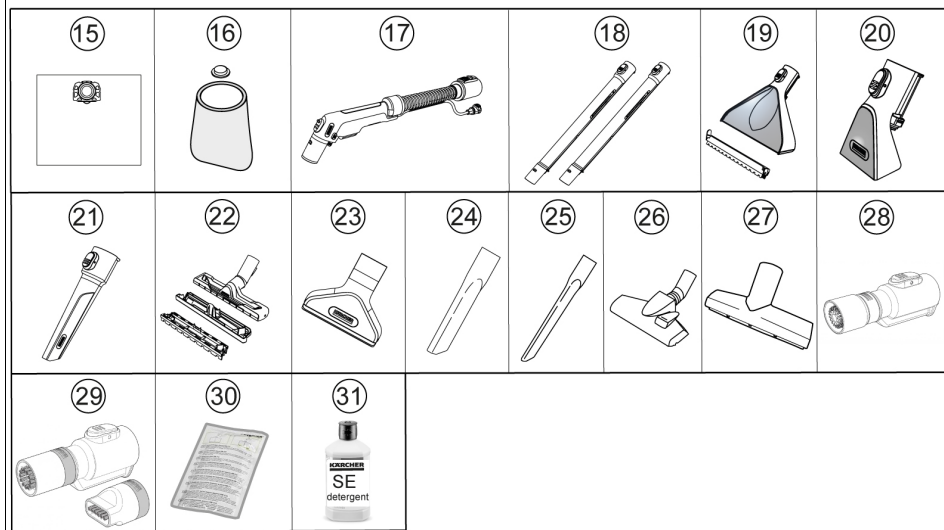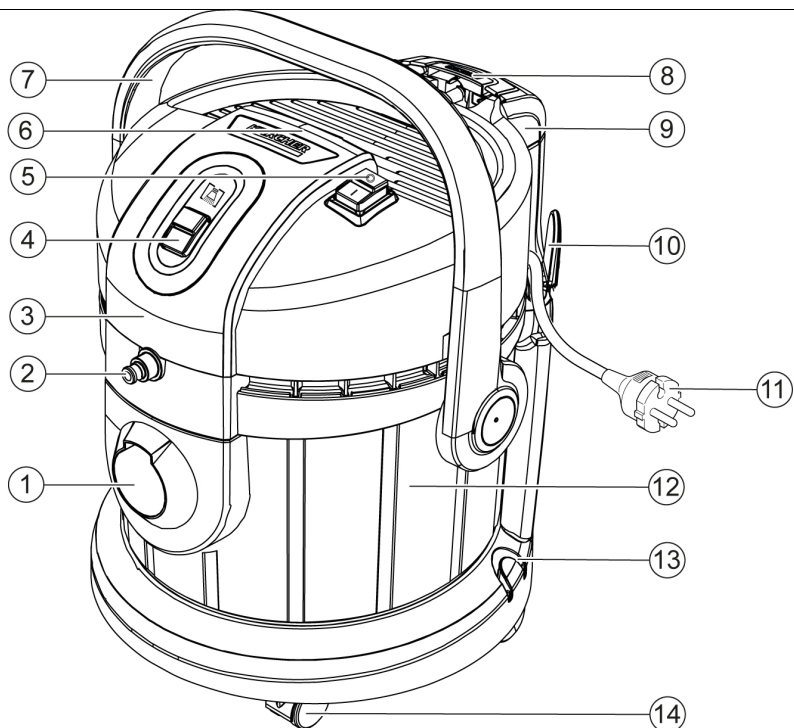

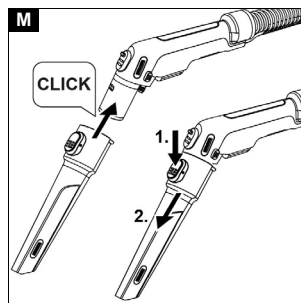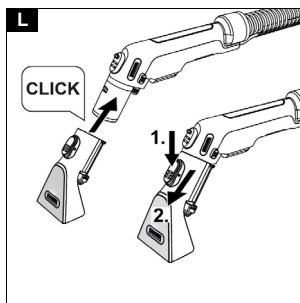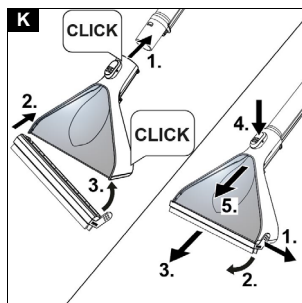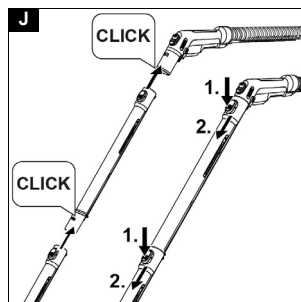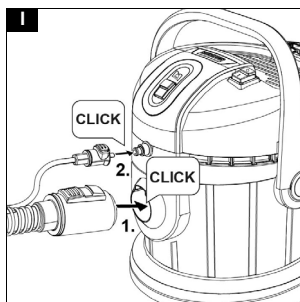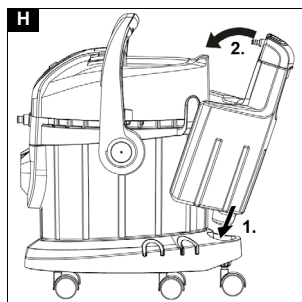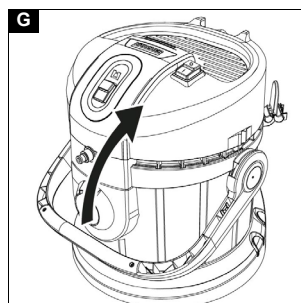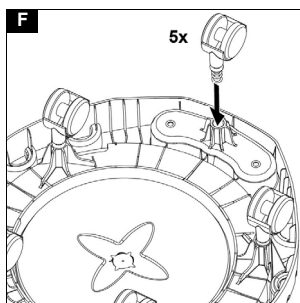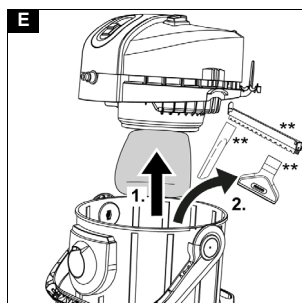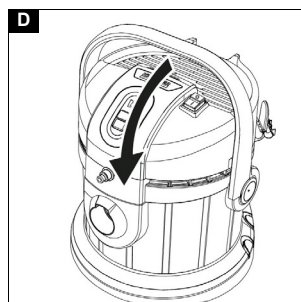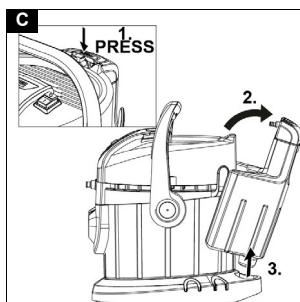

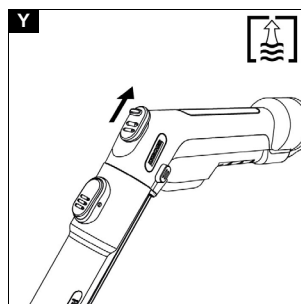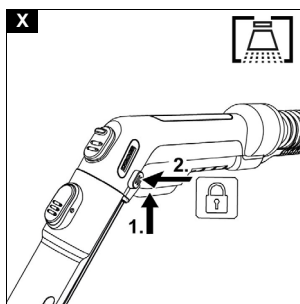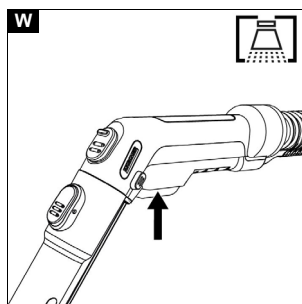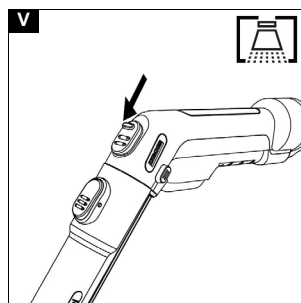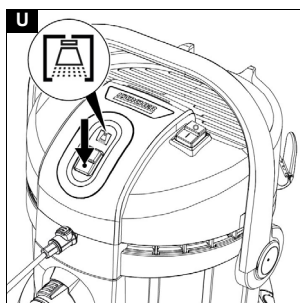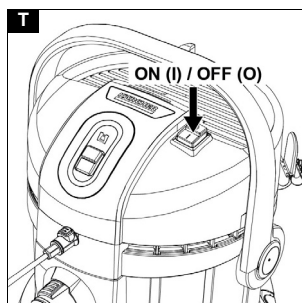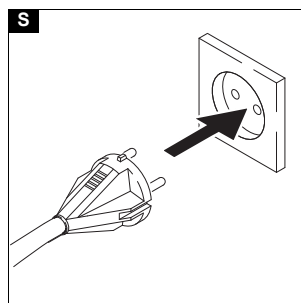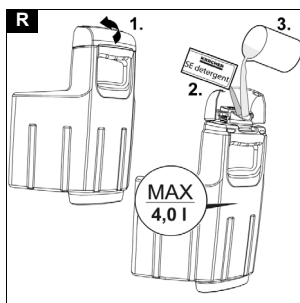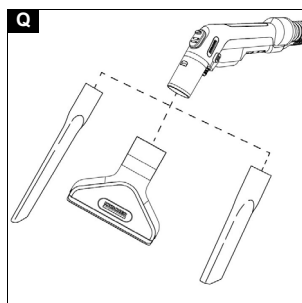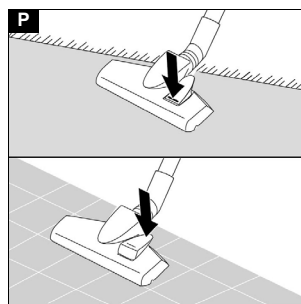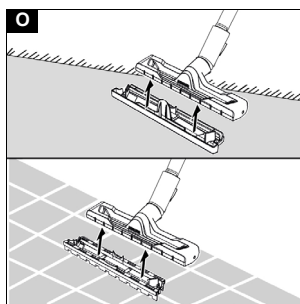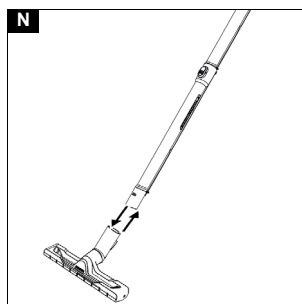

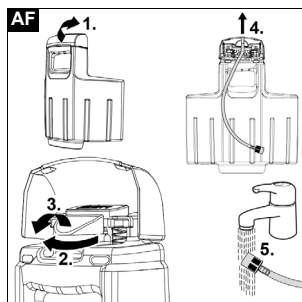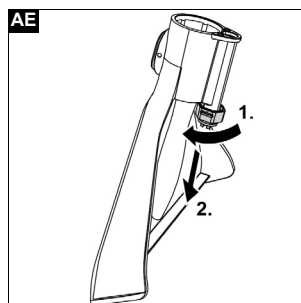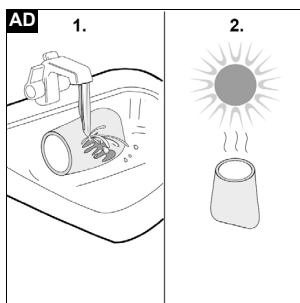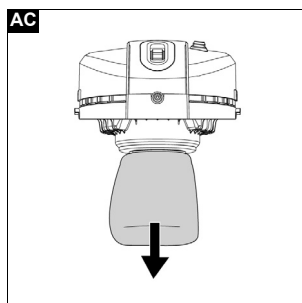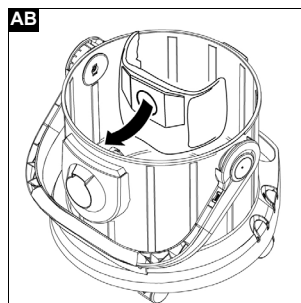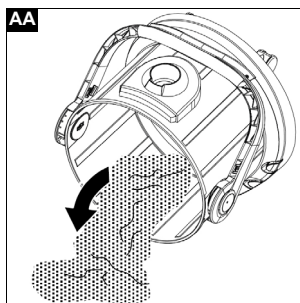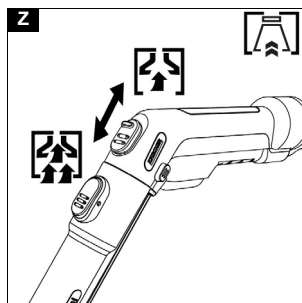

Contents

General notes	6
Safety instructions	6
Intended use	7
Environmental protection	7
Customer Service department	8
Accessories and spare parts	8
Scope of delivery	8
Symbols on the device	8
Device description	8
Initial startup	8
Operation	9
How to use the Accessories	12
Care and maintenance	12
Troubleshooting guide	12
Warranty	13
Technical data	13

General notes

You can find a Code for calling up an application video in:

Illustration B

Safety instructions



Read this safety chapter and these operating instructions before using the device for the first time. Proceed accordingly.

Keep the operating instructions for future reference or for future owners.

- In addition to the notes in the operating instructions, you also need to take into consideration the general safety regulations and accident prevention guidelines applicable by law.
- Warnings and information notices attached to the device provide important information for safe operation.

Hazard levels

⚠ DANGER

- Indication of an imminent threat of danger that will lead to severe injuries or even death.

⚠ WARNING

- Indication of a potentially dangerous situation that may lead to severe injuries or even death.

⚠ CAUTION

- Indication of a potentially dangerous situation that may lead to minor injuries.

ATTENTION

- Indication of a potentially dangerous situation that may lead to damage to property.

Protective gear

- ⚠ CAUTION** • Wear suitable gloves when working with the device.

General safety instructions

- ⚠ DANGER** • Risk of asphyxiation. Keep packaging film out of the reach of children.

- ⚠ WARNING** • Only use the device for its proper use. Take into account the local conditions and beware of third parties, in particular children, when working with the device. • Persons with reduced physical, sensory or mental capabilities and persons lacking experience

and knowledge may only use the appliance if they are properly supervised, have been instructed on use of the appliance safely by a person responsible for their safety, and understand the resultant hazards involved.

- Only people who have been instructed on how to use the device, or have proven their ability to operate it, and have been explicitly instructed to use it, must use the device. • Children must not operate the device. • Children must be supervised to prevent them from playing with the appliance. • Keep the device out of the reach of children when it is connected to the mains or when it is cooling down.

- ⚠ CAUTION** • Safety devices are provided for your own protection. Never modify or bypass safety devices.

Risk of electric shock

- ⚠ DANGER** • Only connect the device to alternating current. The voltage indicated on the type plate must match the voltage of the power source. • Only connect protection class I devices to properly earthed power sources. • Never touch the mains plug and socket with wet hands. • Only operate the device via a fault current protection switch (maximum 30 mA). • Never immerse the device, mains cable or mains plug in water or other liquids. • The mains plug and extension cable connection must not be in water.

- ⚠ WARNING** • Only work with liquids (e.g. cleaning agents) if the device is connected to a socket protected with a fault current protection switch (maximum 30 mA). • Only connect the device to an electrical connection which has been set up by a qualified electrician as per IEC 60364-1. • Switch off the device immediately in the event of leaks. • In case of any foam formation or escaping liquids, switch off the device immediately and remove the mains plug. • Check that the mains connection cable with mains plug is undamaged each time before using the device. To avoid any possible danger, a damaged mains connection cable must be immediately replaced by the manufacturer, or the authorised customer service department or a qualified electrician. • Do not damage the power supply and extension cable by running over it, crushing or yanking it or similar. Protect the power supply cable from heat, oil and sharp edges. • Unsuitable electrical extension cables can be dangerous. Only use electrical extension cables with a splash guard and a diameter of at least 3x1 mm². • Only use the mains connection cable prescribed by the manufacturer, including when replacing the cable. For order no. and type see operating instructions. • Only replace couplings on the power supply or extension cable with those with the same splash guard and the same mechanical strength. • Do not use the device if it has been dropped beforehand, has received an impact or is visibly damaged. Have the device checked by the authorised Customer Service and repaired properly before using the device again. Internal malfunctions could impair the safety of the device.

- ⚠ CAUTION** • Switch off the device and unplug the mains plug before performing cleaning/maintenance. • Have repair work and work on electrical components carried out by the authorised customer service only. • In case of longer breaks in operation and after use, switch off the device at the main switch / device switch and pull the mains plug. • Do not pull the mains plug out the socket using the power supply cable. • Do

not carry/transport the device using the power supply cable.

Operation

⚠ DANGER • When using the device in hazard zones (e.g. service stations), adhere to the respective safety regulations. • Operation in explosive atmospheres is prohibited. • Never use the device to extract any burning or smouldering objects.

DANGER • Never spray or vacuum fluids, flammable gases, explosive dusts as well as undiluted acids and solvents. These include petrol, paint thinners or heating oil, which can form explosive vapours or mixtures through suction air turbulence, also acetone, undiluted acids and solvents because these attack the materials used in the machine. • Risk of explosion

- Never use the device to vacuum up combustible gases, liquids or dusts.
- Never use the device to vacuum up reactive metal dusts (e.g. aluminium, magnesium, zinc).
- Never use the device to vacuum up undiluted brine or acids.
- Never use the device to vacuum up any burning or smouldering objects/matter.

These substances can corrode the materials in use on the device.

⚠ WARNING • Never use the device to vacuum up people or animals. • Do not suck in toxic substances. • Hot water may drip out when disconnecting accessories. Allow the device to cool down first.

⚠ CAUTION • Check the device and the accessories each time before operation, in particular the mains connection and extension cable, to make sure it is safe and working correctly. Pull out the mains plug in case of any damage and do not use the device. • Never leave the device unattended when it is not switched off and with the mains plug or the battery pack removed. • Do not use the device if it has been dropped beforehand, has received an impact or is visibly damaged. Have any damage repaired correctly before using the device again. • The device is not suitable for sucking dust that is harmful to health. • The device must be placed on a firm subsurface.

ATTENTION • Use the socket on the device, if applicable, only for connecting accessories and attachments specified in the operating instructions. • The device is suitable for damp to wet floors up to a maximum water height of 1 cm. Do not drive into an area if there is a danger of exceeding the maximum water height. • The device is only suitable for use on the coats listed in the operating instructions. • Observe the legal regulations when disposing of waste water and brine. • Do not operate the device at temperatures below 0 °C. • Protect the device from rain and frost. Do not store the device outdoors. • Functional impairments. Do not suck in any substances that can harden in contact with water, such as plaster, cement, etc. • During operation, it is necessary to set the device down horizontally/level.

Operation with detergent

⚠ CAUTION • Keep the detergent out of the reach of children. • Never use the recommended detergents undiluted. These products are operationally safe

since they do not contain any acids, alkali or substances that are harmful to the environment. Should detergents come into contact with eyes, rinse these out immediately and thoroughly using water and seek medical attention immediately. The same applies if detergents are swallowed. • Only use the detergents recommended by the manufacturer and observe the application, disposal and warning instructions of the detergent manufacturers.

Maintenance

⚠ WARNING • Prior to cleaning, maintenance and replacement of parts, the device needs to be switched off and the mains plug or battery pack removed. Switch the device off before changing over to another function.

⚠ CAUTION • Repairs may only be carried out by approved customer service sites or staff qualified in this area who are familiar with all relevant safety instructions. • Clean the water level limit facility regularly, checking for any signs of damage.

ATTENTION • Short-circuits or other damage. Do not clean the device with a hose or high-pressure water jet. • Do not clean the device with scouring agents, glass cleaners or multi-purpose cleaners.

Accessories and spare parts

⚠ CAUTION

- Only use accessories and spare parts which are approved by the manufacturer. Only original accessories and original spare parts ensure that the appliance will run fault-free and safely.

Transport

⚠ CAUTION • Switch off the device prior to transport. Secure the device, taking into account its weight. See chapter Technical Data in the operating instructions.

Intended use

Only use the device in private households.

- The device is intended for application as a spray extraction cleaner according to the descriptions given in these operating instructions and the safety instructions for the maintenance cleaning or basic cleaning of carpets with deep cleaning effect.
- Hard floors can also be cleaned with a hard surface attachment for the washing floor nozzle (included in the scope of delivery).
- With the appropriate accessory (included in the scope of delivery), the device can also be used for wet and dry vacuum cleaning.

Environmental protection



The packing materials can be recycled. Please dispose of packaging in accordance with the environmental regulations.



Electrical and electronic devices contain valuable, recyclable materials and often components such as batteries, rechargeable batteries or oil, which - if handled or disposed of incorrectly - can

pose a potential danger to human health and the environment. However, these components are required for the correct operation of the device. Devices marked by this symbol are not allowed to be disposed of together with the household rubbish.

Notes on the content materials (REACH)

Current information on content materials can be found at: www.kaercher.de/REACH

Customer Service department

Our local KÄRCHER branch will be happy to help you if you have any questions or problems with the device.

Accessories and spare parts

Only use original accessories and original spare parts; they ensure safe and fault-free operation of the device. Information on accessories and spare parts can be found at www.kaercher.com.

Scope of delivery

The scope of delivery for the appliance is shown on the packaging. Check the contents for completeness when unpacking. If any accessories are missing or in the event of any shipping damage, please notify your dealer.

Symbols on the device



There is a label on the storage space of the device that describes how to clean the device before storing it:

- 1 Switch off the device.
- 2 Remove the fresh water tank.
- 3 Fill the fresh water tank with about 1 litre of clear water.
- 4 Fit the fresh water tank.
- 5 Press the switch for spraying.
- 6 Drain the spray water in the sink.
See also chapter *Ending operation*

Device description

The device is equipped with different equipment depending on the model selected. The specific equipment is described on the device packaging.

For the figures, please refer to the graphics page.

Illustration A

- ① Suction hose connection
- ② Spray hose connection
- ③ Device head
- ④ Switch for spraying water and detergent
- ⑤ On/Off switch for vacuum cleaning
- ⑥ Recessed grip on the device head
- ⑦ Carrying handle
- ⑧ Fresh water tank unlocking button
- ⑨ Fresh water tank

- ⑩ Storage, mains connection cable
- ⑪ Mains connection cable with mains plug
- ⑫ Container
- ⑬ Holder for suction tubes and accessories
- ⑭ Steering rollers (5x)
- ⑮ ** Filter bag
- ⑯ Foam filter with lid
- ⑰ Spray vacuum hose with spray lever and locking button
- ⑱ Spray suction tubes 2 x 0.5 m (2x)
- ⑲ Spray extraction floor nozzle with hard floor attachment
- ⑳ Spray extraction upholstery nozzle
- ㉑ Spray extraction crevice nozzle
- ㉒ ** Clip-on floor nozzle with carpet and hard floor insert for wet and dry vacuum cleaning
- ㉓ ** Upholstery nozzle for dry vacuum cleaning
- ㉔ ** Crevice nozzle for dry vacuum cleaning
- ㉕ ** Extra long crevice nozzle for dry vacuum cleaning
- ㉖ ** Switchable floor nozzle for carpets and hard floors for dry vacuum cleaning
- ㉗ ** Pet hair brush for dry vacuuming
- ㉘ ** Spot brush
- ㉙ ** Shoe cleaning brush
- ㉚ KÄRCHER SE detergent (100 ml)
- ㉛ ** KÄRCHER SE detergent (1000 ml)

** depending on different configurations

Initial startup

Note

To remove the device head, the fresh water tank must first be removed and the carrying handle folded down at the side.

Removing the fresh water tank

1. Press the unlocking button.
2. Removing the fresh water tank.

Illustration C

Taking off the device head

1. Pull the carrying handle forwards.

Illustration D

The device head is unlocked.

2. Take off the device head.

Illustration E

Installing the steering rollers

1. Remove the contents from the container.

Illustration F

2. Turn the container upside down.

3. Push the steering rollers into the openings at the bottom of the container as far as they will go.

Illustration F

4. Turn the container upside down.

Fitting the device head

1. Place the device head on the container.
2. Pull the carrying handle up.
The device head is locked.

Illustration G

Installing the fresh water tank

1. Insert the fresh water tank at the bottom.
2. Press the top of the fresh water tank against the device head.

3. Make sure that the fresh water tank is engaged.

Illustration H

Connecting the suction and spray hose

1. Attach the suction and spray hose to the connection on the device. Both parts must audibly engage.

Illustration I

2. Fit the accessory as required. See chapter *Installing accessories*.

Operation

Installing accessories

Mounting the accessory for spray extracting

Floor cleaning

Use the spray extraction floor nozzle for cleaning carpets or hard floors (with hard floor attachment).

1. Plug the spray suction tubes together and connect them to the suction hose. All parts must audibly engage.

Illustration J

2. Attach the spray extraction floor nozzle to the spray suction tubes until it audibly engages.

Note

Use the hard floor attachment for hard floor cleaning.

- Fit the hard floor attachment on the spray extraction floor nozzle until it audibly engages.
The squeegee points to the front, the brush strips to the back.

Illustration K

Upholstery cleaning

Depending on requirements, use the spray extraction upholstery nozzle or spray extraction crevice nozzle to clean e.g. upholstery and mattresses.

- Attach the spray extraction upholstery nozzle or spray extraction crevice nozzle to the handle of the suction hose until it audibly engages.

Illustration L

Illustration M

Fitting accessories for wet and dry vacuum cleaning

1. For floor cleaning, plug the spray suction tubes together and connect them to the suction hose. All parts must audibly engage.

Illustration J

2. Slide the floor nozzle on to the spray suction tubes.

Illustration N

3. Depending on the floor covering and cleaning requirements, make sure that the floor nozzle inserts or settings are correct.

Note

Using the floor nozzle with inserts

- For carpet cleaning, use the insert for carpets.
- For cleaning dry dirt, hard floors or water - use the hard floor insert (brush strips and squeegee).

Illustration O

Note

Using the switchable floor nozzle

- Only use it to vacuum clean dry dirt.
- For carpet cleaning, use the position with the brush strips retracted on the underside.
- For hard floor cleaning, use the position with the brush strips extended on the underside.

Illustration P

4. To clean upholstered furniture, for example, slide the upholstery or crevice nozzle directly on to the handle of the suction hose.

Illustration Q

Disconnecting accessories

Disconnecting the accessory for spray extracting

1. Remove the hard floor attachment from the spray extracting floor nozzle.

Illustration K

2. Press the unlocking button and disconnect the spray extracting floor nozzle from the spray suction tubes.

Illustration K

3. Press the unlocking button and disconnect the spray suction tubes from each other.

Illustration J

4. Press the unlocking button on the spray extracting upholstery or spray extracting crevice nozzle and disconnect it from the suction hose.

Illustration L

Illustration M

Disconnecting the accessory for dry vacuum cleaning

1. Disconnect the floor nozzle from the spray suction tube.

Illustration N

2. Press the unlocking button and disconnect the spray suction tubes.

Illustration J

3. Disconnect the upholstery or crevice nozzle from the suction hose.

Illustration Q

Filling the fresh water tank

ATTENTION

The use of unsuitable detergents can damage the device and result in loss of eligibility for warranty claims.

ATTENTION

The fresh water tank must be firmly seated in the device.

Note

The fresh water tank can be removed at any time for filling or be filled directly on the device.

- The total capacity of the fresh water tank is max. 4.0 litres.
- Use KÄRCHER SE detergent for upholstery cleaning if necessary.
- Pour the detergent into the fresh water tank and fill up with tap water (do not overfill).

Filling the water reservoir directly on the device

1. Fold the tank cap up.
2. Recommended quantity of KÄRCHER SE detergent:
 - **Mixing ratio:** 25 - 50 ml of detergent per 1 litre of fresh water.
 - **Dosage for 4.0 litres:** approx. 100 - 200 ml depending on the degree of soiling.

Removing the water reservoir for filling

1. Remove the fresh water tank, see chapter *Removing the fresh water tank*.

2. Fold the tank cap up.
 3. To fill, see "2" in "Filling the water reservoir directly on the device".
- Illustration R**
4. Close the tank cap.
 5. Install the fresh water tank.

Switching on the device

Note

Depending on cleaning requirements, the suction and spray functions can be switched on and used independently or simultaneously.

1. Plug the mains plug into the socket.

Illustration S

2. Press the On switch (position I).
The suction motor starts.

Illustration T

3. To spray the water with the detergent, press the spray switch.
The lamp on the switch lights up and the pump starts.

Illustration U

4. Close the sliding air damper completely.

Illustration V

Cleaning methods

Cleaning tips

- Spray heavily soiled areas in advance and allow the cleaning solution to work for 5 to 10 minutes.
- Always work from light to shadow (from window to door).
- Always work from the cleaned to the uncleaned area.
- The more sensitive the covering (oriental bridges, Berber, upholstery fabric) the lower the concentration of detergent.
- Carpets with jute backs can shrink and bleed in colour if the water is too wet.
- Brush wet pile carpets in the direction of the pile after cleaning when wet (e.g. with a fibre brush or scrubber).
- Impregnating after wet cleaning prevents the textile from being quickly soiled again.
- To avoid pressure points or rust stains, do not walk on or furnish the cleaned area until after it has fully dried.
- To improve the cleaning result, rinse the object with clean water after using detergents.

Spray suction

Note

Warm water (maximum 50 °C) increases the cleaning effect.

Note

Only use KÄRCHER SE detergent for cleaning.

ATTENTION

Danger from cleaning solution

Risk of damage

Before using the device, check the object to be cleaned for colour fastness and water resistance in an inconspicuous place.

ATTENTION

Only use the device on hard floors with a waterproof coating, such as enameled tiles or linoleum.

ATTENTION

To avoid damaging the filter bag, do not use a filter bag for spray vacuum cleaning.

1. Make sure that the filter bag is removed.
2. Install the desired accessory, see chapter *Installing accessories*.
3. Fill the fresh water tank with detergent and water, see chapter *Filling the fresh water tank*.
4. Switch on the device (position I), see chapter *Switching on the device*.
The suction motor starts.

Illustration T

5. Close the air damper completely.

Illustration V

6. Press the switch for spraying.
The lamp on the switch lights up and the pump starts

Illustration U

7. Press the lever on the handle to spray the cleaning solution.

Illustration W

The cleaning solution is sprayed.

8. To spray large areas, first press the lever on the handle and then press the locking button.

Illustration X

9. Run over the surface to be cleaned in overlapping paths. In doing so, pull back the nozzle. Do not push it.

Note

If the fresh water tank is empty, air enters the pump and it becomes noisy. In this case, the spray function must be switched off. If water is required, switch off the suction motor and fill the fresh water tank.

Note

If the wastewater container is full and/or the foam filter is wet, a float switch closes the suction opening and the device runs at a higher speed and becomes loud.

To avoid overfilling the waste water tank, empty the waste water tank directly when filling the fresh water tank.

10. After cleaning, switch off the device (position O), see chapter *Switching off the device*.

Illustration T

Note

After switching off the device, there is still residual liquid in the spray extracting accessory, which runs out onto the floor. To vacuum up this residual liquid, briefly switch on the suction function of the device again and remove the residual liquid from the floor.

11. Switch on the device (position I), see chapter *Switching on the device* and vacuum the residual fluid.
12. Switch off the device again (position O), see chapter *Switching off the device*.

Illustration T

13. Empty the container, see chapter *Emptying the container*.

Illustration AA

Light / Normal soiling with the one step method

1. Press the switch for spraying, see chapter *Spray suction*
- Illustration U**
2. Spray and vacuum clean the cleaning solution in one step.
 3. Switch off the switch for spraying and vacuum clean the remaining detergent solution.
 4. After cleaning, clean the upholstery and carpet with clear, warm water and impregnate if desired.

Heavy contamination or stains with the two-step method

1. Press the switch for spraying, see chapter *Spray suction*
Illustration U
2. Apply the cleaning solution and allow it to take effect for 5 - 10 minutes.
The vacuum function remains switched off.
3. After the contact time, clean the surface as for slight / normal contamination.
4. After cleaning, clean the upholstery and carpet with clear, warm water and impregnate if desired.

Dry vacuuming

ATTENTION

Material damage due to vacuum cleaning without filter bag

This may damage the device.

Always ensure that the filter bag is inserted for dry vacuuming.

ATTENTION

Damage to the foam filter

When changing from wet to dry vacuuming, a wet foam filter can become damaged and unusable.

Replace the foam filter as necessary.

Note

The container and accessories must be dry, otherwise dirt may adhere.

1. Make sure that the container and accessories are dry.
2. Insert the filter bag.
 - a. Unfold the filter bag completely.
 - b. Attach the filter bag to the unit connection and press it on firmly.

Illustration AB

3. Install the desired accessory, see chapter *Installing accessories*.
4. Switch on the device (position I), see chapter *Switching on the device*.

Illustration T

5. Regulate the suction capacity with the air damper.
Illustration Z
6. Switch off the appliance, see Chapter *Switching off the device*.

Illustration T

Wet vacuum cleaning

ATTENTION

Damage to the filter bag

If a filter bag is used for wet vacuum cleaning, it may be damaged.

Do not use a filter bag when vacuuming wet.

1. Remove the filter bag.
2. Install the desired accessory, see chapter *Installing accessories*.
3. Switch on the device, see chapter *Switching on the device*.

Illustration T

4. To vacuum clean large quantities of water, fully open the air damper.

Illustration Y

Note

When the wastewater container is full, a float switch closes the suction opening and the device runs at a higher speed and becomes loud.

5. Empty the container, see chapter *Emptying the container*.

Switching off the device

1. Press the switch for spraying after spray vacuum cleaning.
The pump stops and the lamp on the switch goes out.

Illustration U

2. Press the Off switch (position O).
The suction motor stops.

Illustration T

3. Pull the mains plug out of the outlet.

Emptying the fresh water tank

1. Remove the fresh water tank, see chapter *Removing the fresh water tank*.
2. Emptying the fresh water tank
3. Install the fresh water tank, see chapter *Installing the fresh water tank*.

Emptying the container

Note

When the container is full, a float switch closes the suction opening and the device runs at a higher speed and becomes loud. Switch off the device immediately and drain the waste water.

1. Switch off the device. See chapter *Switching off the device*
2. Remove the suction and spray hose.
3. Take off the device head, see chapter *Taking off the device head*.
4. Empty the container.

Illustration AA

5. Fit the device head, see chapter *Fitting the device head*.
6. Install the fresh water tank, see chapter *Installing the fresh water tank*.

Ending operation

Note

To ensure that no cleaning particles and dirt particles remain in the lines, perform cleaning (without the addition of detergent) after each application.

1. Flush the spray lines in the device.
 - a. Fill the fresh water tank with about 1 litre of clear water.
 - b. Press the switch for spraying.
The lamp on the switch lights up and the pump starts
 - c. Hold the spray/suction hose over a drain until the clear water has been used up.
2. Switch off the device, see chapter *Switching off the device*.
3. Disconnect the accessory, see chapter *Disconnecting accessories*
4. Remove the remaining liquid in the spray/suction hose.
 - a. Press the unlocking button and remove the spray/suction hose from the device.
 - b. Press the lever on the handle of the suction hose and allow the liquid to flow out.

Illustration W

Note

To allow the liquid to dry completely, do not wrap the spray/suction hose around the device to dry.

Note

To avoid puddles in the living area (e.g. on carpet, parquet), let the remaining liquid run in a suitable container (e.g. sink, bucket).

5. Clean the accessory part individually under running water and then allow them to dry.

Note

Any residual water may drip out, therefore it is best to place it in the shower or bath tub.

6. Empty the container, see chapter *Emptying the container*.
7. Thoroughly rinse the container with clear water.
8. If necessary, e.g. if the sieve in the fresh water tank is soiled, rinse the fresh water tank with clear water, see chapter *Cleaning the sieve in the fresh water tank*.
9. Leave the device open to dry.
10. After complete drying, attach the spray suction tubes to the accessory holder.
11. Store the device in a dry and frost-proof room.

How to use the Accessories

General application instructions

- Test the accessory at an inconspicuous point before using it in a sensitive area.
- Follow the manufacturer's cleaning instructions.
- For attaching and removing accessories, see *Installing accessories and Disconnecting accessories*.

Pet hair brush

Accessory specifically for the quick and efficient dry cleaning of lint and pet hair of all kinds.

- Ideal for cleaning in the home, car, motorhome and caravan.

Spot brush

Using the spot brush enables additional deep-fibre wet cleaning of stubborn stains on textiles.

- For optimal results, first remove the dirt with the upholstery nozzle to avoid rubbing it in deeper. Then clean the fabric with the spot brush.

Shoe cleaning brush

The accessories enable quick wet cleaning of sports and leisure shoes, hiking boots and sneakers. The soft bristles remove dirt thoroughly and gently and are also suitable for sensitive materials and leave no traces.

Interchangeable brushes:

- Round brush attachment: Cleans the upper thoroughly and drip-free.
- Narrow brush attachment: Ideal for cleaning shoe soles.

Care and maintenance

General care instructions

- Clean the device and plastic accessory parts with a commonly available plastic cleaner.
- Rinse the container and accessories with water, as necessary, and dry them before further use.

Clean the foam filter

1. Removing the device head.
2. Tap out the dry foam filter and, if necessary, rinse it under running water. To do this, remove the foam filter from the filter basket.

Illustration AC

3. Do not rub or scrub the foam filter when cleaning it.
4. Allow the foam filter to dry completely before using it again.

Illustration AD

5. When reinserting the foam filter, pull the filter over the filter basket and ensure that it is fixed correctly.

Note

To ensure that the device functions properly, it is important that the small black cover in the float basket is still inserted before the foam filter is installed.

Cleaning the spray nozzle

Note

If the spray jet is uneven, the spray nozzle of the spray extracting accessory can be damaged by residues and will need to be cleaned.

1. To clean the floor nozzle and spray extracting upholstery nozzle, loosen the nozzle fastener by turning it and pull it out together with the spray nozzle.

Note

Keep the O-ring/sealing ring in a safe place and reinsert it after cleaning.

Illustration AE

2. Clean residues in the spray nozzle under running water.
3. Insert the spray nozzle into the nozzle fastener and fasten it again by turning it.
4. Also clean residues in the spray nozzle of the spray extracting crevice nozzle under running water.

Cleaning the sieve in the fresh water tank

Note

On the bottom of the fresh water tank there is a filter on which dirt particles can settle and thereby obstruct the water flow.

Therefore, regularly rinse out the fresh water tank.

1. Remove the fresh water tank, see chapter *Removing the fresh water tank*.
2. Clean the sieve.
 - a Fold the tank cap up.
 - b Release the lock.
 - c Remove the water hose from the tank. The sieve is located at the end of the water hose.
 - d Clean the sieve under running water.
3. Rinse the fresh water tank with clear water.

Illustration AF

4. Insert the sieve.
5. Lock the fresh water tank.
6. Install the fresh water tank, see chapter *Installing the fresh water tank*.

Troubleshooting guide

No water emitted from the nozzle

Fresh water tank empty

- Fill up the fresh water tank.

Fresh water sieve is dirty,

- Clean the fresh water filter.

Fresh water tank not installed correctly.

- Install the fresh water tank correctly.

Connection between accessory and spray/suction hose not correct.

- Establish the correct connection.

Detergent pump defective,

- assign Customer Service.

Spray jet uneven

Spray nozzle on the accessory for spray extracting cleaning is soiled.

- Clean the spray nozzle on the respective accessory.

Poor suction performance

The air damper is open too wide.

- Close the air damper.

Accessory, suction hose or suction tubes are clogged.

- Remove the blockage.

The filter bag is full.

- Empty the filter bag.

Foam filter contaminated.

- Tap the foam filter dry or clean it with water.

Foam filter is worn.

- Replace the foam filter.

Detergent pump loud

Fresh water tank empty

- Fill up the fresh water tank.

Water and water steam and/or foam escape from both sides of the device head

The foam filter is too wet, so water is pumped out through the motor.

- Switch off the device and allow the foam filter and device to dry.
- It is possible to dry the foam filter more quickly if it is removed.

Foaming occurs due to incorrect dosing of the detergent.

- Observe the cleaning detergent recommended by the manufacturer.

Warranty

The warranty conditions issued by our relevant sales company apply in all countries. We shall remedy possible malfunctions on your appliance within the warranty period free of cost, provided that a material or manufacturing flaw is the cause. In a warranty case, please contact your dealer (with the purchase receipt) or the next authorised customer service site.

(See overleaf for the address)

Further warranty information (if available) can be found in the service area of your local KÄRCHER website under "Downloads".

Technical data

Electrical connection

Frequency	Hz	50-60
Voltage	V	220-240
Mains fuse (slow-blow)	A	10
Rated power	W	1000

Device performance data

Max. fresh water filling quantity	l	4
Max. waste water filling quantity	l	4
Max. cleaning solution temperature (T in max.)	°C	50

Dimensions and weights

Weight (without accessories)	kg	7,6
Length x width x height	mm	430x385x535

Determined values in acc. with EN 60704-2-1

Sound pressure level	dB(A)	74
----------------------	-------	----

Subject to technical changes without notice.

مساعدة في حالة حدوث أعطال

لا يوجد ماء متسرب في الفوهة

- خزان المياه النقية فارغ
- املء خزان الماء النقي.
- فلتّر الماء النقي منسّخ.
- تنظّف مضاف الماء النقي.
- خزان الماء النقي غير مثبت بشكل صحيح.
- تركيب خزان الماء النقي بشكل صحيح.
- الوصلة بين الملحق وخرطوم الرش / الشفط غير صحيحة.
- قم بتركيب وصلة صحيحة.
- مضخة مواد التنظيف تالفة.
- كلف خدمة العملاء.

تبار الرش غير متساو

- فوهة الرش في ملحق شفط الغسيل منسّخة.
- نظّف فوهة الرش في الملحق المعنى.

قوة الشفط غير كافية

- المنزلق الهوائي مفتوح بدرجة كبيرة للغاية.
- أغلق المنزلق الهوائي.
- ملحق، خرطوم الشفط أو أنبوب الشفط مسدود.
- إزالة الانسدادات.

كيس الفلتر ممتلئ.

- تفريغ كيس الفلتر.
- الفلتر الاسفنجي منسّخ.
- اطرق الفلتر الاسفنجي حتى يجف أو نظفه بالماء.
- الفلتر الاسفنجي تالف.
- استبدل الفلتر الاسفنجي.

مضخة سائل التنظيف بحسب

- خزان المياه النقية فارغ
- املء خزان الماء النقي.
- يتسرب الماء و/أو بخار الماء و/أو الاسفنج من جانبي رأس الجهاز
- الفلتر الاسفنجي مبلل جداً، لذلك يتم ضخ المياه إلى الخارج عبر المحرك.

- أوقف الجهاز واترك الفلتر الاسفنجي والجهاز يجفان.
- يمكن تجفيف الفلتر الاسفنجي بشكل أسرع عند إزالته.
- بسبب الجرعة غير الصحيحة لمادة التنظيف، قد تتكون رغوة.
- انتبه إلى جرعة مادة التنظيف الموصى بها من قبل الشركة المصنعة.

الضمان

يسري في كل دولة شروط الضمان التي تضعها شركة التسويق المتخصصة التابعة لنا. نحن نتولى إصلاح الأخطاء التي قد تطرأ على جهازك خلال فترة الضمان بدون مقابل، عندما يكون سبب هذه الأعطال ناجم عن عيب في المواد المستخدمة أو في عملية التصنيع. في حالة استحقاق الضمان، توجه من فضلك بقسيمة الشراء إلى أقرب موزع أو مركز خدمة عملاء معتمد. (العنوان على الصفحة الخلفية)

يمكن العثور على المزيد من المعلومات حول الضمان (إن وجدت) في قسم الخدمة على موقع KÄRCHER المحلي تحت عنوان "التنزيلات".

البيانات الفنية

توصيل الطاقة

التردد	Hz	50-60
الفلطية	V	220-240
مصدر الشبكة (محمول)	A	10
إدخال الطاقة المقدر	W	1000

أداء الجهاز

أقصى كمية ملء للماء النقي	l	4
أقصى كمية ملء للماء المتسخ	l	4
أقصى درجة حرارة لمحلل التنظيف (T °C)	°C	50

الأبعاد الوزن

الوزن (من دون ملحقات)	kg	7,6
الطول x العرض x الارتفاع	mm	430x385 x535

القيم المسجلة وفقاً للمواصفة EN 60704-2-1

مستوى انبعاث الصوت	dB(A)	74
--------------------	-------	----

المواصفات الفنية خاضعة للتعديل.

إرشاد

5. عند إعادة تركيب الفلتر الاسفنجي، ركب الفلتر فوق سلة الفلتر وتأكد من تثبيتته بشكل صحيح.

إرشاد

لضمان الأداء السليم للجهاز، من المهم أن يبقى الغطاء الأسود الصغير في السلة العائمة موصلاً قبل تركيب الفلتر الاسفنجي.

تنظيف فوهة الرش

إرشاد

في حالة تيار الرش غير المتساوي، قد تتسبب فوهة الرش الخاصة بملحق شطف الغسيل بسبب البقايا ومن ثم يجب تنظيفها.

1. لتنظيف أرضية الغسيل وفوهة غسيل الوساند، فك ملحق الفوهة عن طريق لفه واسحبه للخارج مع فوهة الرش بأكملها.

إرشاد

قم بتخزين الحلقة الدائرية / حلقة الإحكام جيداً واستبدلها بعد التنظيف.

صورة إيضاحية AE

2. نظف البقايا في فوهة الرش تحت الماء الجاري.

3. أدخل فوهة الرش في ملحق الفوهة وأعد توصيلها عن طريق لفها.

4. نظف البقايا في فوهة الرش الخاصة بفوهة غسل الشقوق تحت الماء الجاري.

قم بتنظيف المصفاة الموجودة في خزان الماء النقي

إرشاد

يوجد على أرضية خزان الماء العذب مصفاة يمكن أن يترسب بها جزيئات التناسخ، وبالتالي تعيق تدفق الماء.

لذلك، احرص على شطف خزان الماء العذب بانتظام.

1. قم بإزالة خزان الماء النقي، انظر الفصل فك خزان الماء النقي.

2. تنظيف المصفاة.

a قم بطي غطاء الوقود لأعلى.

b تحرير القفل.

c إزالة خرطوم الماء من الخزان.

توجد المصفاة في طرف خرطوم المياه.

d تنظيف المصفاة تحت المياه الجارية.

3. اشطف خزان الماء النقي بالماء النقي.

صورة إيضاحية AF

4. ركب المصفاة.

5. قفل خزان الماء النقي.

6. قم بتركيب خزان الماء النقي، انظر الفصل تركيب خزان الماء النقي.

لكي لا تنشأ برك مائية في منطقة السكن (مثلاً على السجاد والباركيه)، دع السائل المتبقى يتسرب في وعاء مناسب (مثل حوض الغسيل، الدلو).

5. نظف الملحقات بشكل فردي تحت الماء الجاري ثم اتركها حتى تجف.

إرشاد

قد تكون هناك قطرات من أي مياه لا تزال متبقية، لذلك من الأفضل الوضع في حوض الغسيل أو حوض الاستحمام.

6. قم بإفراغ الحاوية، انظر الفصل تفرغ الوعاء.

7. اشطف الخزان جيداً بماء نقي.

8. عند الحاجة، مثلاً اشطف خزان الماء العذب بماء نقي إذا كانت المصفاة متسخة في خزان الماء العذب، انظر فصل قم بتنظيف المصفاة الموجودة في خزان الماء النقي.

9. اترك الجهاز مفتوحاً حتى يجف.

10. بعد التجفيف الكامل، وصل أنابيب شطف الرش بحامل الملحقات.

11. احفظ الجهاز في أماكن جافة خالية من الصقيع.

استخدام الملحقات

تعليمات الاستخدام العامة

- افحص الملحقات على منطقة غير لافتة قبل استخدامها على موضع حساس.
- اتبع تعليمات التنظيف الصادرة عن الشركة المصنعة.
- تركيب الملحقات وإزالتها، انظر تركيب الملحقات وفصل الملحقات.

فرشاة من شعر الحيوانات

- ملحق مخصص للتنظيف الجاف السريع والفعال للوبر وشعر الحيوانات بجميع أنواعه.
- مثالي للتنظيف في المنزل، والسيارة، والمنزل المتقل، والكرفان.

فرشاة البقع

- يتيح استخدام فرشاة البقع تنظيفاً رطباً إضافياً وعميقاً حتى داخل الألياف لازالة البقع العنيدة من المنسوجات.
- للحصول على أفضل نتيجة، قم بإزالة الأوساخ أولاً باستخدام فوهة المفروشات لتجنب فركها بعمق. بعد ذلك، قم بتنظيف النسيج باستخدام فرشاة البقع.

فرشاة تنظيف الأحذية

- يتيح هذا الملحق تنظيفاً رطباً وسريعاً للأحذية الرياضية وأحذية الاستخدام اليومي وأحذية المشي لمسافات طويلة وأحذية السنيكرز.
- تزيل الشعيرات الناعمة الأوساخ بشكل شامل ولطيف. وهي مناسبة أيضاً للمواد الحساسة ولا تترك أي آثار.
- فرش قابلة للاستبدال:

- رأس فرشاة مستدير: ينظف خامة الجزء العلوي من الحذاء جيداً ودون تقطير.
- رأس فرشاة ضيق: مثالي لتنظيف نعال الأحذية.

العناية والصيانة

تعليمات العناية العامة

- نظف الجهاز وأجزاء الملحقات البلاستيكية باستخدام منظف بلاستيك شائع الاستخدام.
- اشطف الحاوية والملحقات بالماء، حسب اللزوم، وجففها قبل الاستخدام مرة أخرى.

تنظيف الفلتر الإسفنجي

- إزالة رأس الجهاز.
- نظف الفلتر الاسفنجي الجافة بطريقة الطرق وإذا لزم الأمر تحت الماء الجاري. وللقيام بذلك، اسحب الفلتر الاسفنجي من سلة الفلتر.
- صورة إيضاحية AC لا تفرك أو تنظف الفلتر الاسفنجي بالفرشاة عند التنظيف.
- اترك الفلتر الاسفنجي حتى يجف تماماً قبل إعادة استخدامه.

صورة إيضاحية AD

الشفط الرطب

تنبيه

تضرر كيس الفلتر

عند استخدام كيس فلتر أثناء الشفط الرطب، فقد ينضرب.

لا تستخدم أي كيس فلتر مع الشفط الرطب.

1. أزل كيس الفلتر.
2. قم بتركيب الملحقات المرغوبة، انظر فصل تركيب الملحقات.
3. تشغيل الجهاز، انظر الفصل تشغيل الجهاز.

صورة إيضاحية T

4. لشفط كميات كبيرة من الماء، افتح المنزلق الهوائي تمامًا.

صورة إيضاحية Y

إرشاد

- إذا كان خزان الماء المتسخ ممتلئًا، تُغلق العوامة فتحة الشفط ويدور الجهاز بسرعة مرتفعة وبصوت عالٍ.
- قم بإفراغ الحاوية، انظر الفصل تفريغ الوعاء.

إيقاف الجهاز

1. اضغط على مفتاح الرش بعد شفط الرش.
- تتوقف المضخة ولا يضيء المصباح الموجود على المفتاح.

صورة إيضاحية U

2. اضغط على مفتاح الإيقاف (الموضع O).

صورة إيضاحية T

3. سحب قابس الشبكة من المقبس.

تفريغ خزان المياه النقية

1. قم بإزالة خزان الماء النقي، انظر الفصل فك خزان الماء النقي.
2. تفريغ خزان الماء النقي.
3. قم بتركيب خزان الماء النقي، انظر الفصل تركيب خزان الماء النقي.

تفريغ الوعاء

إرشاد

إذا كان الخزان ممتلئًا، تُغلق العوامة فتحة الشفط ويدور الجهاز بسرعة مرتفعة وبصوت عالٍ. قم بإيقاف الجهاز على الفور وإفراغ الماء المتسخ.

1. إيقاف الجهاز، انظر الفصل إيقاف الجهاز.
2. إزالة خرطوم الشفط والرش.
3. إزالة رأس الجهاز، انظر الفصل إزالة رأس الجهاز.
4. إفراغ الحاوية.

صورة إيضاحية AA

5. تركيب رأس الجهاز، انظر الفصل نصب رأس الجهاز.
6. قم بتركيب خزان الماء النقي، انظر الفصل تركيب خزان الماء النقي.

إنهاء التشغيل

إرشاد

لكي لا تبقى جزئيات التنظيف والاتساخات في الوصلات، قم بعملية تنظيف (دون إضافة منظفات) بعد كل استخدام.

1. شطف أنابيب الرش في الجهاز.
a املا خزان الماء النقي بحوالي لتر من الماء النقي.
b اضغط على مفتاح الرش.
يضيء المصباح الموجود على المفتاح وتبدأ المضخة في العمل.
c امسك خرطوم الرش والشفط فوق المصرف حتى يتم استخدام الماء النقي.
2. إيقاف الجهاز، انظر الفصل إيقاف الجهاز.
3. قم بفصل الملحقات، انظر الفصل فك الملحقات.
4. إزالة أي سائل متبق في خرطوم الرش والشفط.
a اضغط على زر التحرير وأدخل خرطوم الرش / الشفط من الجهاز.
- b اضغط على الذراع الموجود بالمقبض اليدوي في خرطوم الشفط وقم بتصريف السائل.

صورة إيضاحية W

إرشاد

لكي يجف السائل تمامًا، لا تقم بلف خرطوم الرش / الشفط حول الجهاز لغرض التجفيف.

إرشاد

إذا كان خزان المياه النقية فارغًا، يدخل الهواء إلى المضخة ويصبح الصوت عاليًا. في هذه الحالة، يجب إيقاف وظيفة الرش. إذا كانت المياه مطلوبة، فاقف أيضًا محرك الشفط واملا خزان المياه النقية.

إرشاد

إذا كان خزان الماء المتسخ ممتلئًا و/أو الفلتر الإسفنجي مبللًا، تُغلق العوامة فتحة الشفط ويدور الجهاز بسرعة مرتفعة وبصوت عالٍ. لتجنب فرط ملء خزان المياه المتسخة، أفرغ خزان المياه المتسخة مباشرة عند ملء خزان المياه النقية.

10. بعد التنظيف، أوقف الجهاز (الموضع O)، انظر الفصل إيقاف الجهاز.

صورة إيضاحية T

إرشاد

بعد إيقاف الجهاز، سيكون هناك سائل متبقى في ملحقات شفط الفصيل، والتي ستسرب على الأرضية. لشفط هذا السائل المتبقى، شغل وظيفة الشفط بالجهاز مجدداً لفترة قصيرة وأزل السائل المتبقى من الأرضية.

11. تشغيل الجهاز (الموضع I)، انظر الفصل تشغيل الجهاز وشفط السائل المتبقى.
12. إيقاف الجهاز مجدداً (الموضع O)، انظر الفصل إيقاف الجهاز.

صورة إيضاحية T

13. قم بإفراغ الحاوية، انظر الفصل تفريغ الوعاء.

صورة إيضاحية AA

اتساخ خفيف / عادي مع طريقة الخطوة الواحدة

1. اضغط على مفتاح الرش، انظر الفصل التنظيف بالرش
2. رش محلول التنظيف واشفطه في عملية واحدة وفي نفس الوقت.
3. قم بإيقاف مفتاح الرش واشفط أي سائل تنظيف متبقى.
4. بعد التنظيف، استكمل تنظيف المفروشات وسجاد الأرضيات بالماء الدافئ النظيف، وأشبعه بالماء عند الرغبة.

الاتساخات الشديدة أو البقع باستخدام طريقة مكونة من خطوتين

1. اضغط على مفتاح الرش، انظر الفصل التنظيف بالرش
2. صب محلول التنظيف واتركه لمدة 5-10 دقائق.
3. تبقى وظيفة الشفط مغلقة.
4. بعد وقت التعرض، نظف السطح كما لو كان متسخًا بشكل خفيف / طفيف.
5. بعد التنظيف، استكمل تنظيف المفروشات وسجاد الأرضيات بالماء الدافئ النظيف، وأشبعه بالماء عند الرغبة.

الشفط الجاف

تنبيه

ضرر مادي بسبب الشفط دون كيس فلتر

قد يتعرض الجهاز للضرر. يجب العمل دائماً باستخدام كيس الفلتر المركب عند الشفط الجاف.

تنبيه

تضرر الفلتر الإسفنجي

عند التحويل من الشفط الرطب إلى الجاف يمكن أن ينسد الفلتر الإسفنجي الرطب ويصبح غير قابل للاستخدام. قم بتغيير الفلتر الإسفنجي عند اللزوم.

إرشاد

- يجب أن تكون الخزانات وملحقاتها جافة، وإلا فقد تلتصق الأوساخ.
 1. تأكد من جفاف الحاويات والملحقات.
 2. تركيب كيس فلتر.
 - a افتح الفلتر الكبسي بالكامل.
 - b قم بتركيب كيس الفلتر بوصلة الجهاز واضغط عليه بقوة.
- #### صورة إيضاحية AB
3. قم بتركيب الملحقات المرغوبة، انظر فصل تركيب الملحقات.
 4. تشغيل الجهاز (الموضع I)، انظر الفصل تشغيل الجهاز.
- #### صورة إيضاحية T
5. اضغط قوة الشفط باستخدام المنزلق الهوائي.
 6. إيقاف الجهاز، انظر الفصل إيقاف الجهاز.
- #### صورة إيضاحية Z
- #### صورة إيضاحية T

4. لتنظيف الأثاث المنجد، مثلاً، حرك الوسائد أو فوّهة الشقوق مباشرة على المقيض اليدوي لخرطوم الشفط.

صورة إضاحية Q

فك الملحقات

فصل ملحقات مكانس الشفط

1. أزل ملحق الأرضية الصلبة لفوّهة غسيل الأرضية.
2. صورة إضاحية K
اضغط على زر التحرير وافصل فوّهة غسيل الأرضية عن أنابيب شفط الرش.
3. صورة إضاحية K
اضغط على زر التحرير وافصل أنابيب شفط الرش عن بعضها بعضاً.
4. صورة إضاحية L
اضغط على زر التحرير الموجود في فوّهة غسيل المنسوجات أو فوّهة غسيل الشقوق وافصلها عن خرطوم الشفط.

صورة إضاحية L

صورة إضاحية M

فصل ملحقات المكينة الجافة

1. فصل فوّهة الأرضية عن أنبوب شفط الرش.
2. صورة إضاحية N
اضغط على زر التحرير وافصل أنابيب شفط الرش.
3. صورة إضاحية L
افصل فوّهة الوسائد أو فوّهة الشقوق عن خرطوم الشفط.

صورة إضاحية Q

ملء خزان الماء النقي

تنبيه

قد يؤدي استخدام منظفات غير مناسبة إلى إتلاف الجهاز واستبعاد خدمات الضمان.

تنبيه

يجب أن يثبت خزان الماء النقي في الجهاز بإحكام.

إرشاد

- يمكن فك خزان الماء العذب لملء أو ملأه مباشرةً من الجهاز.
- السعة الكاملة لخزان المياه العذبة تبلغ 4.0 لترًا كحد أقصى.
- وإذا لزم الأمر، استخدم منظم SE من KÄRCHER لتنظيف المفروشات.
- يوضع المنظم في خزان المياه العذبة، وبملاً بماء الصنبور، ولا يسمح بملؤه بشكل مفرط.

ملء خزان الماء مباشرةً بالجهاز

1. قم بطي غطاء الوقود لأعلى.
2. الكمية الموصى بها من مادة التنظيف KÄRCHER SE:
- نسبة الخلط: 25: 50 مل من مادة التنظيف لكل 1 لتر من المياه العذبة.

• الجرعة في حال استخدام 4.0 لتر: حوالي 100 - 200

فك خزان الماء لغرض الملء

1. قم بإزالة خزان الماء النقي، انظر الفصل فك خزان الماء النقي.
2. قم بطي غطاء الوقود لأعلى.
3. للملء، انظر "2" في "ملء خزان الماء مباشرةً بالجهاز".

صورة إضاحية R

صورة إضاحية S

صورة إضاحية T

تشغيل الجهاز

إرشاد

- بحسب احتياجات التنظيف، يمكن تشغيل وظيفة الشفط والرش واستخدامهما بشكل مستقل أو في نفس الوقت.
- 1. إدخال قابس الشفط في المقبس.
- 2. صورة إضاحية S
بالنسبة لوظيفة الشفط، شغل الجهاز واضغط على مفتاح التشغيل (الوضع 1).
- بيدا المحرك الذي يعمل بالسحب الطبيعي.
- صورة إضاحية T

3. لرش الماء المزود بالمنظف، اضغط على مفتاح الرش.
- يضئ المصباح الموجود على المفتاح وتبدأ المضخة في العمل.

صورة إضاحية U

صورة إضاحية V

صورة إضاحية W

طرق التنظيف

نصائح للتنظيف

- قم برش المواضع المتسخة بشدة مسبقاً، واترك محلول التنظيف لمدة 5 إلى 10 دقائق لتحقيق التأثير المرجو.
- أبدأ العمل دائماً من المناطق المضيئة وصولاً إلى المناطق المظلمة (من النافذة إلى الباب).
- أبدأ العمل دائماً من المناطق النظيفة إلى المناطق غير النظيفة.
- كلما كانت البطانة أكثر حساسية (السجاد الشرقي، سجاد البربر، المفروشات) قل تركيز سائل التنظيف.
- يمكن أن ينكمش السجاد ذو الظهر المصنوع من الجوت، ويفقد لونه إذا استخدمت رطوبية شديدة أثناء العمل.
- مشط السجاد كثيف الوبر وهو رطب في اتجاه الوبر (على سبيل المثال باستخدام مكينة الوبر أو مكينة خشنة).
- عملية التشميع بعد التنظيف الرطب تمنع إعادة اتساخ الأرضيات المصنوعة من المنسوجات بشكل سريع.
- لتجنب مواضع الضغط أو بقع الصدا، لا تخطو على المناطق المنظفة أو تضع قطع الأثاث عليها إلا بعد جفافها.
- لتحسين نتيجة التنظيف، يجب تنظيف الشيء المراد تنظيفه بالماء التنظيف بعد استخدام مواد التنظيف.

التنظيف بالرش

إرشاد

الماء الدافئ (بحد أقصى 50 °م) يزيد من تأثير التنظيف.

إرشاد

اقتصر على استخدام مادة التنظيف KÄRCHER SE من أجل التنظيف.

تنبيه

خطر التعرض لضرب

قبل استخدام الجهاز، تحقق من الشيء المراد تنظيفه للتأكد من ثبات لونه ومقاومته للماء في موضع غير ملفت.

تنبيه

لا تستخدم الجهاز إلا على الأرضيات الصلبة التي بها طلاء مقاوم للماء، على سبيل المثال البلاط المطلي بالمينا أو المشمع.

تنبيه

لتجنب تضرر كيس الفلتر، لا تستخدم كيس فلتر للكنس بالرش.

1. تأكد من إزالة كيس الفلتر.
2. قم بتركيب الملحقات المرغوبة، انظر فصل تركيب الملحقات.
3. املاً خزان الماء العذب بالمنظف والماء، انظر فصل ملء خزان الماء النقي.
4. تشغيل الجهاز (الوضع 1)، انظر الفصل تشغيل الجهاز.
5. بيذا المحرك الذي يعمل بالسحب الطبيعي.
6. صورة إضاحية T
أغلق المنزلق الهوائي تماماً.
7. صورة إضاحية V
اضغط على مفتاح الرش.
8. يضيء المصباح الموجود على المفتاح وتبدأ المضخة في العمل.
9. صورة إضاحية U
لرش محلول التنظيف، اضغط الذراع الموجود على المقبض.
10. صورة إضاحية W
يتم رش محلول التنظيف.
11. لرش مساحات كبيرة، اضغط أولاً على الذراع الموجودة في المقبض ثم اضغط على زر القفل.
12. صورة إضاحية X
مر على السطح المراد تنظيفه عبر مسارات متداخلة. للقيام بذلك، اسحب الفوّهة للخلف ولا تدفعها.

نصب رأس الجهاز

1. تركيب رأس الجهاز في الوعاء.
 2. اسحب مقبض الحمل إلى الأمام.
- رأس الجهاز غير مقفل.
- صورة إيضاحية G**

تركيب خزان الماء النقي

1. تركيب خزان الماء النقي بالأسفل.
 2. اضغط على خزان المياه العذبة تجاه الجزء العلوي من رأس الجهاز.
 3. تأكد من تعشيق خزان الماء النقي.
- صورة إيضاحية H**

توصيل خرطوم الشفط وخرطوم الرش

1. توصيل خرطوم الشفط والرش بالوصلة الموجودة على الجهاز.
 - ويجب النقر على كلا الجزئين حتى يتعشقا في مكانهما.
- صورة إيضاحية I**
2. ركب الملحقات بحسب الاحتياج. انظر الفصل تركيب الملحقات.

التشغيل

تركيب الملحقات

تركيب ملحقات مكانس الشفط

تنظيف الأرضيات

- استخدم فوهة الغسيل لتنظيف سجاد الأرضيات أو الأرضيات الصلبة (مع ملحق الأرضيات الصلبة).
1. توصيل أنابيب شفط الرش سوياً وتوصيلها بخرطوم الشفط.
 - حيث يجب أن تتعشق جميع الأجزاء في مكانها بصوت مسموع.
- صورة إيضاحية J**
2. ضع فوهة شفط الأرضية على أنابيب شفط الرش حتى تتعشق في مكانها.

إرشاد

- لتنظيف الأرضيات الصلبة، استخدم ملحق الأرضيات الصلبة.
- ضع فوهة الأرضية الصلبة على فوهات غسيل الأرضيات حتى تتعشق في مكانها.
 - تشير الشفة المطاطية إلى الأمام، وتشير شعيرات الفرشاة للخلف.

صورة إيضاحية K

تنظيف المفروشات

- بحسب الاحتياج، استخدم فوهة غسيل الوسائد أو فوهة غسيل الفتحات لتنظيف الوسائد والمراتب على سبيل المثال.
- ضع فوهة غسيل الوسائد أو فوهة غسيل الفتحات على مقبض خرطوم الشفط حتى تتعشق في مكانها.

صورة إيضاحية L

صورة إيضاحية M

تركيب ملحقات للمكنسة الرطبة والجافة

1. لتنظيف الأرضية، قم بتوصيل أنابيب شفط الرش سوياً وتوصيلها بخرطوم الشفط، حيث يجب أن تتعشق جميع الأجزاء في مكانها بصوت مسموع.
2. حرك الفوهة الأرضية على أنابيب شفط الرش.
3. بحسب فرش الأرضية واحتياجات التنظيف، انتبه إلى التركيبات أو الإعدادات الصحيحة لفوهة الأرضية.

إرشاد

- استخدم فوهة أرضية مع ملحقات
- لتنظيف سجاد الأرضية، استخدم الملحق الخاص بالسجاد.
 - لتنظيف الأساخات الجافة أو الأرضية الصلبة أو الماء - استخدم ملحق الخلط (شريط الفرشاة والشفة المطاطية).

صورة إيضاحية O

إرشاد

- استخدم الفوهة الأرضية القابلة للضغط
- لا تستخدم إلا لتنظيف الأوساخ الجافة.
 - لتنظيف سجاد الأرضيات، استخدم الوضع الذي تكون فيه شعيرات الفرشاة منكشمة من الأسفل.
 - لتنظيف الأرضيات الصلبة، استخدم الوضع الذي تكون فيه شعيرات الفرشاة منكشمة من الأسفل.
- صورة إيضاحية P**

8) زر تحرير خزان المياه النقية

9) خزان المياه النقية

10) التخزين، كابل وصلة الطاقة

11) كابل التيار الكهربائي المزود بقابس

12) وعاء

13) حامل لماسورة الشفط والملحقات

14) بكرات التوجيه (5x)

15) ** فلتر كيسى

16) الغلتر الإسفنجي المزود بغطاء

17) خرطوم شفط الرش مع ذراع الرش وزر القفل

18) أنابيب شفط الرش 2 × 0.5 م (2x)

19) فوهة أرضية للغسيل مع تركيب أرضى صلب

20) فوهة وسادة الغسيل

21) فوهة شقوق الغسيل

22) ** مشابك للفوهة الأرضية مع تركيبة للسجاد وللأرضية الصلبة للكس الرطب والجاف

23) ** فوهة للمفروشات من أجل الكس الجاف

24) ** فوهة للشقوق من أجل الكس الجاف

25) ** مرفق إضافي لفوهة الشقوق من أجل الكس الجاف

26) ** فوهة أرضية قابلة للتبديل للسجاد والأرضيات الصلبة من أجل الكس الجاف

27) ** فرشاة شعر الحيوانات للتنظيف الجاف

28) ** فرشاة البقع

29) ** فرشاة تنظيف الأحذية

30) المنظف SE من KÄRCHER (100 مل)

31) ** المنظف SE من KÄRCHER (1000 مل)

** اعتماداً على نوع التجهيز

بدء التشغيل

إرشاد

لإزالة رأس الجهاز، يجب أولاً إزالة خزان الماء النقي وطي مقبض الحمل لأسفل بشكل جانبي.

فك خزان الماء النقي

1. اضغط على زر التحرير.

2. اخلع خزان الماء النقي.

صورة إيضاحية C

إزالة رأس الجهاز

1. اسحب مقبض الحمل للأمام.

صورة إيضاحية D

2. رأس الجهاز غير مقفل.

إزالة رأس الجهاز.

صورة إيضاحية E

تركيب العجلات الدوارة

1. أزل المحتوى من الخزان.

صورة إيضاحية E

2. اقلب الحاوية.

3. اضغط البكرات الدوارة في الفتحات الموجودة أسفل الحاوية حتى آخر مداها.

صورة إيضاحية F

4. اقلب الحاوية.

تحتوي الأجهزة الكهربائية والإلكترونية على مواد قيمة قابلة لإعادة التدوير وغالباً ما تحتوي أيضاً على مكونات مثل البطاريات أو المراكمت أو الزيوت والتي قد تشكل خطورة على صحة الإنسان والبيئة في حالة التعامل معها بشكل غير صحيح أو إذا تم التخلص منها بصورة خاطئة. إلا أن هذه المكونات ضرورية لتشغيل الجهاز بصورة سليمة. لا يجوز التخلص من الأجهزة المميزة بهذا الرمز مع النفايات المنزلية.

إرشادات حول مواد المحتويات (REACH)
تجد المعلومات الحالية حول المحتويات على الموقع:
www.kaercher.de/REACH

خدمة العملاء

في حالة وجود أسئلة سوف يقوم فرع شركتنا KÄRCHER بتقديم المساعدة لكم بكل سرور.


الملحقات التكميلية وقطع الغيار

استخدام الملحقات التكميلية الأصلية وقطع الغيار الأصلية فقط، والتي تضمن تشغيل الجهاز بشكل آمن وخالٍ من الاختلالات. تجد المعلومات الخاصة بالملحقات التكميلية وقطع الغيار على الموقع www.kaercher.com.

محتوى التسليم

محتوى تسليم الجهاز مصور على العبوة. تأكد من وجود جميع محتويات العبوة عند فتحها. وفي حالة نقص أية ملحقات تكميلية أو اكتشاف أي تلف بها ناتج عن عملية النقل، يرجى إخطار البائع.

الرموز على الجهاز

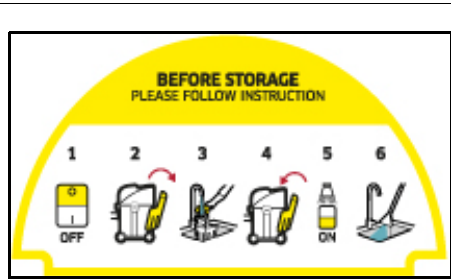

يوجد ملصق على رف الجهاز يصف طريقة تنظيف الجهاز قبل تخزينه:

- 1 أطفئ الجهاز.
 - 2 أزل خزان الماء النقي.
 - 3 املا خزان الماء النقي بحوالي لتر من الماء النقي.
 - 4 تركيب خزان الماء النقي.
 - 5 اضغط على مفتاح الرش.
 - 6 صرف رذاذ الماء في الحوض.
- انظر أيضاً الفصل إنهاء التشغيل

مواصفات الجهاز

يوجد اختلاف في المعدات اعتماداً على الطراز المحدد. يتم وصف المعدات المحددة على عبوة الجهاز.

للاشكال، انظر صفحة الصور.

صورة إيضاحية A

① وصلة خرطوم الشفط

② وصلة خرطوم الرش

③ رأس الجهاز

④ مفتاح لرش الماء والمنظفات

⑤ مفتاح تشغيل / إيقاف للشفط

⑥ فتحة مقبض في رأس الجهاز

⑦ مقبض الحمل

تنويه • يجب أن يكون للجهاز أرضية مستوية وآمنة.

تنبيه • اقتصر على استخدام المقبس الذي قد يكون موجوداً بالجهاز لتوصيل الملحقات والأجهزة الاحتياطية المذكورة في دليل التشغيل. • يصلح استخدام الجهاز للأرضيات الرطبة أو المبللة بالمياه حتى ارتفاع 1 سم للمياه كحد أقصى. لا تسير في منطقة يمكن فيها وجود خطر تجاوز مستوى ارتفاع المياه للحد الأقصى. • الجهاز مناسب للأرضيات المحددة في دليل التشغيل فقط. • احرص على مراعاة اللوائح القانونية عند التخلص من المياه المنسخة والمحاليل القلوية. • لا تستخدم الجهاز عندما تكون درجات الحرارة تحت 0° مئوية. • قم بحماية الجهاز من المطر والصفيع. لا تخزن الجهاز في مكان خارجي. • قيود وظيفية. لا تشفط المواد التي قد تتصلب عند ملامستها للماء، مثل الجبس والأسمنت وما إلى ذلك.

تنبيه • أثناء التشغيل، يجب نصب الجهاز أفقياً / بشكل مستوي.

التشغيل باستخدام مواد تنظيف

تنويه • خزن مواد التنظيف بعيداً عن متناول الأطفال. • لا تستخدم المنظفات الموصى بها في صورة مخففة. المنتجات هي آمنة عند الاستخدام لأنها لا تحتوي على مواد حمضية أو قلوية أو على مواد صارة بالبيئة. في حالة ملامسة مادة التنظيف للعيون، يجب غسلها فوراً بالماء جيداً، أما إذا تم بلع مادة التنظيف فيجب زيارة الطبيب فوراً. • اقتصر على استخدام مواد التنظيف الموصى بها من قبل الجهة الصانعة، والتم بآرشادات الاستخدام والتخلص والتخزين التي تنص عليها الجهة الصانعة لمواد التنظيف.

الصيانة

تحذير • قبل القيام بأعمال التنظيف والصيانة واستبدال الأجزاء، يجب عليك إيقاف الجهاز وفصل القابس أو إزالة البطارية. قم بإيقاف الجهاز قبل التبدل إلى وظيفة أخرى.

تنويه • أعهد فقط لمراكز خدمة العملاء أو العمالة الفنية المصرح لها في هذا المجال بالقيام بعمليات الإصلاح، حيث أنهم يكونون على علم بكل تعليمات السلامة ذات الصلة. • قم بتنظيف محدد مستوى المياه بانتظام وافحصه أثناء ذلك من علامات التلف.

تنبيه • دوائر قصر أو أضرار أخرى. لا تنظف الجهاز عن طريق تيار ماء الخرطوم أو تيار ماء الضغط العالي. • لا تنظف الجهاز باستخدام المنظفات الكاشطة أو منظفات الزجاج أو المنظفات متعددة الأغراض.

الملحقات التكميلية وقطع الغيار

تنويه

• لا تستخدم إلا الملحقات وقطع الغيار المصرح بها من الجهة الصانعة. الملحقات التكميلية الأصلية وقطع الغيار الأصلية تضمن تشغيل الجهاز بشكل آمن وخالٍ من الاختلالات.

النقل

تنويه • أطفئ الجهاز قبل نقله. قم بتثبيت الجهاز مع مراعاة وزنه، انظر فصل *المواصفات الفنية* في دليل التشغيل.

الاستخدام المطابق للتعليمات

استخدم الجهاز للاستعمال المنزلي فقط. • تم تصميم الجهاز للاستخدام كمنظف بالشفط الرذاذي للتنظيف الوقائي أو التنظيف الأساسي لمفروشات الأرضيات مع تأثير التنظيف العميق وفقاً للاوصاف وتعليمات السلامة الواردة في دليل التشغيل هذا. • مع ملحق الأرضية الصلب لفوهة أرضية الشفط (مضمنة في التجهيزات الموردة)، يمكن أيضاً تنظيف الأرضيات الصلبة. • مع الملحقات المناسبة (مضمنة في التجهيزات الموردة)، يمكن استخدام الجهاز أيضاً كمكنسة جافة ورطبة.

حماية البيئة

المواد المستخدمة في التغليف قابلة لإعادة التدوير. يرجى التخلص من مواد التغليف بطريقة تحافظ على البيئة.

إرشادات عامة

يمكنك العثور على رمز الاتصال بفيديو الاستخدام على:

صورة إيضاحية B

إرشادات السلامة

اقرأ فصل السلامة هذا ودليل التشغيل هذا أيضا قبل استخدام الجهاز لأول مرة. ثم تصرف طبقاً لذلك. احتفظ بدليل التشغيل للاستخدام اللاحق أو لتسليمه للمالك الجديد.

- إلى جانب الإرشادات الواردة في دليل التشغيل، يجب عليك مراعاة القواعد العامة للسلامة والوقاية من الحوادث والتي يحددها المشرع القانوني.
- تشير علامات الإرشاد والتحذير الموجودة على الجهاز إلى الإرشادات الهامة للتشغيل الآمن.

درجات الخطر

⚠️ خطر

- إشارة إلى خطر مباشر وشيك الحوادث وقد يؤدي إلى إصابات جسدية بالغة أو إلى الوفاة.

⚠️ تحذير

- إشارة إلى موقف قد تخففه المخاطر وقد يؤدي إلى إصابات جسدية بالغة أو إلى الوفاة.

⚠️ تنويه

- إشارة إلى موقف قد تخففه المخاطر وقد يؤدي إلى إصابات بسيطة.

⚠️ تنبيه

- إشارة إلى موقف قد تخففه المخاطر وقد يؤدي إلى حدوث أضرار مادية.

معدات الحماية الشخصية

- ⚠️ **تنويه** • احرص على ارتداء القفازات المناسبة عند إجراء أعمال على الجهاز.

تعليمات السلامة العامة

- ⚠️ **خطر** • خطر الاختناق. يجب عليك إبعاد أكياس التعبئة والتغليف عن متناول الأطفال.

⚠️ **تحذير** • استخدم الجهاز وفقاً للغرض المحدد له فقط. عليك مراعاة الظروف المحيطة والانتباه عند استخدام الجهاز إلى الأشخاص الآخرين وخاصة الأطفال منهم. • يسمح للأشخاص الذين لديهم قدرات بدنية أو عقلية محدودة أو الذين لا يتوافر لديهم الخبرة والمعرفة الكافية، أن يستخدموا الجهاز بشرط الإشراف عليهم بشكل صحيح، أو إذا تم بعد حصولهم على تعليمات بشأن كيفية الاستخدام الآمن للجهاز من قبل شخص مسؤول عن سلامتهم ومعرفتهم بالمخاطر المرتبطة به. • لا يسمح باستخدام الجهاز إلا من قبل الأشخاص الذين تم إرشادهم إلى كيفية استخدام الجهاز أو الذين أثبتوا قدرتهم على استخدام الجهاز وتم تكليفهم صراحة باستخدامه. • لا يسمح للأطفال بتشغيل الجهاز. • يجب مراقبة الأطفال للتأكد من عدم لعبهم بالجهاز. • احفظ الجهاز بعيداً عن متناول الأطفال، عند توصيله بالشبكة الكهربائية أو عند تبريده.

- ⚠️ **تنويه** • تجهيزات السلامة تخدم حمايتك. لا تقم بتغيير أو تجاوز تجهيزات السلامة أبداً.

خطر الصدمة الكهربائية

⚠️ **خطر** • قم بتوصيل الجهاز بتيار متردد فقط. يجب أن يتوافق الجهد الموجود على لوحة الطراز مع جهد مصدر التيار. • قم بتوصيل أجهزة فئة الحماية I بمصادر التيار الكهربائي المأرضة بشكل سليم فقط. • لا تلمس القابس الكهربائي والمقبس بأيدي مثبلة بالماء نهائياً. • استخدم الجهاز عن طريق قاطع الدائرة الكهربائية فقط (30 مللي أمبير حد أقصى). • لا تغمر الجهاز أو كابل الطاقة أو قابس الطاقة في الماء أو السوائل الأخرى. • لا يسمح بأن تكون التوصيلات ما بين القابس الكهربائي وكابل التمديد الكهربائي موجودة في الماء.

- ⚠️ **تحذير** • لا تعمل إلا مع السوائل (مثل مواد التنظيف) إذا كان الجهاز موصلاً بمقبس آمن مزود بقاطع دائرة يعمل بالتيار المتبقي (بحد أقصى 30 مللي أمبير). • قم بتوصيل الجهاز بوصلة كهربائية

يكون تم شرائها من متجر متخصص ببيع الأجهزة الكهربائية وفقاً لمعيار IEC 60364-1. • أطفئ الجهاز على الفور عند وجود تسربات. • في حالة تكون رغوة أو تسرب سائل، أوقف الجهاز فوراً وافصل القابس الكهربائي. • تأكد قبل كل استخدام للجهاز من عدم وجود تلف في كابل التيار الكهربائي والقابس. عند تعرض كابل التيار الكهربائي للتلف، يجب استبداله على الفور عن طريق الشركة المصنعة، أو مركز خدمة العملاء المعتمد، أو كهربائي متخصص، وذلك لتجنب أي مخاطر. • لا تقم بالحاق أضرار أو إتلاف كابل التوصيل الكهربائي وكابل التمديد الكهربائي عن طريق الدق، سحق، الشد أو فعل شيء به من هذا القبيل. قم بحماية كابل التوصيل الكهربائي من الحرارة، الزيت والحواف الحادة. • كابات التمديد الكهربائي غير المناسبة يمكن أن تكون مصدر للخطر. استخدم كابات التمديد الكهربائية التي تكون مخصصة ضد الماء وذات قطر عرضي 3x1 مم على الأقل². • لا تستخدم إلا وصلة الشبكة المخصصة عليها من الجهة الصانعة، وهو ما يسري أيضاً عند استبدال الوصلة. لمعرفة رقم الطلب والنوع، انظر دليل التشغيل. • الوصلات الموصلة بوصلة الشبكة الكهربائية أو بكابل التمديد الكهربائي عليك استبدالها فقط بأخرى تكون مزودة بحماية ضد الماء ولديها نفس القوة الميكانيكية أيضاً. • لا تستخدم الجهاز إذا تعرض للسقوط سابقاً أو إلى ضربة أو عند وجود تلفيات واضحة. افحص الجهاز بالاستعانة بخدمة العملاء المصنعة وأصلحه بشكل سليم قبل إعادة تشغيله. العطل الداخلي قد يعرض سلامة الجهاز للخطر.

⚠️ **تنويه** • أوقف تشغيل الجهاز قبل كل عملية تنظيف / صيانة، واسحب قابس التيار الكهربائي. • عليك إجراء أعمال الإصلاح أو الأعمال الأخرى على القطع الكهربائية من قبل مركز خدمة معتمدة فقط. • يجب عند التوقف عن العمل لفترة استراحة طويلة وبعد الاستخدام إيقاف الجهاز عن طريق المفتاح الرئيسي / مفتاح الجهاز وكذلك فصل القابس الكهربائي أيضاً. • لا تشد قابس الشبكة من كابل الشبكة من المقبس. • لا تحمل/لا تنقل جهاز الشحن من كابل وصلة الشبكة.

التشغيل

⚠️ **خطر** • عند استخدام الجهاز في المناطق الخطرة (محطات الوقود مثلاً) عليك الالتزام بقواعد السلامة الخاصة بهذه المناطق. • يمنع منعاً باتاً التشغيل في المناطق القابلة للانفجار. • لا تشفط أي أشياء متوهجة أو قابلة للاشتعال.

⚠️ **خطر** • لا تقم أبداً برش أو شطف سوائل متفجرة أو غازات قابلة للاشتعال أو غاز متفجر أو أحماض ومذيبات غير مخففة. تشمل هذه على سبيل المثال البنزين، مخفف الطلاء أو الوقود، التي يمكن من خلال الفتح باستخدام هواء الشفط أن تشكل أبخرة شديدة الاشتعال ومتفجرة وسامة بما في ذلك مخاليط مثل الأسيتون وأحماض ومواد مذيبة غير مخففة والتي يمكن أن تحدث تآكل في المواد المستخدمة بالجهاز. • خطر الانفجار • تجنب استخدام الجهاز في شطف الأتربة أو السوائل أو الغازات القابلة للاشتعال. • تجنب استخدام الجهاز في شطف غبار المعادن التفاعلية (على سبيل المثال، الألومنيوم، والمغنيسيوم، والزنك). • تجنب استخدام الجهاز في شطف الماء المالح أو الأحماض غير المخففة. • تجنب استخدام الجهاز لشطف أي مواد/أجسام تحترق أو يتصاعد منها الدخان. • قد تتسبب هذه المواد في تآكل المواد المستخدمة في الجهاز.

- ⚠️ **تحذير** • لا تستخدم الجهاز لشطف البشر أو الحيوانات.

⚠️ **تحذير** • لا تشفط المواد السامة. • يمكن أن يتقطر المياه الساخن عند فصل أجزاء الملحقات. اترك الجهاز يبرد أولاً.


⚠️ **تنويه** • تأكد قبل كل استخدام من أن الجهاز في حالة سليمة وأمنة للتشغيل وخاصة من كابل التوصيل الكهربائي وكابل التمديد. افصل قابس التيار الكهربائي ولا تستخدم الجهاز عند وجود أضرار. • لا تترك الجهاز دون مراقبة بما في ذلك إطلاق ما لم يتم إيقاف تشغيله وفصل قابس التيار الكهربائي أو إزالة البطارية. • لا تستخدم الجهاز إذا تعرض للسقوط سابقاً أو إلى ضربة أو عند وجود تلفيات واضحة. • قد يصلح للتلفيات بشكل سليم قبل إعادة تشغيل الجهاز. • لا يصلح الجهاز لشطف الأتربة الضارة بالصحة.

REGISTER TO BENEFIT.



Scan QR Code for download
and easy product registra-
tion in Home & Garden App
or website.

karcher.com/register

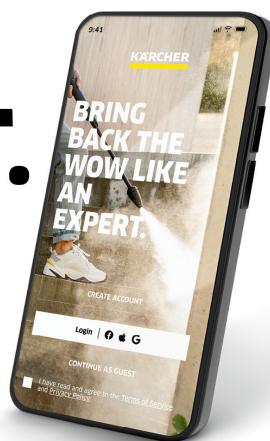

DE – Laden Sie die Home & Garden App herunter, um Ihr Gerät zu registrieren und volle Unterstützung bei der Reinigung zu erhalten.

- Steuerung von smarten Produkten
- Anwendungstipps & Expertenwissen
- Produktinformationen, Zubehör-Übersicht und Betriebsanleitungen
- Hilfestellungen und Service-Kontakt
- Onlineshop, exklusive Angebote und vieles mehr

EN – Download the Home & Garden App to register your device for full support in cleaning.

- Control of smart products
- Application tips & expert knowledge
- Product information, overview of accessories and operating instructions
- Support and service contact
- Online shop – exclusive offers and much more

FR – Téléchargez l'application Home & Garden pour enregistrer votre appareil et bénéficier d'une assistance complète en matière de nettoyage.

- Contrôle des produits intelligents
- Conseils d'utilisation & expertise
- Informations sur les produits, présentation des accessoires et manuels d'utilisation
- Aide et contact de service
- Boutique en ligne – offres exclusives et bien plus encore

ES – Descarga la aplicación Home & Garden para registrar tu equipo y disfrutar de todas las ventajas de la limpieza.

- Control de productos inteligentes
- Consejos de aplicación y conocimientos de expertos
- Información sobre el producto, resumen de accesorios y manual de instrucciones
- Asistencia y contacto para el servicio
- Tienda en línea: ofertas exclusivas y mucho más

karcher.com/dealersearch

Alfred Kärcher SE & Co. KG
Alfred-Kärcher-Str. 28-40
71364 Winnenden (Germany)