


- OPTIONAL EQUIPMENT (Both Models)**
- Tile tank construction
 - Top cover—cylinder operated
 - Control systems and panels
 - Dump valve—cylinder operated
 - Conveyors
 - Water and steam connections

BARRACUDA-SHARK HORIZONTAL MODELS

GENERAL DIMENSIONS
(Inches, not to be used for construction, or for under-the-machine broke pulpers)

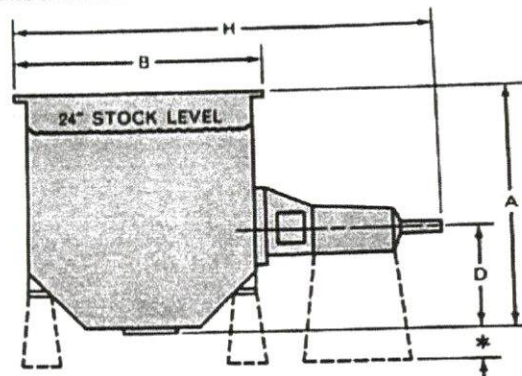

* Foundation height varies with outlet fitting

Operating Capacity	lb @ 6%	375	500	750	1000	1500	2000	3000	4000	6000	8000
	cu ft	101	135	217	270	405	540	810	1080	1620	2160
Motor	Barracuda	100	125	150	200	250	300	400	500	600	750
HP	Shark	60	75	100	125	150	200	250	300	400	500
A (in.)		89	96	108	114	128	136	155	166	189	204
B (in.)		59	65	72	81	91	102	113	126	142	157
C (in.)		—	—	—	—	41	44	48	52	—	—
D (in.)		34	37	42	46	53	58	67	74	84	93
F (in.)		77	84	94	104	120	132	148	163	186	204
H (in.)	Barracuda V-Belt	110	116	129	137	153	—	—	—	—	—
	Integral Gear	110	111	129	135	151	159	183	193	220	233
	Shark V-Belt	110	116	123	132	142	152	170	—	—	—
	Integral Gear	110	111	123	129	145	153	172	182	204	217
Weight lb	Shipping	6,800	7,500	8,200	8,900	11,200	13,500	16,500	20,000	25,000	38,000
	Flooded	16,800	20,200	27,500	32,600	45,500	58,000	81,520	105,020	148,500	200,000
Tank Sections		1	1	1	1	2	2	2	2	*	*

To suit manufacturing or shipping limitations

42728