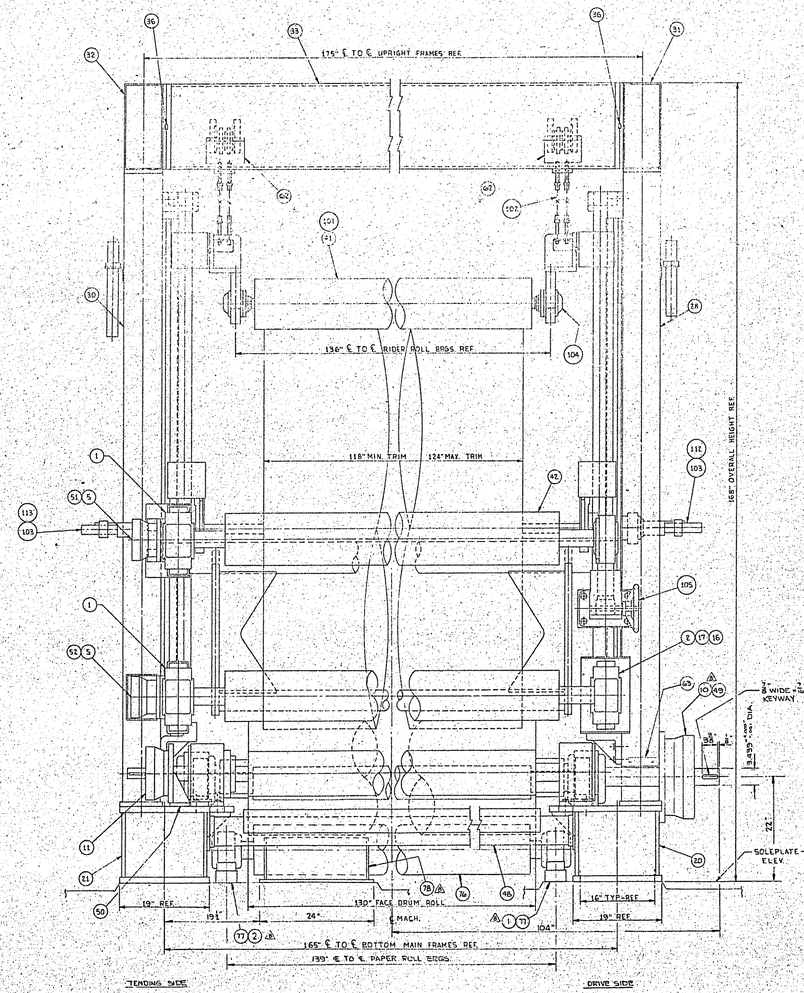

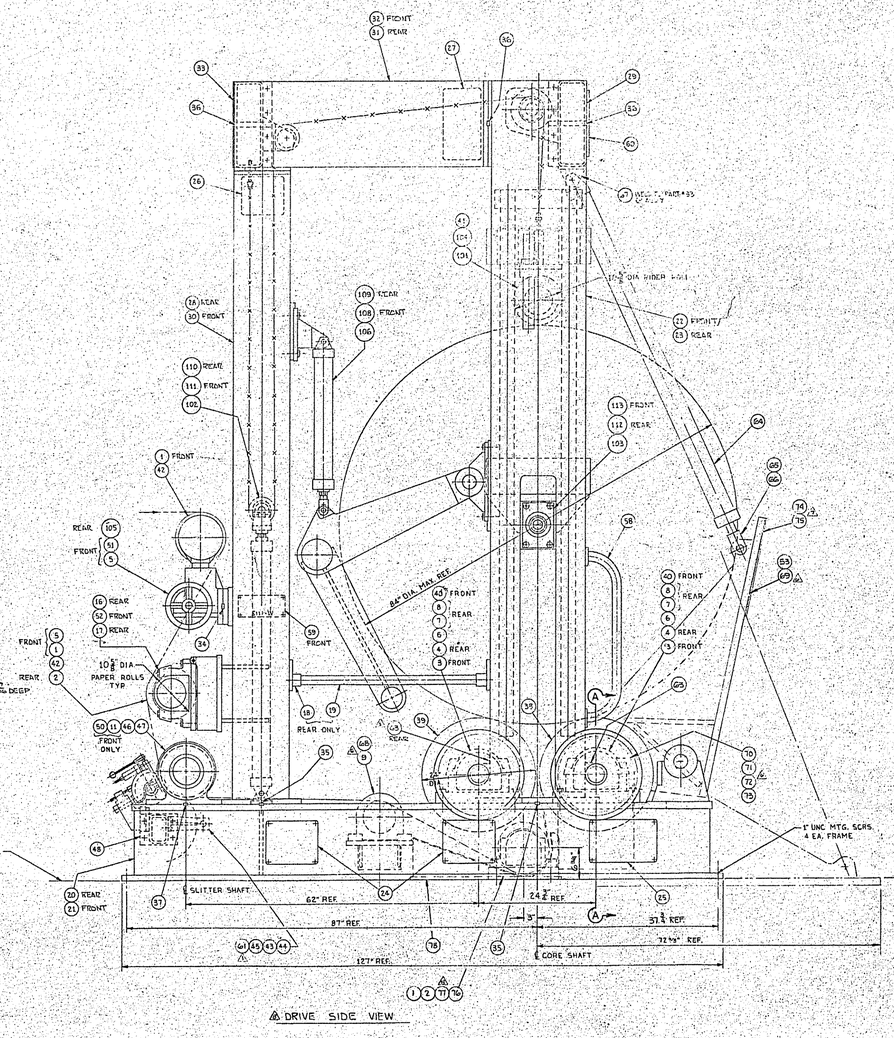

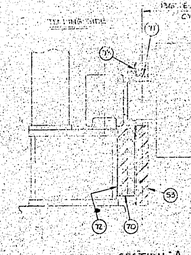

PART NO.	DWG. NO.	ITEM NO.	PARTS LIST DESCRIPTION	M/B
[illegible]			[illegible]	[illegible]
[illegible]			[illegible]	[illegible]
[illegible]			[illegible]	[illegible]

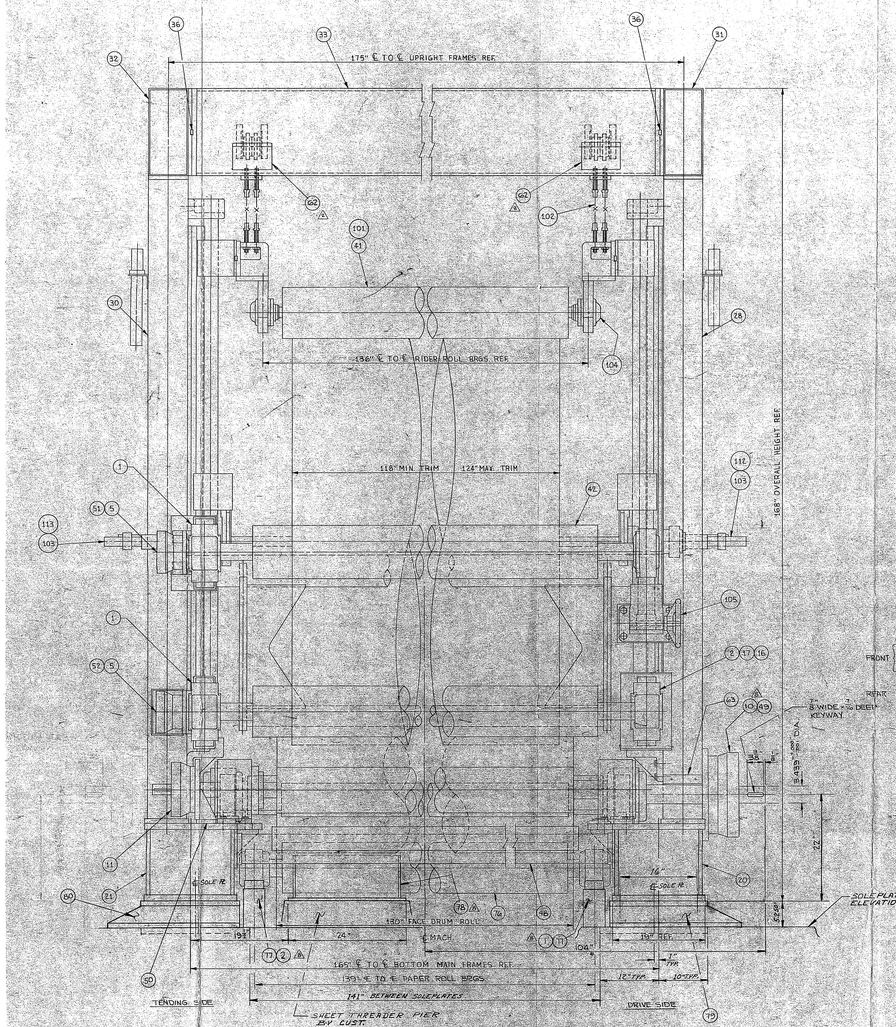

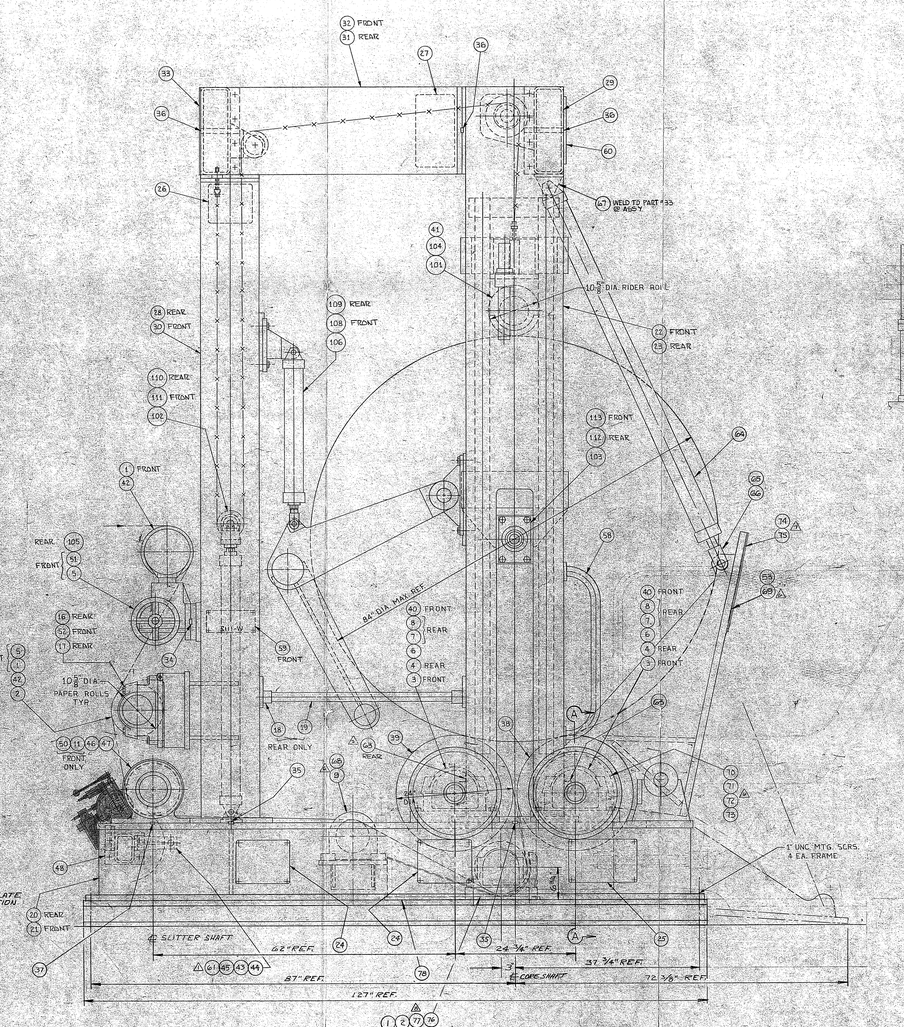

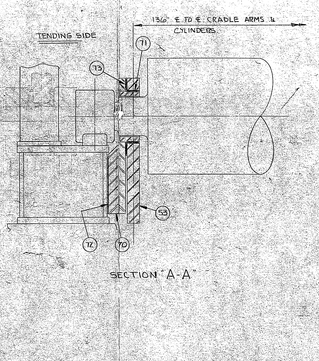

PARTS LIST

PART NO.	DWG. NO.	ITEM NO.	DESCRIPTION	M/B
64			ORTMAN-MILLER INV. DUTY HYD. CYLINDER, CODE # 5TH G 4 11 N E 41 - SERIES "5TH" SINLE "S" CLEVIS MOUNT W/ PIN ASSY. 4" BORE, 12" STROKE NON-CUSHIONED 1¼" DIA. STD. ROD W/ 5TH MALE ROD END 3/4" NPTF PORT LAR BLEED O RDG.	30-3
65			O-H. ROD CLEVIS NF 82265.	30-3
66			O-H. PIN ASSY NF 8583-4	30-3
67			O-M. BASE PIVOT NF 8433	34-3
68	BW-1112-64	1	MT HOPE ROLL MTG BRACKET	17-2
69	BW-1112-69	1	CAP - LOWERING CRADLE	30-9
70	BW-1112-70	1	PIVOT BRACKET	30-9
71	CI-1018-GA	1	BUSHING	30-9
72	CI-1021-1075	1	SHIMS	30-9
73	MS-1044-6-CNT	16	THRUST WASHERS	30-9
74	DW-1112-74	1	CLAMP - GUARD BELTING	30-5
75	BC-1000-98	22	GUARD BELTING	30-5
76	BW-1112-71	1	6¼" DIA. × 128" FACE PAPER ROLL	13-2
77	DW-1112-73	1	BRG. RAISE BLOCK	13-4
78	BW-1112-72	1	SHEET THREADER	15-3
78	AW-1112-52	1	RAISE BLOCK - BASE	38-1
79	AW-1112-52	2	RAISE BLOCK - BASE	38-1

SUB ASSEMBLIES

PART NO.	DWG. NO.	ASSY NO.	DESCRIPTION	M/B
101	AW-1112-B		ASSY. OF RIDER ROLL & CARRIAGE	4-1
102	AW-1112-D		ASSY. OF RIDER ROLL LIFT	15-1
103	AW-1112-C		ASSY. OF CORE RAM CARRIAGES & COUNTER BALANCE	6-1
104	BA-1074-V	101	ASSY. OF BRGS. HSGS. & ROLL	13-1
105	BW-1096-A	104	ASSY. OF SQUARING DEVICE & BRG.	13-1
106	AW-1112-E		ASSY. OF KICKOUT MECHANISM	24-1
107	AW-1112-F	101	ASSY. OF CORE RAM CARRIAGE	25-1
108	DW-1112-F	101	FRAME HYD. PIPING - KICKOUT MECH.	28-1
109	DW-1112-F	102	FRAME HYD. PIPING - KICKOUT MECH.	28-1
110	DW-1112-J	101	FRAME HYD. PIPING - RIDER ROLL LIFT	28-2
111	DW-1112-J	102	FRAME HYD. PIPING - RIDER ROLL LIFT	28-2
112	BW-1112-G	101	FRAME HYD. PIPING - CORE RAM	28-2
113	BW-1112-G	102	FRAME HYD. PIPING - CORE RAM	28-2
114	BW-1112-V	101	FRAME HYD. PIPING - CRADLE	[illegible]
115		102	FRAME HYD. PIPING - CRADLE	[illegible]
116	AW-1112-X		ASSY. OF LIMIT SWITCH LOCATIONS	28-4
117	AW-1112-S4	101	WINDER FRAME HYD. PIPING TO COMM. MANIFD.	37-1
118	AW-1112-S4	102	WINDER FRAME HYD. PIPING TO COMM. MANIFD.	37-1
119	AW-1112-S7		WINDER-FIELD HYD. PIPING	37-5
120	AW-1112-S8		WINDER-FIELD HYD. PIPING (CONT'D.)	37-5
121	AW-1112-S9		WINDER-FIELD PNEU. PIPING	37-6
122	AW-1112-61		WINDER-FIELD WATER PIPING	37-8

NOT SHOWN

PARTS LIST

PART NO.	DWG. NO.	ITEM NO.	DESCRIPTION	M/B
1			SKF PILLOW BLOCK #SAF-1316	2-1
2			SKF PILLOW BLOCK #SAF-1316 (FLOATING)	2-1
3			SKF PILLOW BLOCK HOUSING SAF-228 WITH ONE END CLOSED & FLOATING	2-1
4			SKF PILLOW BLOCK HOUSING SAF-228	2-1
5	Equip. No. 02-00-03-02		WICHITA #TD-208 FLANGE MOUNTED BRAKE - 7.750" DIA. BORE WITH 2" WIDE × 7/16" DEEP KEYWAY	24-3
6	Equip. No. 02-00-03-03		SKF SPHERICAL BRG. 22216CK/W33	24-1
7			SKF LOCKNUTS AN-216	24-1
8			SKF LOCKWASHERS W-216	24-1
9	Equip. No. 02-00-03-42		6" DIA. × 128" FACE MOUNT HOPE ROLL LIFT FOR SPEC. SHEET #336-2083	15-1
10			WICHITA #TD 116 FLANGE MOUNTED BRAKE - 3.500" DIA. BORE WITH 7/8" WIDE × 7/16" DEEP KEYWAY	24-1
11	Equip. No. 02-00-03-06		WICHITA #TD-108 FLANGE MOUNTED BRAKE - 2.750" DIA. BORE WITH ½" WIDE × ½" DEEP KEYWAY	24-1
12	Equip. No. 02-00-03-04		[illegible]	[illegible]
13			[illegible]	[illegible]
14			[illegible]	[illegible]
15			[illegible]	[illegible]
16			PNEUMATIC APPLICATIONS SPAN #2-300 TRANSMITTER WITH REVERSE-ACTING AIR RELAY MODEL #2698-9-LESS CONTROLS, DRILLED & TAPPED FOR SOCKET	28-4
17			PNEUMATIC APPLICATIONS AIR LINE MICROM FILTERS SERIES #F-250-SIX MODEL #10F624	28-4
18			NU-RAIL FLOOR FLANGE #10-1½" PIPE SIZE	2-5
19			1½" STD. PIPE × 42" LG.	2-5
20	AW-1112-34	1	WINDER BASE	2-1
21	AW-1112-34	2	WINDER BASE	2-1
22	AW-1112-31	1	MAIN UPRIGHT FRAME	2-2
23	AW-1112-31	2	MAIN UPRIGHT FRAME	2-2
24	BI-1022-37 [illegible]	20	COVER PLATES	2-2
25	BI-1022-37 [illegible]	21	COVER PLATES	2-2
26	BI-1022-37 [illegible]	22	COVER PLATES	2-2
27	BI-1022-37 [illegible]	23	COVER PLATES	2-2
28	AW-1112-29	1	UPRIGHT FRAME	2-3
29	BW-1112-7	1	TOP CROSS BEAM	2-3
30	AW-1112-30	1	UPRIGHT FRAME	2-4
31	BW-1112-8	2	HORIZONTAL FRAME	2-4
32	BW-1112-8	1	HORIZONTAL FRAME	2-4
33	BW-1112-21	1	CROSS BEAM	2-4
34	BI-1012-38 [illegible]	20	KEY	2-5
35	BI-1012-38 [illegible]	21	KEY	2-5
36	BI-1012-38 [illegible]	22	KEY	2-5
37	BI-1012-38 [illegible]	23	KEY	2-5
38	AW-1112-1	1	24" DIA. × 130" FACE WINDER DRUM (PLAIN)	2-6
39	AW-1112-1	2	24" DIA. × 130" FACE WINDER DRUM (GROOVED)	2-6
40	DA-150-5	1	END PLATES	2-6
41	BW-1112-11	1	10⅜" DIA. × 128" FACE RIDER ROLL	2-8
42	BW-1112-4	1	10⅜" DIA. × 140" FACE PAPER ROLL	2-11
43	DW-1112-41	1	TRIM DEFLECTORS	2-11
44	DW-1112-42	1	MTG. BRACKET	2-5
45	CI-100-001	1	PIN BAR - 1¼" DIA. × 30" LG.	2-5
46	BW-1112-39	1	REWORK OF EXIST. SLITTER PART	2-7
47	BW-1112-26	1	SLITTER BRG. HOUSING	2-7
48	BW-1112-25	1	SLITTER CROSS BEAM	2-11
49	DW-1112-36	1	MTG. SUPPORTS DRUM BRAKE	2-5
50	DW-1112-20	1	BRAKE MTG. BRACKET	2-5
51	DW-1112-28	1	BRAKE MTG. BRACKET	2-5
52	BW-1112-19	1	BRAKE MTG. BRACKET	2-5
53	AW-1112-68	1	LOWERING CRADLE	2-5
[illegible]	[illegible]	[illegible]	[illegible]	[illegible]
58	CI-1007-316	1	HANDRAIL	2-5
59	DI-1002-48	1	SERIAL NO. PLAQUE - STAMP DIS. [illegible]	[illegible]
60	BI-1002-179	1	MANUFACTURE NAMEPLATE	[illegible]
(a)	AW-1112-[illegible]		WINDER TRIM DEFLECTOR ASSY. WITH WINDER & UNWINDER, [illegible] INLET & OUTLET CUT, TRIM, [illegible] SCRAP TRIM MACHINE, [illegible] ROLL ASSY. [illegible] TRIM DEFLECTOR [illegible] CONVEYOR BELT [illegible]	[illegible]
62	BI-1022-37 [illegible]	24	COVER PLATE	2-5
63	DW-1112-56	1	JOURNAL GUARD - [illegible]	[illegible]

NOTES:
1. SHADED EQUIPMENT DENOTES EXIST.

FOR WINDER "OVERTRIP" CONSOLE - SEE DWG. AW-1112-[illegible]
FOR WINDER'S HYDRAULIC PUMPING UNIT - SEE DWG. AW-1112-[illegible]
FOR WINDER'S HYDRAULIC SYSTEM - SEE DWG. AW-1112-[illegible]
FOR WINDER'S PNEUMATIC CONTROLS - SEE DWG. AW-1112-[illegible]
FOR WINDER'S ELECTRICAL CONTROLS - SEE DWGS. AW-1112-[illegible] & AW-1112-[illegible]

FOR W.S. MACH. EXISTING UNWIND STAND & WINDER SLITTER CONTROLS SEE: PNEUMATIC DIAGRAM - AW-1112-[illegible]
ELECTRICAL DIAGRAM - AW-1112-[illegible]

REVISED
MAR 3 1978
DATE
DISTRIB. TO PREVIOUS
ISSUE

CERTIFIED
TO BE A TRUE DRAWING
DATE MAR 3 1978
[illegible]
THE MANCHESTER MACHINE COMPANY
MIDDLETOWN, OHIO

Equip. No. 02-00-00-00

ENGINEERING FILE:
Misc.
Project
Job 0-1431

STOCK CODE 1112

DIAMOND INTERNATIONAL CORPORATION
MANCHESTER MACHINE DIVISION

TITLE: ASSY. OF TWO DRUM WINDER

DRAWN BY [illegible] DATE [illegible]
TRACED BY [illegible] DATE [illegible]
CHECKED BY [illegible] DATE [illegible]
APPROVED BY [illegible] DATE [illegible]

SCALE 1/8" = 1'-0"

AW-1112

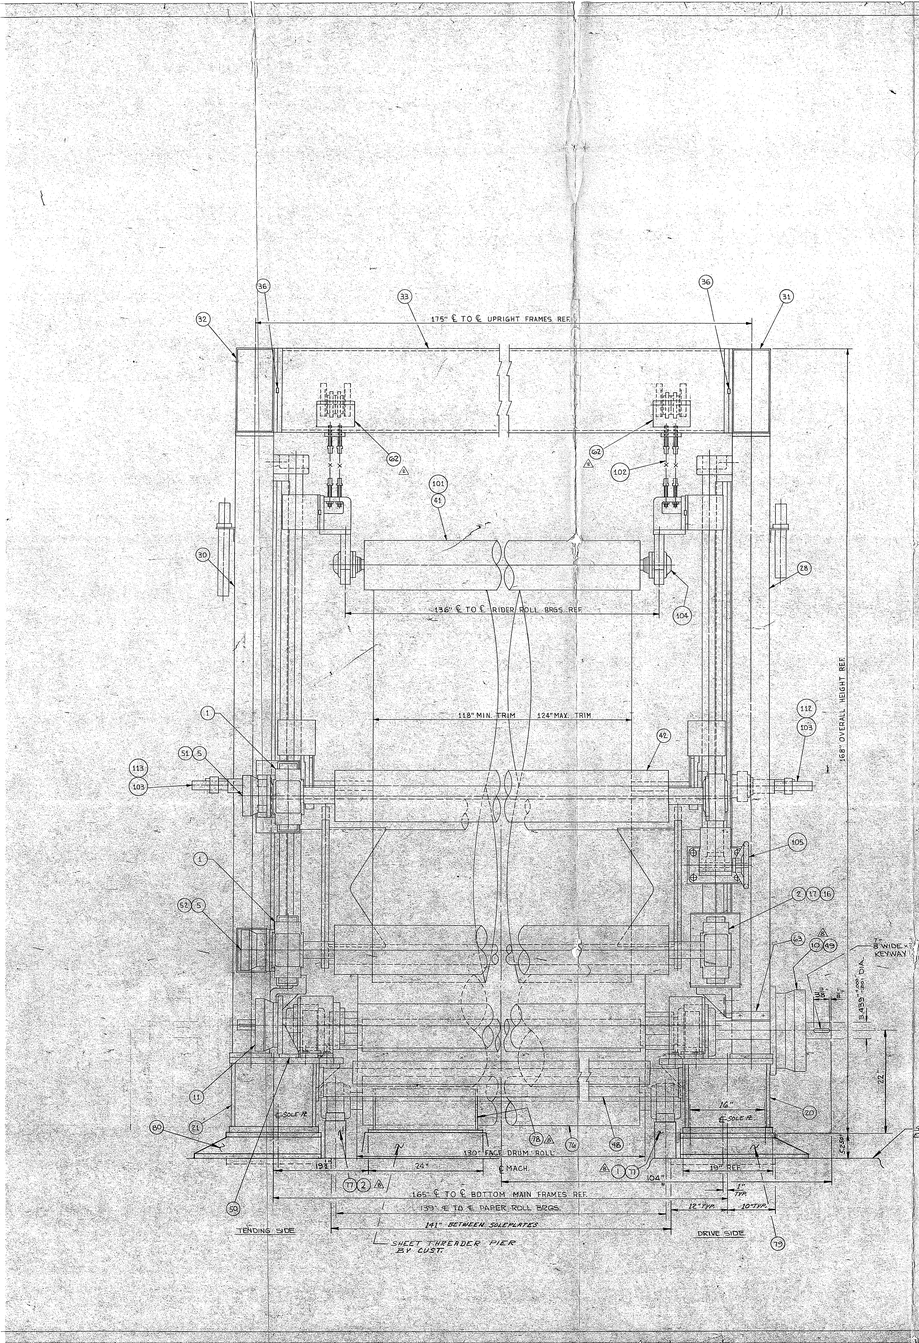

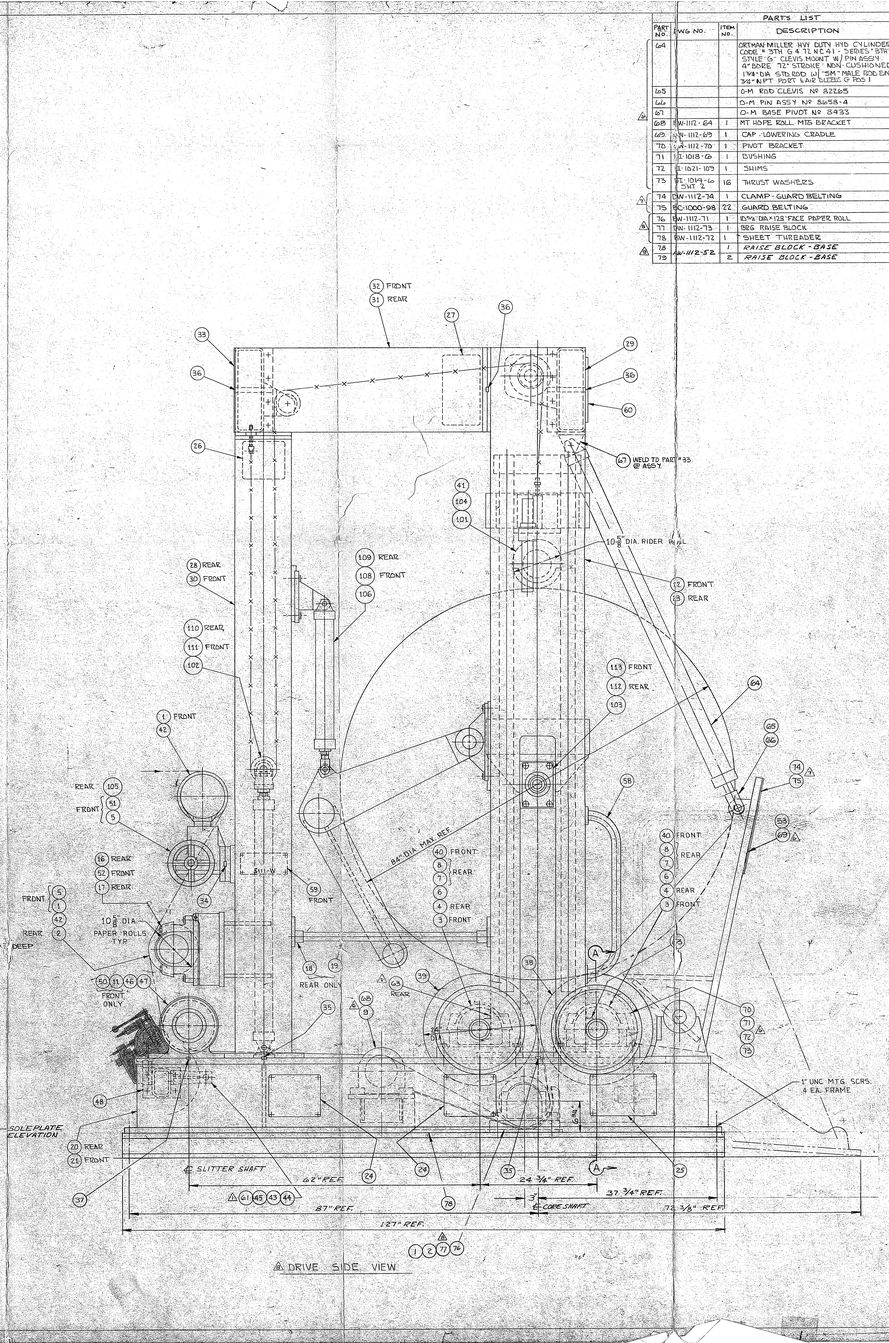

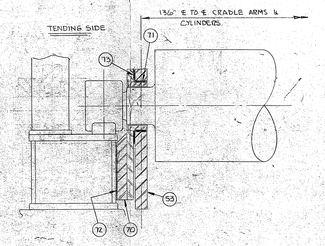

NOTES:
1. SHADED EQUIPMENT DENOTES EXIST.

FOR WINDERS OPERATORS CONSOLE - SEE DWG. AW-1117-M
FOR WINDERS HYDRAULIC PIPING DWG - SEE DWG. AW-1112-B
FOR WINDERS HYDRAULIC SCHEM. - SEE DWG. AW-1112-H
FOR WINDERS PNEUMATIC CONTROLS - SEE DWG. AW-1116
FOR WINDERS ELECTRICAL CONTROLS - SEE DWGS. AW-1112-D & AW-1112-G

FOR W.S. MACH. EXISTING UNWIND STAND & WINDER SLITTER CONTROLS SEE: PNEUMATIC DIAGRAM - AW-1112-F
ELECTRICAL DIAGRAM - AW-1112-D

PARTS LIST

PART NO.	DWG. NO.	ITEM NO.	DESCRIPTION	M/B
64			GATMAN MILLER WVI DUTY HYD. CYLINDER. CORE # 5 BUN G & 71 NC 41 - SERIES 5TH STYLE "G" CLEVIS MOUNT W/PIN ASSY. 4" BORE 72" STROKE NON-CUSHIONED 1¾" DIA. STROKE 1.D. 1¾" MALE ROD END 3½" NPT PORT LAR. SIZE O RDS I	30-3
65			O-M ROD CLEVIS Nº 82285	30-3
66			O-M PIN ASSY Nº 84584-4	30-3
67			O-M BASE PIVOT Nº 84833	30-3
68	AW-1112-64	1	MT. ROLL MTG. BRACKET	17-2
69	AW-1112-69	1	CAP - LOWERING CRADLE	30-4
70	AW-1112-70	1	PIVOT BRACKET	30-4
71	D-1018-6	1	BUSHING	30-4
72	D-1521-103	1	SHIMS	30-4
73	D-1049-6 SHT. 2	16	THRUST WASHERS	30-4
74	AW-1112-74	1	CLAMP - GUARD BELTING	30-5
75	SC-1000-98	22	GUARD BELTING	30-5
76	AW-1112-71	1	8"W DIA. x 12.8" FACE PAPER ROLL	11-2
77	DW-1112-73	1	BRG. RAISE BLOCK	13-4
78	DW-1112-72	1	SHEET THREADER	16-3
78	AW-1112-52	1	*RAISE BLOCK - BASE*	38-1
79		2	*RAISE BLOCK - BASE*	38-1

SUB ASSEMBLIES

PART NO.	DWG. NO.	ASSY NO.	DESCRIPTION	M/B
101	AW-1112-B		ASSY. OF RIDER ROLL & CARRIAGE	4-1
102	AW-1112-B		ASSY. OF RIDER ROLL LIFT	15-1
103	AW-1112-C		ASSY. OF CORE RAM CARRIAGES & COUNTER BALANCE	6-1
104	BA-1076-V	101	ASSY. OF BRGS. HSGS. & ROLL	11-1
105	BW-1096-A	104	ASSY. OF SQUARING DEVICE & BRG.	13-1
106	AW-1112-E		ASSY. OF KICKOUT MECHANISM	24-1
NOT SHOWN	NO DWG.		WICHITA #TD-208 FLANGE MOUNTED BRAKE - 1.750" DIA. BORE WITH ½" WIDE x 1/16" DEEP KEYWAY	30-3
108	DW-1112-F	101	FRAME HYD. PIPING - KICKOUT MECH.	28-1
109	DW-1112-F	102	FRAME HYD. PIPING - KICKOUT MECH.	28-1
110	DW-1112-J	101	FRAME HYD. PIPING - RIDER ROLL LIFT	28-2
111	DW-1112-J	102	FRAME HYD. PIPING - RIDER ROLL LIFT	28-2
112	BW-1112-G	101	FRAME HYD. PIPING - CORE RAM	28-2
113	BW-1112-G	102	FRAME HYD. PIPING - CORE RAM	28-2
114		101	FRAME HYD. PIPING - CRADLE	
115	RW-1112-V	102	FRAME HYD. PIPING - CRADLE	
116	AW-1112-K		ASSY. OF LIMIT SWITCH LOCATIONS	28-4
117	AV-1112-54	101	WINDER FRAME HYD. PIPING TO COMM. MANIFLD.	37-1
118	AW-1112-54	102	WINDER FRAME HYD. PIPING TO COMM. MANIFLD.	37-1
119	AW-1112-57		WINDER-FIELD HYD. PIPING	37-3
120	AW-1112-58		WINDER-FIELD HYD. PIPING (REQ'D)	37-5
121	AW-1112-59		WINDER-FIELD PNEU. PIPING	37-6
122	AW-1112-61		WINDER-FIELD WATER PIPING	37-8

PARTS LIST

PART NO.	DWG. NO.	ITEM NO.	DESCRIPTION	M/B
1			SKF PILLOW BLOCK #SAF-226-HELD	9-1
2			SKF PILLOW BLOCK #SAF-1556 (FLOATING)	9-1
3			SKF PILLOW BLOCK HOUSING SAF 226 WITH ONE END CLOSED & FLOATING	9-1
4			SKF PILLOW BLOCK HOUSING SAF 226 HELD	9-1
Equip. No. 02	— 0 0 3	2	WICHITA #TD-208 FLANGE MOUNTED BRAKE - 1.750" DIA. BORE WITH ½" WIDE x 1/16" DEEP KEYWAY	30-3
Equip. No. 02	— 0 0 3	3		
5			SKF SPHERICAL BRG. 22226CK/W33	9-1
7			SKF LOCKNUTS AN-26	9-1
8			SKF LOCKWASHERS W-26	9-1
Equip. No. 12	— 0 0 4	2	7" DIA. x 12.8" FACE MOUNT HOPE ROLL PER SPEC. SHEET #136.2015	11-2
9				
Equip. No. 02	— 0 0 3	2	WICHITA #TD 114 FLANGE MOUNTED BRAKE - 3.500" DIA. BORE WITH ⅞" WIDE x 7/16" DEEP KEYWAY	26-1
10				
Equip. No. 02	— 0 0 3	4	WICHITA #TD 108 FLANGE MOUNTED BRAKE 2.250" DIA. BORE WITH ½" WIDE x ¼" DEEP KEYWAY	26-1
11				
Equip. No. 02	— 0 0 3	4		
12			[illegible]	[illegible]
13			[illegible]	[illegible]
14			[illegible]	[illegible]
15			[illegible]	[illegible]
16			PNEUMATIC APPLICATIONS SPAN 3-15 PSI TRANSMITTER WITH REVERSE ACTING AIR RELAY MODEL # 12698-9 & LESS CONTROLS, DRILLED & TAPPED PER SKETCH	28-4
17			PNEUMATIC APPLICATIONS AIR LINE & MICROM FILTERS SERIES UF-250-5XV MODEL # 12022-4	28-4
18			NU-RAIL FLOOR FLANGE #40-1½ PIPE SIZE	2-5
19			1½" STD. PIPE x 42" LG.	2-5
20	AW-1112-94	1	WINDER BASE	2-1
21	AW-1112-34	2	WINDER BASE	2-1
22	AW-1112-31	1	MAIN UPRIGHT FRAME	2-2
23	AW-1112-31	2	MAIN UPRIGHT FRAME	2-2
24	BT-1022-37 [illegible]	20	COVER PLATES	2-2
25	BT-1022-37 [illegible]	21	COVER PLATES	2-2
26	BT-1022-37 [illegible]	22	COVER PLATES	2-2
27	BT-1022-37 [illegible]	23	COVER PLATES	2-2
28	AW-1112-29	1	UPRIGHT FRAME	2-3
29	BW-1112-7	1	TOP CROSS BEAM	2-3
30	AW-1112-30	1	UPRIGHT FRAME	2-3
31	BW-1112-8	2	HORIZONTAL FRAME	2-4
32	BW-1112-8	1	HORIZONTAL FRAME	2-4
33	BW-1112-21	1	CROSS BEAM	2-4
34	BT-1012-38 [illegible]	20	KEY	2-5
35	BT-1012-38 [illegible]	21	KEY	2-5
36	BT-1012-38 [illegible]	22	KEY	2-5
37	BT-1012-38 [illegible]	23	KEY	2-5
38	AW-1112-1	1	24" DIA. x 13.0" FACE WINDER DRUM (PLAIN)	2-6
39	AW-1112-1	2	24" DIA. x 13.0" FACE WINDER DRUM (GROOVED)	2-1
40	DA-150-5	1	END PLATES	2-6
41	BW-1112-11	1	10½" DIA. x 12.8" FACE RIDER ROLL	10-1
42	BW-1112-4	1	10½" DIA. x 14.0" FACE PAPER ROLL	12-1
43	DW-1111-41	1	TRIM DEFLECTORS	14-1
44	DW-1112-42	1	MTG. BRACKET	15-1
45	CT-100-001	1	[illegible] BAR - 1¾ DIA. x 10½" LG.	15-1
46	BW-1112-39	4	REWORK OF EXIST. SQUARING SHAFT	30-1
47	BW-1112-26	1	SLITTER BRG. HOUSINGS	30-1
48	BW-1112-25	1	SLITTER CROSS BEAM	30-1
49	DW-1112-36	1	MTG. SUPPORTS DRUM BRAKE	30-1
50	DW-1112-27	1	BRAKE MTG. BRACKET	30-1
51	DW-1112-28	1	BRAKE MTG. BRACKET	30-1
52	DW-1112-35	1	BRAKE MTG. BRACKET	30-1
53	AW-1112-68	1	LOWERING CRADLE	30-2
54	[illegible]		[illegible]	[illegible]
55	[illegible]		[illegible]	[illegible]
56	[illegible]		[illegible]	[illegible]
57	[illegible]		[illegible]	[illegible]
58	CT-1007-316	1	HANDRAIL	1-1
59	DT-1002-28	1	SERIAL NO. PLAQUE - STAMP W/ 1112	1-1
60	BT-1002-179	1	MANCHESTER NAMEPLATE	1-1
(61)			WINDER STEAM CONDENSATE SYSTEM WITH INLETS & DWNSPOUTS - BRANCH INLETS 1½" NPT, OUTLET DOWNSPOUT 2½" NPT, 450 CFM RAM TRAPS, ON UNDERSIDE OF FRAME, SUPPORTED ABOVE LOCATION PRIMARY CONDENSATE TANK WITH DRAINS & CONDENSATE LEVEL INDICATOR	[illegible]
62	BT-622.5-MT	20	CONES PLATES	2-2
63	DW-1112-56	1	JOURNAL GUARD COVER (BRACKET)	2-2

REVISED
DATE MAY 3 1979
DESTROY PREVIOUS ISSUE

CERTIFIED
FOR CONSTRUCTION
DATE ISSUED MAR 3 1978
BY Robert F. Miller
PROJ. ENG.
THE MANCHESTER MACHINE COMPANY
MIDDLETOWN, OHIO

Equip. No. 02 — 0 0 3 2

ENGINEERING FILE:
Misc.
Project
Job 0-1431

0100-200 W-1112 1 1 1 1

DIAMOND INTERNATIONAL CORPORATION
MANCHESTER MACHINE DIVISION
MIDDLETOWN, OHIO

TITLE: ASSY. OF TWO-DRUM WINDER

REV.	DATE	BY	CHK.	APPD.	REVISIONS
1	3-3-79				REVISED PER ECN 1-79
2	3-3-79				REVISED PER ECN 2-79
3	3-3-79				REVISED PER ECN 3-79
4	3-3-79				REVISED PER ECN 4-79
5	3-3-79				REVISED PER ECN 5-79
6	3-3-79				REVISED PER ECN 6-79
7	3-3-79				REVISED PER ECN 7-79
8	3-3-79				REVISED PER ECN 8-79
9	3-3-79				REVISED PER ECN 9-79
10	3-3-79				REVISED PER ECN 10-79
11	3-3-79				REVISED PER ECN 11-79
12	3-3-79				REVISED PER ECN 12-79
13	3-3-79				REVISED PER ECN 13-79
14	3-3-79				REVISED PER ECN 14-79
15	3-3-79				REVISED PER ECN 15-79
16	3-3-79				REVISED PER ECN 16-79
17	3-3-79				REVISED PER ECN 17-79
18	3-3-79				REVISED PER ECN 18-79
19	3-3-79				REVISED PER ECN 19-79
20	3-3-79				REVISED PER ECN 20-79
21	3-3-79				REVISED PER ECN 21-79
22	3-3-79				REVISED PER ECN 22-79
23	3-3-79				REVISED PER ECN 23-79
24	3-3-79				REVISED PER ECN 24-79
25	3-3-79				REVISED PER ECN 25-79

DRAWN BY: [illegible]
TRACED BY: [illegible]
CHECKED BY: [illegible]
APPROVED BY: [illegible]
DATE: [illegible]
SCALE: 1/16"
SIZE: E
DWG. NO. PW-1112

DWG. NO. DW-1117-X REV 0

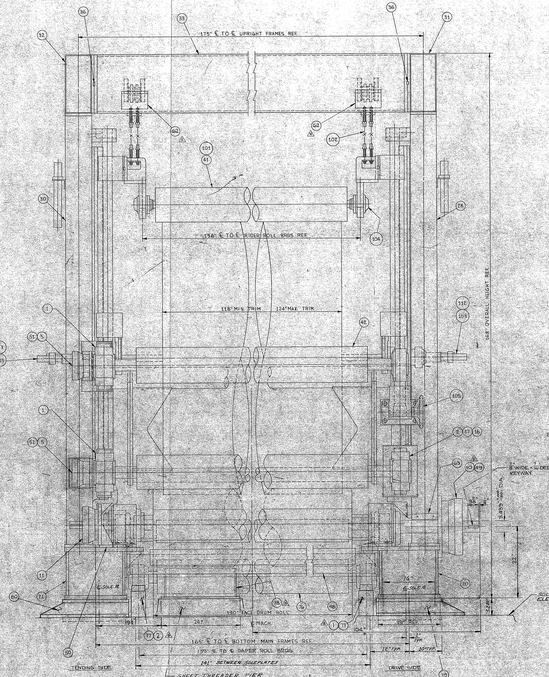
173" ℄ TO ℄ UPRIGHT FRAMES REF.
140" ℄ TO ℄ RIDER ROLL BRKS REF.
118" MIN. TRIM 134" MAX. TRIM
SEE TYP. RIDER ROLL
166" ℄ TO ℄ BOTTOM MAIN FRAMES REF.
199" ℄ TO ℄ PAPER ROLL BRGS.
141" BETWEEN SHEETPLATES
SHEET TRACKER FIELD SIDE
TENDING SIDE
DRIVE SIDE
SECTION A-A
SECTION B-B
SECTION C-C
SECTION D-D
SECTION E-E
SECTION F-F
SECTION G-G
SECTION H-H
SECTION I-I
SECTION J-J
SECTION K-K
SECTION L-L
SECTION M-M
SECTION N-N
SECTION O-O
SECTION P-P
SECTION Q-Q
SECTION R-R
SECTION S-S
SECTION T-T
SECTION U-U
SECTION V-V
SECTION W-W
SECTION X-X
SECTION Y-Y
SECTION Z-Z
SECTION AA-AA
SECTION BB-BB
SECTION CC-CC
SECTION DD-DD
SECTION EE-EE
SECTION FF-FF
SECTION GG-GG
SECTION HH-HH
SECTION II-II
SECTION JJ-JJ
SECTION KK-KK
SECTION LL-LL
SECTION MM-MM
SECTION NN-NN
SECTION OO-OO
SECTION PP-PP
SECTION QQ-QQ
SECTION RR-RR
SECTION SS-SS
SECTION TT-TT
SECTION UU-UU
SECTION VV-VV
SECTION WW-WW
SECTION XX-XX
SECTION YY-YY
SECTION ZZ-ZZ
SECTION AAA-AAA
SECTION BBB-BBB
SECTION CCC-CCC
SECTION DDD-DDD
SECTION EEE-EEE
SECTION FFF-FFF
SECTION GGG-GGG
SECTION HHH-HHH
SECTION III-III
SECTION JJJ-JJJ
SECTION KKK-KKK
SECTION LLL-LLL
SECTION MMM-MMM
SECTION NNN-NNN
SECTION OOO-OOO
SECTION PPP-PPP
SECTION QQQ-QQQ
SECTION RRR-RRR
SECTION SSS-SSS
SECTION TTT-TTT
SECTION UUU-UUU
SECTION VVV-VVV
SECTION WWW-WWW
SECTION XXX-XXX
SECTION YYY-YYY
SECTION ZZZ-ZZZ
SECTION AAAA-AAAA
SECTION BBBB-BBBB
SECTION CCCC-CCCC
SECTION DDDD-DDDD
SECTION EEEE-EEEE
SECTION FFFF-FFFF
SECTION GGGG-GGGG
SECTION HHHH-HHHH
SECTION IIII-IIII
SECTION JJJJ-JJJJ
SECTION KKKK-KKKK
SECTION LLLL-LLLL
SECTION MMMM-MMMM
SECTION NNNN-NNNN
SECTION OOOO-OOOO
SECTION PPPP-PPPP
SECTION QQQQ-QQQQ
SECTION RRRR-RRRR
SECTION SSSS-SSSS
SECTION TTTT-TTTT
SECTION UUUU-UUUU
SECTION VVVV-VVVV
SECTION WWWW-WWWW
SECTION XXXX-XXXX
SECTION YYYY-YYYY
SECTION ZZZZ-ZZZZ
SECTION AAAAA-AAAAA
SECTION BBBBB-BBBBB
SECTION CCCCC-CCCCC
SECTION DDDDD-DDDDD
SECTION EEEEE-EEEEE
SECTION FFFFF-FFFFF
SECTION GGGGG-GGGGG
SECTION HHHHH-HHHHH
SECTION IIIII-IIIII
SECTION JJJJJ-JJJJJ
SECTION KKKKK-KKKKK
SECTION LLLLL-LLLLL
SECTION MMMMM-MMMMM
SECTION NNNNN-NNNNN
SECTION OOOOO-OOOOO
SECTION PPPPP-PPPPP
SECTION QQQQQ-QQQQQ
SECTION RRRRR-RRRRR
SECTION SSSSS-SSSSS
SECTION TTTTT-TTTTT
SECTION UUUUU-UUUUU
SECTION VVVVV-VVVVV
SECTION WWWWW-WWWWW
SECTION XXXXX-XXXXX
SECTION YYYYY-YYYYY
SECTION ZZZZZ-ZZZZZ
SECTION AAAAAA-AAAAAA
SECTION BBBBBB-BBBBBB
SECTION CCCCCC-CCCCCC
SECTION DDDDDD-DDDDDD
SECTION EEEEEE-EEEEEE
SECTION FFFFFF-FFFFFF
SECTION GGGGGG-GGGGGG
SECTION HHHHHH-HHHHHH
SECTION IIIIII-IIIIII
SECTION JJJJJJ-JJJJJJ
SECTION KKKKKK-KKKKKK
SECTION LLLLLL-LLLLLL
SECTION MMMMMM-MMMMMM
SECTION NNNNNN-NNNNNN
SECTION OOOOOO-OOOOOO
SECTION PPPPPP-PPPPPP
SECTION QQQQQQ-QQQQQQ
SECTION RRRRRR-RRRRRR
SECTION SSSSSS-SSSSSS
SECTION TTTTTT-TTTTTT
SECTION UUUUUU-UUUUUU
SECTION VVVVVV-VVVVVV
SECTION WWWWWW-WWWWWW
SECTION XXXXXX-XXXXXX
SECTION YYYYYY-YYYYYY
SECTION ZZZZZZ-ZZZZZZ
SECTION AAAAAAA-AAAAAAA
SECTION BBBBBBB-BBBBBBB
SECTION CCCCCCC-CCCCCCC
SECTION DDDDDDD-DDDDDDD
SECTION EEEEEEE-EEEEEEE
SECTION FFFFFFF-FFFFFFF
SECTION GGGGGGG-GGGGGGG
SECTION HHHHHHH-HHHHHHH
SECTION IIIIIII-IIIIIII
SECTION JJJJJJJ-JJJJJJJ
SECTION KKKKKKK-KKKKKKK
SECTION LLLLLLL-LLLLLLL
SECTION MMMMMMM-MMMMMMM
SECTION NNNNNNN-NNNNNNN
SECTION OOOOOOO-OOOOOOO
SECTION PPPPPPP-PPPPPPP
SECTION QQQQQQQ-QQQQQQQ
SECTION RRRRRRR-RRRRRRR
SECTION SSSSSSS-SSSSSSS
SECTION TTTTTTT-TTTTTTT
SECTION UUUUUUU-UUUUUUU
SECTION VVVVVVV-VVVVVVV
SECTION WWWWWWW-WWWWWWW
SECTION XXXXXXX-XXXXXXX
SECTION YYYYYYY-YYYYYYY
SECTION ZZZZZZZ-ZZZZZZZ
SECTION AAAAAAAA-AAAAAAAA
SECTION BBBBBBBB-BBBBBBBB
SECTION CCCCCCCC-CCCCCCCC
SECTION DDDDDDDD-DDDDDDDD
SECTION EEEEEEEE-EEEEEEEE
SECTION FFFFFFFF-FFFFFFFF
SECTION GGGGGGGG-GGGGGGGG
SECTION HHHHHHHH-HHHHHHHH
SECTION IIIIIIII-IIIIIIII
SECTION JJJJJJJJ-JJJJJJJJ
SECTION KKKKKKKK-KKKKKKKK
SECTION LLLLLLLL-LLLLLLLL
SECTION MMMMMMMM-MMMMMMMM
SECTION NNNNNNNN-NNNNNNNN
SECTION OOOOOOOO-OOOOOOOO
SECTION PPPPPPPP-PPPPPPPP
SECTION QQQQQQQQ-QQQQQQQQ
SECTION RRRRRRRR-RRRRRRRR
SECTION SSSSSSSS-SSSSSSSS
SECTION TTTTTTTT-TTTTTTTT
SECTION UUUUUUUU-UUUUUUUU
SECTION VVVVVVVV-VVVVVVVV
SECTION WWWWWWWW-WWWWWWWW
SECTION XXXXXXXX-XXXXXXXX
SECTION YYYYYYYY-YYYYYYYY
SECTION ZZZZZZZZ-ZZZZZZZZ
SECTION AAAAAAAAA-AAAAAAAAA
SECTION BBBBBBBBB-BBBBBBBBB
SECTION CCCCCCCCC-CCCCCCCCC
SECTION DDDDDDDDD-DDDDDDDDD
SECTION EEEEEEEEE-EEEEEEEEE
SECTION FFFFFFFFF-FFFFFFFFF
SECTION GGGGGGGGG-GGGGGGGGG
SECTION HHHHHHHHH-HHHHHHHHH
SECTION IIIIIIIII-IIIIIIIII
SECTION JJJJJJJJJ-JJJJJJJJJ
SECTION KKKKKKKKK-KKKKKKKKK
SECTION LLLLLLLLL-LLLLLLLLL
SECTION MMMMMMMMM-MMMMMMMMM
SECTION NNNNNNNNN-NNNNNNNNN
SECTION OOOOOOOOO-OOOOOOOOO
SECTION PPPPPPPPP-PPPPPPPPP
SECTION QQQQQQQQQ-QQQQQQQQQ
SECTION RRRRRRRRR-RRRRRRRRR
SECTION SSSSSSSSS-SSSSSSSSS
SECTION TTTTTTTTT-TTTTTTTTT
SECTION UUUUUUUUU-UUUUUUUUU
SECTION VVVVVVVVV-VVVVVVVVV
SECTION WWWWWWWWW-WWWWWWWWW
SECTION XXXXXXXXX-XXXXXXXXX
SECTION YYYYYYYYY-YYYYYYYYY
SECTION ZZZZZZZZZ-ZZZZZZZZZ
SECTION AAAAAAAAAA-AAAAAAAAAA
SECTION BBBBBBBBBB-BBBBBBBBBB
SECTION CCCCCCCCCC-CCCCCCCCCC
SECTION DDDDDDDDDD-DDDDDDDDDD
SECTION EEEEEEEEEE-EEEEEEEEEE
SECTION FFFFFFFFFF-FFFFFFFFFF
SECTION GGGGGGGGGG-GGGGGGGGGG
SECTION HHHHHHHHHH-HHHHHHHHHH
SECTION IIIIIIIIII-IIIIIIIIII
SECTION JJJJJJJJJJ-JJJJJJJJJJ
SECTION KKKKKKKKKK-KKKKKKKKKK
SECTION LLLLLLLLLL-LLLLLLLLLL
SECTION MMMMMMMMMM-MMMMMMMMMM
SECTION NNNNNNNNNN-NNNNNNNNNN
SECTION OOOOOOOOOO-OOOOOOOOOO
SECTION PPPPPPPPPP-PPPPPPPPPP
SECTION QQQQQQQQQQ-QQQQQQQQQQ
SECTION RRRRRRRRRR-RRRRRRRRRR
SECTION SSSSSSSSSS-SSSSSSSSSS
SECTION TTTTTTTTTT-TTTTTTTTTT
SECTION UUUUUUUUUU-UUUUUUUUUU
SECTION VVVVVVVVVV-VVVVVVVVVV
SECTION WWWWWWWWWW-WWWWWWWWWW
SECTION XXXXXXXXXX-XXXXXXXXXX
SECTION YYYYYYYYYY-YYYYYYYYYY
SECTION ZZZZZZZZZZ-ZZZZZZZZZZ
SECTION AAAAAAAAAAA-AAAAAAAAAAA
SECTION BBBBBBBBBBB-BBBBBBBBBBB
SECTION CCCCCCCCCCC-CCCCCCCCCCC
SECTION DDDDDDDDDDD-DDDDDDDDDDD
SECTION EEEEEEEEEEE-EEEEEEEEEEE
SECTION FFFFFFFFFFF-FFFFFFFFFFF
SECTION GGGGGGGGGGG-GGGGGGGGGGG
SECTION HHHHHHHHHHH-HHHHHHHHHHH
SECTION IIIIIIIIIIII-IIIIIIIIIIII
SECTION JJJJJJJJJJJ-JJJJJJJJJJJ
SECTION KKKKKKKKKKK-KKKKKKKKKKK
SECTION LLLLLLLLLLL-LLLLLLLLLLL
SECTION MMMMMMMMMMM-MMMMMMMMMMM
SECTION NNNNNNNNNNN-NNNNNNNNNNN
SECTION OOOOOOOOOOO-OOOOOOOOOOO
SECTION PPPPPPPPPPP-PPPPPPPPPPP
SECTION QQQQQQQQQQQ-QQQQQQQQQQQ
SECTION RRRRRRRRRRR-RRRRRRRRRRR
SECTION SSSSSSSSSSS-SSSSSSSSSSS
SECTION TTTTTTTTTTT-TTTTTTTTTTT
SECTION UUUUUUUUUUU-UUUUUUUUUUU
SECTION VVVVVVVVVVV-VVVVVVVVVVV
SECTION WWWWWWWWWWW-WWWWWWWWWWW
SECTION XXXXXXXXXXX-XXXXXXXXXXX
SECTION YYYYYYYYYYY-YYYYYYYYYYY
SECTION ZZZZZZZZZZZ-ZZZZZZZZZZZ
SECTION AAAAAAAAAAAA-AAAAAAAAAAAA
SECTION BBBBBBBBBBBB-BBBBBBBBBBBB
SECTION CCCCCCCCCCCC-CCCCCCCCCCCC
SECTION DDDDDDDDDDDD-DDDDDDDDDDDD
SECTION EEEEEEEEEEEE-EEEEEEEEEEEE
SECTION FFFFFFFFFFFF-FFFFFFFFFFFF
SECTION GGGGGGGGGGGG-GGGGGGGGGGGG
SECTION HHHHHHHHHHHH-HHHHHHHHHHHH
SECTION IIIIIIIIIIII-IIIIIIIIIIII
SECTION JJJJJJJJJJJJ-JJJJJJJJJJJJ
SECTION KKKKKKKKKKKK-KKKKKKKKKKKK
SECTION LLLLLLLLLLLL-LLLLLLLLLLLL
SECTION MMMMMMMMMMMM-MMMMMMMMMMMM
SECTION NNNNNNNNNNNN-NNNNNNNNNNNN
SECTION OOOOOOOOOOOO-OOOOOOOOOOOO
SECTION PPPPPPPPPPPP-PPPPPPPPPPPP
SECTION QQQQQQQQQQQQ-QQQQQQQQQQQQ
SECTION RRRRRRRRRRRR-RRRRRRRRRRRR
SECTION SSSSSSSSSSSS-SSSSSSSSSSSS
SECTION TTTTTTTTTTTT-TTTTTTTTTTTT
SECTION UUUUUUUUUUUU-UUUUUUUUUUUU
SECTION VVVVVVVVVVVV-VVVVVVVVVVVV
SECTION WWWWWWWWWWWW-WWWWWWWWWWWW
SECTION XXXXXXXXXXXX-XXXXXXXXXXXX
SECTION YYYYYYYYYYYY-YYYYYYYYYYYY
SECTION ZZZZZZZZZZZZ-ZZZZZZZZZZZZ
SECTION AAAAAAAAAAAAA-AAAAAAAAAAAAA
SECTION BBBBBBBBBBBBB-BBBBBBBBBBBBB
SECTION CCCCCCCCCCCCC-CCCCCCCCCCCCC
SECTION DDDDDDDDDDDDD-DDDDDDDDDDDDD
SECTION EEEEEEEEEEEEE-EEEEEEEEEEEEE
SECTION FFFFFFFFFFFFF-FFFFFFFFFFFFF
SECTION GGGGGGGGGGGGG-GGGGGGGGGGGGG
SECTION HHHHHHHHHHHHH-HHHHHHHHHHHHH
SECTION IIIIIIIIIIIII-IIIIIIIIIIIII
SECTION JJJJJJJJJJJJJ-JJJJJJJJJJJJJ
SECTION KKKKKKKKKKKKK-KKKKKKKKKKKKK
SECTION LLLLLLLLLLLLL-LLLLLLLLLLLLL
SECTION MMMMMMMMMMMMM-MMMMMMMMMMMMM
SECTION NNNNNNNNNNNNN-NNNNNNNNNNNNN
SECTION OOOOOOOOOOOOO-OOOOOOOOOOOOO
SECTION PPPPPPPPPPPPP-PPPPPPPPPPPPP
SECTION QQQQQQQQQQQQQ-QQQQQQQQQQQQQ
SECTION RRRRRRRRRRRRR-RRRRRRRRRRRRR
SECTION SSSSSSSSSSSSS-SSSSSSSSSSSSS
SECTION TTTTTTTTTTTTT-TTTTTTTTTTTTT
SECTION UUUUUUUUUUUUU-UUUUUUUUUUUUU
SECTION VVVVVVVVVVVVV-VVVVVVVVVVVVV
SECTION WWWWWWWWWWWWW-WWWWWWWWWWWWW
SECTION XXXXXXXXXXXXX-XXXXXXXXXXXXX
SECTION YYYYYYYYYYYYY-YYYYYYYYYYYYY
SECTION ZZZZZZZZZZZZZ-ZZZZZZZZZZZZZ
SECTION AAAAAAAAAAAAAA-AAAAAAAAAAAAAA
SECTION BBBBBBBBBBBBBB-BBBBBBBBBBBBBB
SECTION CCCCCCCCCCCCCC-CCCCCCCCCCCCCC
SECTION DDDDDDDDDDDDDD-DDDDDDDDDDDDDD
SECTION EEEEEEEEEEEEEE-EEEEEEEEEEEEEE
SECTION FFFFFFFFFFFFFF-FFFFFFFFFFFFFF
SECTION GGGGGGGGGGGGGG-GGGGGGGGGGGGGG
SECTION HHHHHHHHHHHHHH-HHHHHHHHHHHHHH
SECTION IIIIIIIIIIIIII-IIIIIIIIIIIIII
SECTION JJJJJJJJJJJJJJ-JJJJJJJJJJJJJJ
SECTION KKKKKKKKKKKKKK-KKKKKKKKKKKKKK
SECTION LLLLLLLLLLLLLL-LLLLLLLLLLLLLL
SECTION MMMMMMMMMMMMMM-MMMMMMMMMMMMMM
SECTION NNNNNNNNNNNNNN-NNNNNNNNNNNNNN
SECTION OOOOOOOOOOOOOO-OOOOOOOOOOOOOO
SECTION PPPPPPPPPPPPPP-PPPPPPPPPPPPPP
SECTION QQQQQQQQQQQQQQ-QQQQQQQQQQQQQQ
SECTION RRRRRRRRRRRRRR-RRRRRRRRRRRRRR
SECTION SSSSSSSSSSSSSS-SSSSSSSSSSSSSS
SECTION TTTTTTTTTTTTTT-TTTTTTTTTTTTTT
SECTION UUUUUUUUUUUUUU-UUUUUUUUUUUUUU
SECTION VVVVVVVVVVVVVV-VVVVVVVVVVVVVV
SECTION WWWWWWWWWWWWWW-WWWWWWWWWWWWWW
SECTION XXXXXXXXXXXXXX-XXXXXXXXXXXXXX
SECTION YYYYYYYYYYYYYY-YYYYYYYYYYYYYY
SECTION ZZZZZZZZZZZZZZ-ZZZZZZZZZZZZZZ
SECTION AAAAAAAAAAAAAAA-AAAAAAAAAAAAAAA
SECTION BBBBBBBBBBBBBBB-BBBBBBBBBBBBBBB
SECTION CCCCCCCCCCCCCCC-CCCCCCCCCCCCCCC
SECTION DDDDDDDDDDDDDDD-DDDDDDDDDDDDDDD
SECTION EEEEEEEEEEEEEEE-EEEEEEEEEEEEEEE
SECTION FFFFFFFFFFFFFFF-FFFFFFFFFFFFFFF
SECTION GGGGGGGGGGGGGGG-GGGGGGGGGGGGGGG
SECTION HHHHHHHHHHHHHHH-HHHHHHHHHHHHHHH
SECTION IIIIIIIIIIIIIII-IIIIIIIIIIIIIII
SECTION JJJJJJJJJJJJJJJ-JJJJJJJJJJJJJJJ
SECTION KKKKKKKKKKKKKKK-KKKKKKKKKKKKKKK
SECTION LLLLLLLLLLLLLLL-LLLLLLLLLLLLLLL
SECTION MMMMMMMMMMMMMMM-MMMMMMMMMMMMMMM
SECTION NNNNNNNNNNNNNNN-NNNNNNNNNNNNNNN
SECTION OOOOOOOOOOOOOOO-OOOOOOOOOOOOOOO
SECTION PPPPPPPPPPPPPPP-PPPPPPPPPPPPPPP
SECTION QQQQQQQQQQQQQQQ-QQQQQQQQQQQQQQQ
SECTION RRRRRRRRRRRRRRR-RRRRRRRRRRRRRRR
SECTION SSSSSSSSSSSSSSS-SSSSSSSSSSSSSSS
SECTION TTTTTTTTTTTTTTT-TTTTTTTTTTTTTTT
SECTION UUUUUUUUUUUUUUU-UUUUUUUUUUUUUUU
SECTION VVVVVVVVVVVVVVV-VVVVVVVVVVVVVVV
SECTION WWWWWWWWWWWWWWW-WWWWWWWWWWWWWWW
SECTION XXXXXXXXXXXXXXX-XXXXXXXXXXXXXXX
SECTION YYYYYYYYYYYYYYY-YYYYYYYYYYYYYYY
SECTION ZZZZZZZZZZZZZZZ-ZZZZZZZZZZZZZZZ
SECTION AAAAAAAAAAAAAAAA-AAAAAAAAAAAAAAAA
SECTION BBBBBBBBBBBBBBBB-BBBBBBBBBBBBBBBB
SECTION CCCCCCCCCCCCCCCC-CCCCCCCCCCCCCCCC
SECTION DDDDDDDDDDDDDDDD-DDDDDDDDDDDDDDDD
SECTION EEEEEEEEEEEEEEEE-EEEEEEEEEEEEEEEE
SECTION FFFFFFFFFFFFFFFF-FFFFFFFFFFFFFFFF
SECTION GGGGGGGGGGGGGGGG-GGGGGGGGGGGGGGGG
SECTION HHHHHHHHHHHHHHHH-HHHHHHHHHHHHHHHH
SECTION IIIIIIIIIIIIIIII-IIIIIIIIIIIIIIII
SECTION JJJJJJJJJJJJJJJJ-JJJJJJJJJJJJJJJJ
SECTION KKKKKKKKKKKKKKKK-KKKKKKKKKKKKKKKK
SECTION LLLLLLLLLLLLLLLL-LLLLLLLLLLLLLLLL
SECTION MMMMMMMMMMMMMMMM-MMMMMMMMMMMMMMMM
SECTION NNNNNNNNNNNNNNNN-NNNNNNNNNNNNNNNN
SECTION OOOOOOOOOOOOOOOO-OOOOOOOOOOOOOOOO
SECTION PPPPPPPPPPPPPPPP-PPPPPPPPPPPPPPPP
SECTION QQQQQQQQQQQQQQQQ-QQQQQQQQQQQQQQQQ
SECTION RRRRRRRRRRRRRRRR-RRRRRRRRRRRRRRRR
SECTION SSSSSSSSSSSSSSSS-SSSSSSSSSSSSSSSS
SECTION TTTTTTTTTTTTTTTT-TTTTTTTTTTTTTTTT
SECTION UUUUUUUUUUUUUUUU-UUUUUUUUUUUUUUUU
SECTION VVVVVVVVVVVVVVVV-VVVVVVVVVVVVVVVV
SECTION WWWWWWWWWWWWWWWW-WWWWWWWWWWWWWWWW
SECTION XXXXXXXXXXXXXXXX-XXXXXXXXXXXXXXXX
SECTION YYYYYYYYYYYYYYYY-YYYYYYYYYYYYYYYY
SECTION ZZZZZZZZZZZZZZZZ-ZZZZZZZZZZZZZZZZ
SECTION AAAAAAAAAAAAAAAAA-AAAAAAAAAAAAAAAAA
SECTION BBBBBBBBBBBBBBBBB-BBBBBBBBBBBBBBBBB
SECTION CCCCCCCCCCCCCCCCC-CCCCCCCCCCCCCCCCC
SECTION DDDDDDDDDDDDDDDDD-DDDDDDDDDDDDDDDDD
SECTION EEEEEEEEEEEEEEEEE-EEEEEEEEEEEEEEEEE
SECTION FFFFFFFFFFFFFFFFF-FFFFFFFFFFFFFFFFF
SECTION GGGGGGGGGGGGGGGGG-GGGGGGGGGGGGGGGGG
SECTION HHHHHHHHHHHHHHHHH-HHHHHHHHHHHHHHHHH
SECTION IIIIIIIIIIIIIIIII-IIIIIIIIIIIIIIIII
SECTION JJJJJJJJJJJJJJJJJ-JJJJJJJJJJJJJJJJJ
SECTION KKKKKKKKKKKKKKKKK-KKKKKKKKKKKKKKKKK
SECTION LLLLLLLLLLLLLLLLL-LLLLLLLLLLLLLLLLL
SECTION MMMMMMMMMMMMMMMMM-MMMMMMMMMMMMMMMMM
SECTION NNNNNNNNNNNNNNNNN-NNNNNNNNNNNNNNNNN
SECTION OOOOOOOOOOOOOOOOO-OOOOOOOOOOOOOOOOO
SECTION PPPPPPPPPPPPPPPPP-PPPPPPPPPPPPPPPPP
SECTION QQQQQQQQQQQQQQQQQ-QQQQQQQQQQQQQQQQQ
SECTION RRRRRRRRRRRRRRRRR-RRRRRRRRRRRRRRRRR
SECTION SSSSSSSSSSSSSSSSS-SSSSSSSSSSSSSSSSS
SECTION TTTTTTTTTTTTTTTTT-TTTTTTTTTTTTTTTTT
SECTION UUUUUUUUUUUUUUUUU-UUUUUUUUUUUUUUUUU
SECTION VVVVVVVVVVVVVVVVV-VVVVVVVVVVVVVVVVV
SECTION WWWWWWWWWWWWWWWWW-WWWWWWWWWWWWWWWWW
SECTION XXXXXXXXXXXXXXXXX-XXXXXXXXXXXXXXXXX
SECTION YYYYYYYYYYYYYYYYY-YYYYYYYYYYYYYYYYY
SECTION ZZZZZZZZZZZZZZZZZ-Z