

TECHNICAL INFORMATION DIGEST



TID 6-7

Revision: A
August 22, 1986

Applies To

All 1180 MICRO Systems

Title

Multiple Device Controller (MDC), Serial Cable Paddle Connector Assembly and Communications (Comm) Adapter Configurations

Action Required

Be sure that the following components are compatible:

- MDC board
- Serial cable paddle connector assembly
- Communications adapter.

Procedure

Several changes have been made to these components. If you need to replace one of them due to a component failure or for an upgrade of other equipment, only certain combinations are compatible. Use Table 1 or the flowchart in Figure 1 when ordering replacement parts.

	Comm Adapter			Serial Cable Paddle Connector Assembly	
	AD-3-067442 -001	AD-9-067442 -003	AD-1-085156 -001 (new*)	AW-3-065964 -002 (old)	AW-7-085200 -001 (new*)
MDC I QC-S-7- 018375-001 and QC-S-9- 018375-019	Compatible	Compatible if paddle con- nector is old	Compatible if paddle con- nector is new	Compatible	Compatible with MDC I if comm adapter is new.
MDC III QC-S-3- 018375-036	Not compa- tible. Must upgrade to a -003.	Compatible if paddle con- nector is old	Compatible if paddle con- nector is new	Compatible if comm adapter is -003	Compatible if comm adapter is new

* Will require field customization.

Table 1 Configurations

Instructions will come with the board.

TID 6-7
Revision: A
August 22, 1986

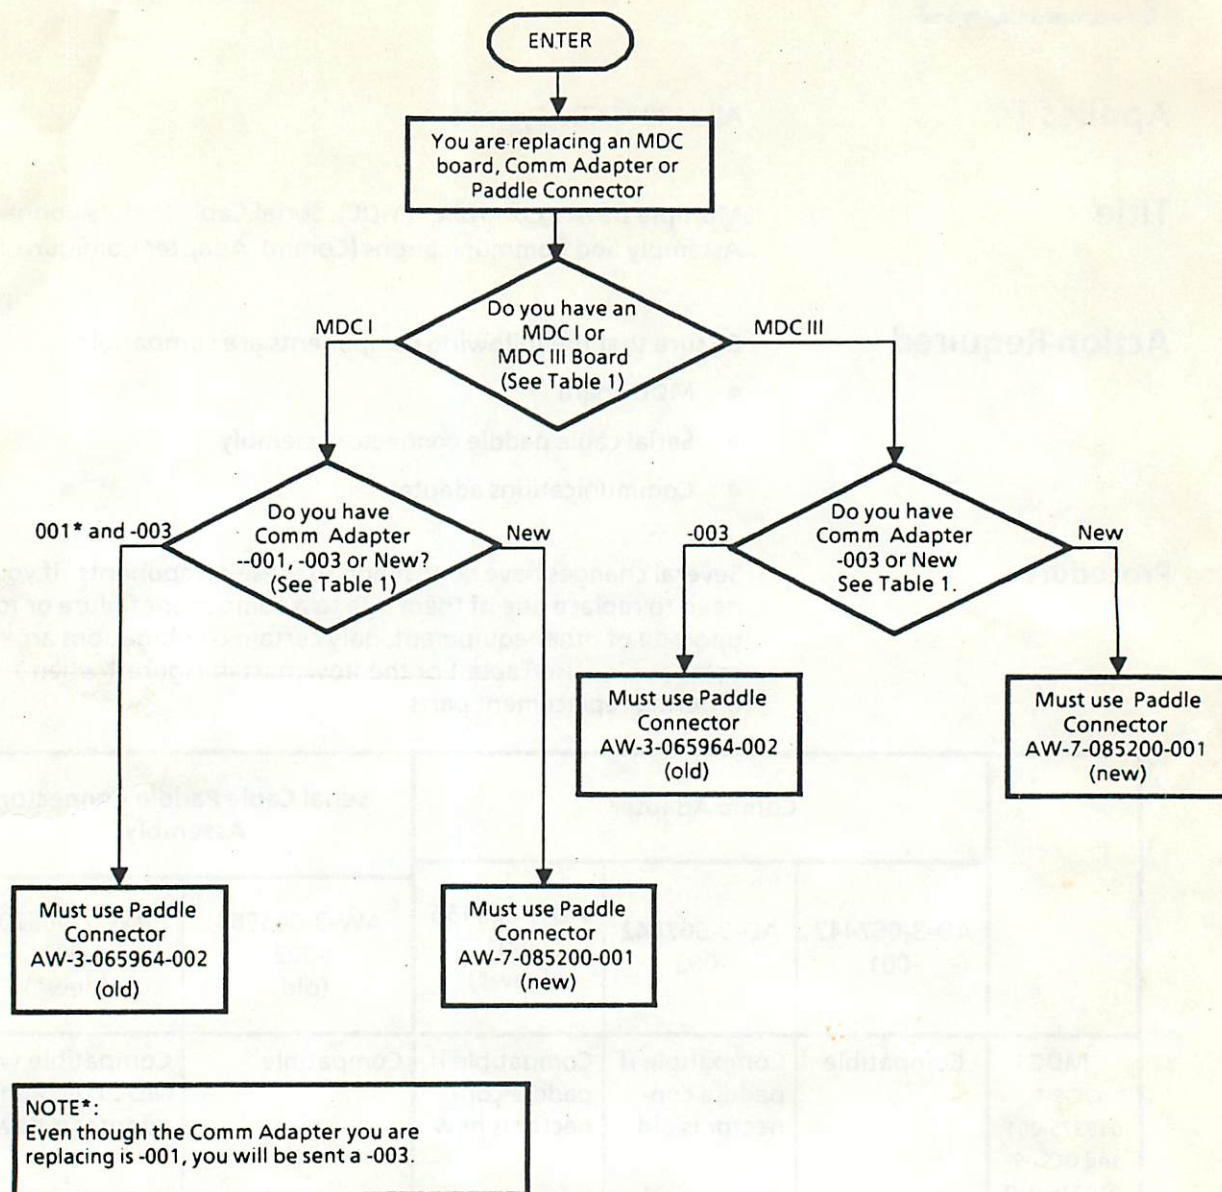


Figure 1 MDC, Paddle Connector and Communications Adapter Compatible Configurations