



Service Manual

ForceTriad™

Energy Platform

This manual and the equipment it describes are for use only by qualified medical professionals trained in the particular technique and surgical procedure to be performed. It is intended as a guide for servicing the Valleylab ForceTriad™ energy platform only. Additional user information is available in the *ForceTriad™ User's Guide*.

Caution

Federal (USA) law restricts this device to sale by or on the order of a physician.

Equipment covered in this manual

ForceTriad™ energy platform

The *ForceTriad Energy Platform Service Manual* consists of two parts—the text (part 1 of 2) and a schematics supplement (part 2 of 2), which contains the schematics.

Valleylab Part Number 945 103 122

Effective Date January 2006

Trademark acknowledgements

ForceTriad™, LigaSure™, LigaSmart™, Smart™, REM™, TissuFect™, Valleylab™, Force FX™, Force EZ™, Force Argon™, Force GSU™, SurgiStat™, EDGE™, AccuVac™, and PolyHesive™ are trademarks of Valleylab.

Patents pending.

Manufactured by

Valleylab

a division of Tyco Healthcare Group LP

Boulder, Colorado 80301-3299 USA

For information call

1-303-530-2300

European representative

Tyco Healthcare UK Ltd.

Gosport, PO13 0AS, UK



Made in USA

Printed in USA

©2006 Valleylab All rights reserved.

Conventions Used in this Guide

Warning

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

Caution

Indicates a hazardous situation which, if not avoided, may result in minor or moderate injury.

Notice

Indicates a hazard which may result in product damage.

Important

Indicates *an operating tip or maintenance suggestion.*

Warranty

Valleylab, a division of Tyco Healthcare Group LP, warrants each product manufactured by it to be free from defects in material and workmanship under normal use and service for the period(s) set forth below. Valleylab's obligation under this warranty is limited to the repair or replacement, at its sole option, of any product, or part thereof, which has been returned to it or its Distributor within the applicable time period shown below after delivery of the product to the original purchaser, and which examination discloses, to Valleylab's satisfaction, that the product is defective. This warranty does not apply to any product, or part thereof, which has been repaired or altered outside Valleylab's factory in a way so as, in Valleylab's judgment, to affect its stability or reliability, or which has been subjected to misuse, neglect, or accident.

The warranty periods for Valleylab products are as follows:

ForceTriad Energy Platform	One year from date of shipment
Electrosurgical Generators	One year from date of shipment
LigaSure Vessel Sealing System	One year from date of shipment
LigaSure Reusable Instruments	One year from date of shipment
Mounting Fixtures (all models)	One year from date of shipment
Footswitches (all models)	One year from date of shipment
Force Argon Units	One year from date of shipment
OptiMumm Smoke Evacuator	Two years from date of shipment
LigaSure Sterile Single Use Items	Sterility only as stated on packaging
Sterile Single Use Items	Sterility only as stated on packaging
Patient Return Electrodes	Shelf life only as stated on packaging

This warranty is in lieu of all other warranties, express or implied, including without limitation, the warranties of merchantability and fitness for a particular purpose, and of all other obligations or liabilities on the part of Valleylab.

Valleylab neither assumes nor authorizes any other person to assume for it any other liability in connection with the sale or use of any of Valleylab's products.

Notwithstanding any other provision herein or in any other document or communication, Valleylab's liability with respect to this agreement and products sold hereunder shall be limited to the aggregate purchase price for the goods sold by Valleylab to the customer. There are no warranties which extend beyond the terms hereof. Valleylab disclaims any liability hereunder or elsewhere in connection with the sale of this product, for indirect or consequential damages.

This warranty and the rights and obligations hereunder shall be construed under and governed by the laws of the State of Colorado, USA. The sole forum for resolving disputes arising under or relating in any way to this warranty is the District Court of the County of Boulder, State of Colorado, USA.

Valleylab, its dealers, and representatives reserve the right to make changes in equipment built and/or sold by them at any time without incurring any obligation to make the same or similar changes on equipment previously built and/or sold by them.



Conventions Used in this Guide	iii
Warranty	iv

Chapter 1. ForceTriad Energy Platform Overview and General Features

ForceTriad Energy Platform Front Panel.....	1-2
Introduction.....	1-2
Parts Shipped	1-3
List of Components	1-3
System Conventions.....	1-4
Touchscreens.....	1-4
Common Symbols	1-4
Power Modes	1-6
Monopolar Modes.....	1-6
Bipolar Modes	1-6
LigaSure Mode.....	1-7

Chapter 2. Patient and Operating Room Safety

General	2-2
Setting Up the System	2-2
Fire/Explosion Hazard.....	2-4
Energy Platform	2-5
Active instruments	2-6
Pacemakers and ICDs.....	2-6
After Surgery	2-6
Monopolar.....	2-7
Inadvertent Radio Frequency (RF) Burns.....	2-8
Bipolar	2-9
LigaSure	2-9
LigaSure in Laparoscopic Procedures	2-10
Servicing.....	2-11
Shunt Cords	2-11
Procedures Where Conductive Fluid is Introduced into the Surgical Site	2-11
Laparoscopic Procedures	2-12

Chapter 3. System Setup

Setup	3-2
Before Startup	3-2
Powering Up the ForceTriad Energy Platform	3-2
System Functions.....	3-2
Adjusting Display Brightness	3-2
Activation Log.....	3-2
Restore.....	3-3
Setup	3-3

Chapter 4. Technical Specifications

Performance Characteristics.....	4-2
General	4-2
Dimensions and Weight	4-2
Operating Parameters	4-3
Transport and Storage.....	4-3
Internal Memory.....	4-3
Audio Volume	4-4
Activation Tone	4-4
Alarm Tone	4-4
REM Contact Quality Monitor	4-5
Autobipolar	4-5
Duty Cycle	4-6
Low Frequency (50/60 Hz) Leakage Current.....	4-6
High Frequency (RF) Leakage Current	4-7
Input Power	4-8
Power Cord Specification.....	4-8
Input Frequency.....	4-9
Input Current	4-9
Backup Power.....	4-9
Equipotential Ground Connection.....	4-9
ECG Blanking	4-9
Standards and IEC Classifications.....	4-10
Class I Equipment (IEC 60601-1).....	4-10
Type CF Equipment (IEC 60601-1)/Defibrillator Proof.....	4-10
Liquid Spillage.....	4-10
Voltage Transients (Emergency Energy Platform Mains Transfer).....	4-11
Electromagnetic Compatibility (IEC 60601-1-2 and IEC 60601-2-2)	4-11
Output Characteristics.....	4-16
Maximum Output for Bipolar, Monopolar, and LigaSure Modes.....	4-16
Output Power vs. Resistance Graphs	4-20
Monopolar Graphs	4-20

Chapter 5. Principles of Operation

Block Diagram	5-2
Functional Overview	5-3
TissuFect Tissue Sensing Technology	5-3
REM Contact Quality Monitoring System.....	5-3
High Voltage DC (HVDC) Power Supply Principles of Operation	5-4
RF Principles of Operation	5-5
REM.....	5-5
Autobipolar	5-5
Leakage Current Monitor	5-5
Sensor Circuit	5-6
Steering Relay PCBA Principles of Operation	5-7

Circuit Descriptions for the Force Triad Display PCBA.....	5-8
Hotlink Transceiver U1	5-8
Liquid Crystal Display (LCD) Driver Inside the FPGA U28	5-8
Touchscreen Driver.....	5-8
LCD Brightness DAC Control	5-9
Barcode Driver	5-9
PCBA ID Transmitter.....	5-9
Power Supply	5-9
Footswitch/Audio PCBA Circuitry Description	5-9
Overview	5-9
Power Supplies	5-10
Communications	5-11
Footswitch Data	5-12
Expansion Port DAC Data.....	5-12
Flash Memory.....	5-12
Isolated Footswitch and Expansion Port Circuitry	5-13
Controller PCBA	5-17
Controller Block Diagram	5-17
Digital Signal Processor (DSP) Controlled Data Converters.....	5-18
Interface Control Logic PLD.....	5-18
External Peripherals.....	5-19
 Chapter 6. Setup, Tests, and Adjustments	
Setting Up the Generator	6-2
Periodic Safety Check	6-3
Recommended Test Equipment.....	6-4
Inspecting the Generator and Accessories	6-4
Inspecting the Internal Components.....	6-6
Verifying REM Function.....	6-7
Checking High Frequency Leakage Current.....	6-14
Calibrating the ForceTriad Generator	6-15
 Chapter 7. Troubleshooting	
Inspecting the ForceTriad Energy Platform	7-1
Responding to System Errors	7-2
System Error Descriptions	7-2
Non-Recoverable Error Descriptions.....	7-2
 Chapter 8. Replacement Procedures	
Fuse Replacement.....	8-2
Battery Replacement	8-2
Low Voltage Power Supply (LVPS) Replacement.....	8-3
Footswitch/Audio PCBA Replacement	8-4
Controller PCBA Replacement	8-5
High Voltage DC (HVDC) PCBA Replacement.....	8-6
Front Panel Replacement	8-7

RF PCBA Replacement	8-8
Steering Relay PCBA Replacement	8-9
Display PCBA Replacement	8-11
Barcode Scanner Replacement.....	8-12
Output Receptacle Replacement	8-13

Chapter 9. Repair Policies and Procedures

Responsibility of the Manufacturer.....	9-2
Routine Maintenance	9-2
Cleaning	9-3
Product Service	9-3
Returning the Energy Platform for Service.....	9-3
Adjustment to Factory Specification (Calibration).....	9-4
Software Upgrades	9-4
Service Centers.....	9-4

Chapter 10. Service Parts

Ordering Replacement Parts.....	10-1
Chassis Assembly.....	10-2
Shield PCBAs	10-6
Front Panel.....	10-8
Display LCD PCBA.....	10-10
Steering Relay PCBA	10-15
Receptacles	10-19
RF PCBA.....	10-24
Footswitch/Audio PCBA.....	10-31
HVDC PCBA.....	10-38
Controller PCBA.....	10-44
Cable Assemblies	10-54

ForceTriad Energy Platform Overview and General Features


This chapter provides an overview of the features and functions of the ForceTriad energy platform.

Caution

Read all warnings, cautions, and instructions provided with this system before use.

Read the instructions, warnings, and cautions provided with electro-surgical instruments before use. Specific instructions for electro-surgical instruments are not included in this manual.

ForceTriad Energy Platform Front Panel

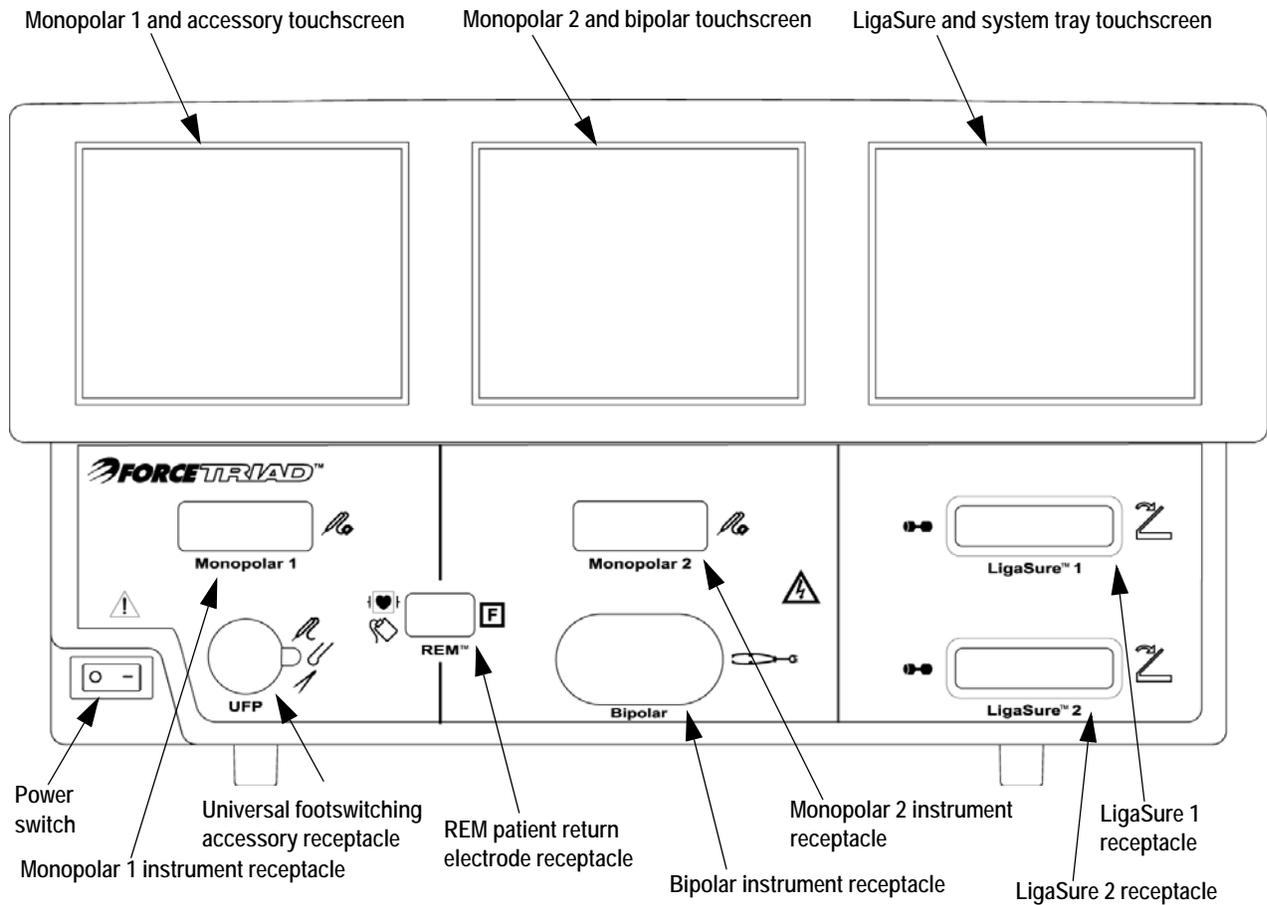

Introduction

The ForceTriad energy platform is designed to provide RF energy for monopolar and bipolar surgical applications and tissue-fusion applications. It features three touchscreen user interfaces, and has the ability to automatically detect handsets and configure the generator accordingly. Safety and diagnostic functionality include automatic fail-safe functions.

Parts Shipped

When you unpack the ForceTriad energy platform, verify that the following parts have been shipped:

- ForceTriad energy platform
- Power cord (110V)
- Monopolar footswitch adapter cable
- User's guide
- Service manual
- Schematics supplement
- Quick reference guide

List of Components

The ForceTriad energy platform is a self-contained unit, consisting of a main enclosure (cover and base) and power cord. The main components of the generator are the following:

- Front panel components
- Rear panel components
- Internal components


Details about the interaction of the main components and PCBA descriptions are provided in Chapter 4, *Principles of Operation*.

System Conventions

Touchscreens

The ForceTriad energy platform features a user-friendly interface with three touchscreens that allow the user to control system functions. The active touchscreen or touchscreens will illuminate, and the unavailable touchscreens will dim.

Common Symbols

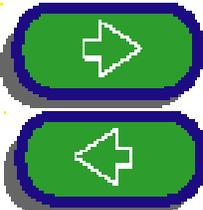Symbol	Name	Description
	Page Up/Page Down	Scroll through blocks of options that cannot be displayed on a single screen.
	Up/Down	Pressing once increases/decreases the associated value selection by one or moves highlighted selection up/down one line. Pressing and holding scrolls up/down.
	Next/Back	Progresses/Regresses to the next screen.
	Back Space	Regresses one character.

Symbol	Name	Description
	Bipolar Mute On/Off	Turn on/off the audio tones produced by the system that indicate the increase or decrease of current during a bipolar procedure.
	Cancel	Cancels current screen and returns to the previous screen.
	Enter	Accepts and initiates current selections.
	System Tray	The system tray contains controls that allow you to access and adjust system settings including screen brightness and Main Menu options.
	Brightness	Each selection of this button adjusts the screen brightness to the next of the three available brightness settings. When maximum brightness is reached, next selection resets to the least bright setting.
	Wrench	Selecting accesses the Main Menu, which provides user-selected options for language, appearance, and operation.

Power Modes

As a safety feature to prevent unexpected power delivery spikes, simultaneous activation of multiple instruments is not possible on the ForceTriad energy platform.

Monopolar Modes

The ForceTriad energy platform produces five different modes of power output.

Cut Modes

Pure cut provides a clean, precise cut in any tissue with little or no hemostasis.

Blend cut is a conventional blended waveform that provides slower cutting and additional hemostasis.

Valleylab Mode

The Valleylab mode delivers optimized energy to provide controlled hemostasis with minimal thermal spread during tissue division. The Valleylab mode function is only available when using Valleylab mode-enabled instruments.

Coag Modes

Fulgurate coagulates tissue by sparking from the active electrode, through air, to the patient tissue. Since sparks may spray unpredictably from the electrode during fulguration, using fulguration for delicate tissue or in confined areas can complicate surgery. Accidental sparking to adjacent areas can occur as tissue at the surgical site dries and becomes more resistant to current flow.

Spray delivers optimum fulguration; penetration is shallower and the tissue area is larger than with the fulgurate mode.

Bipolar Modes

Three bipolar modes are available: low, standard, and macrobipolar.

Low delivers precision and fine control over the amount of desiccation.

Standard is a conventional bipolar output at low voltage.

Macro (macrobipolar) may be used for bipolar cutting or rapid coagulation. Power remains constant over a wide range of tissue types.

Autobipolar

The autobipolar feature senses tissue impedance between the two bipolar electrodes, then uses the impedance information to automatically start or stop bipolar RF energy delivery. Optionally, the user may choose between footswitch start and auto start, or program a delay between auto start and RF activation.

LigaSure Mode

The LigaSure tissue fusion mode can be used on arteries, veins, and lymphatics up to and including 7 mm in diameter and tissue bundles. This system provides precise energy delivery and electrode pressure to vessels for a controlled time period to achieve a complete and permanent fusion of the vessel lumen. The system has been optimized to produce minimal sticking, charring or thermal spread to adjacent tissue.

LigaSure Instruments

The LigaSure instruments that complete the ForceTriad tissue fusion system include multiple reusable and single use instruments for open and laparoscopic procedures. Each reusable instrument requires a corresponding single use electrode. The LigaSure function is only available when using Valleylab LigaSure instruments.



Patient and Operating Room Safety

The safe and effective use of electrosurgery depends to a large degree upon factors solely under the control of the operator. There is no substitute for a properly trained and vigilant surgical team. It is important that the operating instructions supplied with this or any electrosurgical equipment be read, understood, and followed.

Electrosurgery has been used safely in millions of procedures. Before starting any surgical procedure, the surgeon should be trained in the particular technique and surgical procedure to be performed, should be familiar with the medical literature related to the procedure and potential complications, and should be familiar with the risks versus the benefits of utilizing electrosurgery in the procedure.

General

Setting Up the System

Warning

Electric Shock Hazard Connect the system power cord to a properly grounded power receptacle. Do not use power plug adapters.

Fire Hazard Do not use extension cords.

Patient Safety Use the energy platform only if the power-up self-test has been completed as described in this manual, otherwise inaccurate power outputs may result.

Caution

When using a smoke evacuator in conjunction with the ForceTriad energy platform, place the smoke evacuator at a distance from the energy platform and set the system volume control at a level that ensures that the activation tones can be heard.

Connect only Valleylab-approved footswitches. Using footswitches from other manufacturers may cause equipment malfunction.

Warning

Hazardous Electrical Output This equipment is for use only by trained, licensed physicians.

Do not use electrosurgical equipment unless properly trained to use it in the specific procedure being undertaken. Use of this equipment without such training can result in serious, unintended patient injury, including bowel perforation and unintended, irreversible tissue necrosis.

Always use the lowest power setting that achieves the desired surgical effect. The active electrode should be utilized only for the minimum time necessary in order to lessen the possibility of unintended burn injury. Accidental and unintended burn injury has occurred during procedures in small surgical fields and on small appendages. Pediatric applications and/or procedures performed on small anatomic structures may require reduced power settings. The higher the current flow and the longer the current is applied, the greater the possibility of unintended thermal damage to tissue, especially during use on small structures.

Do not wrap the instrument cords or patient return electrode cords around metal objects. This may induce currents that could lead to shocks, fires, or injury to the patient or surgical team.

Electric Shock Hazard Do not connect wet instruments to the energy platform. Ensure that all instruments and adapters are correctly connected and that no metal is exposed at any connection points.

Confirm proper power settings before proceeding with surgery. If the proper power settings are not known, set the power to a low setting and cautiously increase the power until the desired effect is achieved. If increased power settings are requested, check the patient return electrode and all instrument connections before major power setting adjustments.

Warning

Contact between the active electrode and any metal will greatly increase current flow and can result in unintended surgical effect.

While using electrosurgery, the patient should not be allowed to come into direct contact with grounded metal objects (e.g., surgical table frame, instrument table, etc.). If this is not possible during certain procedures (e.g., those in which noninsulated head frames are used), use extreme caution to maximize patient safety:

- Use the lowest power setting that achieves the desired effect.
- Place the patient return electrode as close to the surgical site as possible.
- Place dry gauze between the patient and the grounded object if possible.
- Continually monitor the contact point(s).
- Do not use metal needle monitoring electrodes.

Caution

Read all warnings, cautions, and instructions provided with this energy platform before using.

Read the instructions, warnings, and cautions provided with electrosurgical instruments before using. Specific instructions for electrosurgical instruments are not included in this manual.

For surgical procedures where the current could flow through delicate parts of the body, the use of bipolar techniques may be desirable in order to avoid unwanted coagulation.

Examine all instruments and connections to the system before using. Ensure that the instruments function as intended. Improper connection may result in arcs, sparks, instrument malfunction, or unintended surgical effects.

Do not turn the activation tone down to an inaudible level. The activation tone alerts the surgical team when the energy platform is delivering RF energy.

A non-functioning ForceTriad energy platform may cause interruption of surgery. A backup system should be available for use.

Studies have shown that smoke generated during electrosurgical procedures can be potentially harmful to patients and the surgical team. These studies recommend adequately ventilating the smoke by using a surgical smoke evacuator or other means.^a

Inadvertent activation may occur while installing, removing, or bending electrodes. Ensure that the instrument cord is not connected to the ForceTriad energy platform or that the system is OFF.

a. U.S. Department of Health and Human Services. National Institute for Occupational Safety and Health (NIOSH). Control of Smoke from Laser/Electric Surgical Procedures. HAZARD CONTROLS, Publication No. 96-128, September, 1996.

Notice

Connect the power cord to a properly grounded power receptacle having the correct voltage. Otherwise, product damage may result.

Important

If required by local codes, connect the energy platform to the hospital equalization connector with an equipotential cable.

Fire/Explosion Hazard

Warning

Danger: Explosion Hazard Do not use electrosurgery in the presence of flammable anesthetics.

Fire Hazard Do not place active instruments near or in contact with flammable materials (such as gauze or surgical drapes). Electrosurgical instruments that are activated or hot from use can cause a fire. When not in use, place electrosurgical instruments in a safety holster or safely away from patients, the surgical team, and flammable materials.

Warning

Fire Hazard Sparking and heating associated with electrosurgery can be an ignition source. Keep gauze and sponges wet. Keep electrosurgical electrodes away from flammable materials and oxygen (O₂) enriched environments.

Use of electrosurgery in O₂ rich environments increases the risk of fire. Therefore, take measures to reduce the O₂ concentration at the surgical site.

Avoid enriched O₂ and nitrous oxide (N₂O) atmospheres near the surgical site. Both O₂ and N₂O support combustion and may result in fires and burns to patients or surgical personnel.

If possible, stop supplemental oxygen at least one minute before and during use of electrosurgery.

Do not activate the energy platform until flammable vapors from skin prep solutions and tinctures have dissipated.

Avoid the accumulation of naturally occurring flammable gases that may accumulate in body cavities such as the bowel.

Prevent pooling of flammable fluids and the accumulation of flammable or oxidizing gases or vapors under surgical drapes or near the surgical site.

Tissue buildup (eschar) on the tip of an active electrode may create embers that pose a fire hazard, especially in oxygen enriched environments. Keep the electrode clean and free of all debris.

Facial and other body hair is flammable. Water soluble surgical lubricating jelly may be used to cover hair close to the surgical site to decrease flammability.

Verify that all anesthesia circuit connections are leak free before and during use of electrosurgery.

Fire Hazard During Oropharyngeal Surgery

Verify endotracheal tubes are leak free and that the cuff seals properly to prevent oxygen leaks.

If an uncuffed tube is in use, pack the throat with wet sponges around the uncuffed tube, and be sure to keep sponges wet throughout the procedure.

Question the need for 100% O₂ during oropharyngeal or head and neck surgery.

If necessary, scavenge excess O₂ with separate suction.

Energy Platform**Warning**

Each instrument receptacle on this energy platform is designed to accept only one instrument at a time. Do not attempt to connect more than one instrument at a time into a receptacle. Doing so will cause simultaneous activation of the instruments. Follow the instructions provided with electrosurgical instruments for proper connection and use.

Caution

Do not stack equipment on top of the energy platform or place the energy platform on top of electrical equipment. This is an unstable configuration and does not allow for adequate cooling.

Caution

Provide as much distance as possible between the energy platform and other electronic equipment (such as monitors). Do not cross or bundle electronic device cords. This energy platform may cause interference with other electronic equipment.

Active instruments

Caution

Inspect instruments and cords for breaks, cracks, nicks, and other damage before every use. If damaged, do not use. Damaged instruments or cords may result in injury or electrical shock to the patient or surgical team.

Pacemakers and ICDs

Warning

Use electrosurgery and tissue fusion with caution in the presence of internal or external pacemakers. Interference produced by the use of electrosurgical devices can cause a pacemaker to enter an asynchronous mode or can block the pacemaker effect entirely. Consult the pacemaker manufacturer or hospital cardiology department for further information when use of electrosurgery or tissue fusion appliances is planned in patients with cardiac pacemakers.

If the patient has an implantable cardioverter defibrillator (ICD), contact the ICD manufacturer for instructions before performing an electrosurgical or tissue fusion procedure. Electrosurgery or tissue fusion may cause multiple activations of ICDs.

After Surgery

Warning

Electric Shock Hazard Always turn off and unplug the energy platform before cleaning.

Caution

Do not reprocess, reuse or resterilize instruments labeled “disposable” or “single use only.”

Notice

Do not clean the energy platform with abrasive cleaning or disinfectant compounds, solvents, or other materials that could scratch the panels or damage the energy platform.

Monopolar

Warning

Simultaneously activating suction/irrigation and electrosurgical current may result in increased arcing at the electrode tip, burns to unintended tissues, or shocks and burns to the surgical team.

Some surgeons may elect to “buzz the hemostat” during surgical procedures. It is not recommended, and the hazards of such a practice probably cannot be eliminated. Burns to the surgeon’s hands are possible. To minimize the risk take these precautions:

- Do not “buzz the hemostat” with a needle electrode.
- Do not lean on the patient, the table, or the retractors while buzzing the hemostat.
- Activate cut rather than coag. Cut has a lower voltage than coag.
- Firmly grasp as much of the hemostat as possible before activating the energy platform. This disperses the current over a larger area and minimizes the current concentration at the finger tips.
- “Buzz the hemostat” below hand level (as close as possible to the patient) to reduce the opportunity for current to follow alternate paths through the surgeon’s hands.
- Use the lowest power setting possible for the minimum time necessary to achieve hemostasis.
- Activate the energy platform after the instrument makes contact with the hemostat. Do not arc to the hemostat.
- When using a coated or nonstick blade electrode, place the edge of the electrode against the hemostat or other metal instrument.

Patient Return Electrodes

Warning

Do not attempt to use patient return electrodes that disable the REM system. The ForceTriad energy platform's contact quality monitoring system will function correctly only with REM patient return electrodes. Any other patient return electrode products may cause patient injury or product damage.

The safe use of monopolar electrosurgery requires proper placement of the patient return electrode. To avoid electrosurgical burns beneath the patient return electrode, follow all directions on the product package for proper return electrode placement and use.

Do not cut a patient return electrode to reduce its size. Patient burns due to high current density may result.

A patient return electrode is not necessary in bipolar or LigaSure procedures.

To avoid patient burns, ensure that the patient return electrode firmly and completely contacts the skin. Always check the patient return electrode periodically and after the patient is repositioned and during procedures involving long periods of activation.

Use of duty cycles greater than 25% (10 seconds active followed by 30 seconds inactive) will increase the risk that heat build-up under a return electrode may be high enough to injure the patient. Do not continuously activate for longer than one minute.

Inadvertent Radio Frequency (RF) Burns

Warning

Electrodes and probes used with monitoring, stimulation, and imaging devices (or similar equipment) can provide a path for high frequency current even if the electrodes or probes are isolated at 50-60 Hz, insulated, and/or battery operated.

Do not use needles as monitoring electrodes during electrosurgical procedures. Inadvertent electrosurgical burns may result.

To reduce the risk of an inadvertent electrosurgical burn at the electrode or probe site, place the electrode and/or probe as far away as possible from the electrosurgical site and/or patient return electrode. Protective impedances (resistors or RF inductors) installed in the monitoring leads may reduce the risk of such burns. Consult the hospital biomedical engineer for further information.

Warning

In some circumstances, the potential exists for alternate site burns at points of skin contact (e.g., between the arm and the side of the body). This occurs when electrosurgical current seeks a path to the patient return electrode that includes the skin-to-skin contact point. Current passing through small skin-to-skin contact points is concentrated and may cause a burn. This is true for ground referenced and isolated output electrosurgical energy systems.

To reduce the potential for alternate site burns, do one or more of the following:

- Avoid skin-to-skin contact points, such as fingers touching leg or knee touching knee when positioning the patient.
- Place insulation, such as dry gauze or towel, between contact points to ensure that contact does not occur.
- Position the patient return electrode to provide a direct current route between the surgical site and the return electrode which avoids skin-to-skin contact areas.
- In addition, place patient return electrodes according to the manufacturer's instructions.

Bipolar**Caution**

Bipolar instruments must be connected to the bipolar instrument receptacle only. Improper connection may result in inadvertent system activation.

LigaSure**Warning**

LigaSure instruments are intended for use ONLY with the Valleylab ForceTriad energy platform and the Valleylab LigaSure vessel sealing system. Use of these instruments with other Valleylab generators or with generators produced by other manufacturers could result in injury to the patient or surgical team, or cause damage to the instrument.

If the seal cycle complete tone has not sounded, an optimal seal may not have been achieved. Reactivate the RF energy until a seal complete tone is heard.

The LigaSure tissue fusion function has not been shown to be effective for tubal sterilization or tubal coagulation for sterilization procedures. Do not use this function for these procedures.

Use caution during surgical cases in which patients exhibit certain types of vascular pathology (atherosclerosis, aneurysmal vessels, etc.). For best results, apply the seal to unaffected vasculature.

Warning

Do not activate the energy platform in the LigaSure mode until the tissue fusion instrument has been applied with the proper pressure. Activating the energy platform before this is done will result in an improper seal and may increase thermal spread to tissue outside the surgical site.

Tissue fusion requires the application of RF energy and pressure from the instrument. Tissue to be sealed must be firmly grasped between the instrument jaw electrodes. Tissue in the jaw hinge or outside the instrument jaw will not be sealed even if thermal blanching occurs.

Do not use LigaSure instruments on vessels in excess of 7 mm in diameter.

LigaSure instruments that require single use electrodes must be used with the correct electrode type. Use of these instruments with any other electrodes could result in injury to the patient or surgical team, or cause damage to the instrument.

Conductive fluids (e.g, blood or saline) in direct contact with LigaSure instruments or in close proximity may carry electrical current or heat, which may cause unintended surgical effects or burns.

Caution

Energy based devices, such as electrosurgical pencils or ultrasonic scalpels, that are associated with thermal spread should not be used to transect seals.

Avoid placing fingers in the handle ratchet mechanism. Injury to the user may result.

LigaSure in Laparoscopic Procedures

Warning

For laparoscopic procedures, be alert to these potential hazards:

- The external surfaces of the LigaSure instrument jaws may remain hot enough to cause burns after the RF current is deactivated.
- Inadvertent activation or movement of the activated LigaSure instrument outside of the field of vision may result in injury to the patient.
- Do not activate the instrument while the instrument jaws are in contact with, or in close proximity to, other instruments including metal cannulas, as localized burns to the patient or physician may occur.
- Do not activate the LigaSure function in an open circuit condition. Activate the energy platform only when the instrument is near or in direct contact with the target tissue to reduce the possibility of unintended burns.
- Carefully insert and withdraw LigaSure instruments from cannulas to avoid possible damage to the devices and/or injury to the patient.

Servicing

Warning

Electric Shock Hazard Do not remove the energy platform cover. Contact authorized personnel for service.

Notice

Refer to this system's service manual for maintenance recommendations and function and output power verification procedures.

Shunt Cords

Warning

Some surgical instruments (e.g., colonoscopes) may allow substantial leakage current that could burn the surgeon. If the instrument manufacturer recommends the use of a shunt cord (s-cord) to direct the current back to the energy platform, you must also use a Valleylab E0507-B adapter. To avoid a REM alarm, you must use a REM patient return electrode with the E0507-B adapter.

Procedures Where Conductive Fluid is Introduced into the Surgical Site

Warning

When this energy platform is used in procedures where conductive fluid (saline or lactated ringers) is introduced into the surgical site for distention or to conduct RF current, higher than normal currents (greater than one amp) may be produced. In this situation, use one or more **adult**-size return electrodes. Do not use return electrodes labeled for children, infants, babies, neonatal use, or pediatric use.

Use of duty cycles greater than 25% (10 seconds active followed by 30 seconds inactive) will increase the risk that heat build-up under a return electrode may be high enough to injure the patient. Do not continuously activate for longer than one minute.

Laparoscopic Procedures

Warning

For laparoscopic procedures, be alert to these potential hazards:

- Laparoscopic surgery may result in gas embolism due to insufflation of gas in the abdomen.
- The electrode tip may remain hot enough to cause burns after the electrosurgical current is deactivated.
- Inadvertent activation or movement of the activated electrode outside of the field of vision may result in injury to the patient.
- Localized burns to the patient or physician may result from electrical currents carried through conductive objects (such as cannulas or scopes). Electrical current may be generated in conductive objects through direct contact with the active electrode, or by the active instrument (electrode or cable) being in close proximity to the conductive object.
- Do not use hybrid trocars that have a nonconductive locking anchor placed over a conductive sleeve. For the operative channel, use all metal or all plastic systems. At no time should electrical energy pass through hybrid systems. Capacitive coupling of RF current may cause unintended burns.
- When using laparoscopic instrumentation with metal cannulas, the potential exists for abdominal wall burns to occur due to direct electrode contact or capacitive coupling of RF current. This is most likely to occur in instances where the energy platform is activated for extended periods at high power levels inducing high current levels in the cannula.
- Ensure that the insulation of single use and reusable laparoscopic instrumentation is intact and uncompromised. Compromised insulation may lead to inadvertent metal-to-metal sparking and neuromuscular stimulation and/or inadvertent sparking to adjacent tissue.
- Do not activate electrodes while in contact with other instruments as unintended tissue injury may occur.

Do not activate the energy platform in an open circuit condition. To reduce the chances of unintended burns, activate the energy platform only when the active electrode is near or touching the target tissue.

- Use the lowest power setting that achieves the desired surgical effect and use a low voltage waveform (Pure Cut, Valleylab, or Fulgurate) to lessen the potential for the creation of capacitive currents.
- Carefully insert and withdraw active electrodes from cannulas to avoid possible injury to the patient or damage to the devices.

Valleylab recommends against the use of laparoscopic surgery on pregnant patients.

System Setup

This chapter describes the how to set up the energy platform, turn it on, and configure system settings.

Caution

Read all warnings, cautions, and instructions provided with this system before use.

Read the instructions, warnings, and cautions provided with electro-surgical instruments before use. Specific instructions for electro-surgical instruments are not included in this manual.

Setup

Before Startup

1. Verify the system is off by pressing the power switch off (O).
2. Place the energy platform on a flat, stable surface such as a table, platform, boom system, or Valleylab cart. Carts with conductive wheels are recommended. Refer to the procedures for your local institution or your local codes.
3. Plug the system power cord into the rear panel receptacle.
4. Plug the system power cord into a grounded power receptacle.

Powering Up the ForceTriad Energy Platform

1. Turn on the system by pressing the power switch on (|). Observe the following during the power-up self test:
 - The ForceTriad logo will appear on all three screens.
 - A status bar indicates activity.
 - An hourglass icon indicates activity after the status bar disappears.
 - A tone will sound upon completion of self-test.
2. If the system does not pass the power-up self test, refer to the *Troubleshooting* chapter.

System Functions

Adjusting Display Brightness



The ForceTriad energy platform screens have three levels of brightness. Touch the brightness icon on the right side of the right touchscreen to adjust the display brightness.

Activation Log

The Activation Log allows the user to view the last 1000 activations and REM alerts.

1. Touch the wrench icon on the right side of the right touchscreen. The Main Menu display will appear in the left touchscreen.
2. Touch Activation Log in the Main Menu. The activation log will appear on the center touchscreen.
3. Touch the single up or down arrows to the right of the activation log to scroll through the log one line at a time.
4. Touch the green arrow button on the bottom right corner of the Main Menu screen to return the ForceTriad energy platform to the previous setup configuration. The last settings will be displayed.

Restore

Select the Restore button in the Main Menu to restore the ForceTriad energy platform to the previous setup configuration. The touchscreens will display the last settings entered prior to shutting the system off.

Setup

The Setup menu allows the user to change the language that the system touchscreens display, set the time and date, and enable or disable the autobipolar mode.

Language Setup

1. Touch the wrench icon on the right side of the right touchscreen. The Main Menu display will appear in the left touchscreen.
2. Touch Setup in the Main Menu. The Setup display will appear in the left touchscreen.
3. Touch Language in the Setup menu. A list of languages will appear in the left touchscreen.
4. Touch the single up or down arrows to the right of the list to scroll through the list one line at a time.

or

Touch the double up or down arrows to scroll through the list one page at a time.

5. Touch the desired language. A confirmation box will appear and request the user to confirm that a language change is desired.
6. To proceed with the language change, touch the green check mark button. The language will be activated and the confirmation box will close.

or

To reject the language change, touch the red 'X' button. The language setting will return to the previously selected language.

7. Touch the green arrow button to return to the Setup menu.
8. Touch the green arrow button below the Setup menu to return to the Main Menu.

Time and Date Setup

1. Touch the wrench icon on the right side of the right touchscreen. The Main Menu display will appear in the left touchscreen.
2. Touch Setup in the Main Menu. The Setup display will appear in the left touchscreen.
3. Touch the Time and Date button in the Setup menu. The Time and Date display will appear in the left touchscreen.
4. Touch the desired numeric field (minutes, seconds, month, day, or year) to select that field.

5. Touch the up or down arrows next to the time or date row to adjust the selected numeric field.

Touch and hold the arrows to increase the number once per second. After four seconds, the numbers will increase once per 100 milliseconds.

6. Touch the green check mark button to store the date and time information and return to the Setup menu.

or

Touch the red 'X' button to return the time and date to the previous settings and return to the Setup menu.

7. Touch the green arrow button below the Setup menu to return to the Main Menu.

Enable/Disable Autobipolar

1. Touch the wrench icon on the right side of the right touchscreen. The Main Menu display will appear in the left touchscreen.
2. Touch Setup in the Main Menu. The Setup menu will appear in the left touchscreen.
3. If the Autobipolar mode is not enabled, the Autobipolar button shall display 'Enable AutoBipolar'. Touch the Enable AutoBipolar button to enable the autobipolar mode.

If the Autobipolar mode is enabled, the Autobipolar button shall display 'Disable AutoBipolar'. Touch the Disable AutoBipolar button to disable the autobipolar mode.

4. Touch the green arrow button below the Setup menu to return to the Main Menu.

Demo Mode

Warning

Demo mode is intended for demonstration or testing purposes only. Demo mode is not intended for clinical use.

1. Touch the wrench icon on the right side of the right touchscreen. The Main Menu display will appear in the left touchscreen.

Enable Demo Mode

1. In the Main Menu, the Demo mode button will display 'Enter Demo' if the system is not in Demo mode. Touch the Enter Demo mode button to begin Demo mode. The system operating displays will appear in all the touchscreens with the words 'DEMO MODE: Not for Clinical Use' on all three screens.



**DEMO MODE:
Not For Clinical Use**

2. Proceed with any practice or demonstration scenarios. While in Demo mode, the REM alarm and the dual instrument error alarm are deactivated but RF power will still be delivered.

NOTE: In Demo Mode the generator will not sense instrument type, so the appropriate tab must be selected manually for the connected instrument.

3. To exit Demo mode, either turn the system off and restart it, or follow the steps in the exit Demo mode section below.

Exit Demo Mode

1. Touch the wrench icon on the right side of the right touchscreen. The main menu display will appear in the left touchscreen.
2. In the Main Menu, the Demo mode button will display 'Exit Demo' if the system is in Demo mode. Touch the Exit Demo button in the Main Menu to exit the Demo mode. The system touchscreens will display the last settings entered during the Demo mode.



Technical Specifications

All specifications are nominal and subject to change without notice. A specification referred to as “Typical” is within $\pm 20\%$ of a stated value at room temperature (77°F/25°C) and a nominal line input voltage.

Caution

Read all warnings, cautions, and instructions provided with this system before use.

Read the instructions, warnings, and cautions provided with electrosurgical instruments before use. Specific instructions for electrosurgical instruments are not included in this manual.

Performance Characteristics

General

Output configuration	Isolated output
Cooling	Natural convection and fan
Display	Three LCD touchscreens
Connector ports	LED illuminated Smart connector readers
Mounting	<ul style="list-style-type: none">• ForceTriad cart (FT900), Universal Mounting cart (UC8009), and/or the UC8010 Overshelf• operating room boom systems• any stable, flat surface such as a table or cart top

Dimensions and Weight

Width:	18 inches
Depth	20 inches
Height	10 inches
Weight	30 pounds

Operating Parameters

Ambient temperature range +10°C to +40°C

Relative humidity 30% to 75% non-condensing

Atmospheric pressure 700 millibars to 1060 millibars

Warm-up time If transported or stored at temperatures outside the operating temperature range, allow one hour for the energy platform to reach room temperature before use.

Transport and Storage

Ambient temperature range -30°C to +65°C

Relative humidity 0% to 90% (non-condensing)

Atmospheric pressure 500 millibars to 1060 millibars

Duration of storage The ForceTriad energy platform may be stored indefinitely. If the energy platform is stored for over one year, the memory battery must be replaced.

Internal Memory

Nonvolatile, battery-backed RAM Battery type: Lithium
Battery life: 120 mAh

Storage capacity • 256 KB

Audio Volume

The audio levels stated below are for activation tones (cut, Valleylab, coag, bipolar, and LigaSure modes) and alarm tones (REM and system alarms) at a distance of one meter.

Activation Tone

Volume (adjustable)	45 to 65 dBA
Frequency	Cut: 660 Hz Valleylab: 800 Hz Coag: 940 Hz Bipolar: 940 Hz LigaSure: 440 Hz
Duration	Continuous while the system is activated

Alarm Tone

Volume (not adjustable)	>65 dBA
Frequency	REM: 660 Hz Regrasp: 985 Hz Seal Complete: 985 Hz Error/System Alert: Beep tone ranging from 1400 Hz to 7100 Hz
Duration	REM: Two 1/2 second tones separated by 1/2 second for each REM event Regrasp: Three 1/2 second tones -- high, low, high -- separated by 1/2 second Seal Complete: Two 1/2 second tones separated by 1/2 second for each Seal Complete event Error/System Alert: Two 1/2 second tones separated by 1/2 second for each Error/System Alert event

REM Contact Quality Monitor

Interrogation frequency	140 kHz \pm 10 kHz
--------------------------------	----------------------

Interrogation current	< 50 μ A
------------------------------	--------------

Interrogation voltage	< 12V RMS
------------------------------	-----------

Acceptable Resistance Range

REM resistance measurements are \pm 10% during RF activation and \pm 5% when RF output is not activated.

REM patient return electrode: 5 to 135 ohms or up to a 40% increase in the initial measured contact resistance (whichever is less).

If the measured resistance is outside the acceptable range(s) noted above, a REM fault condition occurs.

REM Alarm Activation

REM patient return electrode: When the measured resistance exceeds the standard range of safe resistance (below 5 ohms or above 135 ohms) or when the initial measured contact resistance increases by 40% (whichever is less), the REM alarm indicator enlarges and flashes red and yellow, a tone sounds twice, and RF output is disabled. The indicator remains illuminated red and yellow until you correct the condition causing the alarm. Then, the indicator illuminates green and RF output is enabled.

Autobipolar

The ForceTriad energy platform is equipped with an autobipolar feature that allows for automatic activation of bipolar energy. The autobipolar specifications are:

Interrogation frequency	80 kHz \pm 10 kHz
--------------------------------	---------------------

Interrogation current	< 50 μ A
------------------------------	--------------

Interrogation voltage	< 12V RMS
------------------------------	-----------

Activation Impedance	20 Ω to 500 Ω
-----------------------------	-----------------------------

Deactivation Impedance	User selectable: 1, 500 Ω , 1, 800 Ω , 2, 000 Ω , or 2, 200 Ω
Measurement Accuracy	10% of Full Scale activation impedance while keying active 5% of Full Scale activation impedance while keying inactive
Keying Delay	User selectable in 500 msec increments from 0 sec to 2.5 sec

Duty Cycle

Under maximum power settings and rated load conditions, the ForceTriad energy platform is capable of operating a duty cycle of 25%, defined as 10 seconds active and 30 seconds inactive, in any mode for a period of 4 hours.

Caution
Use of duty cycles greater than 25% (10 seconds active followed by 30 seconds inactive) will increase the risk that heat build-up under a return electrode may be high enough to injure the patient. Do not continuously activate for longer than one minute.

Low Frequency (50/60 Hz) Leakage Current

Enclosure source current, ground open	< 300 μ A
Source current, patient leads, all outputs	Normal polarity, intact ground: < 10 μ A Normal polarity, ground open: < 50 μ A Reverse polarity, ground open: <50 μ A Mains voltage on applied part: < 50 μ A
Sink current at high line, all inputs	< 50 μ A

High Frequency (RF) Leakage Current

Bipolar RF leakage current < 59.2 mA_{rms}

Monopolar RF leakage current < 150 mA_{rms}

LigaSure Leakage 132 mA

Input Power

100–120 Volt	220–240 Volt
Maximum VA at nominal line voltage: Idle: 52 VA Bipolar: 450 VA Cut: 924 VA Coag: 530 VA	Maximum VA at nominal line voltage: Idle: 52 VA Bipolar: 450 VA Cut: 924 VA Coag: 530 VA
Input mains voltage, full regulation range: 90–132 Vac	Input mains voltage, full regulation range: 208–264 Vac
Input mains voltage, operating range: 85–132 Vac	Input mains voltage, operating range: 170–264 Vac
Mains current (maximum): Idle: 0.4 A Bipolar: 2.0 A Cut: 7.0 A Coag: 4.0 A LigaSure: 5.0 A	Mains current (maximum): Idle: 0.2 A Bipolar: 1.0 A Cut: 3.5 A Coag: 2.0 A LigaSure: 2.5 A
Mains line frequency range (nominal): 50 to 60 Hz	Mains line frequency range (nominal): 50 to 60 Hz
Fuses (2): 5 mm x 20 mm 8A, 250 V fast blow	Fuses (2): 5 mm x 20 mm 8A, 250 V fast blow
Power cord: 3-prong hospital grade connector	Power cord: 3-prong locally approved connector

Power Cord Specification

This unit was equipped from the factory with a 110 VAC hospital grade NEMA 5-15 power cord. Should the AC power cord need to be replaced to match another plug configuration, the replacement plug/cable/receptacle configuration must meet or exceed the following specifications:

100-120 VAC

Cable - SJT16/3, IEC color code, maximum length 15 ft (5 m)

Plug - minimum 10 A - 125 VAC

Unit receptacle - IEC female, minimum 10 A - 125 VAC

220-240 VAC

Cable - H05VVVF3G1.0 VDE, maximum length 15' (5 meters)

Plug - minimum 6 A - 250 VAC

Unit receptacle - IEC female, minimum 6 A - 250 VAC

Input Frequency

The ForceTriad energy platform operates within specification at all line input frequencies between 48 Hz and 62 Hz. The User does not need to reconfigure the ForceTriad energy platform for different line frequencies.

Input Current

The ForceTriad energy platform draws no more than 10A at any line input voltage.

Backup Power

The ForceTriad energy platform retains all user programmed features, calibration, and statistical data when switched off and unplugged. The ForceTriad energy platform operates within specification when switched over to a supplied line power by hospital backup systems.

Equipotential Ground Connection

An equipotential ground connection is provided to allow connection of the ForceTriad energy platform to ground.

ECG Blanking

An ECG blanking port is provided to signal other devices that the ForceTriad energy platform is active. The receptacle is a 2.5mm mono jack. It is electrically isolated from the internal ground referenced electronics with the shell electrically connected to the chassis for ESD protection.

Standards and IEC Classifications



ATTENTION

Consult accompanying documents.



The generator output is floating (isolated) with respect to ground.



DANGER

Explosion risk if used with flammable anesthetics.



To reduce the risk of electric shock, do not remove the cover. Refer servicing to qualified service personnel.



Non-Ionizing Radiation



Classified with respect to electrical shock, fire, mechanical, and other specified hazards only in accordance with UL60601-1 and CAN/CSA C22.2 No. 601.1.

Class I Equipment (IEC 60601-1)

Accessible conductive parts cannot become live in the event of a basic insulation failure because of the way in which they are connected to the protective earth conductor.

Type CF Equipment (IEC 60601-1)/Defibrillator Proof



This generator provides a high degree of protection against electric shock, particularly regarding allowable leakage currents. It is type CF isolated (floating) output and may be used for procedures involving the heart.

This generator complies with the ANSI/AAMI HF18 specifications for “defibrillator proof” designation and IEC 60601-2-2.

Liquid Spillage

The ForceTriad energy platform is constructed so that liquid spillage in normal use does not wet electrical insulation or other components, which when wetted are likely to adversely affect the safety of the equipment.

Voltage Transients (Emergency Energy Platform Mains Transfer)

The ForceTriad energy platform continues to operate normally with no errors or system failures when transfer is made between line AC and an emergency energy platform voltage source. (IEC 60601-2-2 sub-clause 51.101 and AAMI HF18 sub-clause 4.2.2)

Electromagnetic Compatibility (IEC 60601-1-2 and IEC 60601-2-2)

This generator complies with the appropriate IEC 60601-1-2 and 60601-2-2 specifications regarding electromagnetic compatibility.

Notice

The ForceTriad generator should not be used adjacent to or stacked with equipment other than specified in the ForceTriad generator user guide and service manual. If adjacent or stacked use is necessary, the ForceTriad generator should be observed to verify normal operation in the configuration in which it will be used.

The ForceTriad generator intentionally applies RF energy for diagnosis or treatment during activation. Observe other electronic medical equipment in the vicinity during the ForceTriad generator activation for any possible adverse electromagnetic effects. Ensure adequate separation of electronic medical equipment based on observed reactions.

The use of accessories, other than specified in the ForceTriad generator user guide and service manual, may result in increased emissions or decreased immunity of the ForceTriad generator.

The ForceTriad energy platform meets the following requirements:

- ESD Immunity (IEC 60601-1-2 Sub-Clause 36.202 and IEC 61000-4-2)
- Radiated Immunity (IEC 60601-1-2 sub-clause 36.202.2 and IEC 61000-4-3)
- Electrical Fast Transient/Burst (IEC 60601-1-2 sub-clause 36.202.3.1 and IEC 61000-4-4)
- Surge Immunity (IEC 60601-1-2 sub-clause 36.202.3.2 and IEC 61000-4-5)
- Emissions (IEC 60601-1-2 sub-clause 36.201.1, IEC 60601-2-2 sub-clause 36 and CISPR 11 Class A)
- Harmonic distortion (IEC 60601-1-2 sub-clause 36.201.3.1 and IEC 61000-3-2)
- Conducted disturbances (IEC 60601-1-2 sub-clause 36.202.6 and IEC 61000-4-6)
- Power frequency magnetic fields (IEC 60601-1-2 sub-clause 36.202.8.1 and IEC 61000-4-8)
- Voltage dips, short interruptions and variations (IEC 60601-1-2 sub-clause 36.202.7 and IEC 61000-4-11)

Guidance and manufacturer's declaration - electromagnetic emissions		
The ForceTriad generator is intended for use in the electromagnetic environment specified below. The customer or the user of the ForceTriad generator should assure that it is used in such an environment.		
Emissions test	Compliance	Electromagnetic environment - guidance
RF emissions CISPR 11	Group 2	The ForceTriad generator must emit electromagnetic energy in order to perform its intended function. Nearby electronic equipment may be affected.
RF emissions CISPR 11	Class A	The ForceTriad generator is suitable for use in all establishments other than domestic and those directly connected to the public low-voltage power supply network that supplies buildings used for domestic purposes.
Harmonic emissions IEC 61000-3-2	Class A	
Voltage fluctuations/ flicker emissions IEC61000-3-3	Complies	

Guidance and manufacturer's declaration - electromagnetic immunity			
The ForceTriad generator is intended for use in the electromagnetic environment specified below. The customer or the user of the ForceTriad generator should assure that it is used in such an environment.			
Immunity test	IEC 60601 test level	Compliance level	Electromagnetic environment - guidance
Electrostatic discharge (ESD) IEC 61000-4-2	+/-6 kV contact +/-8 kV air	+/-6 kV contact +/-8 kV air	Floors should be wood, concrete or ceramic tile. If floors are covered with synthetic material, the relative humidity should be at least 30%.
Electrical fast transient/burst IEC 61000-4-4	+/-2 kV for power supply lines +/-1 kV for input/output lines	+/-2 kV for power supply lines +/-1 kV for input/output lines	Mains power quality should be that of a typical commercial or hospital environment.
Surge IEC 61000-4-5	+/-1 kV differential mode +/-2 kV common mode	+/-1 kV differential mode +/-2 kV common mode	Mains power quality should be that of a typical commercial or hospital environment.
Voltage dips, short interruptions and voltage variations on power supply input lines IEC 61000-4-11	<5% Ut (>95% dip in Ut) for 0,5 cycle 40% Ut (>60% dip in Ut) for 5 cycles 70% Ut (>30% dip in Ut) for 25 cycles <5% Ut (>95% dip in Ut) for 5 sec	<5% Ut (>95% dip in Ut) for 0,5 cycle 40% Ut (>60% dip in Ut) for 5 cycles 70% Ut (>30% dip in Ut) for 25 cycles <5% Ut (>95% dip in Ut) for 5 sec	Mains power quality should be that of a typical commercial or hospital environment. If the user of the ForceTriad generator requires continued operation during power mains interruptions, it is recommended that the ForceTriad generator be powered from an uninterruptible power supply or a battery.
Power frequency (50/60 Hz) magnetic field IEC 61000-4-8	3 A/m	3 A/m	Power frequency magnetic fields should be at levels characteristic of a typical location in a typical commercial or hospital environment.
NOTE: Ut is the a.c. mains voltage prior to the application of the test level.			

Guidance and manufacturer's declaration - electromagnetic immunity			
The ForceTriad generator is intended for use in the electromagnetic environment specified below. The customer or the user of the ForceTriad generator should assure that it is used in such an environment.			
Immunity test	IEC 60601 test level	Compliance level	Electromagnetic environment - guidance
<p>Conducted RF IEC 61000-4-6</p> <p>Radiated RF IEC 61000-4-3</p>	<p>3 Vrms 150KHz to 80MHz</p> <p>3 V/m 80MHz to 2.5GHz</p>	<p>3 V</p> <p>7 V/m</p>	<p>Portable and mobile RF communications equipment should be used no closer to any part of the ForceTriad generator, including cables, than the recommended separation distance calculated from the equation applicable to the frequency of the transmitter.</p> <p>Recommended separation distance</p> <p>$d=0.5\sqrt{P}$</p> <p>$d=0.5\sqrt{P}$ 80MHz to 800MHz $d=\sqrt{P}$ 800MHz to 2.5GHz</p> <p>Where P is the maximum output power rating of the transmitter in watts (W) according to the transmitter manufacturer and d is the recommended separation distance in meters (m).</p> <p>Field strengths from fixed RF transmitters, as determined by an electromagnetic site survey, should be less than the compliance level in each frequency range.</p> <p>Interference may occur in the vicinity of equipment marked with the following symbol:</p> 
<p>NOTE 1 At a 80MHz and 800MHz, the higher frequency range applies.</p> <p>NOTE 2 These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects and people.</p>			
<p>a. Field strengths from fixed transmitters, such as base stations for radio (cellular/cordless) telephones and land mobile radios, amateur radio, AM and FM radio broadcast and TV broadcast cannot be predicted theoretically with accuracy. To assess the electromagnetic environment due to fixed RF transmitters, an electromagnetic site survey should be considered. If the measured field strength in the location in which the ForceTriad generator is used exceeds the applicable RF compliance level above, the ForceTriad generator should be observed to verify normal operation. If abnormal performance is observed, additional measures may be necessary, such as reorienting or relocating the ForceTriad generator.</p> <p>b. Over the frequency range 150kHz to 80MHz, field strengths should be less than 7V/m.</p>			

Recommended separation distances between portable and mobile RF communication equipment and the ForceTriad generator

The ForceTriad generator is intended for use in an electromagnetic environment in which radiated RF disturbances are controlled. The Customer or the user of the ForceTriad generator can help prevent electromagnetic interferences by maintaining a minimum distance between portable and mobile RF communications equipment (transmitters) and the ForceTriad generator as recommended below, according to the maximum output power of the communications equipment.

Rated maximum output power of transmitter (W)	Separation distance according to frequency of transmitter (m)		
	150 kHz to 80MHz $d=0.5\sqrt{P}$	80MHz to 800MHz $d=0.5\sqrt{P}$	800MHz to 2.5GHz $d=\sqrt{P}$
0.01	0.05 m	0.05 m	0.1 m
0.1	0.16 m	0.16 m	0.32 m
1	0.5 m	0.5 m	1 m
10	1.6 m	1.6 m	3.2 m
100	5 m	5 m	10 m

For transmitters rated at a maximum output power not listed above, the recommended separation distance d in meters (m) can be estimated using the equation applicable to the frequency of the transmitter, where P is the maximum output power rating of the transmitter in watts (W) according to the transmitter manufacturer.

NOTE 1 At 80MHz and 800MHz, the separation distance for the higher frequency range applies.

NOTE 2 These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects and people.

Output Characteristics

Maximum Output for Bipolar, Monopolar, and LigaSure Modes

Power readouts agree with actual power into rated load to within 15% or 5 watts, whichever is greater.

Mode	Open Circuit Peak Voltage (max)	Open Circuit P-P Voltage (max)	Rated Load (max)	Power (max)	Crest Factor*	Duty Cycle
Bipolar						
Low	250 V	500 V	100 Ω	95 W	1.42	N/A
Standard	175 V	350 V	100 Ω	95 W	1.42	N/A
Macro	250 V	500 V	100 Ω	95 W	1.42	N/A
Monopolar Cut						
Cut	920 V	1840 V	300 Ω	300 W	1.42	N/A
Blend	1485 V	2970 V	300 Ω	200 W	2.7	50%
Valleylab (HWD)	2365 V	4730 V	300 Ω	200 W	4.3	25%
Monopolar Coag						
Fulgurate	3050 V	6100 V	500 Ω	120 W	5.55	6.5%
Spray	3625 V	7250 V	500 Ω	120 W	6.6	4.6%
LigaSure	287.5 V	575 V	20 Ω	350 W	1.42	N/A

* An indication of a waveform's ability to coagulate bleeders without a cutting effect.

Available Power Settings in Watts

Bipolar and Autobipolar (all modes)

1	2	3	4	5	6	7	8	9	10
11	12	13	14	15	16	17	18	19	20
21	22	23	24	25	26	27	28	29	30
31	32	33	34	35	36	37	38	39	40
45	50	55	60	65	70	75	80	85	90
95									

Monopolar Cut

1	2	3	4	5	6	7	8	9	10
11	12	13	14	15	16	17	18	19	20
21	22	23	24	25	26	27	28	29	30
31	32	33	34	35	36	37	38	39	40
45	50	55	60	65	70	75	80	85	90
95	100	110	120	130	140	150	160	170	180
190	200	210	220	230	240	250	260	270	280
290	300								

Valleylab

1	2	3	4	5	6	7	8	9	10
11	12	13	14	15	16	17	18	19	20
21	22	23	24	25	26	27	28	29	30
31	32	33	34	35	36	37	38	39	40
45	50	55	60	65	70	75	80	85	90
95	100	110	120	130	140	150	160	170	180
190	200								

Monopolar Coag

1	2	3	4	5	6	7	8	9	10
11	12	13	14	15	16	17	18	19	20
21	22	23	24	25	26	27	28	29	30
31	32	33	34	35	36	37	38	39	40
45	50	55	60	65	70	75	80	85	90
95	100	110	120						

Output Waveforms

Tissue Sensing Technology, an automatic adjustment, controls all modes. As tissue resistance increases from zero, the energy platform outputs constant current followed by constant power followed by constant voltage. The maximum output voltage is controlled to reduce capacitive coupling and video interference and to minimize sparking.

Bipolar

Low	472 kHz sinusoid continuous
------------	-----------------------------

Standard	472 kHz sinusoid continuous
-----------------	-----------------------------

Macro	472 kHz sinusoid continuous
--------------	-----------------------------

Monopolar Cut

Cut	472 kHz sinusoid continuous
------------	-----------------------------

Blend	472 kHz bursts of sinusoid, recurring at 26.21 kHz intervals. 50% duty cycle.
--------------	---

Valleylab

Valleylab	472 kHz bursts of sinusoid, recurring at 28.3 kHz intervals. 25% duty cycle.
------------------	--

Monopolar Coag


Fulgurate	472 kHz damped sinusoidal bursts with a repetition frequency of 30.66 kHz. 6.5% duty cycle.
------------------	---

Spray	472 kHz damped sinusoidal bursts with a randomized repetition centered at 21.7 kHz. 4.6% duty cycle.
--------------	--


Output Power vs. Resistance Graphs

Monopolar Graphs


Output power versus impedance
for Pure power

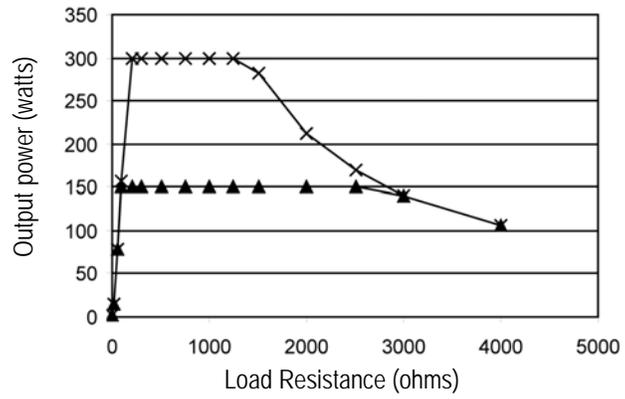


Peak voltage versus impedance
for Pure power

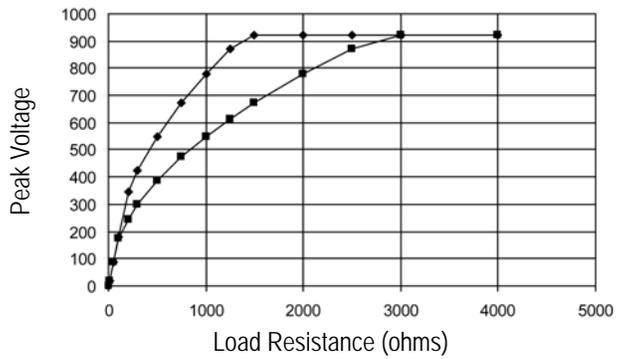


Output power versus power
setting for Pure power

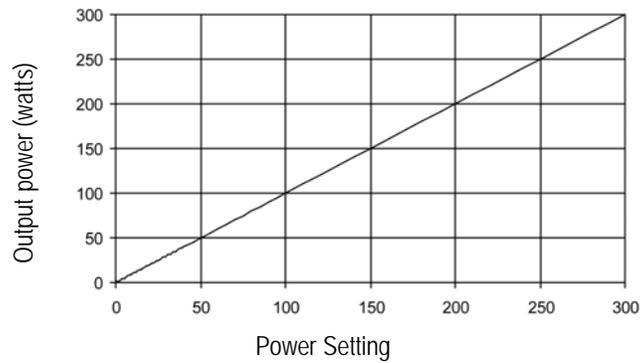


Peak voltage versus power setting for Pure power

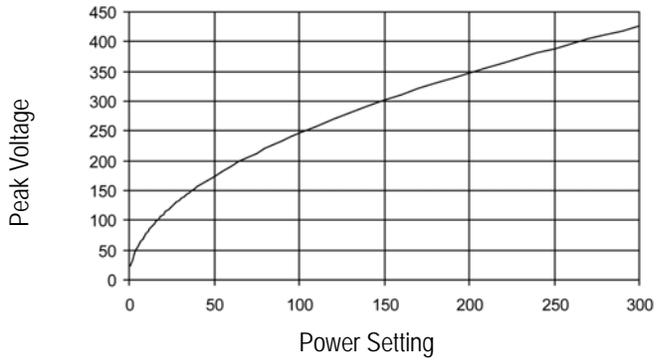


Output power versus impedance for Blend power

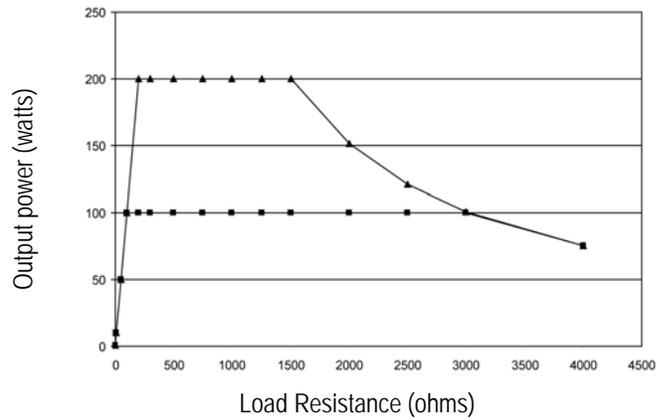


Peak voltage versus impedance for Blend power

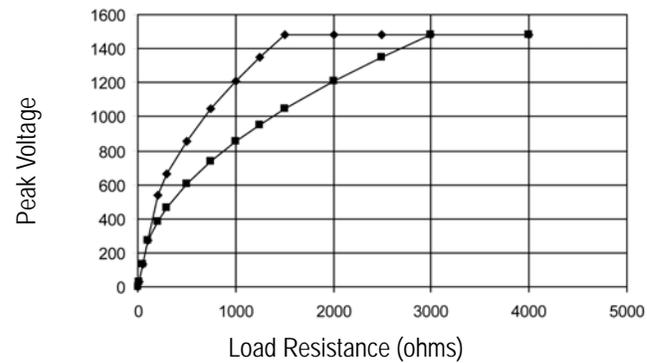


Output power versus power setting for Blend power

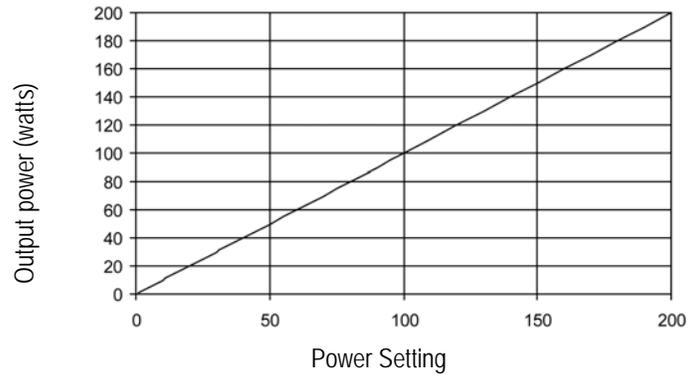


Peak voltage versus power setting for Blend power

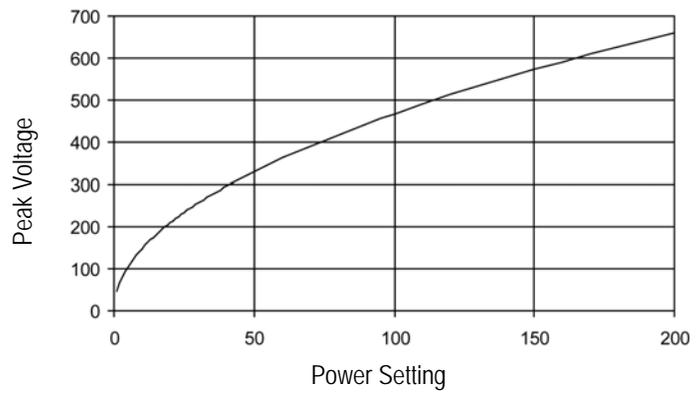


Output power versus impedance for Fulgurate power

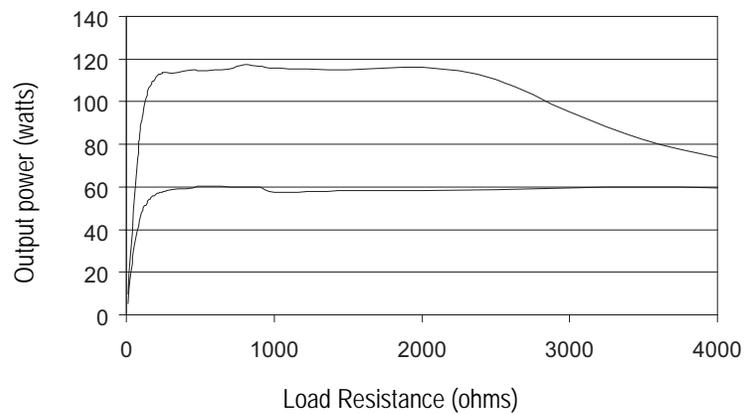


Peak voltage versus impedance for Fulgurate power

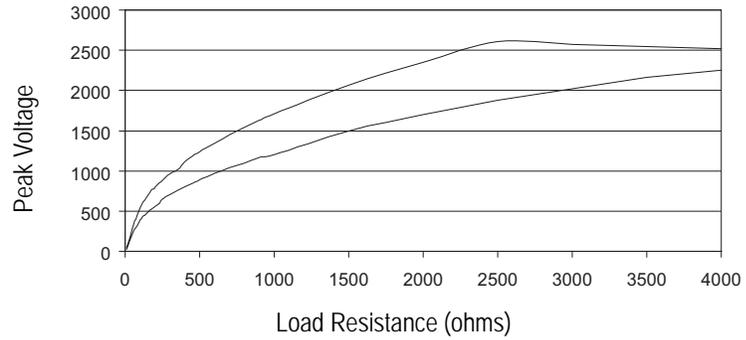

Output power versus power setting for Fulgurate power

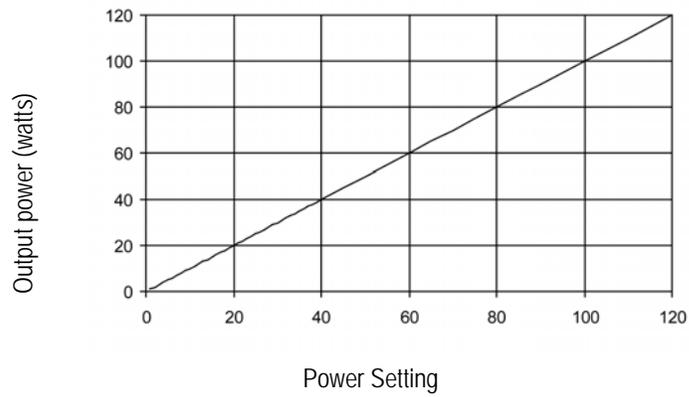


Peak voltage versus power setting for Fulgurate power

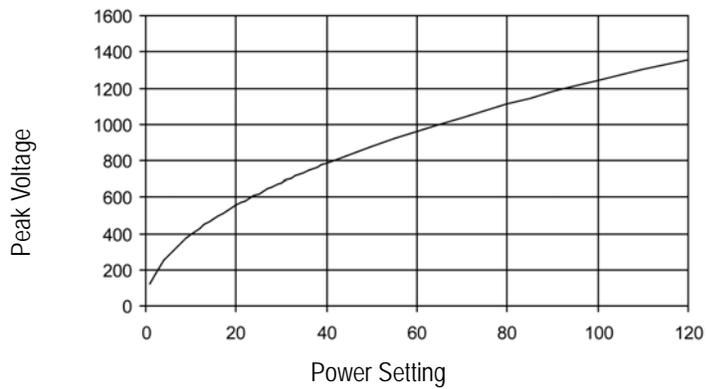


Output Power vs. Resistance Graphs


Output power versus impedance
for Spray power

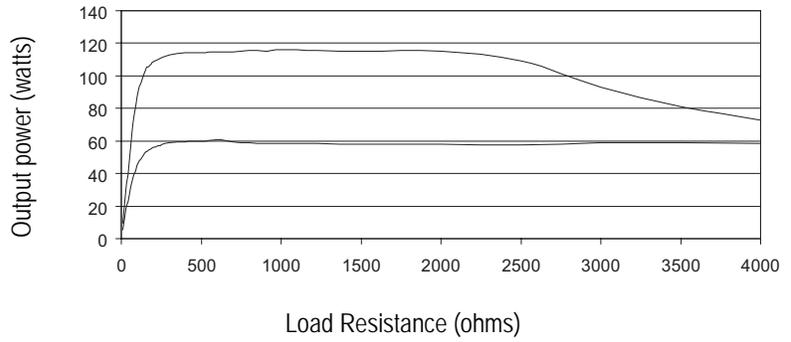


Peak voltage versus impedance
for Spray power

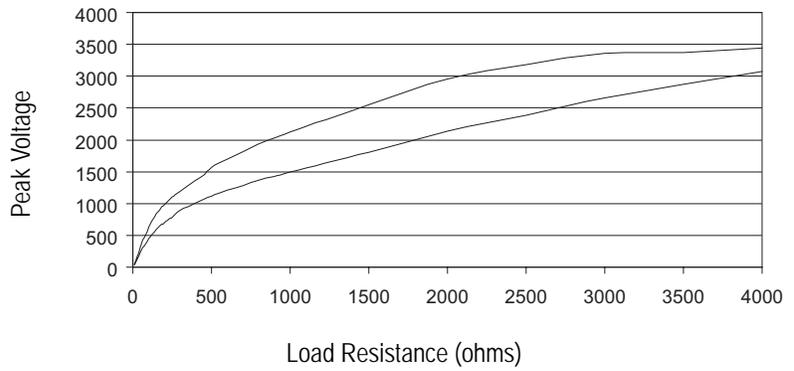


Output power versus power
setting for Spray power

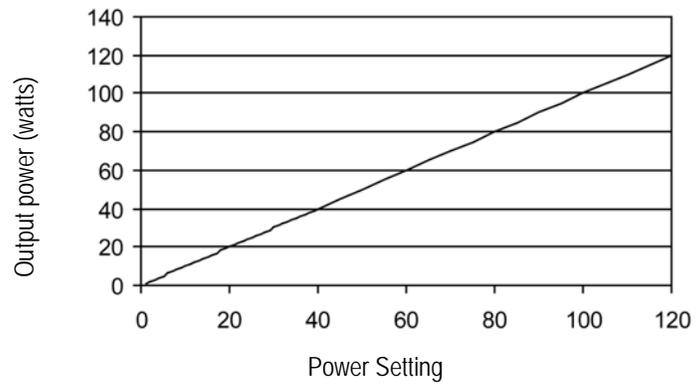


Peak voltage versus power setting for Spray power

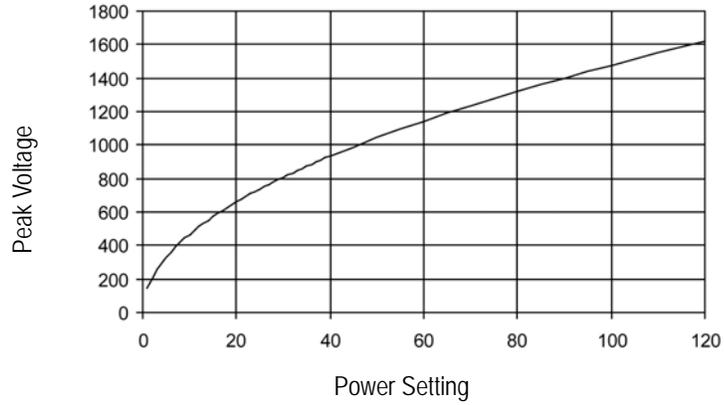


Output power versus impedance for Valleylab power

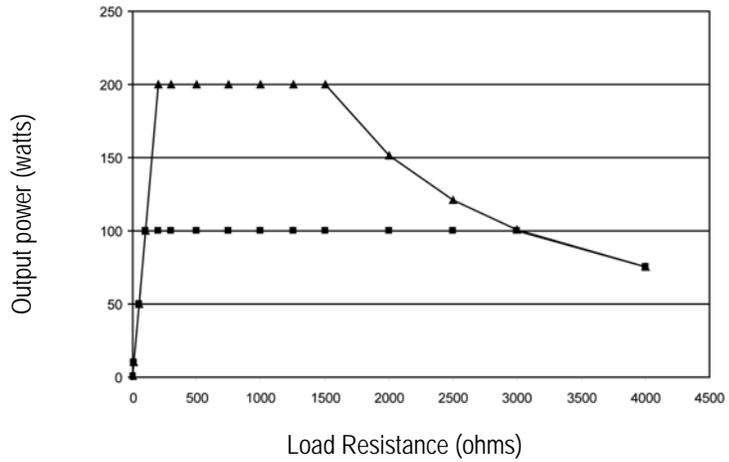


Peak voltage versus impedance for Valleylab power

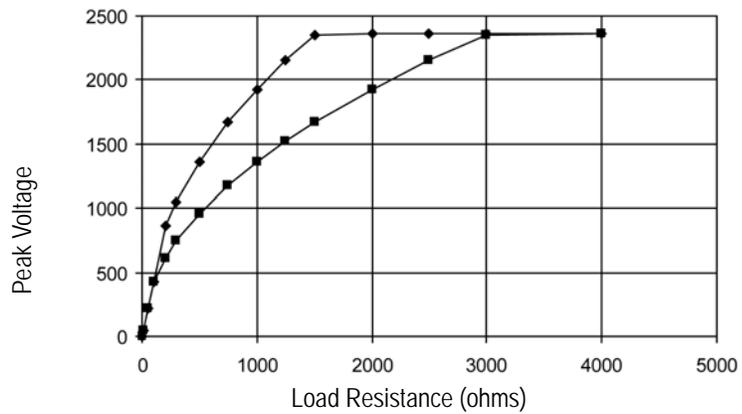

Output power versus power setting for Valleylab power

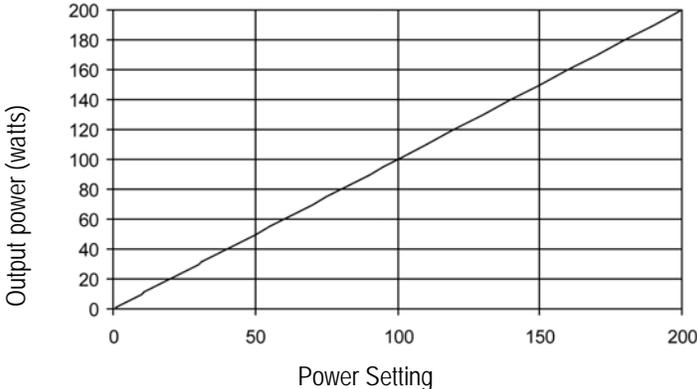


Peak voltage versus power setting for Valleylab power

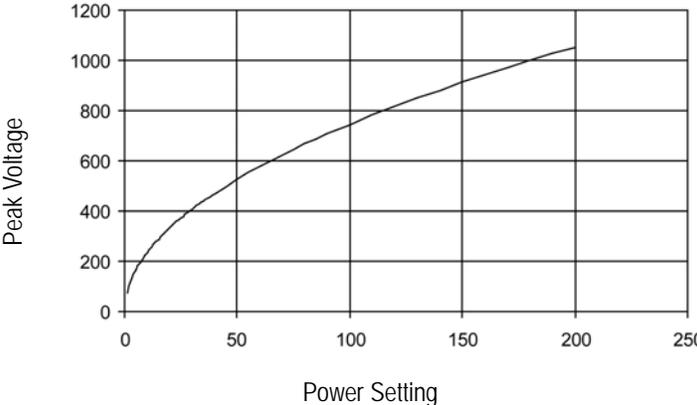


Bipolar Graphs


Output power versus impedance for Bipolar Low power

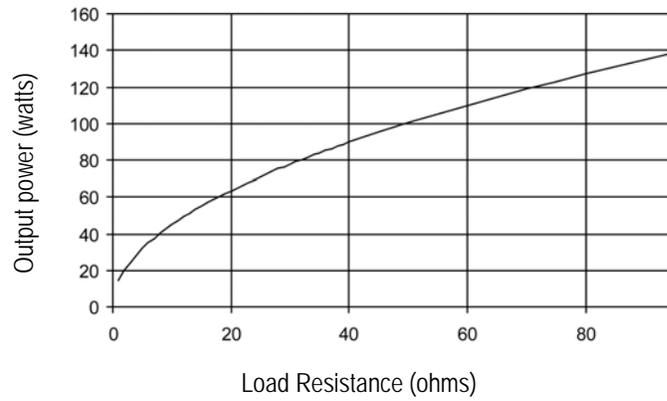


Peak voltage versus impedance for Bipolar Low power

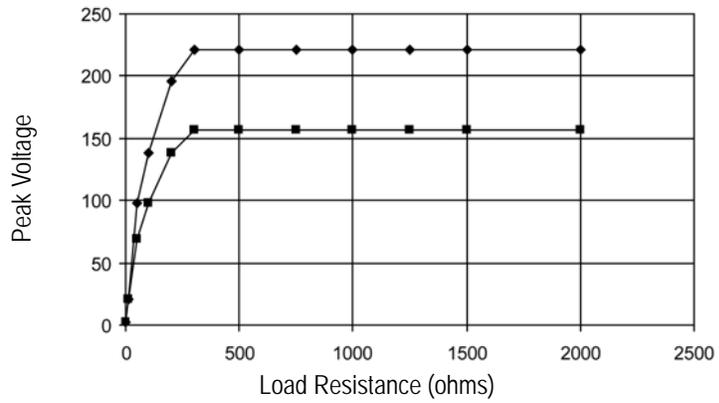


Output power versus power setting for Bipolar Low power

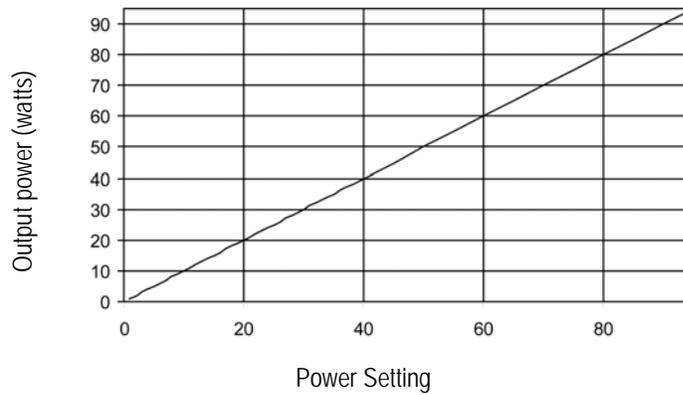


Peak voltage versus power setting
for Bipolar Low power

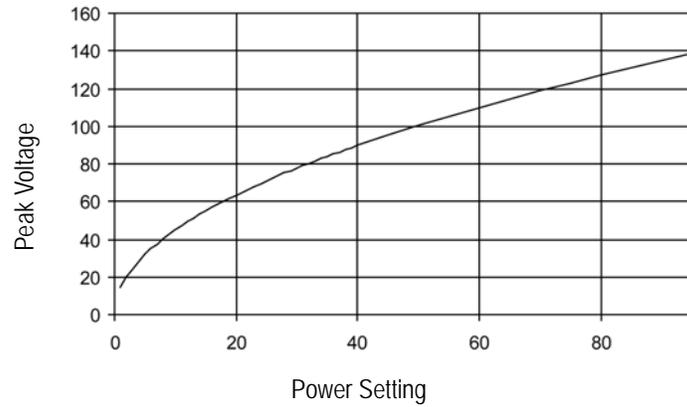


Output power versus impedance
for Bipolar Standard power

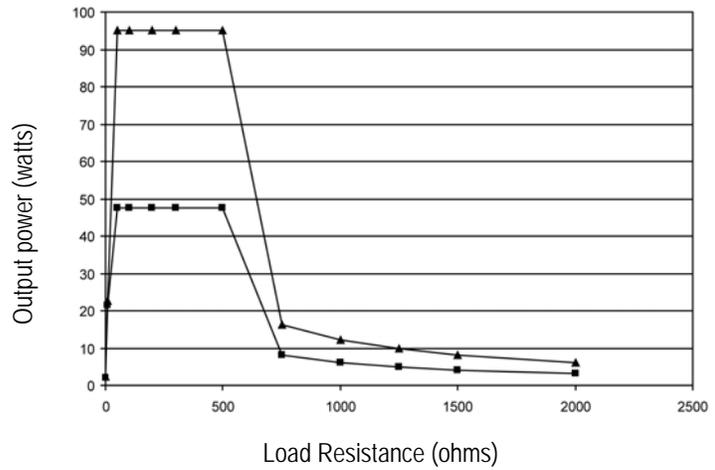


Peak voltage versus impedance
for Bipolar Standard power

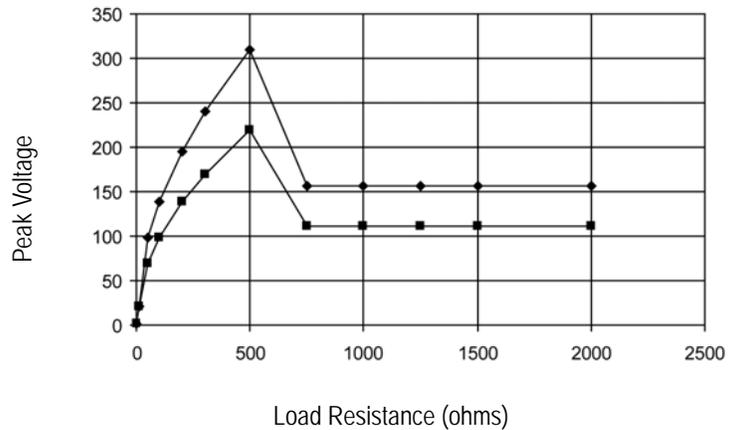


Output power versus power setting for Bipolar Standard power

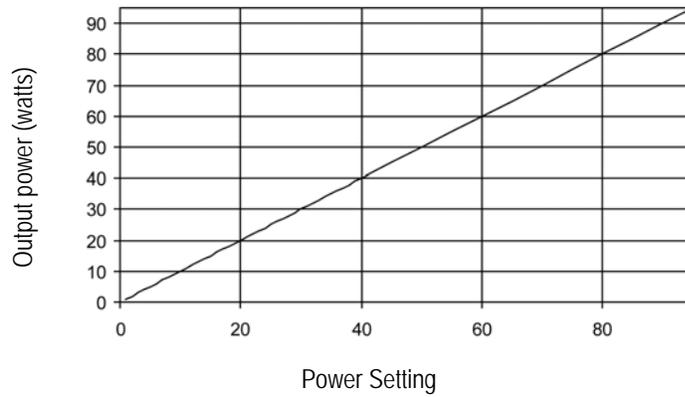

Peak voltage versus power setting for Bipolar Standard power

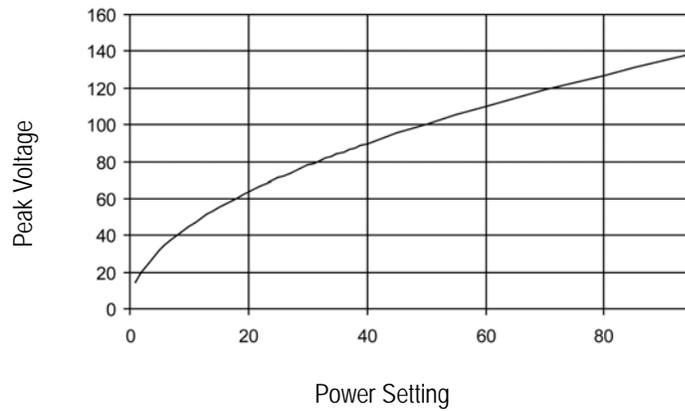


Output power versus impedance for Bipolar Macro power

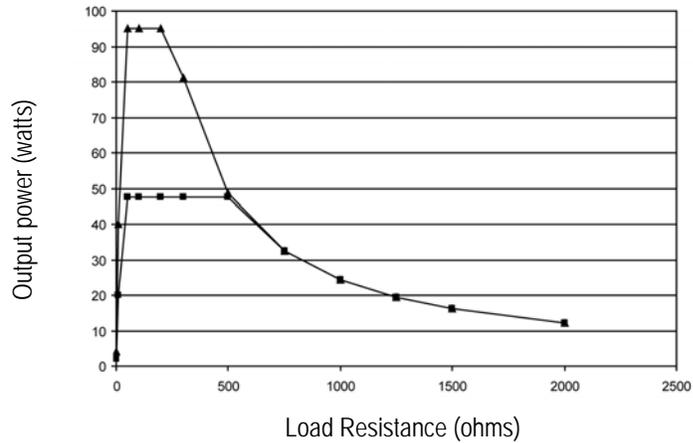


Technical Specifications


Peak voltage versus impedance
for Bipolar Macro power

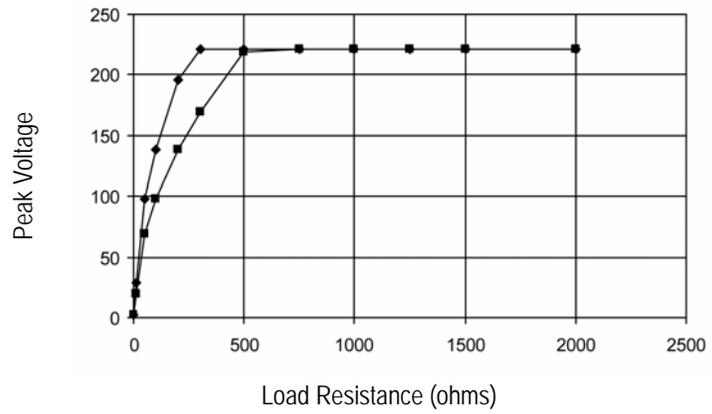


Output power versus power setting
for Bipolar Macro power

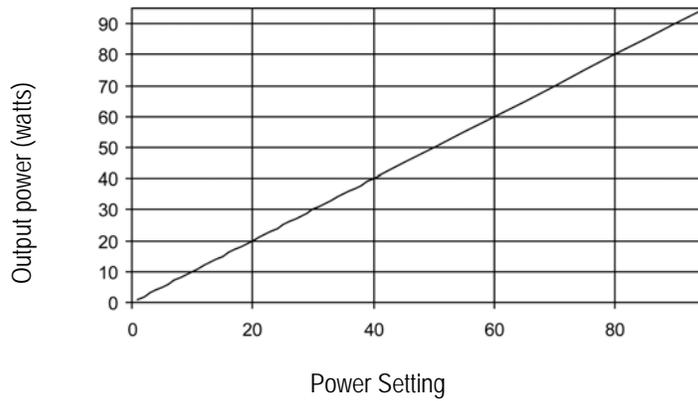


Peak voltage versus power setting
for Bipolar Macro power

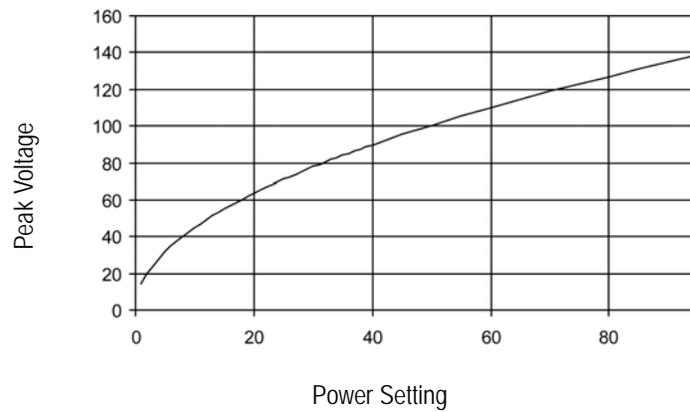


Output power versus impedance for LigaSure power

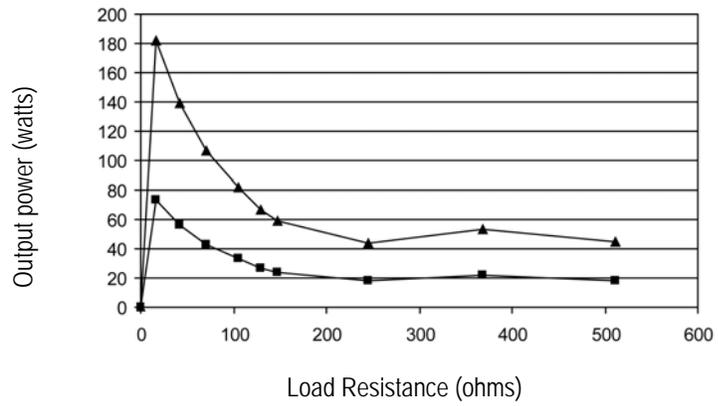

Peak voltage versus impedance for LigaSure power

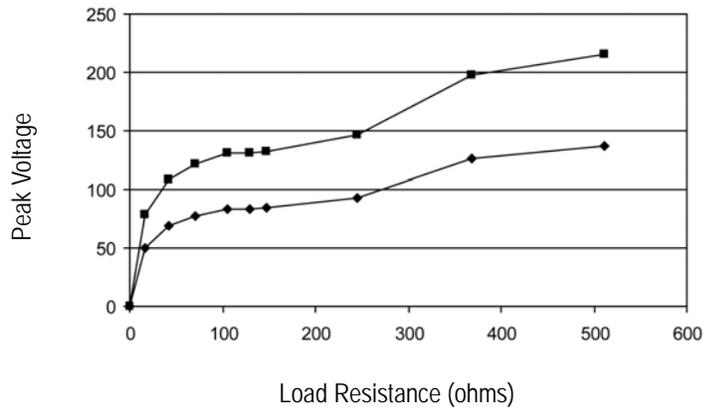

Current versus impedance for LigaSure power

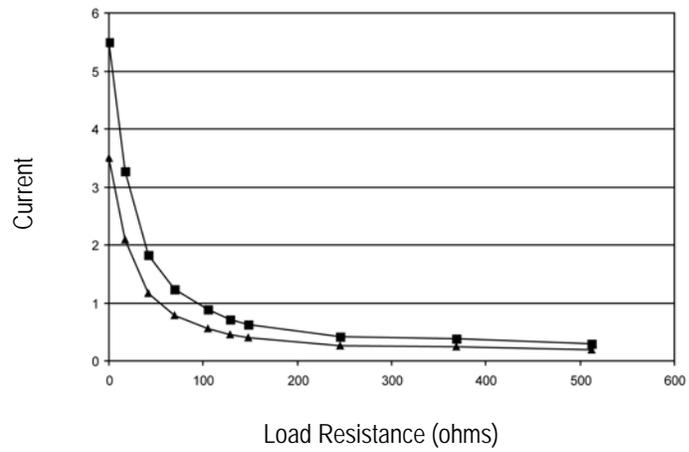

Technical Specifications




Principles of Operation

This chapter provides detailed information about how the ForceTriad energy platform functions and how the internal components interact.

This chapter includes the following information:

- A block diagram that illustrates how the energy platform functions
- A general description of how the generator works
- Detailed descriptions of the circuitry for the printed PCBAs

Block Diagram

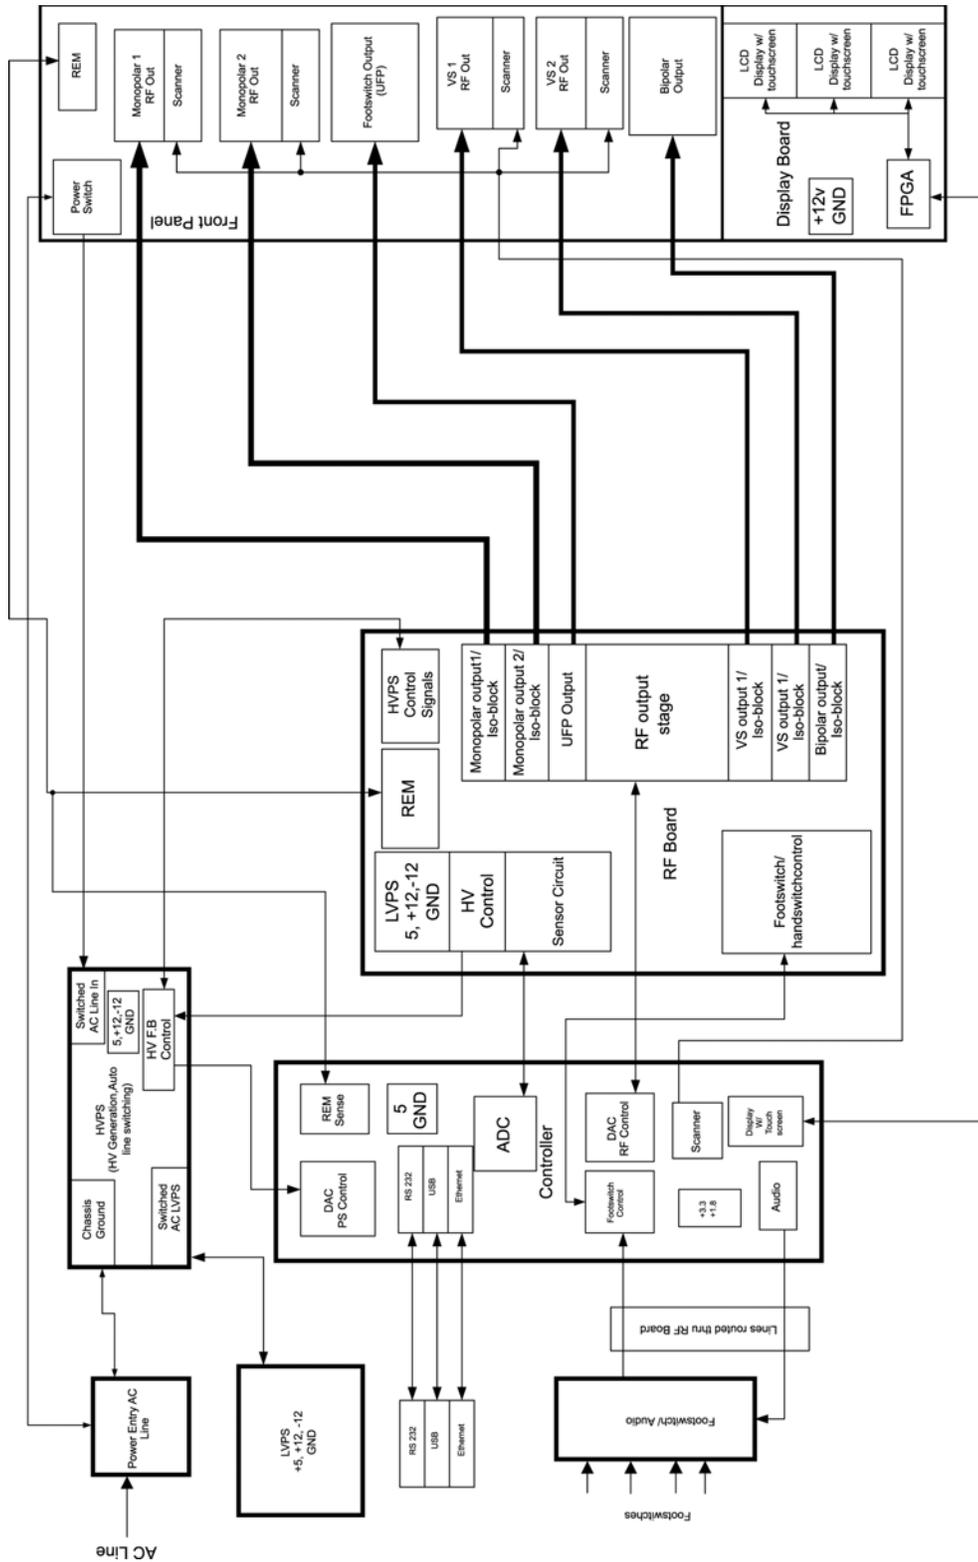

Functional Overview

The ForceTriad electrosurgical generator system is a combination of a full-featured general surgery electrosurgical unit and a LigaSure vessel sealing system. The monopolar and bipolar sections of the ForceTriad are isolated electrosurgical outputs that provide the appropriate power for cutting, desiccating, and fulgurating tissue during monopolar and bipolar surgery. The LigaSure section of the ForceTriad provides power for vessel sealing.

During monopolar electrosurgery, radio frequency (RF) current flows from the generator to an active electrode, which delivers the current to the patient. The resistance to the current, provided by the patient's tissue and/or the air between the active electrode and the tissue, produces the heat that is necessary for the surgical effect. The RF current flows from the active electrode, through the patient's body tissue to the return electrode, which recovers the current and returns it to the generator.

The LigaSure vessel sealing system provides precise energy delivery and electrode pressure to vessels for a controlled time period to achieve a complete and permanent fusion of the vessel lumen.

TissuFect Tissue Sensing Technology

The ForceTriad generator automatically senses resistance and adjusts the output voltage to maintain a consistent tissue effect across different tissue impedance. This adjustment is based on the selected mode, the power setting, and the level of tissue resistance.

REM Contact Quality Monitoring System

The ForceTriad generator uses the Valleylab REM Contact Quality Monitoring system to monitor the quality of electrical contact between the patient return electrode and the patient. The REM system is designed to minimize the risk of burns at the return electrode site during monopolar electrosurgery.

When you connect a REM patient return electrode to the Patient Return Electrode receptacle, you activate the REM system. When you activate monopolar output, the generator connects the patient return electrode path. If you activate bipolar output while a return electrode is connected to the patient, the return electrode circuit is deactivated automatically to eliminate the possibility of current dispersal.

The REM system continuously measures resistance at the return electrode site and compares it to a standard range of safe resistance (between 5 and 135 ohms), thus minimizing intermittent false alarms that could result from small changes in resistance. The REM system also adapts to individual patients by measuring the initial contact resistance (baseline resistance) between the patient and the patient return electrode. If the tissue impedance at the return electrode decreases during electrosurgery, the REM system resets the baseline resistance.

REM Alarm Activation

The REM Alarm indicator flashes red, a tone sounds, and the generator stops producing output power when either of the following occurs:

- The measured resistance is below 5 ohms or above 135 ohms, the limits of the standard range of safe resistance.
- An increase in contact resistance is greater than 40% from the initial measurement (baseline resistance).

The REM Alarm indicator remains illuminated red until you correct the condition causing the alarm. Then, the indicator illuminates green and RF output is enabled.

Electrodes Without the REM Safety Feature

Return electrodes without the REM safety feature should not be used on the ForceTriad energy platform.

High Voltage DC (HVDC) Power Supply Principles of Operation

The HVDC power supply will regulate an output DC voltage to a desired level that is proportional to a 0 to 5V analog logic signal called Voltage Control (ECON). The AC input range is 85VAC to 264VAC with line frequencies from 47Hz to 63Hz. The HVDC can be simplified into two sections, the AC section and DC section.

The AC section rectifies the AC input into the rectified +Bus and –Bus voltages. For line voltages of 150VAC or less, the rectified AC voltage is doubled. The rectified voltage is monitored and will be flagged if the voltage starts to drop too low or if the rectified voltage exceeds 400VDC. As a safety feature, the HVDC will be shut down when it exceeds 400VDC. The AC section also incorporates a soft start circuit that will reduce the inrush AC current at power up.

The DC section is a phase-shifted full-bridge topology and uses a Pulse Width Modulator (PWM) from Texas Instruments, part number UCC3895. For information on this particular topology, the data sheet (**available at ti.com**) for this part contains a full dialogue of the theory of operation. The DC section consists of limits that help protect the HVDC from fault conditions. These limits include over voltage, over current, over power, and short circuit. Each limit sends a flag to the controller card if it is triggered and will shut down the HVDC. Another feature of the HVDC is an active discharge circuit; this circuit will place a load across the output. This allows the output of the HVDC to discharge quickly no matter what the load attached to the HVDC.

RF Principles of Operation

The primary purpose of the ForceTriad RF PCBA is to convert the DC voltage coming from the HVDC PCBA into a 470 KHz RF signal that is sent to the Steering Relay PCBA to be distributed to the appropriate output. A push-pull typology is used to accomplish this voltage conversion. Two gate drive signals that are 180° out of phase are used to drive the high voltage Field Effect Transistors (FETs), called T ON and T ON 180. The gate drive signals turn on each of the FETs at opposite times to deliver a waveform at the specified power requested from the user. The RF PCBA is capable of several different outputs ranging from 5.5Arms in LigaSure tissue fusion modes to over 7KVpp in coag modes. Relays throughout the RF PCBA switch in the appropriate tuning elements required to achieve these various outputs.

Primary and redundant sense circuits detect the RF output voltage and current. An accurate scaled down AC voltage representative of each of these is sent to the Controller PCBA, which in turn will keep the output at levels appropriate for the mode in use. Four sense relays per circuit correspond to specific modes and switch in voltage dividers tuned to divide the output signals to levels that are manageable for the Controller card. Three relays per voltage sense circuit divide down the output voltages from 425Vpk - 5000Vpk to around 1Vpk, depending on the mode selected by the user. The current sensors use 1 relay per circuit; this relay kicks in for currents higher than 1Arms. The sensor signals are passed through a multiplier which uses a gain control signal from the controller card. After this multiplier stage, the signal is filtered and routed to the controller card. RF voltage and current foldback circuits use the ranges selected on the sensors to determine if a limit has been hit. These circuits will foldback the ECON signal going to the HVDC, reducing the DC output to the RF PCBA. This in turn reduces the RF output amplitude.

REM

The Return Electrode Monitor (REM) circuit monitors the resistance between the two return areas on a REM electrode using a 140 KHz signal generated by the controller card.

Autobipolar

The Autobipolar (ABP) circuit consists of an 80 KHz signal, also generated by the controller card. It is used to monitor the bipolar output impedance.

Leakage Current Monitor

The RF PCBA also features a leakage current monitor circuit, which measures the active and return of the generator and puts out a DC voltage that represents the difference between the two. If this voltage exceeds a limit, the RF will be folded back to prevent excess leakage current.

Sensor Circuit

The sensor circuit provides RF output voltage and current monitoring to software in order to deliver the correct energy dosage during a surgical procedure. Two identical sensory circuit paths, composed of a primary and backup, are implemented to provide fail-safe mitigation in the event of circuit failure. Since each primary and backup sensor circuit mirrors the other, the sensed output voltages, which are monitored by software, are equal when the sensory system maintains proper operation. In the event of primary or backup sense circuit failure, dissimilar outputs are present and software detection stops delivery of RF and notifies the user with an error message displayed on the front panel of the ForceTriad generator.

Each primary and backup sensory circuit consists of four processing elements to ensure that the correct RF is delivered. In the description that follows, the primary sensory path is identified for the voltage sense circuitry, with reference designation only provided to the backup circuit. Backup circuit operation is identical to the primary circuit that is described here. RF current sense circuit process is symmetrical to the voltage sense description in that it also uses four processing elements. The only notable difference between voltage and current sensing is the different transfer gains required to adequately address the dynamic range of individual generator operating modes.

First: Transformer T6, along with resistors R110 and R119, provide RF output voltage monitoring by generating a proportionately scaled, secondary sense voltage, which is correlated to the delivered RF output voltage. Backup referenced components are T1, R95, and R111.

Second: Coupled to the secondary of transformer T6, a software controlled switched pad network is implemented to provide proper impedance scaling to address the dynamic sensory range required for all operating modes of the ForceTriad generator. This pad impedance switched network is used to develop the proportionately scaled secondary sense voltage of T6. Resistors R103 and R107 provide the initial impedance termination, paralleled by resistor paired components R104 and R105, R94 and R106, and R85 and R100, which are switched independent on the selected generator Cut, Blend, and Coag operating modes respectively. Paired resistor switching is accomplished by electronic switch components RL12, RL11, and RL10 respectively. Backup referenced terminating components are R89 and R93; paired components are R90 and R91, R88 and R92, and R81 and R84; and switch components are RL9, RL8, and RL7, which are used respectively.

Third: The Pad network output of T6 is then differentially fed to a gain control module, U18, which provides continuous gain control to normalize the sensed voltage output, independent of generator operating modes and delivered RF power levels. Amplifier, U19, buffers the signal received from software which is used to precisely control the gain of U18, while amplifier U17 provides a scaled differential output voltage, a result of U18 gain processing. Backup referenced components are gain control module U40, buffer amp U31, and difference amp U30 respectively.

Fourth: The output of amplifier U17 is now delivered to the last stage for sensory signal processing. An anti-alias filter device, U16, receives the difference signal from U17, providing 4th order low pass filtering of the RF, to attenuate spurious harmonic frequency components above 2.5 MHz. Resistors R123 and R126 set the gain of U16 to unity. The last stage of sensor processing provides a twofold benefit to the RF monitored output; it increases the accuracy of the delivered RF

by minimizing the corruptive influence of high frequency noise to the sensed signals, above the operating frequency of the generator. Secondly, the high fourth-order filter of U16 prevents the generation of alias frequency components caused by sampling theorem errors when the sensed signal information is processed by software. Backup components U29, R190, and R216 are used.

Steering Relay PCBA Principles of Operation

To accommodate the need for high isolation between the patient and ground referenced voltages during use, the ForceTriad Steering Relay PCBA design incorporates several different types of relays designed for very high voltage standoff. In addition, cut-outs on the PCBA increase distances at strategic locations to help reduce creepage issues.

Multiple functions are performed by the Steering Relay PCBA. The main function is to route the 470 KHz from the RF PCBA to one of the six outputs. The outputs are as follows: Ligasure 1, Ligasure 2, Bipolar, Mono 1, Mono 2, and Footswitch Controlled outputs. Because only one output can be active at any given time, the Steering Relay PCBA plays an important role in maintaining the isolation between all the outputs and their respective circuits. During mono and footswitch modes, a return path, called Mono return, is required. Mono return is monitored with a Return Electrode Monitor (REM) circuit. This circuit monitors the resistance between the two return areas on a REM electrode. The actual REM circuit is on the RF PCBA, but this 140 KHz signal is routed through the Steering Relay PCBA to the Mono return. Another signal that is routed from the RF PCBA to the Steering Relay PCBA is the Autobipolar (ABP) signal. This 80 KHz signal monitors the bipolar output impedance.

Another important function of the Steering Relay PCBA is hand-switching detection. The circuits used to detect hand-switching requests are powered from individual, highly isolated power supplies. These power supplies use transformers that convert ground referenced +12V to an isolated +8V or +5V, each referenced to its corresponding output. Five handswitching power supplies are available: Ligasure 1, Ligasure 2, Bipolar, Mono 1, and Mono 2. When an active hand switch signal is detected, the detection signal is transferred across an optocoupler and is sent to the microprocessor.

The final function of this PCBA is footswitch and bipolar sense. These circuits determine if an instrument is connected to any of the receptacles.

Circuit Descriptions for the Force Triad Display PCBA

Hotlink Transceiver U1

The Cypress Hotlink II transceiver U1 handles all communications between the Display PCBAs Field Programmable Gate Array (FPGA) U28 and the Controller PCBA. As configured for the serial link in ForceTriad energy platform, it takes an 8-bit data bus, 2-bit control bus, and 50 MHz clock input, performs 8b/10b encoding and transmits differential serial data at 500 Mbps. On the receive side it accepts the 500 Mbps serial stream; recovers the embedded clock; performs 10b/8b decoding, byte alignment, and error detection; and outputs a 50 MHz 8-bit data bus with 3 bits of receive status/control data. A single IC handles bi-directional communication.

Liquid Crystal Display (LCD) Driver Inside the FPGA U28

The LCD driver receives video data from the Controller PCBA and outputs it to the displays. Data is written into a 16-pixel deep First In/First Out (FIFO) when received from the serial link. Data is read out of the FIFO and presented to the displays at the pixel rate. For the ForceTriad energy platform, the pixel rate is ~4.8 MHz (generated by dividing the receive clock by 16) yielding a display refresh rate of ~46 Hz. In either case, the pixel rate must be derived from the receive clock to keep the display output in sync with the display data generation on the Controller PCBA and prevent overflowing or under flowing of the pixel FIFO.

Touchscreen Driver

Reading user input from the touchscreens is performed by the touchscreen driver. Three touchscreens are attached to the Display PCBA, each through its own 5-wire interface. The touchscreen driver polls each screen in turn to determine whether the user is pressing on it. If so, then the X and Y position of the touch are detected. On the Force Triad Display PCBA, load switching FETs are used to drive voltages onto the four electrical drive connections, and the voltage on the sense connection is read by an Analog Digital Converter (ADC) U4. The drive circuitry normally drives +3.3V to all four drive connections, while the sense connection is pulled weakly to ground. The FPGA repeatedly reads the analog voltage on the sense line. As long as it is closer to ground than to +3.3V, it registers a “no touch” read. If, however, the sense line is closer to +3.3V than to ground, it initiates a read cycle. In the read cycle, the FPGA first applies +3.3V to the X and (right side) drive connections and ground to the Y and L (left side) drive connections. The voltage on the sense line is sampled to obtain the X position. Then, the Y and (top side) drive connection are driven to +3.3V while the X and L (bottom side) drive connections are grounded. The sense line voltage is recorded as the Y position. This process is repeated for each of the three touchscreens. The current state of each display (no touch or XY position) is reported to the Controller PCBA at a rate of at least 200 Hz.

LCD Brightness DAC Control

The brightness for each Quarter Video Graphics Array (QVGA) display can be controlled individually by feeding an analog value between 0 and 5V to its inverter. This is accomplished by use of a Digital/Analog Converter (DAC) U24. The LCD brightness DAC control block takes DAC values from the serial link and writes them to the DAC.

Barcode Driver

The Display PCBA supports communication with four barcode readers through a quad-Universal Asynchronous Receiver/Transmitter (UART) U14. One channel of the serial interface side of the UART is connected to each barcode reader, while the control side is connected to the display FPGA. The barcode driver reads data bytes out of the UART as they are received from the barcode readers and sends them to the Controller PCBA. It also writes data and control bytes to the UART as specified by the Controller PCBA.

PCBA ID Transmitter

The FPGA pulls the PCBA ID Transmitter U22 every time a new screen is sent to the Display PCBA from the Controller PCBA. The PCBA ID for the Display PCBA is 7 this set up by tying pins 1, 2, and 3 of U22 to 3.3 volts.

Power Supply


The power supply is dual DC to DC converter U16. The power supply has an input of 5 Volts and converts it down to 3.3 and 1.8 Volts outputs.

Footswitch/Audio PCBA Circuitry Description

Overview

The primary function of the audio circuitry is to receive commands from the Interface Control Logic (ICL) FPGA on the Controller PCBA via a serial, two-wire SMBus data link. The FPGA on this PCBA processes that data to determine three parameters; wave file, volume, and duration. Based on these parameters, the FPGA accesses corresponding parallel data from flash memory, serializes it and passes it out to the DAC. Control data is also passed to the DAC that sets the volume level of the output amplifier stage. Footswitch data is collected and sent to the Controller PCBA as well. Finally, the expansion port has an RS-232 and EKG/blinking relay interface that connects directly to the Controller PCBA and DAC controlled by this FPGA. The following diagram illustrates signal interconnect.

Audio Board Block Diagram

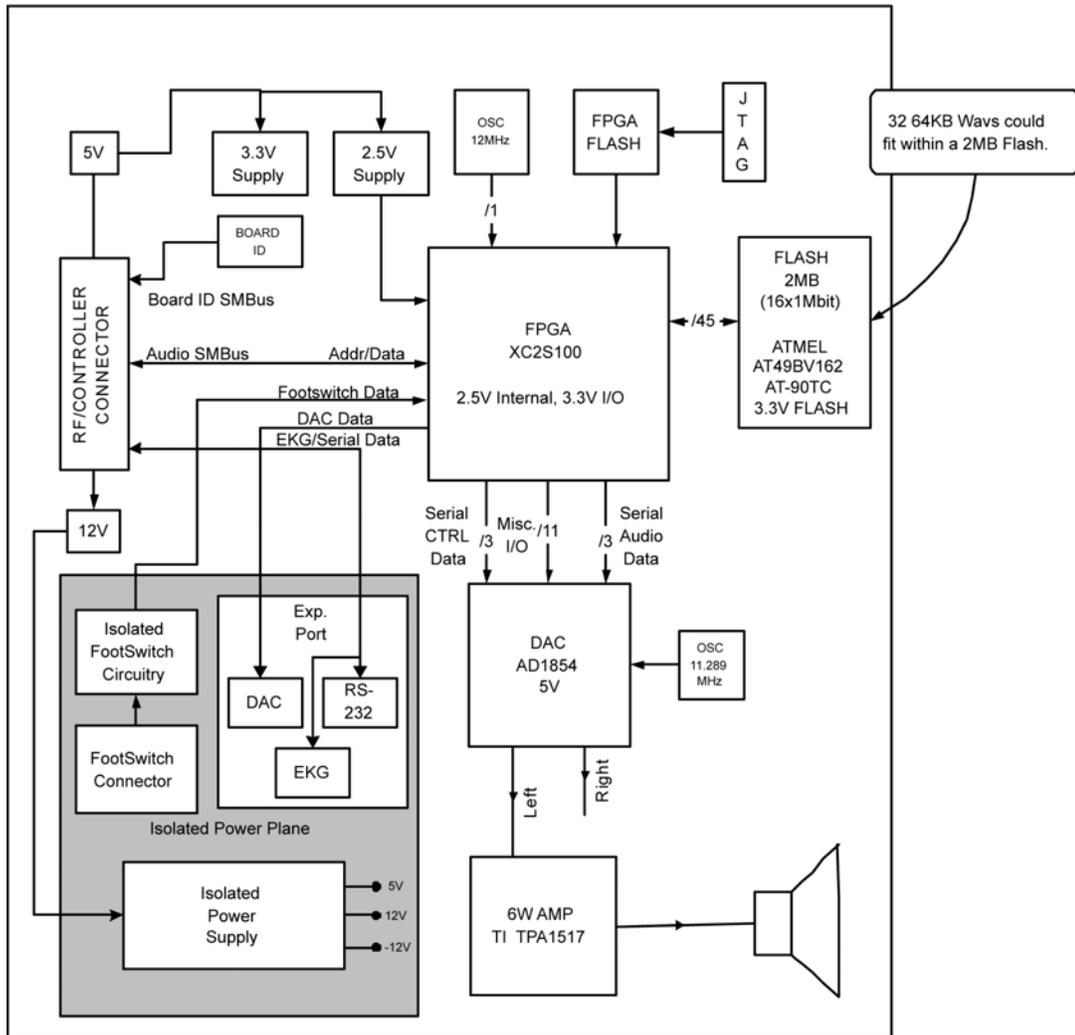

Power Supplies

This PCBA requires 2 power supplies: 5V and 12V. From those input voltages it also generates 2.5V, 3.3V, and isolated supplies of +12V, -12V and +5V. 5V and 12V are delivered to this PCBA via the RF PCBA connector. The 2.5V and 3.3V supplies are regulated down from the 5V supply on this PCBA. The 5V rail should draw approximately 100mA. The 12V rail should draw approximately 500mA at full volume with no expansion port peripherals connected. The 12V supply is used by the audio amplifier, TPA1517, and also generates all of the isolated power supplies. The isolated power supply can source approximately 250mA on each, +12V ISO and -12V ISO, and 500mA on +5V ISO.

Voltage	Testpoint
+5V	J6
+12V	J11
+3.3V	TP3
+2.5V	TP1
DGND	J8, J9, J10
+12 ISO	TP24
-12V ISO	TP25
+5V ISO	TP26
ISO GND (IGND)	TP16

Clocks	Testpoint
AUDIO DAC CLK (11.28 MHz)	TP2
FPGA CLK (12.00 MHz)	TP5

Communications

All communications between the Controller PCBA and the Footswitch/Audio PCBA are conducted over a two-wire System Management Bus (SMBus). Two SMBuses are in this design. The audio SMBus is for communications between the host Controller PCBA (master) and Footswitch/Audio PCBA. The ID SMBus is a shared bus between all the PCBAs in the system and is used for PCBA identification purposes. The master of this bus is the Controller PCBA.

The audio SMBus uses a Valleylab-specific data link layer in which all data communications involve addressing a register within the FPGA and then either writing or reading four bytes of data to/from it. Each register is 32-bits wide, and SMBus communications send one byte at a time, thus four bytes of data must be written or read. Technically more than four bytes can be sent, but they will be ignored. The ID SMBus again uses a Valleylab-specific data protocol but instead of 4-byte data transactions, it uses 8-byte data transactions because the PCBA IDs are 64-bits wide.

Audio Data

Three commands can be received from the Controller PCBA; reset, parameter write and parameter read. The reset command resets all internal state machines inside the FPGA. It will also immediately stop a running audio stream. The parameter commands allow the controller to write and read three internal parameters that control sending out audio data.

These parameters are *wave file*, *duration*, and *volume*. The *wave file* parameter selects a particular wave file in the flash memory by selecting a base memory address from a look up table. The *duration* parameter selects how many times to repeat the wave file. Since each wave file is a fixed length, that file can be repeated up to 30 times, or it can be told to be sent out continuously until another command is received. Finally, the *volume* parameter simply selects a volume level between 0 (mute) and 1024 (highest volume, approx. 60dBA).

When a command is received, the FPGA processes that command only once. For example, if a particular wave file is selected to be played twice, the FPGA will play that wave file twice and then stop until a new command is received. If a wave file is to be played continuously, it can be set via the *duration* field.

The parameter read command allows for the controller to read back the last parameters written into the FPGA. This is primarily for debug purposes.

Footswitch Data

Footswitch data is polled in this FPGA and, when a footswitch register read is received from the ICL FPGA, the footswitch register data is sent to the ICL FPGA and then cleared. After being cleared, the FPGA immediately polls the footswitches for new footswitch activations. If an activation is detected, the FPGA holds a corresponding bit in the footswitch register until it is read by the ICL FPGA, even if the footswitch is depressed before that event occurs.

Expansion Port DAC Data

The ICL FPGA sends DAC data to this FPGA, which is then serialized and sent out to the expansion port DACs. Four DAC registers can be written to in this FPGA; each corresponds to a RF statistic: power, current, voltage, and load impedance.

Flash Memory

The flash memory can be expanded from a 2 MB flash to a 4 MB flash without a re-layout of the PCBA. Flash data is 16-bits wide and 1024 K deep. All wave files are stored in the flash memory. The wave files, when stored in the flash, are stripped of all header information, and a wave length field is appended to the beginning of each file. This length is the number of 16-bit words in the wave file.

DAC Amplifier


The DAC is an Analog Device AD1854. It is controlled by two serial interfaces. One interface streams left and right channel audio data. The other interface sends control data to the DAC, including amplification settings. The volume parameter is passed directly to the DAC via this interface. The amplifier is an Analog Device TPA1517. It is a 6-watt amplifier and runs off 12 volts. For both the DAC and the amplifier, only one of the two channels is used since the Footswitch/Audio PCBA only has one speaker.

Isolated Footswitch and Expansion Port Circuitry

The footswitch circuit provides an isolated footswitch detection circuit that passes footswitch data directly to this PCBA's FPGA. The FPGA, as noted above, polls the footswitches for activations. The expansion port has an EKG/blanking relay that is directly controlled by the Controller PCBA. The expansion port also has an RS-232 interface that links directly to the controller. And finally, it has a DAC that outputs analog data that corresponds to RF parameters.

FPGA Design

The FPGA has 10 significant pieces of circuitry as shown in the following figure. Each piece is described below.

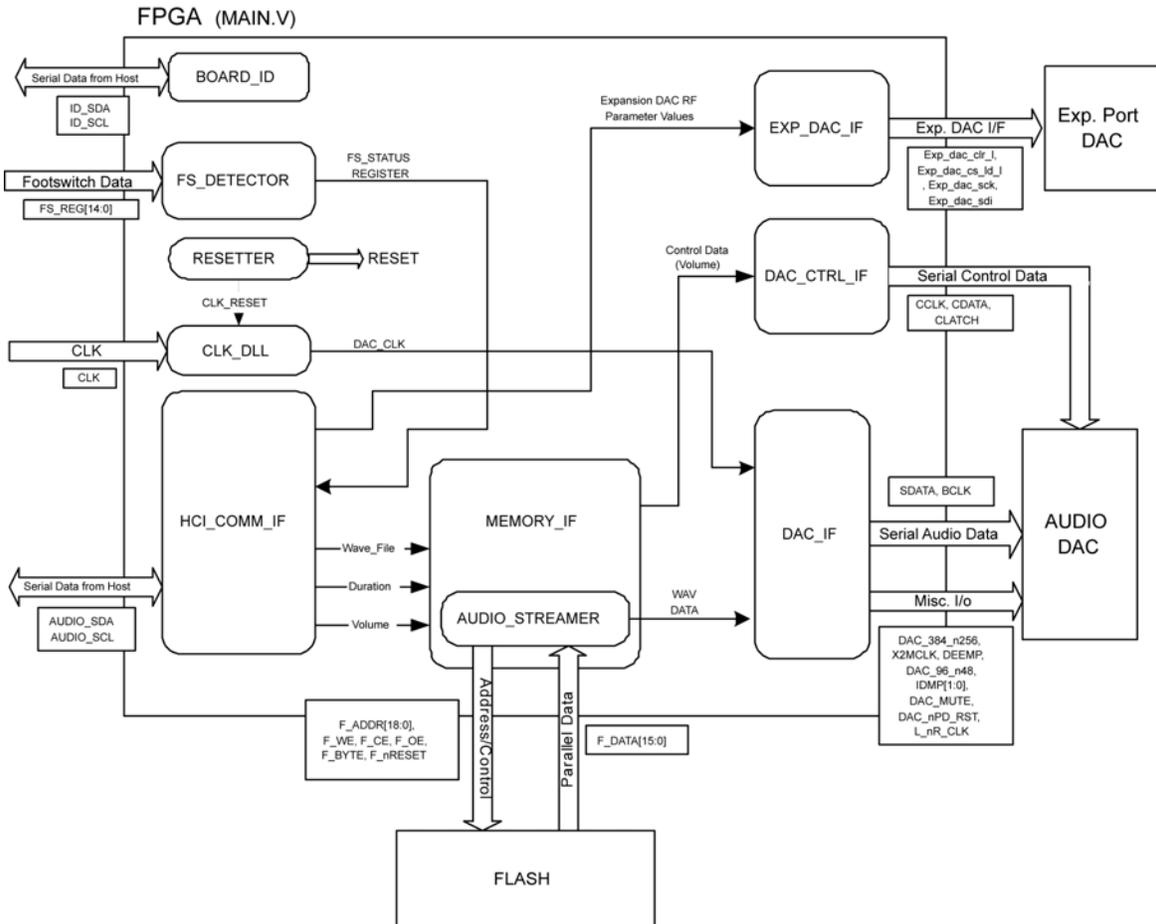


Signal Name	Direction	Description
CLK	INPUT	12MHz System Input Clock
ID SDA	BI-DIRECTIONAL	Bi-Dir. SMBus data line for sending PCBA ID data between all PCBAs. Controller PCBA is the Master.
ID SCL	INPUT	SMBus Clock for PCBA ID SMBus, 100KHz
AUDIO SDA	BI-DIRECTIONAL	Bi-Dir SMBus data line for sending data between Controller PCBA and FS/AUDIO PCBA. Controller PCBA is the Master.
AUDIO SCL	INPUT	SMBus Clock for Audio SMBus, 100KHz
F ADDR [21:0]	OUTPUT	Flash Address Lines
F DATA [15:0]	INPUT	Flash Data Lines
F OE	OUTPUT	Flash Output Enable, Active Low
F CE	OUTPUT	Flash Chip Enable, Active Low
F WE	OUTPUT	Flash Write Enable, Active Low
F nRESET	OUTPUT	Flash Reset
F nBYTE	OUTPUT	Low Selects Byte Mode, High = Word Mode
CLATCH	OUTPUT	Latches control data into the DAC. This output is rising-edge sensitive to the DAC.
CCLK	OUTPUT	Control clock output for control data. Data is latched into DAC on rising edge of this signal.
CDATA	OUTPUT	Serial control data output, MSB first, containing 16 bits of unsigned data per channel. Used for specifying channel-specific attenuation and mute.
DAC 384 n256	OUTPUT	Selects the master clock mode as either 384 times the intended sample frequency (High) or 256 times the intended sample frequency (Low)
X2MCLK	OUTPUT	Low = 2xMCLK for DAC, High = 1x MCLK for DAC
DEEMP	OUTPUT	Digital de-emphasis is enabled when this signal is HI
DAC 96 n48	OUTPUT	Selects 48 kHz (LO) or 96 kHz Sample Frequency Control
DAC MUTE	OUTPUT	HI to mutes both stereo analog outputs. Deassert LO for normal operation
DAC nPD RST	OUTPUT	The AD1854 is placed in a low power consumption mode when this pin is held LO. The AD1854 is reset on the rising edge of this signal.
L nR CLK	OUTPUT	Selects left or right channel of DAC for serial data
SDATA	OUTPUT	Serial output audio data, MSB first, containing two channels of 16-bits of twos complement data per channel

Signal Name	Direction	Description
BCLK	OUTPUT	Latches serial audio data into DAC
Exp dac clr l	OUTPUT	Asynchronous clear output. A logic low at this level-triggered output clears all registers and causes the Exp. Port DAC voltage outputs to drop to 0V.
Exp dac cs ld l	OUTPUT	Serial Interface Chip Select/Load Output. When this signal is low, SCK is enabled for shifting data on SDI into the Exp. Port DAC register.
Exp dac sck	OUTPUT	Serial Interface Clock to Exp. Port DAC. This clock latches serial data into the DAC.
Exp dac sdi	OUTPUT	Serial Interface Data Output to Exp. Port DAC. Data is applied to SDI for transfer to the DAC at the rising edge of SCK. The LTC2624 accepts input word lengths of 24 bits.
FS REG[14:0]	INPUT	Active high footswitch inputs. A high signal here indicates a footswitch activation.

Controller PCBA

Controller Block Diagram

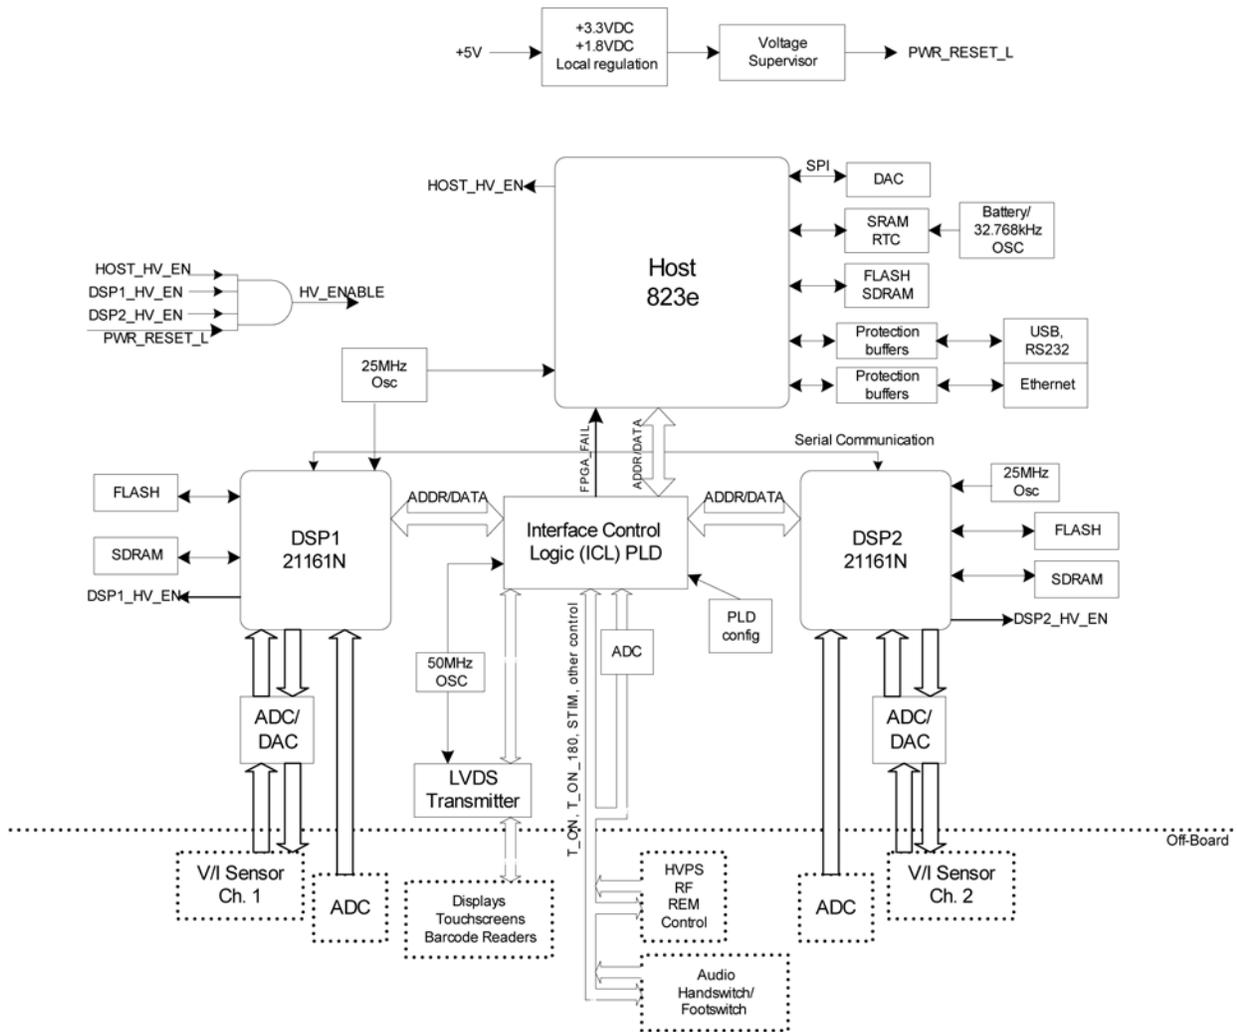

Host Processor

The host has FLASH, SDRAM, and SRAM memory blocks. All memory devices are directly connected to the address and data bus. The SRAM is a battery-backed device that also supports the system's real-time clock function. The host processor is also capable of external communication through two RS232 ports, an Ethernet port, and a USB port. The host processor is to have a four clk cycle wait state for a read access to the ICL.

Digital Signal Processor (DSP) Controlled Data Converters

DSP1

The first Analog Devices ADSP-21161N DSP is the main control system processor. Its primary responsibility is control of the High Voltage Power Supply (HVPS) setting (via an on-board DAC), as well as the keying signal for the FR FETs (T_ON, T_ON_180). It also reads a set of voltage and current sensors that complete the feedback loop of the control system. DSP1 has FLASH and SDRAM memories directly connected to its address and data bus. DSP1 is to have four wait states for a read access to the ICL.

DSP2

The second 21161 in the system is the dosage-error processor. It reads a redundant set of the same sensors that DSP1 reads. Through a direct-connect serial channel (or through the ICL), the two DSPs are able to compare sensor results. DSP2 has FLASH and SDRAM memories directly connected to its address and data bus. DSP2 is to have four wait states for a read access to the ICL.

Interface Control Logic PLD

The purpose of the ICL is to act as Hardware Abstraction Layer (HAL) for the processors. Those peripherals not directly connected to the processors are connected to the ICL and the data transfers appear as 32-bit registers for the processors to read or write. The ICL also provides a communication channel for the three processors via a tri-port RAM. The peripherals connected to the ICL are:

- Footswitch/Audio PCBA
- PCBA ID bus
- Display PCBA (LCDs, barcode readers, and touchscreens)
- Low Voltage Power Supply (LVPS) power fail circuit
- REM and HVPS sensor circuits
- RF relays

Data Converters

There are four high-speed Analog-to-Digital Converters (ADCs) on the PCBA for voltage and current sensor data. There is also one slow-speed ADC for reading REM voltage as well as the HVPS output. There are three Digital-to-Analog Converters (DACs) on the PCBA as well. One DAC is not used. The other two DACs are used by the DSPs to drive the gain of their respective voltage and current sensors. DSP1's DAC also drives the voltage level of the HVPS. The following figures show how the on-board and off-board data converters are connected.

DSP-Controlled Data Converters



ICL-Controlled Data Converters



External Peripherals

The Controller PCBA has ports for talking to external peripherals through the following protocols: RS232, USB 1.1, and Ethernet.



Setup, Tests, and Adjustments

After unpacking or after servicing the ForceTriad energy platform, set it up and verify that it functions correctly.

If the generator does not satisfactorily complete the self-test, calibrate it to ensure its accuracy.

Setting Up the Generator

Warning

Electric Shock Hazard Connect the generator power cord to a properly grounded receptacle. Do not use power plug adapters.

Fire Hazard Do not use extension cords.

Caution

Do not stack equipment on top of the generator or place the generator on top of electrical equipment. These configurations are unstable and/or do not allow for adequate cooling.

Provide as much distance as possible between the electrosurgical generator and other electronic equipment (such as monitors). An activated electrosurgical generator may cause interference with them.

Notice

If required by local codes, connect the generator to the hospital equalization connector with an equipotential cable.

Connect the power cord to a wall outlet having the correct voltage. Otherwise product damage may result.

1. Verify the generator is off by pressing the power switch off (O).
2. Place the generator on a stable flat surface, such as a table, platform, or Valleylab cart. Carts with conductive wheels are recommended. For details, refer to the procedures for your institution or to local codes.

Provide at least four to six inches of space from the sides and top of the generator for cooling. Normally, the top, sides, and rear panel are warm when the generator is used continuously for extended periods of time.

Ensure that the generator rests securely on the cart or platform. The underside of the generator contains four rubber feet and additional holes that allow you to reposition the feet to ensure stability. Use a Phillips screwdriver to remove the rubber feet from the generator. Then, reinstall the feet in the preferred location.

3. According to the procedures used by your institution, connect an equipotential grounding cable to the grounding lug on the rear panel of the generator. Then, connect the cable to earth ground.
4. Plug the generator power cord into the rear panel receptacle.
5. Plug the generator power cord into a grounded receptacle.
6. Turn on the generator by pressing the power switch on (I). Verify the following:
 - All visual indicators and displays on the front panel illuminate
 - Activation tones sound to verify that the speaker is working properly

7. *If the self-test is successful*, a tone sounds. Verify the following:
 - The three LCD touch screens illuminate and show the appropriate operating screen.
 - Each display shows a power setting of one watt.
 - The REM alarm indicator illuminates red.
8. *If the self-test is not successful*, an alarm tone sounds. An error screen appears on each of the LCD touchscreens. Note the information on this display and refer to Chapter 6, *Troubleshooting*.

Periodic Safety Check

Perform the following safety check every six months to verify that the generator is functioning properly. Record the test results for reference in future tests. If the generator fails to meet any of the checks, refer to Chapter 6, *Troubleshooting*.

Warning

Electric Shock Hazard - When taking measurements or troubleshooting the generator, take appropriate precautions, such as using isolated tools and equipment, using the “one hand rule, etc.

Electric Shock Hazard - Do not touch any exposed wiring or conductive surfaces while the generator is disassembled and energized. Never wear a grounding strap when working on an energized generator.

Caution

The generator contains electrostatic-sensitive components. When repairing the generator, work at a static-control workstation. Wear a grounding strap when handling electrostatic-sensitive components, except when working on an energized generator. Handle PCBAs by their nonconductive edges. Use an antistatic container for transport of electrostatic-sensitive components and PCBAs.

Important

When testing RF equipment, follow these test procedures to duplicate manufacturer test data. Keep test leads to the minimum length usable; lead inductance and stray capacitance can adversely affect readings. Carefully select suitable ground points to avoid ground loop error in measurements.

The accuracy of most RF instruments is approximately 1–5% of full scale. Using uncompensated scope probes causes large errors when measuring high voltage RF waveforms.

The summary of safety checks:

- Inspect the generator and accessories
- Inspect the internal components
- Test the generator
- Verify REM function
- Confirm outputs
- Check leakage current and ground resistance

Recommended Test Equipment

- Stylus pencil (for calibrating touch screen)
- 5, 10, 20, 30, 50, 100, 200, 300, 500, 1000, 2000, 5000 ohm, all 250 watt, 1% tolerance, noinductive (Dale NH-250, or equivalent)
- Current transformer - Pearson model 411, or equivalent
- True RMS voltmeter - Fluke 8920A, or equivalent
- Decade resistance box (for REM testing)
- REM plug
- Oscilloscope - Tektronix 2445, or equivalent
- X10 and X100 oscilloscope probes
- X1000 high voltage probe
- Digital voltmeter (3.5 digit minimum)
- Handswitching electrosurgical pencils
- Force Triverse electrosurgical device (barcode)
- LigaSure instrument (dot code)
- Valleylab footswitch pedals (bipolar, monopolar, LigaSure)
- Potentiometer adjustment tool
- Low frequency test circuit

Inspecting the Generator and Accessories

Equipment required:

- Bipolar footswitch or monopolar footswitch
- Bipolar instrument cords (handswitching and footswitching)
- Monopolar instrument cords (handswitching and footswitching)
- LigaSure instrument cords (handswitching and footswitching)

Turn off the generator, and disconnect the power cord from the wall receptacle.

Rear Panel

1. Check the rear panel footswitch receptacles for obstructions or damage. Check for a secure fit by inserting the bipolar footswitch or monopolar footswitch connector into the appropriate receptacle.
2. Remove the fuse and verify correct voltage and current rating. Refer to *Performance Characteristics* in Chapter 9.
3. If either connection is loose, replace the Footswitch/Audio PCBA. Refer to *Footswitch/Audio PCBA Replacement* in Chapter 7.

Front Panel

1. Check the Universal Footswitching Port (UFP) for obstructions or damage. Check for a secure fit by inserting the monopolar footswitch connector into the receptacle. Verify the UFP properly detects instrument insertion.
If the connection is loose, replace the receptacle. Refer to *Output Receptacle Replacement* in Chapter 7.
2. Check the Bipolar instrument receptacle for obstructions or damage. Insert the bipolar instrument connector (footswitching and handswitching) into the appropriate receptacle to verify a secure fit. Verify the Bipolar instrument receptacle properly detects instrument insertion.
If the connection is loose, replace the receptacle assembly. Refer to *Output Receptacle Replacement* in Chapter 7.
3. Check the Monopolar instrument receptacles for obstructions or damage. Insert the Monopolar instrument connector into the appropriate receptacle to verify a secure fit. Ensure the barcode readers detect and read the handswitching electro-surgical pencil and Force Triverse electro-surgical device.
If any of the connections are loose, replace the receptacle assembly. Refer to *Output Receptacle Replacement* in Chapter 7.
4. Check the Patient Return Electrode receptacle for a broken pin or an obstruction.
If the receptacle is damaged or obstructed, replace the receptacle assembly. Refer to *Output Receptacle Replacement* in Chapter 7.
5. Check the LigaSure instrument receptacles for obstructions or damage. Insert the LigaSure instrument connector into the appropriate receptacle to ensure a secure fit. Verify the barcode readers detect and read the LigaSure instrument.
If any of the connections are loose, replace the receptacle assembly. Refer to *Output Receptacle Replacement* in Chapter 7.

Footswitches

1. Remove the footswitch from the generator.
2. Inspect the connector for damage or corrosion.
3. Inspect the footswitch for damage.
4. Reconnect the footswitch to the generator.

Power Cord

1. Remove the power cord from the unit and ensure that it is unplugged from the wall receptacle.
2. Inspect the power cord for damage.
3. Reconnect the power cord to the generator and wall receptacle.

Inspecting the Internal Components

Equipment required:

- Phillips screwdriver

Caution

The generator contains electrostatic-sensitive components. When repairing the generator, work at a static-control workstation. Wear a grounding strap when handling electrostatic-sensitive components, except when working on an energized generator. Handle PCBAs by their nonconductive edges. Use an antistatic container for transport of electrostatic-sensitive components and PCBAs.

1. Turn off the generator.
2. Remove the four screws that secure the cover to the chassis. Lift the cover off the chassis. Set the cover aside for reinstallation.
3. Verify that all connectors are firmly seated.
4. Inspect each PCBA for damaged components, wires, cracks, and corrosion.
 - If you find evidence of damage on the Controller PCBA, Steering Relay PCBA, Display PCBA, or Footswitch/Audio PCBA, replace the PCBA. Refer to *Controller PCBA Replacement*, *Steering Relay PCBA Replacement*, *Display PCBA Replacement*, or *Footswitch/Audio PCBA Replacement* in Chapter 7.
 - If you find evidence of damage on the HVDC Power Supply PCBA or the RF PCBA, replace the PCBA only if the damage is severe. Refer to *Power HVDC Power Supply PCBA Replacement and RF PCBA Replacement* in Chapter 7.
5. Reinstall the cover on the generator. Position the cover above the chassis and slide it down. Install the four screws that secure the cover to the chassis.

Testing the Generator

Turning on the generator initiates an internal self-test to verify the calibration. The self-test also checks the operation of the speaker, all indicators, and the displays.

Warning

Use the generator only if the self-test has been completed as described. Otherwise, inaccurate power outputs may result.

1. Turn on the generator by pressing the front panel On (I) switch. Verify the following:
 - All visual indicators and displays on the front panel illuminate.
 - Activation tones sound to verify that the speaker is working properly.
2. *If the self-test is successful*, a tone sounds. Verify the following:
 - The three LCD touch screens illuminate and show the appropriate operating screen.
 - Each display shows a power setting of one watt.
 - The REM alarm indicator illuminates red.
3. *If the self-test is not successful*, an alarm tone sounds. An error screen appears on each of the LCD touchscreens. Note the information on this display and refer to Chapter 6, *Troubleshooting*.

Verifying REM Function

Equipment required:

- REM plug and resistance substitution box
1. Set the resistance substitution box to 120 ohms. Connect the resistance box to the generator and confirm that the REM indicator illuminates green.
 2. Slowly increase the resistance and verify that the REM alarm sounds at 135 ± 5 ohms.
 3. Decrease the resistance to 60 ohms and verify that the REM indicator illuminates green.
 4. Increase the resistance to 100 ohms and verify that the REM alarm sounds.
 5. Decrease the resistance to 30 ohms and verify that the REM indicator illuminates green.
 6. Decrease the resistance to 10 ohms and verify that the REM indicator illuminates green.
 7. Decrease the resistance to 3 ohms and verify that the REM alarm sounds.

Confirming Outputs

Important

The output of any receptacle equipped with a barcode scanner may only be verified using an appropriate barcode or dot code accessory.

The generator must be in the Demo mode to confirm outputs.

The ForceTriad is designed to function only as Return Electrode Contact Quality Monitor (RECQM) equipped unit. To disable the RECQM circuit, see the following instructions for enabling the Demo mode.

Enable Demo Mode

1. To enter demo mode, touch the wrench icon on the right side of the right touchscreen. The Main Menu display will appear in the left touchscreen.
2. In the Main Menu, the Demo mode button will display 'Enter Demo' if the system is not in Demo mode. Touch the Enter Demo mode button to begin Demo mode. The system operating displays will appear in all the touchscreens with the words 'DEMO MODE: Not for Clinical Use' on all three screens.



**DEMO MODE:
Not For Clinical Use**

Note: While in Demo mode, the REM alarm and the dual instrument error alarm are deactivated, but RF power will still be delivered. The generator will not sense the instrument type, so the appropriate tab must be selected manually for the connected instrument.

3. To exit Demo mode, either turn the system off and restart it, or follow the steps in the exit Demo mode section below.

Exit Demo Mode

1. Touch the wrench icon on the right side of the right touchscreen. The Main Menu display will appear in the left touchscreen.
2. In the Main Menu, the Demo mode button will display 'Exit Demo' if the system is in Demo mode. Touch the Exit Demo button in the Main Menu to exit the Demo mode. The system touchscreens will display the last settings entered during the Demo mode.

Checking the Bipolar Output

1. Verify that the generator successfully completes the self-test as described in *Testing the Generator* in this chapter.
2. Connect the test equipment for bipolar output.
 - a. Connect the two test cables to the Bipolar Instrument receptacle. Ensure the test cables depress both the sensing switches of the receptacle.
 - b. Pass one test cable through the current transformer and connect the current transformer to the voltmeter.
 - c. Connect the 100 ohm power resistor across the output jacks at the end of the test cables.
 - d. Connect the bipolar footswitch to the Bipolar Footswitch receptacle on the rear panel.
3. Press the Low button and set the bipolar power to 10 watts.
4. Test the output current for the selected Bipolar mode.
 - a. Press the footswitch pedal and, while activating the generator, note the output on the voltmeter.
 - b. Release the footswitch pedal.
 - c. Based on the voltmeter setting and the current transformer you are using, calculate and record the output current.
5. Press the Med (Standard) button and repeat step 4.
6. Press the Macro (Macrobipolar) button and repeat step 4.
7. Verify that the generator output for each mode is 315 ± 24 mA rms.

If the output is outside the specified range, calibrate the bipolar output as described in calibration steps 1, 5, 6, and 9 then repeat this procedure. If the output for one or more modes remains outside the specified range, call the Valleylab Service Center.

Checking the Monopolar Output for the Cut Modes

1. Verify that the generator successfully completes the self-test as described in *Testing the Generator* in this chapter.
2. Connect the test equipment for monopolar output.
 - a. Connect a handswitching instrument in the Monopolar 1 Instrument receptacle. Pass the test cable through the current transformer and connect the current transformer to the voltmeter.
 - b. Use a test cable to short the two pins on the Patient Return Electrode receptacle.
 - c. Connect the second test cable from the voltmeter to both pins of the Patient Return Electrode receptacle.
 - d. Connect the 300 ohm resistor across the output jacks at the end of the test cables.
3. Press the Pure button on the far left screen.
4. Press the Cut up (Δ) or down (∇) arrow buttons to set the cut power to 75 watts.
5. Test the monopolar cut output.
 - a. Press the handswitch cut button and, while activating the generator, note the output on the voltmeter.
 - b. Release the handswitch button.
 - c. Based on the voltmeter setting and the current transformer you are using, calculate and record the output current.
6. Press the Blend button and repeat step 5.
7. Verify that the generator output for each mode is 499 ± 38 mA rms.

If the output is outside the specified range, calibrate the monopolar output as described in calibration steps 1, 5, 6, and 9 then repeat this procedure. If the output for one or more cut modes remains outside the specified range, call the Valleylab Service Center.

Check the Output for the Coag Modes

1. Verify that the generator successfully completes the self-test as described in *Testing the Generator* in this chapter.
2. Connect the test equipment for monopolar output.
 - a. Connect a handswitching instrument in the Monopolar 1 Instrument receptacle. Pass the test cable through the current transformer and connect the current transformer to the voltmeter.
 - b. Use a test cable to short the two pins on the Patient Return Electrode receptacle.
 - c. Connect the second test cable from the voltmeter to both pins of the Patient Return Electrode receptacle.
 - d. Connect the 500 ohm resistor across the output jacks at the end of the test cables.
3. Press the Fulgurate button.
4. Press the Coag up (Δ) or down (∇) arrow buttons to set the coag power to 30 watts.
5. Test the monopolar coag output.
 - a. Press the handswitch coag button and, while activating the generator, note the output on the voltmeter.
 - b. Release the handswitch button.
 - c. Based on the voltmeter setting and the current transformer you are using, calculate and record the output current.
6. Press the Spray button and repeat step 5.
7. Verify that the system output for each mode is 245 ± 19 mA rms.


If the output is outside the specified range, calibrate the monopolar output as described in calibration steps 1, 5, 6, and 9 then repeat this procedure. If the output for one or more coag modes remains outside the specified range, call the Valleylab Service Center.

Checking Low Frequency Leakage Current

Check the low frequency leakage current before returning the ForceTriad to clinical use.

Equipment required:

- DVM
- Leakage current tester.

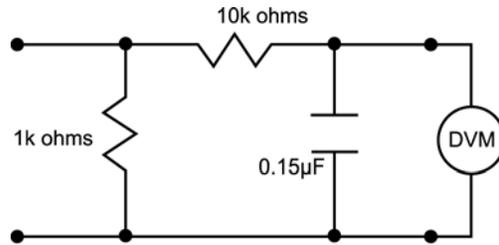

1 millivolt = 1 microamp

Leakage current test circuit per IEC 60601-1

Output Receptacles and REM Source Current

1. Set the DVM to AC volts (200 mV) and connect the leakage current test circuit.
2. Turn on the generator.
3. Measure between all the output receptacles (including the Patient Return Electrode receptacle) and earth ground. Record the largest reading.
4. Determine the leakage current using the conventional 1 microamp per 1 millivolt.
5. Verify under normal conditions (ground closed, normal polarity) the leakage current is less than 10 microamps. If the leakage current is greater than 10 microamps, call the Valleylab Service Center.
6. Verify single fault conditions (ground open) the leakage current is less than or equal to 50 microamps. If the leakage current is greater than 50 microamps, call the Valleylab Service Center.

Chassis or Earth Leakage

1. Set the DVM to AC volts (200 mV) and connect the leakage current test circuit.
2. Turn on the generator.
3. Measure between the chassis and earth ground.
4. Determine the leakage current using the conventional 1 microamp per 1 millivolt.
5. Verify under normal conditions (ground closed, normal polarity) the leakage current is less than 100 microamps. If the leakage current is greater than 100 microamps, call the Valleylab Service Center.
6. Verify single fault conditions (ground open) the leakage current is less than or equal to 300 microamps. If the leakage current is greater than 300 microamps, call the Valleylab Service Center.

Output Receptacles and REM Sink Current

1. Set the DVM to AC volts (200 mV) and connect the leakage current test circuit.
2. Turn on the generator and connect the end of the leakage current test circuit to mains voltage through a 120 k Ω resistor.
3. Connect the other side of the IEC leakage load to all of the output receptacles (including the Patient Return Electrode receptacle)
4. Determine the leakage current using the conventional 1 microamp per 1 millivolt.
5. Verify the leakage current is less than or equal to 20 microamps. If the leakage current is greater than 20 microamps, call the Valleylab Service Center.

Checking High Frequency Leakage Current

Check the high frequency leakage current and ground resistance before returning the ForceTriad to clinical use. Check the leakage current:

- After calibrating the generator
- Every six months

Equipment required:

- 200 ohm, 250 watt, noninductive resistor
- Current transformer
- True RMS voltmeter (Fluke 8920 or equivalent)
- Bipolar and monopolar footswitches
- Leakage table - per IEC 601-2-2, Figure 104

Checking Monopolar High Frequency Leakage Current

1. Connect the 200 ohm load from the UFP through the current transformer to the equipotential ground lug on the rear of the generator.
2. Connect the current transformer to a true RMS voltmeter.
3. Connect a monopolar footswitch to the UFP Footswitch receptacle on the rear panel.
4. Activate the footswitch in each Monopolar mode at the maximum control setting. Record the leakage current. If using the leakage table, leakage current should not exceed 150 mA for any mode.
5. If the high frequency leakage exceeds 150 mA, call the Valleylab Service Center for further instructions.

Checking Bipolar High Frequency Leakage Current

1. Remove the monopolar accessories and connect the 200 ohm load from one side of the bipolar output through the current transformer to the equipotential ground lug on the rear of the generator.
2. Connect the current transformer to the true RMS voltmeter.
3. Connect a bipolar footswitch to the Bipolar Footswitch receptacle on the rear panel.
4. Activate the footswitch in each mode at maximum control setting. Record the leakage current. It should not exceed 60 mA for any mode using either the leakage table or short lead configuration.
5. If the high frequency leakage exceeds 60 mA, call the Valleylab Service Center for further instructions.

Calibrating the ForceTriad Generator

There are nine calibration steps. During calibration you verify information specific to the ForceTriad generator, adjust the date, and adjust the clock. You also adjust the REM circuit and several values, or factors, that ensure the proper operation of the generator.

Notice

After completing any calibration step, proceed to the next step to save the values from the completed calibration step.

Common Calibration Symbols

	Wrench
	Enter
	Up/Down
	Page Up/Page Down
	Next/Back
	Cancel

Step 1 - LC Filter Tuning

1. Turn off the generator.
2. Remove the four screws that secure the cover to the chassis. Lift the cover off the chassis. Set the cover aside for reinstallation.
3. Connect a cable through a Pearson current monitor from the REM port to the ground lug in the back of the generator.
4. Turn the generator on.
 - a. Select the 'Wrench' button on the right side of the right screen.
 - b. Select the 'Service' button.
 - c. Enter password '423213' and select the 'Enter' button.
 - d. Select the 'Diagnostics' button.
 - e. Select the 'Debug Mode' button.
 - f. Select the 'Mono Blend' button from the drop down list (Mode Selection).
 - g. Select the 'Mono 1' button from the drop down list (Port Selection).
 - h. Select the 'Open Loop' button.
 - i. Set level to 20% using the 'Up' button.
 - j. Select the 'Start RF' button.
5. Adjust the inductor potentiometer (L2) located on the HVDC PCBA to get the lowest possible reading on the external True RMS meter.
6. Select the 'Stop RF' button when the optimal current value has been reached.
7. Turn the generator off.
8. Apply loctite, or equivalent, to the inductor potentiometer.
9. Reinstall the cover on the generator. Position the cover above the chassis and slide it down. Install the four screws that secure the cover to the chassis.

Step 2 - Set Date and Time

1. Turn the generator on.
2. Select the 'Wrench' button on the right side of the right screen.
3. Select the 'Setup' button.
4. Select the 'Time and Date' button.
5. Adjust time and date using up and down arrow keys and select the 'Enter' button.
6. Select the 'Back' button to return to the Main Menu.

Step 3 - Touch Screen Calibration

1. Select the 'Service' button.
2. Enter password '423213' and select the 'Enter' button.
3. Select the 'Maintenance' button.
4. Select the 'Calibrate' button.
5. Use the up and down arrows to scroll through the calibration menu list and select the 'Touch Screen' button.
6. Follow the on-screen instructions and press the 'Next' button to continue with calibration.
7. When the on-screen calibration instructions have been completed and saved, select the 'Cancel' button to exit.

Step 4 - Scanner Calibration

1. Use the up and down arrows to scroll through the calibration menu list and select the 'Scanner' button. Allow the generator to perform an initial scan on all ports.
2. Follow the on-screen instructions and select the 'Next' button to continue with calibration.
3. When the on-screen calibration instructions have been completed and saved, select the 'Cancel' button to exit.

Step 5 - Voltage Calibration

1. Use the up and down arrows to scroll through the calibration menu list and select the 'Voltage Cal' button.
2. Follow the on-screen instructions and select the 'Next' button to continue with calibration.
3. When the on-screen calibration instructions have been completed and saved, select the 'Cancel' button to exit.

Step 6 - Current Calibration

1. Use the up and down arrows to scroll through the calibration menu list and select the 'Current Cal' button.
2. Follow the on-screen instructions and select the 'Right Arrow' button to continue with calibration.
3. When the on-screen calibration instructions have been completed and saved, select the 'Cancel' button to exit.

Step 7 - REM Calibration

1. Use the up and down arrows to scroll through the calibration menu list and select the 'REM' button.
2. Follow the on-screen instructions and select the 'Next' button to continue with calibration.
3. When the on-screen calibration instructions have been completed and saved, select the 'Cancel' button to exit.

Step 8 - Autobipolar Calibration

1. Use the up and down arrows to scroll through the calibration menu list and select the 'AutoBip' button.
2. Follow the on-screen instructions and select the 'Next' button to continue with calibration.
3. When the on-screen calibration instructions have been completed and saved, select the 'Cancel' button to exit.

Step 9 - RF Leakage Calibration

1. Use the up and down arrows to scroll through the calibration menu list and select the 'Leakage' button.
2. Follow the on-screen instructions and select the 'Next' button to continue with calibration.
3. When the on-screen calibration instructions have been completed and saved, select the 'Cancel' button to exit.
4. Turn the generator off, then back on to reboot the system.

Troubleshooting

If the system is not functioning properly, use the information in this chapter to perform the following tasks:

- Identify and correct the malfunction
- If a system error was displayed, take the appropriate action to correct the condition.

Inspecting the ForceTriad Energy Platform

If the ForceTriad energy platform malfunctions, check for obvious conditions that may have caused the problem:

- Check the system for visible signs of physical damage.
- Verify that all accessory cords are properly connected.
- Check the power cord. Replace the power cord if you find exposed wires, cracks, frayed insulation, or a damaged connector.
- Open the fuse drawer and inspect the fuse housing and fuses for damage and corrosion. Verify that the fuses are firmly seated.

An internal component malfunction in the system can damage the fuses. You may need to replace the fuses if the generator fails the self-test or stops functioning.

Responding to System Errors

Example



- E277 is the error identification number.
- SELF_TESTS identifies the file name within the code where the error occurred.
- H identifies the processor in which the error occurred.
(H = Host, DSP1 = Main Digital Signal Processor, DSP2 = Backup Digital Signal Processor)
- 0.0014 identifies the version of code.
- L1603 identifies the line of code at which the error occurred.

Important

When contacting Valleylab Service, include all screen information.

System Error Descriptions

When recoverable system errors occur, the system is no longer functional. The only way to recover is to recycle power.

Non-Recoverable Error Descriptions

When non-recoverable errors occur, the system will have limited functionality, but will not allow RF output. The system will allow qualified service personnel to access the diagnostic service menu to aid in troubleshooting the unit. Software downloads can be performed and some limited capability is permitted within the main menus.

When the Diagnostic menu is selected, the user can choose to disable errors. When errors are disabled, the user has access to the full capability of the system and further non-recoverable errors will not limit this capability. However, because errors have occurred, the system may not function per specifications. The user can only enable errors by recycling power.

The table below describes system errors that can be reported by the ForceTriad energy platform.

System Error Identifications	Description	Recommended Action
E 2 ERR_SE_ICL_ERROR	Unable to communicate to hardware using the Host ICL registers	Replace Controller PCBA
E 3 ERR_SE_APP_ROM_FAIL	DSP application ROM check failed at startup	Replace Controller PCBA
E 4 ERR_SE_BOOT_ROM_FAIL	DSP boot ROM check failed at startup	Replace Controller PCBA
E 5 ERR_SE_RAM_FAIL	DSP RAM check failed at startup	Replace Controller PCBA
E 6 ERR_SE_RTOS_FAIL	Software error - A real time operating system failure. Example: During startup, the Host software failed to create a thread necessary for the system to function.	Replace Controller PCBA
E 7 ERR_SE_GEN_FAIL	General system error failure Example: During startup, an error occurred while performing initialization or setup of some of the Host application software.	Replace Controller PCBA
E 8 ERR_SE_CRITICAL_DATA	Software error - Critical data has been corrupted. Example: The data store was not initialized.	Replace Controller PCBA
E 9 ERR_SE_ASSERT	Software error - A software failure has occurred that has generated an assertion. Example: A pointer that has not been assigned is about to be used.	Replace Controller PCBA
E 10 ERR_SE_INVALID_DATA	Software error - A software failure occurred because of invalid data. Example: Invalid configuration data resulted in the inability of the user interface to function properly.	Replace Controller PCBA

Troubleshooting

System Error Identifications	Description	Recommended Action
E 11 ERR_SE_MACHINE_CHECK_EXCEPTION	A Host processor machine check exception has occurred. Example: The Host processor is trying to access an address location that does not exist.	Replace Controller PCBA
E 12 ERR_SE_DATA_STORAGE_EXCEPTION	A Host processor data storage exception has occurred.	Replace Controller PCBA
E 13 ERR_SE_ISI_EXCEPTION	A Host processor data storage exception has occurred.	Replace Controller PCBA
E 14 ERR_SE_ALIGNMENT_EXCEPTION	A Host processor alignment exception has occurred. Example: The operand of a load/store instruction is not word aligned.	Replace Controller PCBA
E 15 ERR_SE_PROGRAM_EXCEPTION	A Host processor program exception has occurred.	Replace Controller PCBA
E 16 ERR_SE_FP_UNAVAILABLE_EXCEPTION	A Host processor floating point unavailable exception has occurred. Example: Execution of a floating point instruction was attempted.	Replace Controller PCBA
E 17 ERR_SE_SYS_CALL_EXCEPTION	A Host processor system call exception has occurred. Example: A system call instruction (sc) has been executed.	Replace Controller PCBA
E 18 ERR_SE_TRACE_EXCEPTION	A Host processor trace exception has occurred. Example: When single step tracing is enabled, this exception is generated after the successful completion of each instruction. Instruction RFI is excluded.	Replace Controller PCBA
E 19 ERR_SE_FP_ASSIST_EXCEPTION	A HOST processor floating point assist exception has occurred.	Replace Controller PCBA

System Error Identifications	Description	Recommended Action
E 20 ERR_SE_MEM_ALLOC_FAIL	A memory allocation failure has occurred.	Replace Controller PCBA
E 21 ERR_SE_UNKNOWN_EXCEPTION	The Host processor has generated an unknown exception. The exception vector is not a valid vector.	Replace Controller PCBA
E 22 ERR_SE_STACK_OVERFLOW	A thread on the host has overflowed it's stack.	Replace Controller PCBA

The following table describes all of the non-recoverable error identifications for the ForceTriad.

Non-Recoverable Error Identifications	Description	Recommended Action
E 257 ERR_NR_DOSAGE	General RF dosage error	<ol style="list-style-type: none"> 1. Calibrate 2. Replace Controller PCBA 3. Replace RF PCBA 4. Replace HVPS PCBA 5. Replace Steering Relay PCBA
E 258 ERR_NR_MEM_ALLOC_FAIL	Software Error - Memory allocation failures Example: Unable to allocate a memory block from the operating system memory pool.	Replace Controller PCBA
E 259 ERR_NR_INVALID_DATA	Software Error - Invalid data Examples: Invalid DSP Identifier Invalid audio tone ID	Replace Controller PCBA
E 260 ERR_NR_COM_ERROR	Various communication errors Example: An error occurred in communications between a DSP and the Host.	Replace Controller PCBA
E 261 ERR_NR_HW_ERROR	Hardware setup/control error Examples: Unable to fully disable RF while attempting to deactivate	<ol style="list-style-type: none"> 1. Calibrate 2. Replace Controller PCBA 3. Replace RF PCBA 4. Replace HVPS PCBA 5. Replace FTSW PCBA
E 262 ERR_NR_ACT_DENIED	Activation denied error	Replace Controller PCBA
E 263 ERR_NR_INVALID_STATE	Software Error - Invalid state Example: Invalid system state	Replace Controller PCBA

Non-Recoverable Error Identifications	Description	Recommended Action
E 264 ERR_NR_UNSUPPORTED_CMD	Software Error - Unsupported command Example: A Host thread has been sent a command from another thread that is undefined.	Replace Controller PCBA
E 265 ERR_NR_ACCESS_FUNCTION	Software Error - Access function error Examples: A thread is unable to interface with another thread to carry out a system function. A user interface object is unable to interface with another user interface object to complete a user interface function.	Replace Controller PCBA
E 266 ERR_NR_TIMEOUT_ERROR	A timeout occurred. Example: The Host timed out waiting for flash download to a DSP.	<ol style="list-style-type: none"> 1. Reboot unit and retry flashing 2. Replace Controller PCBA
E 267 ERR_NR_GEN_ERROR	General NR failure source unknown top level reporting Example: Activation has been denied during calibration	Replace Controller PCBA
E 268 ERR_NR_SELF_TEST_ERROR	Self test error After successful completion of the Host POST self tests, the status of all self tests is verified as passed as a double check. If at least one status indicates a failure, this error is reported.	Replace Controller PCBA
E 270 ERR_NR_AUDIBLE_ERROR	Audio self test error	<ol style="list-style-type: none"> 1. Replace FTSW PCBA 2. Replace Controller PCBA
E 271 ERR_NR_STUCK_BUTTON_ERROR	Stuck Button self test error	<ol style="list-style-type: none"> 1. Replace FTSW PCBA 2. Replace Steering Relay PCBA 3. Replace Controller PCBA

Non-Recoverable Error Identifications	Description	Recommended Action
E 273 ERR_NR_INTER_PROC_COMM_ERROR	Inter-processor communication self test error	<ol style="list-style-type: none"> 1. Reflash Host and DSPs 2. Replace Controller PCBA
E 274 ERR_NR_CRITICAL_DATA_ERROR	Critical data self test error	<ol style="list-style-type: none"> 1. Calibrate 2. Replace Controller PCBA
E 275 ERR_NR_MULTI_TASKING_ERROR	Multitasking self test error	Replace Controller PCBA
E 276 ERR_NR_ANALOG_SENSOR_ERROR	Analog Sensor self test error	<ol style="list-style-type: none"> 1. Calibrate REM and autobipolar 2. Replace RF PCBA 3. Replace Controller PCBA
E 277 ERR_NR_RF_SHUT_DWN_1_ERROR	RF gen/shutdown self test #1 error	<ol style="list-style-type: none"> 1. Calibrate voltage, current, leakage 2. Replace RF PCBA 3. Replace HVPS PCBA 4. Replace Controller PCBA
E 278 ERR_NR_RF_SHUT_DWN_2_ERROR	RF gen/shutdown self test #2 error	<ol style="list-style-type: none"> 1. Calibrate voltage, current, leakage 2. Replace HVPS PCBA
E 279 ERR_NR_RF_SHUT_DWN_3_ERROR	RF gen/shutdown self test #3 error	<ol style="list-style-type: none"> 1. Calibrate voltage, current, leakage 2. Replace HVPS PCBA
E 280 ERR_NR_TIMEBASE_ERROR	Timebase comparison self test error	Replace Controller PCBA
E 281 ERR_NR_SYS_WATCH_DOG_ERROR	System watch dog self test error	Replace Controller PCBA
E 282 ERR_NR_ICL_PROG_ERROR	ICL chip programmed self test error	Replace Controller PCBA
E 283 ERR_NR_RAM_MEMORY_ERROR	Ram memory self test error	Replace Controller PCBA
E 284 ERR_NR_FLASH_MEMORY_ERROR	FLASH memory self test error	Replace Controller PCBA

Non-Recoverable Error Identifications	Description	Recommended Action
E 285 ERR_NR_INVALID_CONFIG_DATA	Software Error - Configuration data is not valid (checksum error)	Replace Controller PCBA
E 286 ERR_NR_NULL_PTR	Software Error - Null pointer detected Example: DSP detected un-initialized data	Replace Controller PCBA
E 287 ERR_NR_AIE	Absolute integral error	<ol style="list-style-type: none"> 1. Calibrate voltage, current, leakage 2. Replace RF PCBA 3. Replace HVPS PCBA 4. Replace Steering Relay PCBA 5. Replace Controller PCBA
E 288 ERR_NR_SENSOR_CLIP	DSP sensor clipping error	<ol style="list-style-type: none"> 1. Replace HVPS PCBA 2. Replace RF PCBA 3. Replace Controller PCBA
E 289 ERR_NR_SENSOR_COMPARE	DSP sensor comparison error	<ol style="list-style-type: none"> 1. Calibrate voltage, current 2. Replace RF PCBA 3. Replace Controller PCBA
E 290 ERR_NR_DATA_SAMPLE_ERROR	VI data sampling error	Replace Controller PCBA
E 291 ERR_NR_COMM_WD_ERROR	Communication watchdog error	Replace Controller PCBA
E 292 ERR_NR_DSP_SW_ERROR	Software Error - Generic DSP software failure	Replace Controller PCBA
E 293 ERR_NR_FLASH_ERROR	Error occurred writing to FLASH	Replace Controller PCBA
E 294 ERR_NR_OS_ERROR	Software Error - Real time operating system error Example: Failed to start an operating system timer	Replace Controller PCBA
E 295 ERR_NR_NV_STORE_ERROR	Error occurred storing data to NV store	Replace Controller PCBA

Non-Recoverable Error Identifications	Description	Recommended Action
E 296 ERR_NR_ICL_HB_ERROR	ICL heartbeat error	Replace Controller PCBA
E 297 ERR_NR_MSG_VIEWER_CTOR_FAIL	Software Error - Message viewer class construction failure	Replace Controller PCBA
E 298 ERR_NR_SYS_CTLR_REQ_FAIL	Software Error - System controller unexpectedly denied request to bring up main menus	Replace Controller PCBA
E 299 ERR_NR_LKG_LIMIT	DSP2 Leakage sensor compare error	<ol style="list-style-type: none"> 1. Calibrate leakage 2. Replace HVPS PCBA 3. Replace RF PCBA 4. Replace Controller PCBA
E 300 ERR_NR_BAD_SCANNER	Scanner failed self test failure	<ol style="list-style-type: none"> 1. Replace barcode scanners 2. Replace Display PCBA 3. Replace Controller PCBA
E 301 ERR_NR_LOW_BATTERY	Battery self test failure	Replace battery Replace Controller PCBA
E 302 ERR_NR_IO_ERROR	Memory-mapped I/O error Example: The Host Memory-mapped register runtime self test verifies that the HVPS, steering relays, and RF enable registers are set properly for the currently running state. If not, this error is reported.	Replace Controller PCBA
E 303 ERR_NR_DSP_VERIFY_ERROR	DSP configuration verify failure	Replace Controller PCBA
E 304 ERR_NR_SCREEN_STACK_ERROR	Software Error - Error in screen stack manipulation in AppScreenBase Example: The user will see unexpected screen behavior.	Replace Controller PCBA

Non-Recoverable Error Identifications	Description	Recommended Action
E 305 ERR_NR_ROM_ERROR	ROM self test failure	Replace Controller PCBA
E 306 ERR_NR_ICL_COMM_LINK_ERROR	ICL communication link test failure	<ol style="list-style-type: none"> 1. Check cable between RF PCBA and FTSW PCBA 2. Check cable between Controller PCBA and Display PCBA 3. Program FTSW FPGA 4. Program Display FPGA 5. Replace FTSW PCBA 6. Replace Display PCBA 7. Replace Controller PCBA 8. Replace Steering Relay PCBA 9. Replace RF PCBA
E 307 ERR_NR_RF_TEST4_ERROR	RF gen/shutdown self test #4 error	<ol style="list-style-type: none"> 1. Replace RF PCBA 2. Replace Controller PCBA



Replacement Procedures

Follow the procedures in this chapter when you need to replace the parts listed below:

- Fuses
- Battery
- Low Voltage Power Supply
- Footswitch/Audio PCBA
- Controller PCBA
- High Voltage DC PCBA
- Front Panel
- Steering Relay PCBA
- Display PCBA
- Barcode Scanner
- Output Receptacles

The parts used in these procedures are listed in Chapter 10.

Fuse Replacement

Equipment required:

- Small flathead screwdriver

Warning

Fire Hazard For continued protection against fire hazard, replace fuses only with fuses of the same type and rating as the original fuse.

1. Turn off the generator. Disconnect the power cord from the wall receptacle and the rear panel of the generator for easier access to the adjacent fuse drawer.
2. To release the fuse drawer, insert a small flathead screwdriver into the slot on the drawer below the power cord receptacle then slide the drawer out.
3. Replace each fuse with one of the same type and rating.
4. Slide the fuse drawer into its slot until it snaps into place.
5. Connect the power cord to the rear panel.

Battery Replacement

Equipment required:

- Phillips screwdriver

Warning

Electric Shock Hazard To allow stored energy to dissipate after power is disconnected, wait at least five minutes before replacing parts.

Caution

The generator contains electrostatic-sensitive components. When repairing the generator, work at a static-control workstation. Wear a grounding strap when handling electrostatic-sensitive components, except when working on an energized generator. Handle PCBAs by their non-conductive edges. Use an antistatic container for transport of electrostatic-sensitive components and PCBAs.

Notice

Calibrate the generator after you install a new battery. Calibration values are lost when the battery is replaced. Refer to *Calibrating the ForceTriad Generator* in Chapter 5 for instructions.

1. Turn off the generator. Disconnect the power cord from the wall receptacle.
2. Remove the four screws that secure the cover to the chassis. Lift the cover off the chassis. Set the cover and screws aside for reinstallation.
3. Locate the battery on the left side of the Controller PCBA.
4. Grasp the battery and remove it from the socket.
5. Install the new battery.
6. Position the cover above the chassis and slide it down. Install the four screws that secure the cover to the chassis.

Low Voltage Power Supply (LVPS) Replacement

Equipment required:

- Phillips screwdriver

Warning

Electric Shock Hazard To allow stored energy to dissipate after power is disconnected, wait at least five minutes before replacing parts.

Caution

The generator contains electrostatic-sensitive components. When repairing the generator, work at a static-control workstation. Wear a grounding strap when handling electrostatic-sensitive components, except when working on an energized generator. Handle PCBAs by their non-conductive edges. Use an antistatic container for transport of electrostatic-sensitive components and PCBAs.

1. Turn off the generator. Disconnect the power cord from the wall receptacle.
2. Remove the four screws that secure the cover to the chassis. Lift the cover off the chassis. Set the cover and screws aside for reinstallation.
3. Locate the LVPS on the left rear of the unit and disconnect the cable assemblies from the LVPS.
4. Remove the three screws securing the LVPS to the chassis. Note that the lower right screw is non-conductive nylon.
5. Remove the LVPS.
6. Install the new LVPS in the correct orientation.
7. Replace the three screws, ensuring the nylon screw is installed in the lower right corner.
8. Reconnect the cable assemblies.
9. Position the cover above the chassis and slide it down. Install the four screw that secure the cover to the chassis.

Footswitch/Audio PCBA Replacement

Equipment required:

- Phillips screwdriver

Warning

Electric Shock Hazard To allow stored energy to dissipate after power is disconnected, wait at least five minutes before replacing parts.

Caution

The generator contains electrostatic-sensitive components. When repairing the generator, work at a static-control workstation. Wear a grounding strap when handling electrostatic-sensitive components, except when working on an energized generator. Handle PCBAs by their non-conductive edges. Use an antistatic container for transport of electrostatic-sensitive components and PCBAs.

1. Turn off the generator. Disconnect the power cord from the wall receptacle.
2. Remove the four screws that secure the cover to the chassis. Lift the cover off the chassis. Set the cover and screws aside for reinstallation.
3. Locate the Footswitch/Audio PCBA on the right rear of the generator and disconnect the cable assemblies from the Footswitch/Audio PCBA.
4. Remove the two screws securing the Footswitch/Audio PCBA to the chassis. On the rear of the generator, remove the four screws securing the Monopolar and Bipolar Footswitch receptacles to the chassis.
5. Remove the Footswitch/Audio PCBA.
6. Install the new Footswitch/Audio PCBA.
7. Replace the two screws securing the Footswitch/Audio PCBA to the chassis. Replace the four screws securing the Monopolar and Bipolar Footswitch receptacles to the chassis.
8. Reconnect the cable assemblies.
9. Position the cover above the chassis and slide it down. Install the four screws that secure the cover to the chassis.

Controller PCBA Replacement

Equipment required:

- Phillips screwdriver

Warning

Electric Shock Hazard To allow stored energy to dissipate after power is disconnected, wait at least five minutes before replacing parts.

Caution

The generator contains electrostatic-sensitive components. When repairing the generator, work at a static-control workstation. Wear a grounding strap when handling electrostatic-sensitive components, except when working on an energized generator. Handle PCBAs by their non-conductive edges. Use an antistatic container for transport of electrostatic-sensitive components and PCBAs.

Notice

Calibrate the generator after you replace the Controller PCBA. Refer to *Calibrating the ForceTriad Generator* in Chapter 5 for instructions.

1. Turn off the generator. Disconnect the power cord from the wall receptacle.
2. Remove the four screws that secure the cover to the chassis. Lift the cover off the chassis. Set the cover and screws aside for reinstallation.
3. Locate the Controller PCBA on the right side of the generator and disconnect the cable assemblies from the Controller PCBA.
4. Remove the single screw securing the Controller PCBA to the chassis.
5. Remove the Controller PCBA, taking care not to damage the RF PCBA connector.
6. Install the new Controller PCBA in the correct orientation, taking care to align the RF PCBA connector properly.
7. Replace the single screw securing the Controller PCBA to the chassis.
8. Reconnect the cable assemblies to the Controller PCBA.
9. Position the cover above the chassis and slide it down. Install the four screws that secure the cover to the chassis.

High Voltage DC (HVDC) PCBA Replacement

Equipment required:

- Phillips screwdriver

Warning

Electric Shock Hazard To allow stored energy to dissipate after power is disconnected, wait at least five minutes before replacing parts.

Caution

The generator contains electrostatic-sensitive components. When repairing the generator, work at a static-control workstation. Wear a grounding strap when handling electrostatic-sensitive components, except when working on an energized generator. Handle PCBAs by their non-conductive edges. Use an antistatic container for transport of electrostatic-sensitive components and PCBAs.

Notice

Calibrate the generator after you install a new HVDC PCBA. Refer to *Calibrating the Force Triad Generator* in Chapter 5 for instructions.

1. Turn off the generator. Disconnect the power cord from the wall receptacle.
2. Remove the four screws that secure the cover to the chassis. Lift the cover off the chassis. Set the cover and screws aside for reinstallation.
3. Locate the HVDC PCBA on the left side of the generator and disconnect the cable assemblies from the HVDC PCBA.
4. Remove the single screw securing the HVDC PCBA to the chassis. This screw is inserted from the chassis side of the assembly.
5. Remove the HVDC PCBA, taking care not to damage the RF PCBA connector.
6. Install the new HVDC PCBA in the correct orientation, taking care to align the RF PCBA connector properly.
7. Replace the single screw securing the HVDC PCBA to the chassis.
8. Reconnect the cable assemblies to the HVDC PCBA.
9. Position the cover above the chassis and slide it down. Install the four screws that secure the cover to the chassis.

Front Panel Replacement

Equipment required:

- Phillips screwdriver

Warning

Electric Shock Hazard To allow stored energy to dissipate after power is disconnected, wait at least five minutes before replacing parts.

Caution

The generator contains electrostatic-sensitive components. When repairing the generator, work at a static-control workstation. Wear a grounding strap when handling electrostatic-sensitive components, except when working on an energized generator. Handle PCBAs by their non-conductive edges. Use an antistatic container for transport of electrostatic-sensitive components and PCBAs.

Notice

Calibrate the generator after you install a new Front Panel. Refer to *Calibrating the ForceTriad Generator* in Chapter 5 for instructions.

1. Turn off the generator. Disconnect the power cord from the wall receptacle.
2. Remove the four screws that secure the cover to the chassis. Lift the cover off the chassis. Set the cover and screws aside for reinstallation.
3. Remove the three screws attaching the Front Panel assembly to the top rail of the chassis. Remove the four screws at the sides of the Front Panel attaching it to the chassis.
4. Disconnect cable assemblies:
 - a. Steering Relay PCBA to RF PCBA
 - b. Display PCBA to Controller PCBA
 - c. Power Switch to Power Receptacle
5. Rotate the top of the Front Panel assembly downwards until the Steering Relay PCBA clears the chassis top rail. Lift the Front Panel assembly away from the chassis.
6. Install the new Front Panel:
 - a. Hold the assembly at an angle with the top away from the generator.
 - b. Set the bottom of the Front Panel assembly into the chassis, taking care to line up the alignment tabs.
 - c. Rotate the Front Panel assembly towards the chassis, ensuring the fan cables are not pinched.
 - d. Slide the top of the Steering Relay PCBA under the top rail of the chassis until the screw holes align.

7. Replace the three screws securing the Front Panel assembly to the chassis top rail. Reinstall the four screws attaching the Front Panel to the chassis.
8. Reconnect cable assemblies:
 - a. Steering Relay PCBA to RF PCBA
 - b. Display PCBA to Controller PCBA
 - c. Power Switch to Power Receptacle
9. Position the cover above the chassis and slide it down. Install the four screws that secure the cover to the chassis.

RF PCBA Replacement

Equipment required:

- Phillips screwdriver

Warning

Electric Shock Hazard To allow stored energy to dissipate after power is disconnected, wait at least five minutes before replacing parts.

Caution

The generator contains electrostatic-sensitive components. When repairing the generator, work at a static-control workstation. Wear a grounding strap when handling electrostatic-sensitive components, except when working on an energized generator. Handle PCBAs by their non-conductive edges. Use an antistatic container for transport of electrostatic-sensitive components and PCBAs.

Notice

Calibrate the generator after you install a new RF PCBA. Refer to *Calibrating the ForceTriad Generator* in Chapter 5 for instructions.

1. Turn off the generator. Disconnect the power cord from the wall receptacle.
2. Remove the four screws that secure the cover to the chassis. Lift the cover off the chassis. Set the cover and screws aside for reinstallation.
3. Remove the following components:
 - a. Controller PCBA; see the *Controller PCBA Replacement* section
 - b. HVDC PCBA; see the *HVDC PCBA Replacement* section
 - c. Front Panel assembly; see the *Front Panel Replacement* section
4. Disconnect cable assemblies:
 - a. Footswitch/Audio PCBA to RF PCBA
 - b. LVPS PCBA to RF PCBA
 - c. Fan and Temperature Sensor
5. Remove the nine screws securing the RF PCBA to the chassis.
6. Remove the RF PCBA by lifting and sliding forward.

7. Install the new RF PCBA by lowering and sliding backwards.
8. Reinstall the nine screws securing the RF PCBA to the chassis.
9. Reconnect cable assemblies:
 - a. Footswitch/Audio PCBA to RF PCBA
 - b. LVPS PCBA to RF PCBA
 - c. Fan and Temperature Sensor
10. Reinstall components:
 - a. Front Panel assembly; see the *Front Panel Replacement* section
 - b. HVDC PCBA; see the *HVDC PCBA Replacement* section
 - c. Controller PCBA; see the *Controller PCBA Replacement* section
11. Position the cover above the chassis and slide it down. Install the four screws that secure the cover to the chassis.

Steering Relay PCBA Replacement

Equipment required:

- Phillips screwdriver

Warning

Electric Shock Hazard To allow stored energy to dissipate after power is disconnected, wait at least five minutes before replacing parts.

Caution

The generator contains electrostatic-sensitive components. When repairing the generator, work at a static-control workstation. Wear a grounding strap when handling electrostatic-sensitive components, except when working on an energized generator. Handle PCBAs by their non-conductive edges. Use an antistatic container for transport of electrostatic-sensitive components and PCBAs.

Notice

Calibrate the generator after you install a new Steering/Relay PCBA. Refer to *Calibrating the ForceTriad Generator* in Chapter 5 for instructions.

1. Turn off the generator. Disconnect the power cord from the wall receptacle.
2. Remove the four screws that secure the cover to the chassis. Lift the cover off the chassis. Set the cover and screws aside for reinstallation.
3. Remove the Front Panel assembly; see the *Front Panel Replacement* section. Place the Front Panel assembly on a non-scratch surface to protect the touch screens.

4. With the top of the Front Panel facing away, disconnect the following:
 - a. Barcode scanner cables
 - b. Zero Insertion Force (ZIF) connectors, then the shield ground connectors
 - c. Steering Relay PCBA to Display PCBA cable assembly
5. Remove the four screws securing the Steering Relay PCBA to the side brackets. Remove the three screws attaching the bracket to the top of the Steering Relay PCBA.
6. Carefully lift the Steering Relay PCBA off of the Front Panel until sufficient space to disconnect the cable assemblies is available. Disconnect the cable assemblies attaching the Steering Relay PCBA to the output receptacles. Finish removing the Steering Relay PCBA.
7. Install the new Steering Relay PCBA:
 - a. Position the Steering Relay PCBA above the Front Panel in the correct orientation.
 - b. Reconnect the cable assemblies attaching the Steering Relay PCBA to the output receptacles.
 - c. Reconnect the cable assembly connecting the Steering Relay PCBA to the Display PCBA.
 - d. Verify that the Barcode Scanner cable assemblies are not trapped between the two assemblies.
 - e. Lower the Steering Relay PCBA onto the Front Panel making sure the Barcode Scanner assemblies align with the slots in the Steering Relay PCBA.
8. Reinstall the four screws securing the Steering Relay PCBA to the Front Panel side brackets.
9. Reconnect the four Barcode scanner cable assemblies taking care to fully insert and align the ZIF cables. Verify the shield ground connectors are completely connected.
10. Reinstall the top bracket using three screws, verifying the Barcode Scanner cable assemblies are captured in the proper slots.
11. Reinstall the Front Panel assembly; see the *Front Panel Replacement* section.
12. Position the cover above the chassis and slide it down. Install the four screws that secure the cover to the chassis.

Display PCBA Replacement

Equipment required:

- Phillips screwdriver

Warning

Electric Shock Hazard To allow stored energy to dissipate after power is disconnected, wait at least five minutes before replacing parts.

Caution

The generator contains electrostatic-sensitive components. When repairing the generator, work at a static-control workstation. Wear a grounding strap when handling electrostatic-sensitive components, except when working on an energized generator. Handle PCBAs by their non-conductive edges. Use an antistatic container for transport of electrostatic-sensitive components and PCBAs.

1. Turn off the generator. Disconnect the power cord from the wall receptacle.
2. Remove the four screws that secure the cover to the chassis. Lift the cover off the chassis. Set the cover and screws aside for reinstallation.
3. Remove the Front Panel assembly; see the *Front Panel Replacement* section. Place the Front Panel assembly on a non-scratch surface to protect the touch screens.
4. Remove the Steering Relay PCBA; see the *Steering Relay PCBA Replacement* section.
5. Remove the four screws in the center of the Display PCBA securing it to the Front Panel. Carefully lift the Display PCBA out of the Front Panel.
6. Install the new Display PCBA by carefully lowering it into the Front Panel in the correct orientation.
7. Replace the four screws securing the Display PCBA to the Front Panel.
8. Reinstall the Steering Relay PCBA; see the *Steering Relay PCBA Replacement* section.
9. Reinstall the Front Panel assembly; see the *Front Panel Replacement* section.
10. Position the cover above the chassis and slide it down. Install the four screws that secure the cover to the chassis.

Barcode Scanner Replacement

Equipment required:

- Phillips screwdriver

Warning

Electric Shock Hazard To allow stored energy to dissipate after power is disconnected, wait at least five minutes before replacing parts.

Caution

The generator contains electrostatic-sensitive components. When repairing the generator, work at a static-control workstation. Wear a grounding strap when handling electrostatic-sensitive components, except when working on an energized generator. Handle PCBAs by their non-conductive edges. Use an antistatic container for transport of electrostatic-sensitive components and PCBAs.

Notice

Calibrate the generator after you install a new Barcode Scanner. Refer to *Calibrating the ForceTriad Generator* in Chapter 5 for instructions.

1. Turn off the generator. Disconnect the power cord from the wall receptacle.
2. Remove the four screws that secure the cover to the chassis. Lift the cover off the chassis. Set the cover and screws aside for reinstallation.
3. Remove the Front Panel assembly; see the *Front Panel Replacement* section. Place the Front Panel assembly on a non-scratch surface to protect the touch screens.
4. Remove the Steering Relay PCBA; see the *Steering Relay PCBA Replacement* section.
5. Remove the two screws at the bottom of the Barcode Scanner assembly. Slide the Barcode Scanner and shield out of the receptacle assembly.
6. Slide the new Barcode Scanner into the shield, ensuring the shield ground tab mates correctly.
7. Slide the Barcode Scanner and shield into the receptacle assembly. Reattach the two screws securing the Barcode Scanner to the receptacle assembly.
8. Reinstall the Steering Relay PCBA; see the *Steering Relay PCBA Replacement* section.
9. Reinstall the Front Panel; see the *Front Panel Replacement* section.
10. Position the cover above the chassis and slide it down. Install the four screws that secure the cover to the chassis.

Output Receptacle Replacement

Equipment required:

- Phillips screwdriver

Warning

Electric Shock Hazard To allow stored energy to dissipate after power is disconnected, wait at least five minutes before replacing parts.

Caution

The generator contains electrostatic-sensitive components. When repairing the generator, work at a static-control workstation. Wear a grounding strap when handling electrostatic-sensitive components, except when working on an energized generator. Handle PCBAs by their non-conductive edges. Use an antistatic container for transport of electrostatic-sensitive components and PCBAs.

1. Turn off the generator. Disconnect the power cord from the wall receptacle.
2. Remove the four screws that secure the cover to the chassis. Lift the cover off the chassis. Set the cover and screws aside for reinstallation.
3. Remove the Front Panel assembly; see the *Front Panel Replacement* section. Place the Front Panel assembly on a non-scratch surface to protect the touch screens.
4. Remove the Steering Relay PCBA; see the *Steering Relay PCBA Replacement* section.

Monopolar 1 Receptacle

- a. Remove the three screws securing the Monopolar 1 receptacle to the Front Panel.
- b. Remove the Monopolar 1 cable assembly from the receptacle.
- c. Install the new Monopolar 1 receptacle in the Front Panel using the three screws.
- d. Install the Monopolar 1 cable assembly.

Monopolar 2 Receptacle

- a. Remove the three screws securing the Monopolar 2 receptacle to the Front Panel.
- b. Remove the Monopolar 2 cable assembly from the receptacle.
- c. Install the new Monopolar 2 receptacle in the Front Panel using the three screws.
- d. Install the Monopolar 2 cable assembly.

LigaSure 1 Receptacle

- a. Remove the three screws securing the LigaSure 1 receptacle to the Front Panel.
- b. Remove the LigaSure 1 cable assembly from the receptacle.
- c. Install the new LigaSure 1 receptacle in the Front Panel using the three screws.
- d. Install the LigaSure 1 cable assembly.

LigaSure 2 Receptacle

- a. Remove the three screws securing the LigaSure 2 receptacle to the Front Panel.
- b. Remove the LigaSure 2 cable assembly from the receptacle.
- c. Install the new LigaSure 2 receptacle in the Front Panel using the three screws.
- d. Install the LigaSure 2 cable assembly.

Universal Footswitching Port

- a. Remove the four screws securing the Universal Footswitching Port to the Front Panel.
- b. Remove the Universal Footswitching Port cable assembly from the receptacle.
- c. Install the new Universal Footswitching Port in the Front Panel using the four screws.
- d. Install the Universal Footswitching Port cable assembly.

Bipolar Receptacle

- a. Remove the three screws securing the Bipolar receptacle to the Front Panel.
- b. Remove the Bipolar receptacle cable assembly from the receptacle.
- c. Install the new Bipolar receptacle in the Front Panel using the three screws.
- d. Install the Bipolar receptacle cable assembly.

REM Receptacle

- a. Remove the two screws securing the REM receptacle to the Front Panel. Note the length of each screw. Remove the REM retaining bracket.
 - b. Install the new REM receptacle in the Front Panel. Replace the REM retaining bracket. Secure the REM receptacle and bracket using the two screws.
5. Reinstall the Steering Relay PCBA; see the *Steering Relay PCBA Replacement* section.
6. Reinstall the Front Panel assembly; see the *Front Panel Replacement* section.
7. Position the cover above the chassis and slide it down. Install the four screws that secure the cover to the chassis.



Repair Policies and Procedures

This chapter presents the following information:

- The manufacturer's responsibility
- Routine maintenance
- Returning the energy platform for service
- Service centers

Caution

Read all warnings, cautions, and instructions provided with this system before use.

Read the instructions, warnings, and cautions provided with electro-surgical instruments before use. Specific instructions for electro-surgical instruments are not included in this manual.

Responsibility of the Manufacturer

Valleylab is responsible for the safety, reliability, and performance of the energy platform only if all of the following conditions have been met:

- Installation and setup procedures in this manual are followed.
- Assembly operation, readjustments, modifications, or repairs are carried out by persons authorized by Valleylab.
- The electrical installation of the relevant room complies with local codes and regulatory requirements, such as IEC and BSI.
- The equipment is used in accordance with the Valleylab instructions for use.

For warranty information, refer to the preface in this manual.

Routine Maintenance

Notice

Refer to the energy platform service manual for maintenance recommendations and function and output power verification procedures.

When should the energy platform be checked or serviced?

Valleylab recommends that the energy platform be inspected by qualified service personnel at least twice a year. This inspection should include adjusting the system to factory specifications.

When should the power cord be checked or replaced?

Check the power cord each time you use the energy platform or at the intervals recommended by your institution. Replace the power cord if you find exposed wires, cracks, frayed edges, or a damaged connector.

When should the fuses be replaced?

An internal component malfunction can damage the fuses. You may need to replace the fuses if the system fails the self-test or if the energy platform stops functioning, even though it is receiving power from a wall outlet.

Cleaning

Warning

Electric Shock Hazard Always turn off and unplug the energy platform before cleaning.

Notice

Do not clean the energy platform with abrasive cleaning or disinfectant compounds, solvents, or other materials that could scratch the panels or damage the energy platform.

1. Turn off the system and unplug the power cord from the wall outlet.
2. Thoroughly wipe all surfaces of the energy platform and power cord with a damp cloth and mild cleaning solution or disinfectant. The energy platform will withstand the effects of cleaning over time without degrading the enclosure or display quality.

Product Service

Valleylab recommends that authorized Valleylab personnel service the ForceTriad energy platform, however some service operations can be performed by qualified biomedics.

Returning the Energy Platform for Service

Before you return the energy platform, call your Valleylab representative for assistance. If you are instructed to send the energy platform to Valleylab, do the following:

1. Obtain a return authorization number.

Call the Valleylab Customer Service Center for your area to obtain a Return Authorization Number. Have the following information ready when you call:

- Hospital/clinic name/customer number
- Your telephone number
- Department/address, city, state, and zip code
- Model number
- Serial number
- Description of the problem
- Type of repair to be done

2. Clean the energy platform.
See the section above entitled "Cleaning."

3. Ship the energy platform.
 - a. Attach a tag to the energy platform that includes the return authorization number and the information (hospital, phone number, etc.) listed in step 1.
 - b. Be sure the energy platform is completely dry before you pack it for shipment. Package it in its original shipping container, if available.
 - c. Ship the energy platform, prepaid, to the Valleylab Service Center.

Adjustment to Factory Specification (Calibration)

Valleylab recommends that only Valleylab-authorized personnel calibrate the ForceTriad energy platform. The energy platform incorporates automatic calibration where possible to reduce the required equipment and manual steps.

Software Upgrades

Software upgrades must be performed by authorized personnel only.

Service Centers

For a complete list of service centers worldwide, please refer to the Valleylab website:

<http://www.valleylab.com/valleylab/international/service-world.html>

Service Parts

Replacement parts for the ForceTriad generator are listed in this chapter. If the part number is not listed for a specific item, a replacement for that item is not available.

All components must be replaced with parts of identical construction and value. Replacement ratings and tolerances must be equal to or better than the original. Valleylab does not recommend field replacement of surface mount components.

Ordering Replacement Parts


Parts may be ordered from the Valleylab Service Center for your location.

When ordering replacement parts, include this information:


- Model number (located on the rear panel of the generator)
- Serial number (located on the rear panel of the generator)
- Part number (for the part you are ordering)
- Modification number, if applicable.

If you do not know the part number or if you wish to order spare parts, call the Valleylab Service Center for assistance.

Chassis Assembly

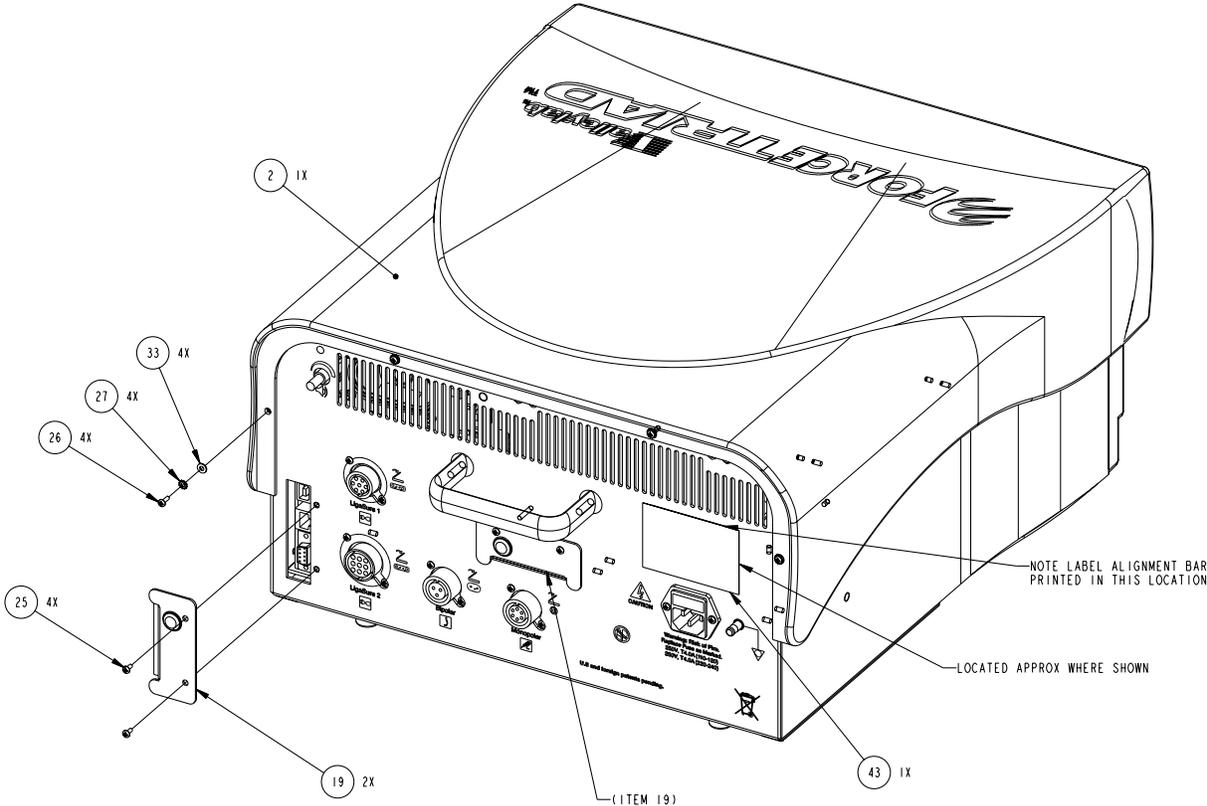


Chassis Assembly (continued)

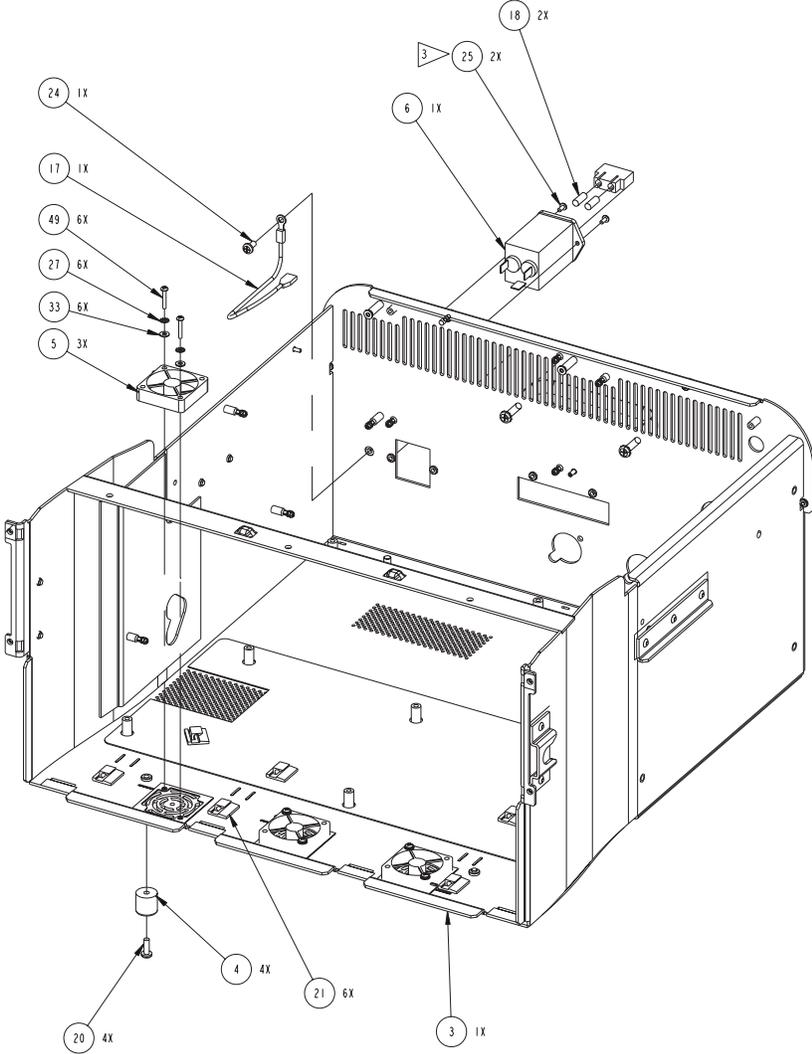

Service Parts

Chassis Assembly (continued)

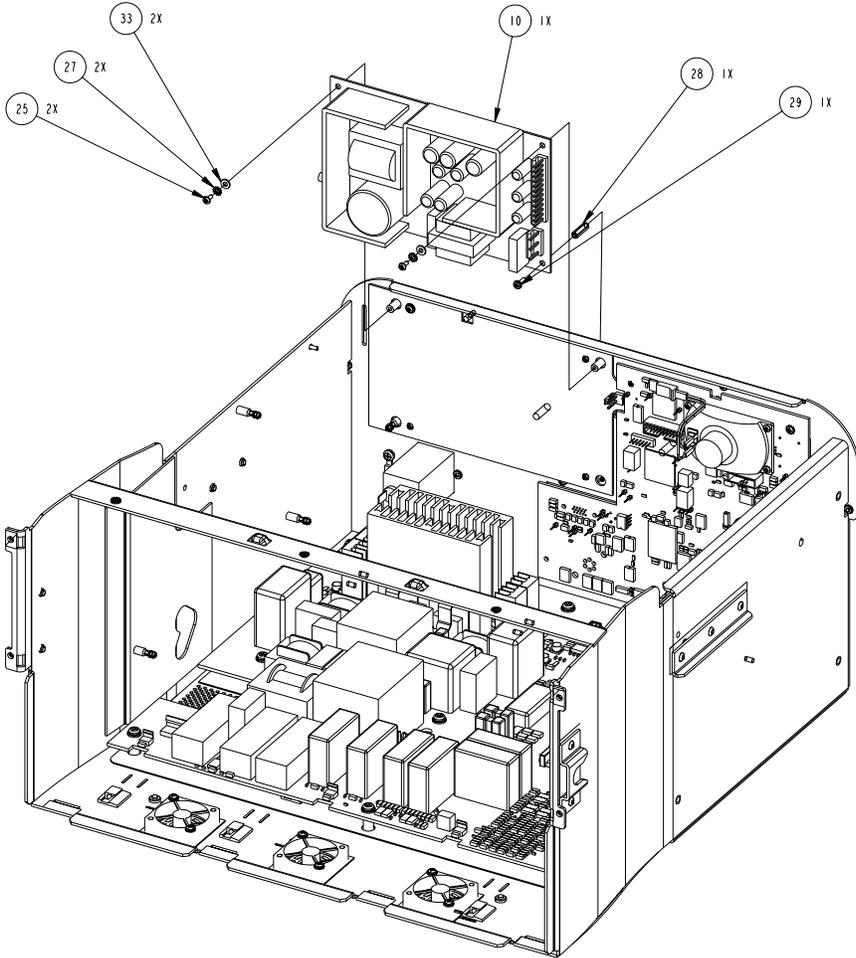


Chassis Assembly Parts List

Reference Designator	Quantity	Description	Part Number
10	1	PWR SPLY LV 75 WATT	207000252
42	1	CD PWR AC	207002060
28	1	STANDOFF, 4.5MM, HEX, M3, 16LG, NYL	213110652
30	1	STANDOFF, 6MM HEX, M3, 14LG	213110655
31	1	STANDOFF, 6MM HEX, M3, 14LG, NYL	213110656
4	4	FT RBR	213400082
18	2	FUSE 8A 250V 5MM	215100090
2	1	TOP COVER FORCETRIAD GEN	223200716
3	1	CHASSIS ASSY NHP GENERATOR	223200718
9	1	LUG GNDG	223400632
19	2	PLATE COVER NHP CHASSIS	223200733
24	0	SCR PNH PHH M4X0.7X8MM	237050113
29	0	SCR NYL PHIL M3X0.5X8	237050126
32	0	SCR PNH M3 10MM	237050138
20	0	SCR PNH PHIL M4X0.7X12 ZINC	237050141
25	2	SCREW, PH, PHILLIPS, M3 X6, ST	237050197
6	1	FLTR EMI	251400007
47	0	WSHR METRIC M4	253300005
48	0	WSHR E.T. M4 STL	253300024
27	0	LK WASH INTRNL METRIC M3.0	253300044
33	0	WASHER FLAT M3 REDUCED OD	253300056

Service Parts

Shield PCBAs

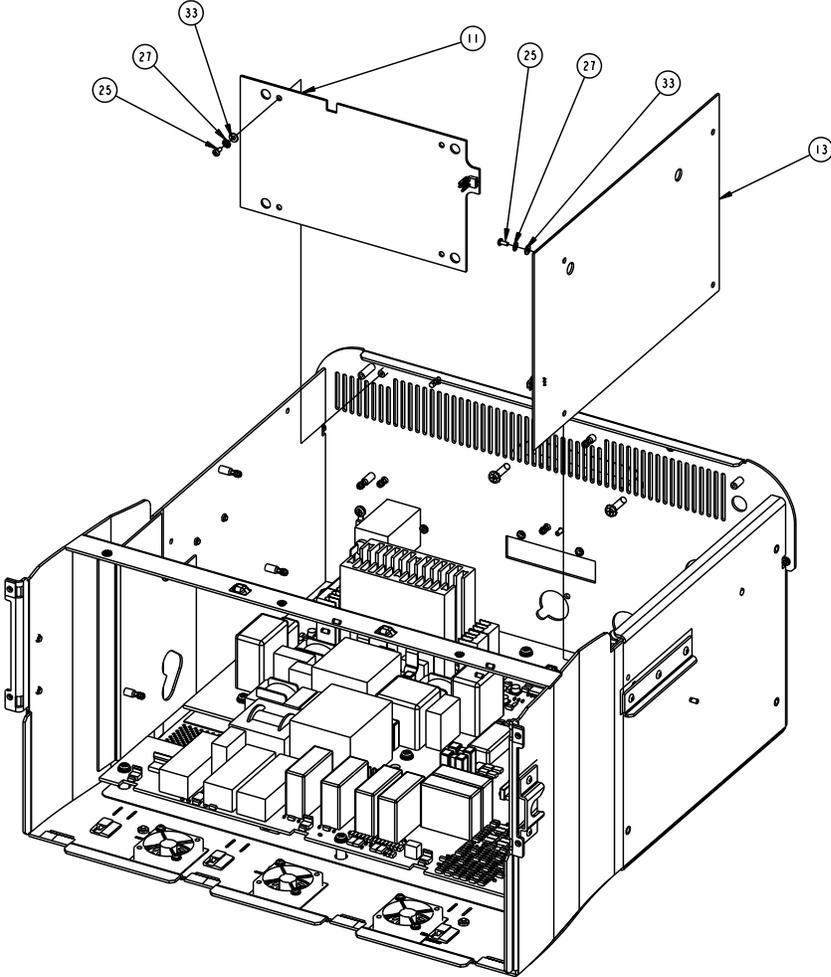


Shield PCBAs Parts List

Reference Designator	Quantity	Description	Part Number
13	1	PCB ASSY NHP RF SHIELD	201714000
2	1	CONN 3 POS HDR.100 CTR RT	208300935
11	1	PCB ASSY NHP LVPS RF SHIEL	201717000
	1	CONN 2POS HDR.156 CENTER	208300929

Service Parts

Front Panel

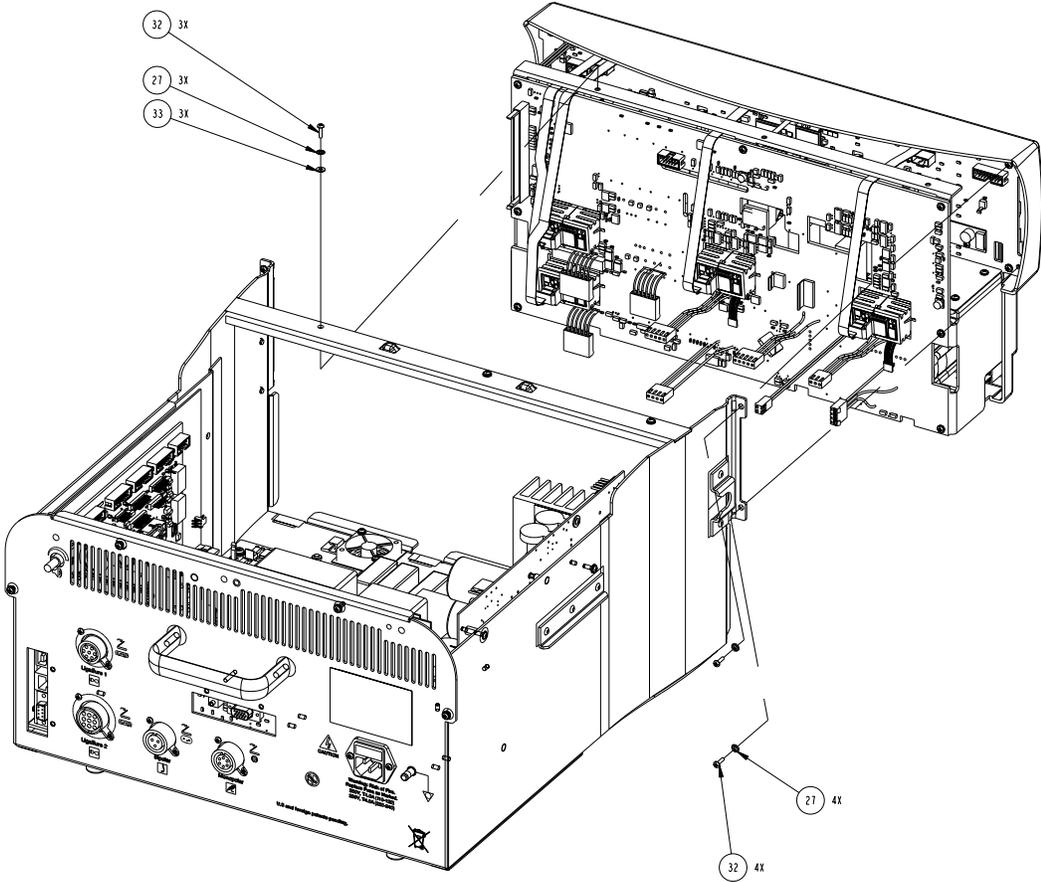

Front Panel Parts List

Reference Designator	Quantity	Description	Part Number
1	1	FRONT PANEL FORCETRIAD	223150568
2	1	OVERLAY NHP GENERATOR	207500882
9	1	PL RETG REM	223301239
19	1	RAIL MOUNTING ASSY NHP RF BRD	223301246
18	2	BRACKET RELAY NHP GENERATOR	223301247
3	3	GASKET, FOAM, TCHSCRN, DSPL, NHP	232302043
27	0	SCR NYL PHIL M3 X 0.5 X 8	237050126
21	0	SCR PNH M3 10MM	237050138
30	0	SCR PNH M3 X 0.5 X 8 ZINC	237050149
22	0	SCR PNH PHIL M3 X 0.5 X 16	237050179
23	6	SCREW, PH, PHILLIPS, M3 X 6, ST	237050197
24	4	SCREW PH PHILLIPS M3 X 50 ST	237050198
4	1	SW DP 120AMP SRG	243025037
	0	LKWASH INTRNL METRIC M3.0	253300044
29	0	WASHER FLAT M3 REDUCED OD	253300056

Service Parts

Display LCD PCBA

Display LCD PCBA Parts List

Reference Designator	Quantity	Description	Part Number
14	1	ASSY, NHP DISPLAY PCB	1000640
	1	ASSY DISPLAY LCD FORCETRIAD	207000281
	0	RES 287K 1206 1% .25W RoHS	1000336
8	12	WASHER FIBER M3	1000358
16	1	RES 287K 1206 1% .25W RoHS	1000336
2	3	INVERTER, LCD, NHP ERG 8M05	207000279
1	1	NHP DISPLAY ASSEMBLY	207000280
C15, C14	2	CAP SMD .1UF 50V 20%	204200580
J24	1	HDR LKG 2 PIN .1 CTR	208200389
J6, J4, J7, J5	4	HEADER 3X1 LOCKING MOLEX	208300831
J11, J13, J14	3	CONN 5PIN .1VERT HDR W/LOCK	208300932
J30	1	CONN 8 POS THRU HOLE JACK	208400140
C94	1	CAP 10UF 0805 10% 10V X5R	M204200668

Reference Designator	Quantity	Description	Part Number
C34, C71, C68, C77, C54, C169, C168, C166, C165, C164, C126, C162, C33, C161, C163, C174, C43, C124, C120, C40, C12, C11, C83, C39, C82, C172, C45, C170, C173, C158, C81, C32, C80, C78, C171, C125, C35, C36, C1, C25, C24, C23, C180, C150, C22, C149, C148, C21, C147, C146, C51, C160, C3, C46, C137, C138, C139, C52, C53, C145, C144, C143, C20, C19, C142, C140, C136, C156, C159, C141, C31, C10, C9, C127, C17, C8, C128, C129, C18, C130, C49, C157, C4, C155, C132, C154, C133, C7, C6, C16, C26, C134, C152, C151, C135, C153, C131, C427, C190, C200, C433, C108, C434, C435, C436, C432, C438, C123, C103, C197, C196, C195, C194, C193, C192, C191, C437, C105, C426, C425, C107, C424, C106, C207, C206, C201, C428, C198, C104, C429, C204, C203, C430, C431, C202, C121, C205, C181, C96, C189, C183, C199, C182, C91, C90, C210, C119, C95, C179, C44, C89, C178, C177, C176, C122, C175, C111, C208, C188, C187, C186, C100, C99, C98, C185, C439, C209, C97, C110, C184, C109	171	CAP .01UF 0603 10% 50V X7R	M204200670
C116, C66, C167, C118, C117, C65, C47, C48, C50, C56, C57, C58, C59, C60, C61, C62, C85, C64, C115, C67, C86, C88, C92, C93, C5, C112, C113, C114, C63	29	CAP .1UF 0603 10% 16V X7R	M204200671
C70, C69, C55, C13, C2, C76, C87	7	CAP 10uf 1206 5% 50V X7R	M204200674
C73	1	CAP 10PF 0603 5% 50V COG	M204200694

Reference Designator	Quantity	Description	Part Number
C72	1	CAP 100PF 0603 5% 50V COG	M204200696
C74, C75	2	CAP 220PF 50V 10% X7R	M204200725
C42, C41	2	CAP 4.7uf 3216 10% 10V TANT	M204600092
C79	1	CAP 10UF 3528 10% 16V TANT	M204600097
C101, C84, C27, C287, C102, C28, C237	7	CAP 47UF 3528 10% 10V TANT	M204600098
C29, C38, C37, C30	4	CAP 100UF 7343 10% 10V TANT	M204600099
J22, J15	2	CONN 1x6 .100 HEADER	M208300875
J28, J29	2	CONN 20 POS 2X10 .100 HEADER	M208300887
J12	1	CONN 4 POS .100 VERT HDR	M208300894
J10, J23, J3, J18	4	CONN 12POS .50 VERT HDR ZIF	M208300916
J21, J19, J20	3	CONN 33 PIN ZIF SMT	M208300917
J32	1	CONN 10POS SHOUEDED TRM STRP .10	M208300933
J31, J33	2	CONN 16POS SHOUEDED TRM STRP .10	M208300934
U28	1	IC FPGA 456 BGA 100K GATES	M210100103
U14	1	IC UART QUAD WFIFO 16BIT 5V	M210100104
U16	1	2 PHASE DUAL DC/DC CONVERTER	M210100105
U4	1	IC ADC 8CH 10BIT	M210100106
U18, U17	2	IC N&P CHANNEL MOSFET 12V	M210100107
U2, U9, U8, U7, U6, U5, U3, U13, U19, U20, U12, U21, U23, U25, U26, U27	16	IC N&P CHANNEL CMOS FET 0.9W	M210100108
J25, J17, J16, J26	4	SPKR SMT SOBERTON ST01BH	M210100112
U15	1	IC PROM FLASH 4MB	M210720050
U22	1	IC EEPROM SERIAL 2.7V RoHS	M210720051
U24	1	DAC, QUAD, 10 BIT, SERIAL, VOLTAGE	M210750009

Reference Designator	Quantity	Description	Part Number
U55	1	IC SRAM SYNC 128X36	M210770011
U10	1	IC ACCELERATOR SMBUS	M210800052
U1	1	IC SERIAL TXCVR 1.5 GB	M210800056
R288, R12, R287, R89, R90, R91, R92, R233, R279, R45, R290, R286, R289, R285, R284, R283, R282, R281, R280	19	RES NETWORK 33 50V 5% 0603	M234100186
R38, R221	2	RES ARRAY 4.7K 5% .031W ISOL	M234150014
R96, R95	2	RES 27K 0805 5% .125W	M234201698
R68	1	RES 267K 1% .25W 1206	M234201699
R67, R79	2	RES 118K 0603 1% .10W	M234201701
R61, R66, R65	3	RES 59K 0603 1% .10W	M234201702
R41	1	RES 0 OHM 1206 5% .25W	M234204130
R13, R15, R19, R24	4	RES 100K .25W 1% SM1206	M234204133
R27, R17, R22, R21, R31	5	RES 10K .25W 1% SM1206	M234204134
R86	1	RES 3.32K 0603 1% 0.1W	M234250507
R30, R29, R87, R88, R26, R28	6	RES 49.9 OHM 1% 0.1W 0603	M234250510
R34, R33, R94, R93, R43, R32	6	RES 4.7K 5% 0.1W THICK FILM	M234250520
R293, R7, R8, R9, R10, R292, R11	7	RES 10K 1% 0.1W THICK FILM	M234250521
R3, R5, R1	3	RES 100K 1% 0.1W THICK FILM	M234250522
R291, R51, R52, R56, R64, R47	6	RES 33.0 OHM 0603 1% 0.1W	M234250523
R25, R18, R23, R16, R14, R6, R20	7	RES 0.0 OHM 0603 5% .0625W	M234250528
R69, R70	2	RES 20.0 OHM 0603 5% 0.1W	M234250530

Reference Designator	Quantity	Description	Part Number
R39, R78, R77, R76, R75, R40, R37, R36, R42	9	RES 100 OHM 0603 1% 0.1W	M234250533
R62, R63	2	RES 15K 0603 1% .1W	M234250567
R48	1	RES 10 OHM 1206 1% .25W	M234250601
D2, D12, D1, D3, D4, D9, D14, D6, D11, D7, D8, D13, D10, D5, D15	15	DIODE TVS SMT 10.3KV	M239350027
Y1	1	OSC 50.0MHZ 3.3V	M250010053
FB7, FB6, FB4, FB3, FB2, FB1	6	FER 100 OHM 3A EMI 1206	M251100186
L1, L2	2	IND 10UH LOW PROFILE	M251100213
FB5	1	FERRITE 4A 120 OHM @ 100MHZ	M251100214
R316	1	RES 0.0 OHM 0603 5% .0625W	M234250528
5	3	FLAT FLEX CABLE 33COND	207500890
13	6	SPACER, .25HEX, .090ID, .25 LG NYLON	213110650
12	12	SPACER, .25HEX, .115ID, .25 LG NYLON	213110651
11	6	NUT HEX M2 STEEL	224300043
9	6	SCREW, PH, PHILLIPS, M2 X14, ST	237050195
7	12	SCREW, TAPPING, PH, PHIL, M3X13, ST	237102178
3	3	LCD, DIS, NHP SHARP 5.7" LCD, LQ057QDC02	245500089
4	3	TOUCH SCREEN, LCD, DISPLAY, NHP	245500090
6	12	LKWASH INTRNL METRIC M3.0	253300044
10	0	WSHR FLAT M2	253300054
14	6	WASHER M2 SPLIT LOCK	253300057

Steering Relay PCBA

Steering Relay PCBA Parts List

Reference Designator	Quantity	Description	Part Number
20	1	PCB ASSY NHP STEERING RELAYS	1000436
C149	1	CAP POLPRO 2KV 10% .0047 UF	204200548
C25, C95, C108, C107, C106, C105, C103, C102, C100, C99, C76, C97, C115, C93, C91, C90, C89, C88, C86, C23, C79, C98, C136, C143, C147, C154, C155, C158, C141, C140, C139, C111, C137, C113, C134, C132, C131, C130, C129, C127, C124, C119, C77, C138, C14, C29, C81, C27, C26, C24, C21, C75, C16, C32, C13, C12, C9, C8, C7, C4, C142, C18, C57, C73, C67, C65, C63, C61, C60, C28, C58, C56, C48, C40, C37, C36, C35, C34, C59	79	CAP SMD 50V .1UF	204200552
C55, C160, C145, C10, C159	5	CAP 10UF 50V 20% SMD	204200582
C152	1	CAP POLPRO .047UF 630V 5%	204200614
J2	1	CONN PC MALE 4 PIN	208188004
J8, J9	2	CONN 6CKT .100" CTRS	208200321
J7, J6, J15	3	CONN LKG 3CKT .1CNTS	208200324
J18	1	HDR LKG 4 PIN .1 CTR	208200390
J17	1	CONN 5 POS HDR .156 VERT	208300910
J4, J11, J14	3	CONN 3 POS HDR .156 VERT .170 TAIL	208300920
J3, J12, J16	3	CONN 4 POS HDR .156 VERT .170 TAIL	208300921
J5, J13	2	CONN 6 POS HDR .156 VERT .170 TAIL	208300923
J10	1	CONN 7 POS HDR .156 VERT .170 TAIL	208300924


Service Parts

Reference Designator	Quantity	Description	Part Number
J1	1	CONN 64 POS HDR LOCKING .155 TAIL	208300925
U22, U25	2	IC VR TO-220 LM7805	210300083
U6, U7, U8, U10, U14, U15, U16, U17	8	VFC LM331	210740007
	0	FAB NHP STEERING RELAYS	228593000
K4, K5, K6, K7	4	RLY COTO-9442	230017003
K10, K2, K3, K8, K9, K11, K1	7	RELAY REED HIGH VOLTAGE	230017019
OP9, OP2, OP3, OP4, OP12, OP13, OP1, OP8, OP18, OP19, OP20, OP16, OP15, OP11, OP17, OP7, OP6, OP5, OP10, OP14	20	PCB SGLE MT ISLTR OPTO	239750073
T3, T4, T1, T5, T2	5	XFMR SQ CORE REM	251300045
C144, C53, C54, C62, C125, C126, C64, C66, C78, C69, C80, C52, C96, C68, C146, C117, C150, C151, C153, C156, C157, C109, C110, C116, C118, C87, C42, C123, C1, C70, C3, C17, C20, C2, C41, C121, C30, C120, C43, C122, C45, C44	43	CAP 1UF 25V 10% SM1206	M204200663
C74, C22, C5, C38	4	CAP 680PF 1206 5% 50V COG	M204200714
C161, C114, C71, C39, C11	5	CAP 1000PF 1206 10% 50V X7R	M204200715
C128, C112, C94, C47, C33, C19, C133, C135	8	CAP 3300PF 1206 10% 50V X7R	M204200716
C84, C83, C82	3	CAP .01UF 1206 5% 50V X7R	M204200721
C31, C50, C51, C92, C104, C46, C49, C15	8	CAP 0.01uF 1206 16V 1% COG	M204200730
C101, C148, C85, C72	4	CAP 4.7UF 7343 10% 35V TANT	M204600109
U2, U21	2	IC TRANS DARL ARRAY HI V	M210100095
U11, U13, U19, U3	4	IC MOSFET DRVR INV LOW-SIDE	M210100098

Reference Designator	Quantity	Description	Part Number
U20, U18, U5, U9	4	IC TIMER SINGLE BIPOLAR PREC	M210100099
Q2, Q8, Q6, Q4, Q5	5	IC FET N-CH DC-DC CONV 200V	M210100110
U23, U24	2	74HC14 HEX SCHMITT TRIGGER INV	M210510001
U12, U4	2	IC INVERTER HEX SCHMITT TRIG	M210510094
U1	1	IC EEPROM SERIAL 2.7V RoHS	M210720051
RN1	1	RES 1K SOM14 5% .08W BUS	M234150016
R38, R123, R83, R87, R91, R98, R104, R108, R110, R29, R111, R113, R118, R80, R122, R109, R124, R137, R142, R144, R149, R168, R30, R31, R32, R33, R34, R121, R23, R79, R20, R8, R24, R25, R35, R43, R44, R76, R11, R45, R78, R75, R74, R68, R54, R49	46	RES TF 0.25W 1% 1KOHM 1206PKG	M234201687
R1, R2	2	RES 0 OHM 1206 5% .25W	M234204130
R40, R58, R59, R62, R96, R97, R100, R148	8	RES 100K .25W 1% SM1206	M234204133
R164, R163, R159, R153, R64, R151, R132, R117, R116	9	RES 2K .25W 1% SM1206	M234204144
R103, R145, R140, R101, R95, R114, R133, R135	8	RES 30K .25W 1% SM1206	M234204145
R154, R160, R156, R63, R129	5	RES 5.49K .25W 1% SM1206	M234204148
R50, R9, R82, R7	4	RES 10 OHM 1206 1% .25W	M234250601
R65, R69, R77, R162, R36	5	RES 24.9 OHM 1206 1% .25W	M234250603
R141, R146, R139, R119, R115, R99, R93, R134	8	RES 47 OHM 1206 1% .25W	M234250605
R166, R53, R18, R81, R125	5	RES 75 OHM 1206 1% .25W	M234250608
R52, R167, R126, R86, R4	5	RES 100 OHM 1206 1% .25W	M234250609

Reference Designator	Quantity	Description	Part Number
R157, R161, R155, R130, R128, R3	6	RES 2.49K 1206 1% .25W	M234250615
R51, R106, R105, R90, R89, R88, R70, R107, R48, R17, R165, R71, R16, R27, R28, R47	16	RES 4.99K 1206 1% .25W	M234250619
R41, R61, R55, R39, R22, R21, R57, R56	8	RES 6.8K 1206 1% .25W	M234250621
R136, R94, R102, R112, R120, R147, R138, R143	8	RES 14.7K 1206 1% .25W	M234250623
R13, R14, R19, R26, R15, R12, R46, R37	8	RES 1.1K 1206 1% .25W	M234250641
R131, R158, R152, R127, R72, R60, R42, R73, R150	9	RES 3.83K 1206 1% .25W	M234250648
R66, R85, R92, R5	4	RES 11.3K 1206 1% .25W	M234250649
R10, R6, R67, R84	4	RES 5.62K 1206 1% .25W	M234250650
Q9, Q1, Q3, Q7	4	TRANSISTOR, MMBT2222ALT1	M239200079
CR13, CR18, CR2, CR3, CR4, CR6, CR7, CR8, CR9, CR12, CR14, CR16, CR10, CR15	14	DIODE REF SHUNT 2.5V 1%	M239350023
CR5, CR17, CR19, CR1, CR11	5	DIODE SWITCHING 150V 250MW	M239350024
FB14, FB18, FB6, FB20, FB17, FB16, FB15, FB13, FB12, FB11, FB10, FB9, FB7, FB19, FB5, FB4, FB3, FB2, FB1, FB8	20	FER 100 OHM 3A EMI 1206	M251100186

Receptacles

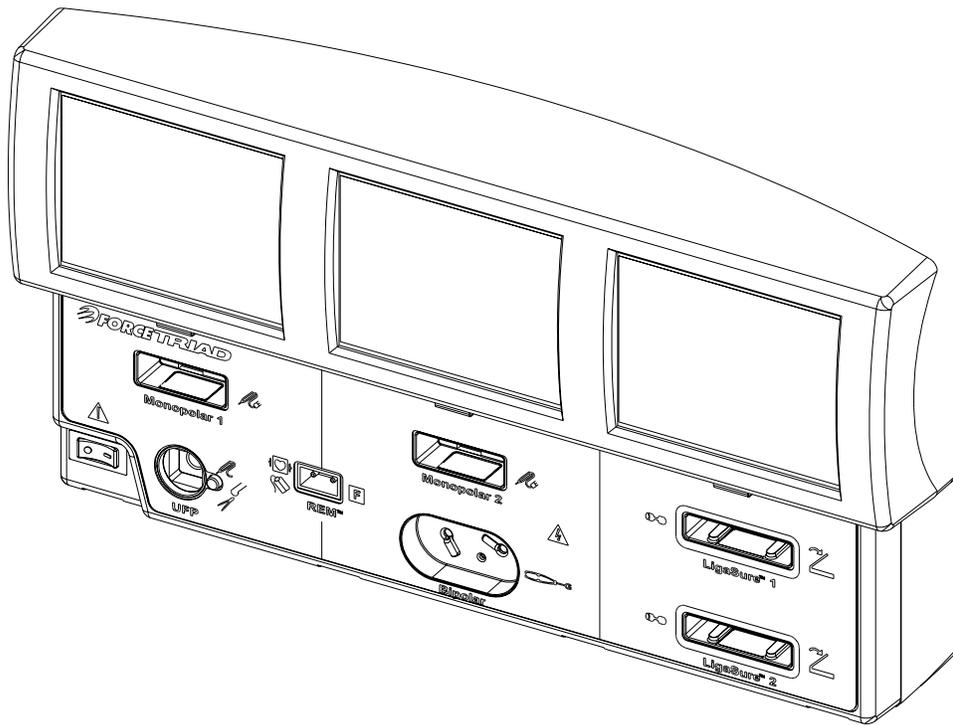

Service Parts

Receptacles Parts List

Reference Designator	Quantity	Description	Part Number
7	1	ASSY BI-POLAR RECEPTACLE	202750287
7	1	CABLE BIP OUTPUT FORCETRIAD	207500863
1	1	RECEPTACLE BIP MECH ASM	207500952
3	1	ASSY CABLE BIP SENSE	207500883
1	1	RECEPTACLE BI-POLAR	223150521
2	2	ACTUATOR SWITCH BI-POLAR	223150564
6	2	NUT HEX M1.6	224300042
4	2	SCREW M1.6 X .35 X 10MM	237050199
5	4	WASHER FLAT M1.6	253300055
10	1	UFP ASSEMBLY	202750289
	1	ASSY CABLE UFP POWER	207500880
	1	UFAP MECH ASSEMBLY	207500951
10	1	ASSY CABLE UFP SENSE	207500879
16	2	RING RETAINING .25 DIA	213100165
6	1	PIN, UFP SPRING	213140134
8	1	PIN, UFAP, ACTUATOR	213140138
15	2	PIN 1/16 DIA, 1/4L	213140139
14	1	PIN 1/16 DIA, 3/8L	213140140
9	1	ROD, PUSH RELEASE UFAP	222004022
4	3	ROLLER, UFP PROBE CONTACT	223150523
5	3	CONE UFP LEAD-IN	223150524
3	1	HOUSING UFP BACKPLATE	223150525
1	1	HOUSING UFP FRONTPLATE	223150526


Reference Designator	Quantity	Description	Part Number
2	1	GUIDE UFP TOP ROLLER	223150527
22	1	BRACKET UFAP DETECTION, SWITCH	223301251
23	1	BRACKET CLEVIS UFAP	223301252
7	1	CLEVIS ROCKER ARM UFP	223400966
11	1	SPRING COMPRESSION .088 OD	223500097
13	3	SPRING EXTENSION .094 OD	223500098
12	1	SPRING COMPRESSION .300 OD	223500099
17	0	SCR PNH PHIL M3 X 0.5 X 16	237050179
18	1	SCREW CHEESEHEAD SLOTTED M1.6	237050191
20	2	SCREW PANHD PHIL M3 X 0.5 X 45	237050192
19	4	SCREW HILO PNHDPHL 2-32 X 3/8	237050193
21	2	SCREW PANHD PHIL M2 X 0.4 X 6	237050194
8	1	ASSY REM CABLE NHP	202750291
1	0	PCB CONN 3CKT	208159003
2	0	TERM 18-24 AWG	208161001
6	1	ADPTR BK CVR	223100264
5	1	ADPTR HSG	223100562
1	2	CONT PIN SOL .093 DIA	208200290
7	0	SCR PLASTITE 4 X 3/8	237102173
4	0	SLVG PVC CLR 8AWG	249014015
	0	W T 20AWG WHT	255058007
13	1	RECEPTACLE ASM NHP MONOPOLAR	202750293
3	4	LABEL BARCODE NULL CODE FORCETRIAD	1000567
4	1	ASSY CABLE MONO 1 MODE	207500886

Reference Designator	Quantity	Description	Part Number
2	1	ASSY CABLE MONO 1 OUTPUT	207500887
1	1	RECEPTACLE ASM MONOPOLAR	207500928
2	6	SPRING PIN CONTACT	208250011
1	6	SPRING PIN CONTACT HOUSING	208250012
5	2	RETAINING RING .093 DIA	213130064
3	1	RECEPTACLE MONOPOLAR CONNECTOR	223150474
2	1	PIN HOUSING SPRING LATCH	223400931
3	3	BARREL, RF, SMART CONNECTOR	223400935
6	1	PIVOT MONOPOLAR RECEPTACLE	223400934
7	1	HOUSING SPRING LATCH SMART CON	223400936
4	1	SPRING PIVOT	223500092
8	1	SPRING LATCH	223500093
9	1	SPRINGCUP PLASTIC	223500096
5	0	TBG HT SHRK BLK 3/64 I.D.	249001006
12	1	RECEPTACLE ASM NHP MONOPOLAR 2	202750294
2	1	ASSY CABLE MONO 2 OUTPUT	207500888
1	1	RECEPTACLE LIGASURE W/INSERTS	223150563
2	2	BARREL, RF, SMART CONNECTOR	223400935
3	4	INSERT ELECTRODE NHP .104 LIG	223400954
4	1	PIN INSERT LIGASURE RECEPTACLE	223400981
2	1	HOUSING SPRING LATCH SMART CON	223400936
6	1	PIVOT LIGASURE RECEPTACLE	223400980
7	1	SPRING PIVOT	223500092
5	1	SPRINGCUP PLASTIC	223500096

Reference Designator	Quantity	Description	Part Number
4	1	SPRING .12OD X .25L	223500105
	1	ASSY CABLE LIG 1 OUTPUT	207500873
	1	LABEL BARCODR NHP-NULL CODE	216151481
	1	LIGASURE RECEPT CONTACT HSG	223150544
5	1	RECEPTACLE ASM NHP LIGASURE 2	202750296
	1	ASSY, RECEPTACLE, LIGASURE W/MECH	207002121
3	2	RETAINING RING .093 DIA	213130064
6	4	BAR CODE READER ASSY NHP	203200115
	1	SHROUD ASSY MIRROR/WINDOW	207500953
3	1	MIRROR RECEPTACLE	213400114
4	1	WINDOW LIGA/MONO RECEP	223150469
1	1	CCD SHROUD RIGHT NHP	223150513
2	1	CCD SHROUD LEFT NHP	223150514
	1	BARCODE SCANNER	210600017
5	1	SHIELD BAR-CODE SCANNER NHP	223400999
	2	SCREW PANHD PHIL M2 X 0.4 X 6	237050194
	0	WSHR FLAT M2	253300054

Service Parts

RF PCBA

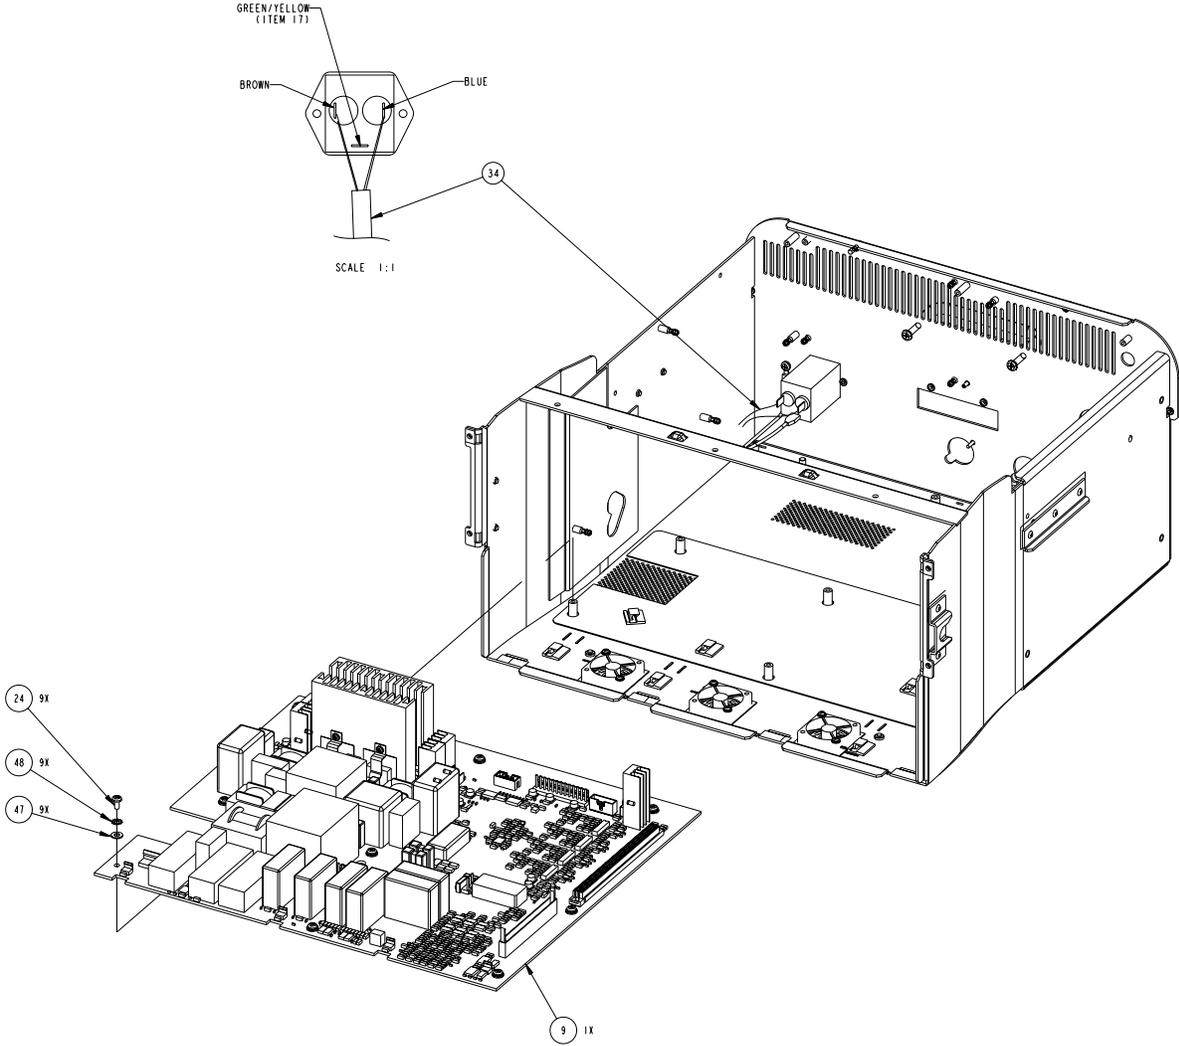

RF PCBA Parts List

Reference Designator	Quantity	Description	Part Number
9	1	PCB ASSY NHP RF	1000661
C85, C105	2	CAP POLPRO 250V	204200542
C109	1	CAP POLPRO 400V 10% 2.2 UF	204200544
C37	1	CAP POLPRO 160V 1UF	204200571
C135, C63, C50, C73, C79, C22, C74, C26, C72, C110, C31, C80, C95, C96, C97, C99, C103, C30	18	CAP .01UF 50V 10% SMD	204200581
C147, C144, C142, C129, C40, C131, C123, C43, C106	9	CAP 10UF 50V 20% SMD	204200582
C108	1	CAP .1UF MKS2 5% 250V POLY	204200722
C34, C33	2	DMC 8200PF 500V 5%	204300126
C153, C152	2	DMC 1000V 5% 2000PF	204301072
C35	1	CAP MICA DIP 1000V 5% 5100PF	204301081
C150, C151, C36, C84, C83, C82, C81	7	CAP .01UF RAD 5% 1000V MICA	204301095
C44	1	CAP POLPRO .047UF 400V 5%	204450013
C29, C32	2	CAP PPS 0.22UF100V 5%	204450018
J12	1	CONNECTOR PCB (13 CKT)	208160063
J7, J9, J1	3	CONN LKG 3CKT .1CNTS	208200324
J3	1	CONNECTOR 64 PIN	208300728
J8	1	CONN RCPT 32 PIN DIN	208300826
J4	1	HDR CIRC 6 STR LK .156 CTR	208300850
J6	1	CONN 150 POS 50X3 .100 F VERT	208300901
J5	1	CONN 3 POS HDR .156 VERT	208300908
J2	1	CONN 4 POS HDR .156 VERT	208300909

Service Parts

Reference Designator	Quantity	Description	Part Number
U46, U45, U37, U47	4	IC MOSFET DRIVER 12A NON-INV	210100096
U40, U51, U18, U23	4	IC MULT/DIV DUAL CHL LINEAR	210100100
Q3, Q2, Q4, Q1	4	IC FREDFET N-CHL PWR 800V 52A	210100101
U50	1	IC VR TO-220 7905CT	210300093
3	1	MT CBL TIE	213130021
9	4	CLIP CMTNT	213130037
12	2	THERMAL CONDUCTOR NHP RF	214200050
2	5	THERMAL CONDUCTOR	214200051
10	0	TIE W	222004001
HS3, HS7, HS2, HS5, HS6	5	HTSK MDM PWR	223400521
HS1, HS4	2	HEATSINK RF STAGE NHP	223400977
RL3, RL4, RL5	3	RELAY REED HIGH VOLTAGE	230017019
R111, R110, R119, R95	4	RES 30.1K AXIAL 1% 6W	234400306
4	0	SCR PNH PHIL STL 4-40X.25	237100472
8	5	SCR, PNH SLT 6-32X.25, NYLON	237300047
D5, D1, D2, D4, D6, D7, D8, D3	8	DIODE	239500019
RL19, RL18, RL17, RL16, RL6, RL14, RL13, RL15	8	RELAY DPDT 5KV 10A	243081003
L10, L7	2	INDUCTOR 90ÅH	251100180
L11	1	INDUCTOR, RF OUTPUT 15UH	251100209
L12, L13	2	INDUCTOR, RF 4.5UH	251100210
T8	1	TRANSFORMER RF LIG OUTPUT	251200115
T7	1	TRANSFORMER OUTPUT COAG	251200116
T10	1	XFMR SQ CORE ABP	251300036
T11, T12	2	XFMR S G DR	251300039


Reference Designator	Quantity	Description	Part Number
T9	1	XFMR SQ CORE REM	251300045
T2, T3, T5, T4	4	TRANSFORMER RF VOLTAGE SENSE	251300059
T1, T6	2	TRANSFORMER RF VOLTAGE SENSE	251300060
7	6	WSHR PL FLAT 6 R	253010001
5	6	SCR PNH PHIL 6-32 X .375	586005194
C17, C18, C19, C20, C21, C23, C15, C39, C6, C28, C12, C11, C10, C9, C41, C78, C7, C4, C3, C2, C1, C8, C158, C141, C76, C77, C143, C145, C161, C139, C159, C71, C157, C156, C155, C154, C148, C146, C160, C5, C102, C104, C107, C124, C126, C128, C101, C75, C98, C132, C130, C42	52	CAP SM X7R 50V 10% .1UF 1206	M204200603
C89, C90, C91, C94, C92, C60, C122, C127, C57, C133, C100, C134, C46, C38, C27, C16, C140, C13, C125, C116, C138, C118, C61, C88, C62, C114, C65, C69, C66, C113, C14, C48, C56, C53, C117, C149, C52, C59, C120, C70, C87, C47, C121, C49	44	CAP 1UF 25V 10% SM1206	M204200663
C136, C111, C86, C64, C58, C51, C45, C112	8	CAP 10PF 1206 5% 50V NPO	M204200712
C24, C25	2	CAP 1000PF 1206 10% 50V X7R	M204200715
C115, C137, C67, C54	4	CAP .18UF 1206 10% 50V X7R	M204200718
J11	1	CONN 30 POS.05 STR PCB VRT HDR	M208300874
J10	1	CONN 10POS SHOUEDED TRM STRP .10	M208300933
U33	1	IC D-O/A LM2904 SM	M210100059
U38, U29, U21, U16	4	IC AMP DIFF LP FLTR 2.5MHZ	M210100092
U8, U44, U1, U43, U9	5	IC TRANS DARL ARRAY HI V	M210100095

Reference Designator	Quantity	Description	Part Number
U27, U13	2	IC MOSFET DRVR 1.5A DUAL N-INV	M210100097
U36, U48	2	IC AND QUAD 2 INPUT	M210200070
U34	1	IC REFERENCE LDO MICROPWR	M210300133
U32, U41, U12, U28, U20, U25	6	IC OPAMP DUAL 160 MHZ R-R	M210400064
U17, U19, U31, U30, U22, U11, U42, U10, U6, U7, U24, U2, U3, U4, U5, U39	16	IC DUAL OP AMP 325MHZ SOIC8	M210400065
U35	1	IC COMPARATOR QUAD DIFF	M210410006
U26	1	IC INVERTER HEX SCHMITT TRIG	M210510094
U49	1	IC EEPROM SERIAL 2.7V RoHS	M210720051
U15, U14	2	IC UPOWER 12-BIT ADC SIOC8	M210740025
RL10, RL11, RL1, RL9, RL8, RL7, RL2, RL12	8	RLY SOLID STATE NHP SENSE	M230017018
RN2, RN1, RN3	3	RES 1K SOM14 5% .08W BUS	M234150016
R195, R229, R200, R205, R207, R210, R219, R223, R225, R228, R197, R234, R236, R241, R112, R251, R155, R253, R255, R256, R188, R96, R248, R115, R141, R139, R135, R132, R59, R146, R62, R153, R116, R117, R118, R130, R187, R162, R60, R171, R67, R185, R184, R182, R181, R175, R174, R173, R145, R172, R158, R170, R169, R168, R164	55	RES TF 0.25W 1% 1KOHM 1206PKG	M234201687
R242, R194, R152, R154, R243, R222, R224, R144, R129, R140, R196, R131	12	RES 0 OHM 1206 5% .25W	M234204130
R212, R213, R179, R177, R176, R215	6	RES 10K .25W 1% SM1206	M234204134
R136, R231, R202, R159	4	RES 133K 1206 1% .25W	M234204135
R214, R180	2	RES 20K 1206 1% .25W	M234204139

Reference Designator	Quantity	Description	Part Number
R178, R186	2	RES 2K .25W 1% SM1206	M234204144
R239, R240, R237, R238	4	RES 4.99 OHM 1206 1% .25W	M234250600
R81, R84, R85, R100	4	RES 20.5 OHM 1206 1% .25W	M234250602
R16, R25, R24, R23, R22, R19, R17, R18	8	RES 49.9 OHM 1206 1% .25W	M234250606
R30, R21, R20, R15	4	RES 73.2 OHM 1206 1% .25W	M234250607
R91, R90, R105, R104	4	RES 75 OHM 1206 1% .25W	M234250608
R211, R127, R133, R192, R246, R220, R150, R209, R156, R198	10	RES 100 OHM 1206 1% .25W	M234250609
R93, R103, R107, R89	4	RES 137 OHM 1206 1% .25W	M234250610
R11, R12, R13, R14, R79, R82, R83, R86, R87, R97, R98, R101, R102, R108, R109, R80	16	RES 499 OHM 1206 1% .25W	M234250611
R235, R167, R250, R163	4	RES 2.21K 1206 1% .25W	M234250614
R244	1	RES 2.49K 1206 1% .25W	M234250615
R147, R230, R232, R254, R201, R160, R137, R203	8	RES 3.01K 1206 1% .25W	M234250617
R41, R53, R113, R39, R183, R208, R226, R249, R252, R51, R29, R27, R54, R37	14	RES 4.99K 1206 1% .25W	M234250619
R114	1	RES 6.8K 1206 1% .25W	M234250621
R106, R88, R92, R94	4	RES 34 OHM 1206 1% .25W	M234250639
R206, R227	2	RES 2.15K 1206 1% .25W	M234250640
R247, R221, R199, R193, R157, R151, R134, R128	8	RES 1.5K 1206 1% .25W	M234250644
R121, R122	2	RES 332 1206 1% .25W	M234250651
R123, R126, R245, R189, R148, R190, R216, R217	8	RES 1.58K .25W 1% 1206	M234250666

Reference Designator	Quantity	Description	Part Number
R28, R40, R55, R42, R56, R32, R52, R38	8	RES PREC 3.16K.125W 0.1% 1206	M234250667
R35, R1, R3, R69, R65, R49, R6, R8, R48, R34	10	RES PREC 20K.125W 0.1% 1206	M234250668
R76, R78, R75, R72	4	RES PREC 2.0K .125W 0.1% 1206	M234250669
R63, R61, R43, R58, R46, R44, R57, R120, R10, R70, R66, R2, R4, R5, R64, R50, R124, R47, R45, R31, R33, R68, R36, R26, R9, R7	26	RES PREC 1.0K .125W 0.1% 1206	M234250670
R74, R77, R73, R71	4	RES PREC 158 .125W 0.1% 1206	M234250671
R99	1	RES 7.50K .25W 1% 1206	M234250673
CR1, CR2	2	DIODE ZENER 10V 500MV	M239350017
D10, D11, D9, D13, D15, D14, D12	7	DIODE REC. SCHTKY.5A SOD 123	M239700084
L5, L2, L3, L1, L4, L6, L8, L9	8	IND 120UH SHIELDED MOLDED	M251100205
R142, R143, R166, R165	4	RES 4.99K 1206 1% .25W	M234250619

Footswitch/Audio PCBA

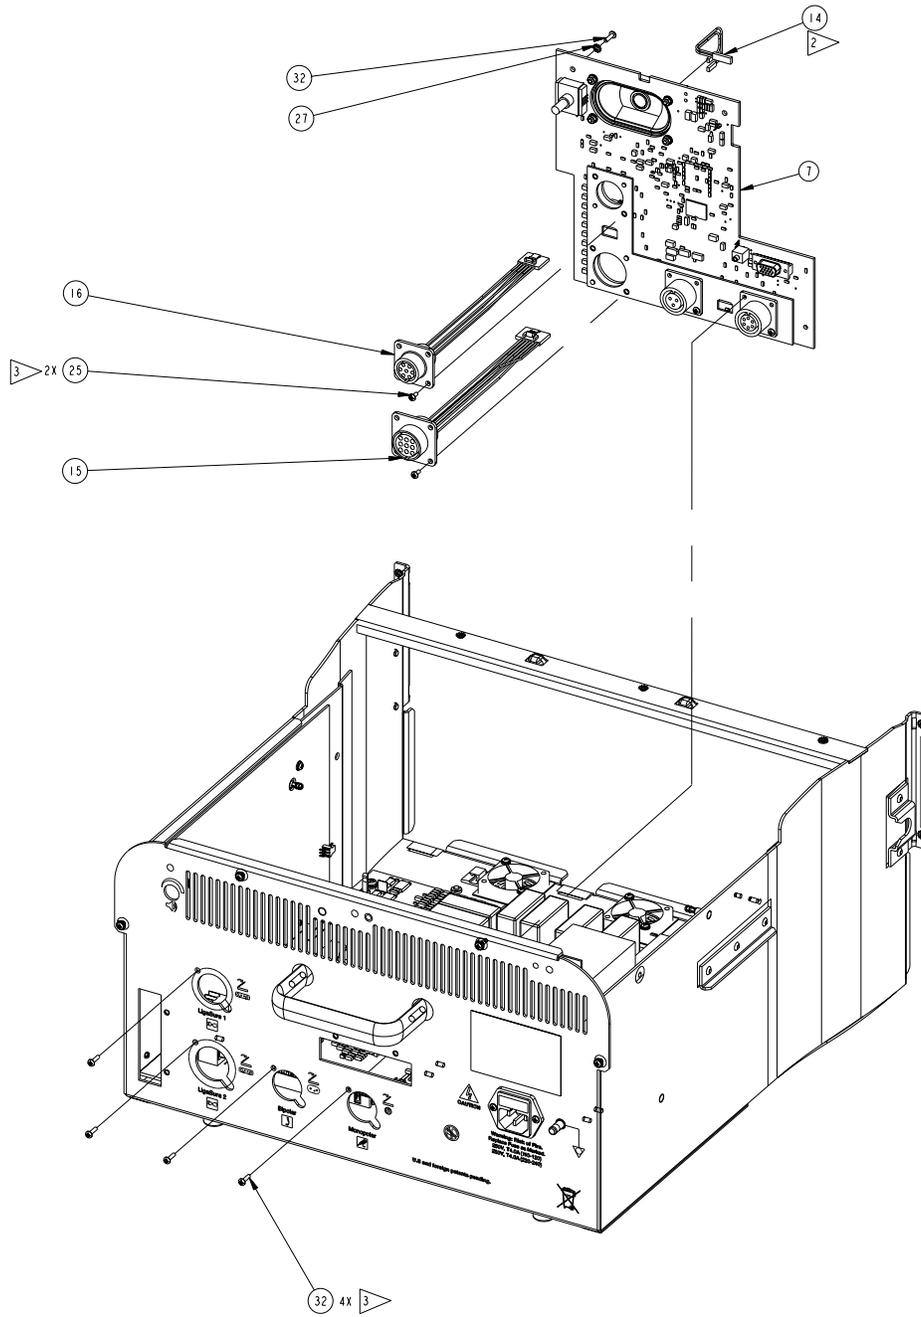

Service Parts

Footswitch/Audio PCBA Parts List

Reference Designator	Quantity	Description	Part Number
7	1	PCB ASSY NHP FOOTSWITCH	1000467
C236, C237	2	CAP TANT 68UF 20V 10% SMD	204200596
C140, C96, C30, C9, C138, C136, C131, C101, C54, C59, C122, C116, C111, C106, C52	15	CAP .01UF 2000V 10% X7R SMT	204200604
J5	1	CONN CIRC	208109000
J4	1	CONN 2 POS 100 RT ANG M HEADER	208300876
J7	1	CONN 6 P RECEPT CIR F PNL MNT	208300907
J2	1	CONN 15 POS RECEPT D-SUB VERT	208300913
J12	1	CONN 2 POS JACK F SUB-MINI	208400142
6	1	BRKT MOUNTING ASSY FTSW AUD/BRD	223301245
3	0	NUT HEX STL ZINC PLD M3X0.5	224300004
R14	1	POT 5K	236200103
4	0	SCR PNH PHIL M3 X .5 X 10	237050108
7	4	SCREW, PH, PHILLIPS, M3 X 6, ST	237050197
5	1	SPKR 8OHM 2W 82DB/W	241100010
2	0	WSHR FLAT M3.0	253300004
C137, C32, C135, C105, C139, C241, C100, C129, C51, C95, C31, C22, C4, C127, C110, C115, C58, C53	18	CAP .01UF 0603 10% 50V X7R	M204200670

Reference Designator	Quantity	Description	Part Number
C38, C39, C35, C33, C48, C29, C34, C40, C41, C43, C45, C47, C28, C16, C229, C49, C60, C179, C46, C167, C156, C157, C158, C159, C164, C20, C166, C148, C168, C223, C178, C177, C176, C112, C165, C142, C23, C21, C17, C14, C13, C12, C150, C141, C149, C143, C144, C145, C146, C147, C24, C134, C71, C183, C69, C86, C87, C88, C114, C84, C133, C83, C90, C91, C92, C66, C94, C89, C70, C68, C64, C63, C62, C61, C78, C79, C85, C67, C97, C187, C186, C185, C184, C81, C82, C80, C126, C77, C98, C76, C93, C75, C124, C73, C125, C182, C72, C181, C180, C130, C132, C74, C123, C103, C104, C107, C108, C102, C109, C128, C99, C113, C117, C118, C119, C120, C121	117	CAP .1UF 0603 10% 16V X7R	M204200671
C3, C1, C50, C44, C7, C8, C25, C26, C27, C65	10	CAP 1UF 0805 10% 16V X7R	M204200672
C175, C11	2	CAP 2.2UF 0805 10% 16V X7R	M204200673
C56, C169, C57	3	CAP 10uf 1206 5% 50V X7R	M204200674
C155	1	CAP 2200PF 0603 10% 100V X7R	M204200688
C224, C225	2	CAP 5PF 0603 5% 50V COG	M204200693
C232, C234	2	CAP 10PF 0603 5% 50V COG	M204200694
C231, C233	2	CAP 27PF 0603 5% 50V COG	M204200695
C235	1	CAP 1500PF 0603 5% 50V X7R	M204200697
C230	1	CAP .015UF 0603 5% 50V X7R	M204200699
C154, C153	2	CAP .033UF 0603 5% 25V X7R	M204200700
C238, C239	2	CAP 22UF 7343 10% 20V TANT	M204200962
C18	1	CAP 470UF ELECT 20% 63V AL	M204500192


Reference Designator	Quantity	Description	Part Number
C170, C6, C15, C55, C171, C172, C173, C174, C42, C5	10	CAP 10uf 3528 20% 10V TANT	M204600093
C163, C162, C160, C161	4	CAP .1UF 3216 10% 50V TANT	M204600096
C227	1	CAP 1UF 3216 10% 20V TANT	M204600101
C240, C37, C10	3	CAP 4.7UF 3528 10% 20V TANT	M204600102
C36, C228	2	CAP 47UF 7343 10% 20V TANT	M204600104
C2, C19	2	CAP 100uf 7343 20% 20V TANT	M204650008
J15	1	CONN 30 POS.05 STR PCB VRT HDR	M208300874
J3	1	CONN 1x6 .100 HEADER	M208300875
J14	1	CONN 7 POS HDR .100 VERT LTCH	M208300904
J1	1	CONN 8 POS HDR .100 VERT LTCH	M208300905
J16	1	CONN 10POS SHOUEDED TRM STRP .10	M208300933
J17	1	CONN 16POS SHOUEDED TRM STRP .10	M208300934
U5	1	IC AMP AUDIO DUAL 6W	M210100084
U6, U29, U28, U27, U26	5	IC DIGITAL ISOL 4-CH	M210200071
U22	1	IC DIGITAL ISOL 4-CH SPLIT INPUTS	M210200272
U73	1	IC PROGR REFERENCE 2.5-36V	M210300126
U16	1	IC REG SWTCHR STPDWN .6A 500KHZ	M210300136
U4	1	IC 500MA 2.5V LDO REG 8-SOIC	M210350005
U14	1	IC 500MA 3.3V LDO REG 8-SOIC	M210350006
U23	1	IC OP AMP DUAL R-R IN/OUT	M210400063
U30, U10, U15, U2	4	IC COMPARATOR QUAD W REF	M210410011
U69	1	IC DC/DC CONTROLLER PUSH/PUL	M210600012
U8	1	IC PROM PROGR 1MBIT 3.3V	M210720048
U3	1	IC MEMORY FLASH 2.7V	M210720049

Reference Designator	Quantity	Description	Part Number
U21	1	IC EEPROM SERIAL 2.7V RoHS	M210720051
U1	1	IC DAC STEREO 96KHZ	M210750010
U9	1	IC DAC QUAD 12-BIT R-R	M210750014
U7	1	IC FPGA 2.5V 100K GATE SPART 2	M210780023
U13	1	XCVR, RS232, .3V, TSOP16	M210800049
U12, U11	2	IC ACCELERATOR SMBUS	M210800052
K1	1	RLY SOLID STATE NHP SENSE	M230017018
R2	1	RES .25W 5% 180 OHM 1206 SMD	M234204109
R30	1	RES 33.0 OHM 5%0 0.1W 0603	M234250509
R7, R3	2	RES 49.9 OHM 1% 0.1W 0603	M234250510
R35	1	RES 150 OHM 5% 0.1W 0603	M234250511
R90, R201	2	RES 1K 1% 0.1W 0603	M234250515
R78, R76, R74, R68, R17, R62, R57, R49, R41, R53, R25, R15, R45, R19, R4	15	RES 1.4K 0603 1%0.1W THICK FLM	M234250517
R29, R75, R39, R63, R23, R16, R9, R5, R77, R69, R42, R54, R26, R50, R18, R20, R46, R58, R79	19	RES 2.15K 1% 0.1W THICK FILM	M234250519
R1, R24, R10, R11, R21, R22, R86, R32, R89, R36, R66, R70, R71, R88, R34, R92, R87, R31	18	RES 4.7K 5% 0.1W THICK FILM	M234250520
R100, R64, R65	3	RES 10K 1% 0.1W THICK FILM	M234250521
R202	1	RES 100K 1% 0.1W THICK FILM	M234250522
R33, R6, R91	3	RES 0.0 OHM 0603 5% .0625W	M234250528
R97, R98	2	RES 511 OHM 2512 1% 1W	M234250544
R12, R27, R37, R40	4	RES 16.9K 0603 1% .1W	M234250548
R99	1	RES 0.05 OHM 1206 1% .25W	M234250550

Reference Designator	Quantity	Description	Part Number
R192	1	RES 976 OHM 0603 1% .1W	M234250557
R198	1	RES 2.49K 0603 1% .1W	M234250559
R110	1	RES 5.11K 0603 1% .1W	M234250564
R199	1	RES 15K 0603 1% .1W	M234250567
R193	1	RES 16.9K 0603 1% .1W	M234250568
R194, R195	2	RES 36.5K 0603 1% .1W	M234250570
R205	1	RES 47K 0603 1% .1W	M234250571
R204	1	RES 49.9K 0603 1% .1W	M234250572
R203	1	RES 191k 0603 1% .1W	M234250573
R101	1	RES 30.1K 0603 1% .1W	M234250663
R96, R95, R94, R93	4	RES 27K 0805 5% .125W	M234250664
R38, R43, R28, R13	4	RES 2.4M 0603 1% 1/10W	M234250674
U71, U70	2	IC MOSFET N-CHL PWR 30V	M239200092
D27	1	DIODE ZENER 8.5V 500MV	M239350014
D26, D25, D23, D24	4	DIODE SCHOTTKY 40V	M239350015
D16, D6, D18, D1, D2, D3, D5, D7, D8, D10, D11, D22, D4, D30, D12, D21, D20, D17, D15, D14, D13, D19	22	DIODE RECTIFIER ESD 7V 2A	M239350022
D28	1	DIODE RECT SCHTKY 40V 1.0 A	M239350028
D9	1	LED 80M 2.0V GRN-CL LED	M239750137
U72	1	IC OPTOCOUPLER 1CHL	M239750158
D29	1	DIODE SWITCHING 75V.25A 350MW	M239850042
Y1	1	OSC 11.2896MHz	M250010050
Y3	1	OSC 12.000MHz	M250010051

Reference Designator	Quantity	Description	Part Number
FB3, FB7, FB12, FB5, FB2, FB1, FB17, FB16, FB15, FB14, FB13, FB11, FB8, FB6, FB10, FB4, FB9	17	FER 100 OHM 3A EMI 1206	M251100186
L14, L11	2	IND 10UH PWR SW FREQ 1MHZ	M251100195
L1	1	IND 33UH PWR 0.65A 22MHz	M251100217
T12	1	TRANSFORMER, DC-DC, SM, 5KV ISO	M251200110
T13	1	TXFMR 100UH 1:1	M251200113

HVDC PCBA

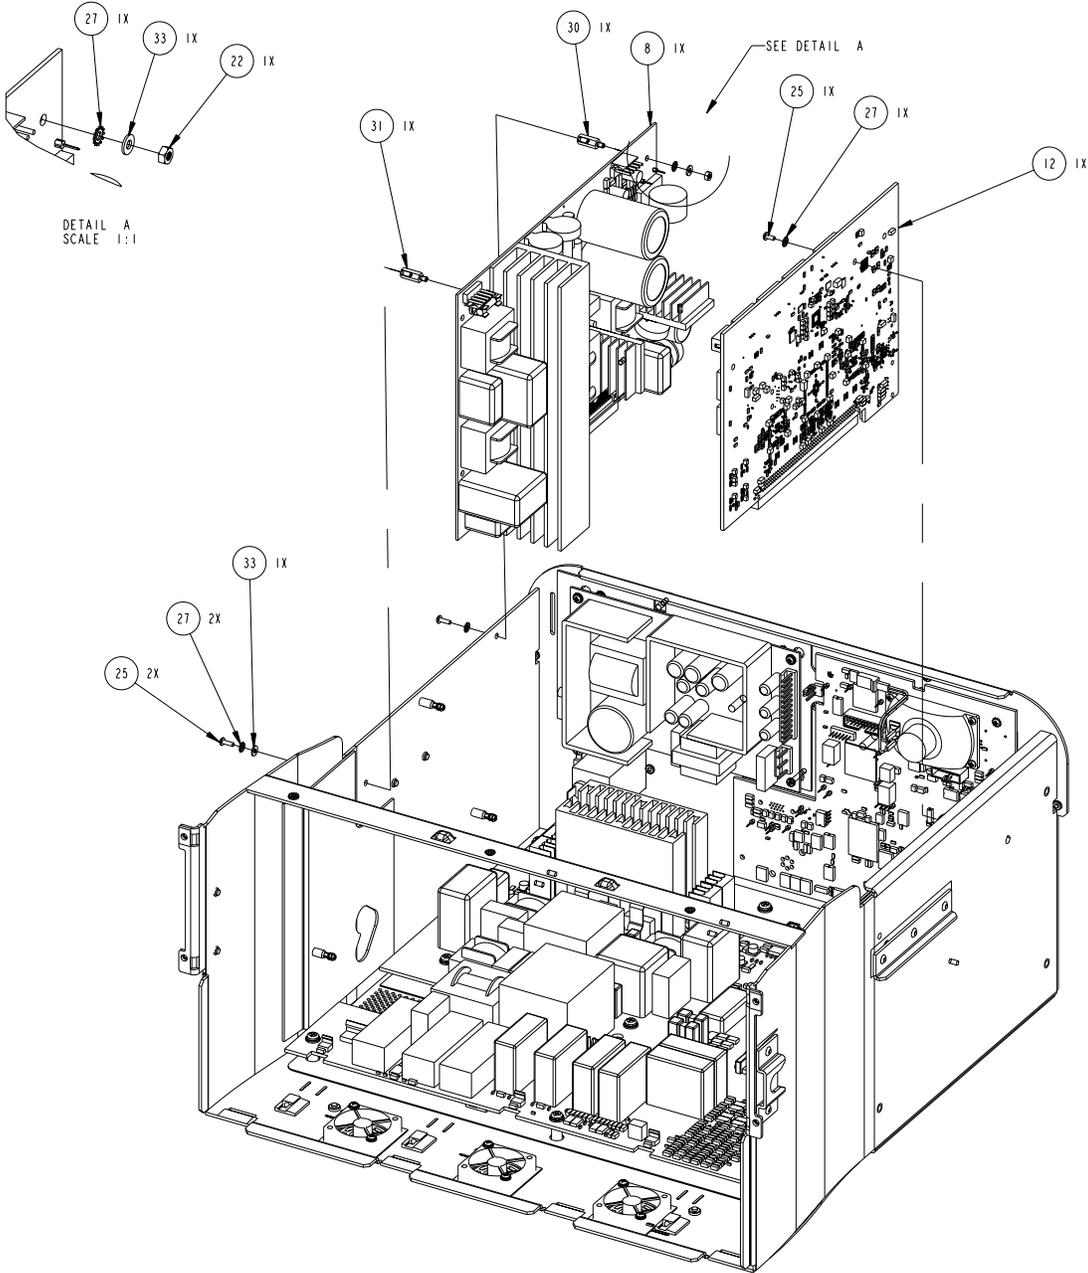

HVDC PCBA Parts List

Reference Designator	Quantity	Description	Part Number
8	1	PCB ASSY NHP HVDC	1000424
C26	1	CAP MICA 500V 5% 220 PF	204105010
C76, C47, C27, C19	4	CAP POLPRO 400V 10% 2.2 UF	204200544
C41, C64, C65, C66, C69, C70, C60, C52, C62, C43, C39, C8, C13, C23, C30, C34, C38, C51	18	CAP .01UF 50V 10% SMD	204200581
C36, C15, C53, C56, C58, C57, C24, C72, C3	9	CAP 10UF 50V 20% SMD	204200582
C71, C20	2	CAP 2.2UF MKP4 10% 1000V POLY	204200667
C17	1	DMC 1000V 5% 22PF	204301052
C5, C16	2	CAP ELCTLT AL SHT 680UF 400V	204500178
C1, C2	2	CAP 1UF RADIAL 20% 450V ELECT	204500185
C46	1	CAP 330UF SNP MNT 20% 250V POL	204500186
J4	1	CONN R ANG 32 PIN DIN	208300825
J1, J2	2	CONN 5 POS HDR .156 VERT	208300910
U10, U9, U3, U2	4	IC DRIVER MOSFET NON-INV 6A	210100066
OPT2, OPT1	2	OPTO PHOTOCOUPLER HI ISO	210100068
Q11	1	IC MOSFET N-CH PWR 200V	210100113
9	1	STANDOFF, PCB, PH, 6MM STAINLESS STEEL	213110654
5	7	CLIP CMTNT	213130037
11	1	THERMAL CONDUCTOR A NHP HVDC	214200049
	2	THERMAL CONDUCTOR NHP RF	214200050
10	1	FUSE 8A 250V 5MM	215100090
F1A	1	FUSE HLDR	215100526
	1	HEATSINK, NPG HVDCPS	222004019

Reference Designator	Quantity	Description	Part Number
7	2	HEATSINK RECTIFIER HVDC NHP	223400978
R38	1	RES POWER 150 OHM 4W 1% AXIAL	234250678
R12	1	RES 3.74K AXIAL 1% .5W	234400305
R10, R28	2	RES 30.1K AXIAL 1% 6W	234400306
R6, R9	2	RES 60.4K AXIAL 1% 3W	234400307
R4	1	RES 100K AXIAL 1% 4W	234400308
R14	1	RES 120K AXIAL 5% 1W	234400309
6	0	SCR PNH M3 10MM	237050138
3	0	SCR PNH M3 X 0.5 X 8 ZINC	237050149
Q4, Q6	2	TRANSISTOR 350V NPN TO-02	239200083
Q1, Q5	2	TRANS MOSFET N-CHL 800V 4.1A	239300042
Q8, Q10, Q15, Q12	4	TRANS MOSFET N-CH 500V 46A	239300043
D2	1	DIODE RECT BRIDGE 800V 8A	239700089
U5	1	DIODE RECT BRIDGE 600V 11A	239700090
R109, R108, R36, R2, R1	5	THMS INRUSH 5 OHM 6 AMP	240003005
K2, K1	2	RELAY DPST 110V COIL 10A	243081004
L4, L3, L1	3	INDUCTOR 90 μ H	251100180
L2	1	INDUCTOR ADJ NHP HVDC	251100215
T1	1	XFMR SENSE 5MH 1:50	251200114
T3	1	TRANSFOMER HVDC POWER	251200118
T4, T2	2	XFMR S G DR	251300039
4	0	WSHR FLAT M3.0	253300004
C67, C75, C73, C63, C61, C59, C54, C45, C44, C42, C40, C33, C29, C25, C74	15	CAP SM X7R 50V 10% .1UF 1206	M204200603

Reference Designator	Quantity	Description	Part Number
C11, C12, C14, C10, C22, C48, C21, C9, C6, C4, C28, C50, C49, C7	14	CAP 1UF 25V 10% SM1206	M204200663
C37	1	CAP 330PF 1206 5% 50V COG	M204200664
C31	1	CAP 2200PF 1206 5% 50V X7R	M204200665
C32	1	CAP 390PF 1206 5% 50V X7R	M204200713
C55	1	CAP .033UF 1206 10% 50V X7R	M204200717
C35	1	CAP .22UF 1206 10% 50V X7R	M204200719
J3	1	CONN 10POS SHOUEDED TRM STRP .10	M208300933
U14, U7	2	IC D-O/A LM2904 SM	M210100059
U8	1	IC MULTIPLIER ANOLOG	M210100065
U17	1	IC DRVR MOSFET N-INV 6A 8SOIC	M210100115
U6	1	IC PWM PHASE SHIFT CONTROLLER	M210200054
U11, U12	2	IC OPAMP DUAL RR IN OUT	M210400043
U13	1	IC COMPARATOR QUAD DIFF	M210410006
U1	1	IC DUAL DIFFERENTIAL COMP	M210410009
U15	1	IC INVERTER HEX SCHMITT TRIG	M210510094
U16	1	IC EEPROM SERIAL 2.7V RoHS	M210720051
K3	1	RELAY DPDT 12V 1A MICRO POL	M230017017
R89, R88, R83, R82, R78, R77, R92, R72, R35, R64, R58, R52, R48, R75, R24, R43, R23, R33, R39	19	RES TF 0.25W 1% 1KOHM 1206PKG	M234201687
R29, R76, R60, R46, R73, R30	6	RES 0 OHM 1206 5% .25W	M234204130
R15, R16, R20	3	RES 100K .25W 1% SM1206	M234204133

Reference Designator	Quantity	Description	Part Number
R101, R50, R53, R54, R55, R74, R86, R87, R57, R8, R98, R95, R91, R59, R93, R94, R49, R104	18	RES 10K .25W 1% SM1206	M234204134
R102	1	RES 133K 1206 1% .25W	M234204135
R21, R62	2	RES 20K 1206 1% .25W	M234204139
R17	1	RES 221K 1206 1% .25W	M234204140
R25, R26	2	RES 2K .25W 1% SM1206	M234204144
R99, R100	2	RES 5.49K .25W 1% SM1206	M234204148
R3	1	RES 909K 1206 1% .25W	M234204153
R18	1	RES 95.3K 1206 1% .25W	M234204154
R70, R44, R63, R34, R71, R110, R27, R68, R37, R32	10	RES 10 OHM 1206 1% .25W	M234250601
R11, R7	2	RES 100 OHM 1206 1% .25W	M234250609
R40	1	RES 499 OHM 1206 1% .25W	M234250611
R107, R105, R65	3	RES 2.49K 1206 1% .25W	M234250615
R47, R51	2	RES 3.57K 1206 1% .25W	M234250618
R85	1	RES 4.99K 1206 1% .25W	M234250619
R19	1	RES 33.2K 1206 1% .25W	M234250625
R42	1	RES 59K 1206 1% .25W	M234250626
R90, R13, R96	3	RES 102K 1206 1% .25W	M234250633
R97	1	RES 137K 1206 1% .25W	M234250634
R84	1	RES 232K 1206 1% .25W	M234250635
R41, R5	2	RES 49.9K 1206 1% .25W	M234250636
R79	1	RES 150K 1206 1% .25W	M234250642
R106, R22	2	RES 18.7K .25W 1% 1206	M234250657
R56	1	RES 9.09K .25W 1% 1206	M234250661

Reference Designator	Quantity	Description	Part Number
R103	1	RES 6.04K .25W 1% 1206	M234250662
R61	1	RES 1.87K, .25W 1% 1206	M234250672
R111	1	RES 0.1 OHM 5W 1% SMT	M234300099
Q7, Q3, Q2	3	TRANS NPH HI V 140V 600MA	M239100025
Q18, Q17, Q16	3	TRANS MOSFET N-CHL 50V 200MA	M239200081
Q14, Q13	2	TRANS AMP 40V NPN SOT23	M239200094
D9, D10, D30, D1	4	DIODE ZENER 1.5W 200V	M239350026
D4, D5, D7, D11	4	DIODE GLASS PASS 1A 1000V	M239500026
D12	1	DIODE ZENER 10V 350MW	M239600663
D3, D6	2	DIODE ZENER 15V 350MW	M239600664
D18	1	DIODE ZENER 27V 350MW	M239600665
D31, D29, D28, D27, D26, D25, D22, D21, D20, D19, D17, D16	12	DIODE REC. SCHTKY.5A SOD 123	M239700084
D24, D23, D15, D14, D13, D8	6	DIODE SWITCHING 75V.25A 350MW	M239850042
C68	1	CAP .01UF 50V 10% SMD	204200581
C18	1	DMC 1000V 5% 22PF	204301052
R31	1	RES 0 OHM 1206 5% .25W	M234204130
R45	1	RES 10K .25W 1% SM1206	M234204134
Q9	1	TRANS MOSFET N-CHL 50V 200MA	M239200081

Controller PCBA

Controller PCBA Parts List

Reference Designator	Quantity	Description	Part Number
12	1	PCB ASSY NHP CONTROLLER	1000063
TP7, TP32, TP33, TP30, TP21, TP13, TP31	7	CONN PC MALE 1 PIN	208188001
J21	1	CONN 9 POS RECEPT RT ANGLE DB9	208300880
J18	1	CONN ETHERNET MOD RECEPT	208300881
J13	1	CONN 4P RTANG RCPT TYPE B USB	208300883
J20	1	CONN 150 PIN TYPE C RT ANG EUR	208300888
J16	1	CONN 8 POS THRU HOLE JACK	208400140
U40	1	IC DC-DC DUAL 5V-3.3V ISO 1W	210600018
U31	1	IC DC-DC DUAL 5V-5V ISO 1W	210600019
	1	BATRY SNAPHAT TIMEKEEPER SRAM	250020035
C402, C326, C328, C329, C331, C332, C335, C336, C403, C396, C416, C413, C415, C319, C337, C197, C5, C109, C191, C192, C193, C414, C195, C417, C317, C204, C277, C278, C279, C280, C281, C311, C194, C419, C411, C427, C423	37	CAP .01UF 0603 10% 50V X7R	M204200670

Reference Designator	Quantity	Description	Part Number
C490, C522, C564, C523, C521, C565, C126, C184, C183, C182, C181, C178, C177, C176, C45, C130, C187, C123, C88, C86, C71, C58, C49, C48, C46, C175, C392, C489, C491, C488, C487, C438, C437, C424, C420, C185, C393, C186, C376, C374, C373, C372, C287, C284, C198, C87, C394, C510, C518, C514, C513, C111, C6, C511, C512, C508, C505, C504, C503, C502, C495, C492, C493, C494, C497, C499, C500	67	CAP .1UF 0603 10% 16V X7R	M204200671
C550, C83, C465, C466, C545, C549, C82, C546, C462, C81	10	CAP 1000PF 0805 5% 50V COG	M204200677
C14, C19, C21, C11, C28, C9, C54, C56, C55, C26	10	CAP .01UF 0805 5% 16V COG	M204200678
C496, C112, C113, C114, C115, C498, C501, C519, C517	9	CAP 1UF 0603 10% 10V X5R	M204200680

Service Parts

Reference Designator	Quantity	Description	Part Number
C305, C306, C307, C308, C309, C310, C312, C313, C61, C324, C44, C47, C50, C51, C52, C314, C325, C315, C323, C322, C321, C320, C318, C63, C53, C293, C267, C269, C270, C271, C272, C273, C274, C275, C282, C285, C286, C289, C290, C60, C299, C64, C68, C69, C70, C302, C291, C300, C292, C298, C297, C296, C107, C295, C266, C301, C142, C242, C153, C152, C172, C151, C149, C148, C147, C146, C145, C155, C143, C157, C141, C218, C220, C221, C222, C223, C188, C189, C224, C225, C226, C144, C161, C167, C166, C201, C205, C208, C209, C210, C211, C165, C164, C154, C162, C229, C160, C212, C213, C169, C170, C214, C215, C216, C217, C159, C158, C163, C95, C108, C106, C238, C105, C103, C102, C101, C100, C99, C98, C227, C96, C131, C243, C244, C245, C246, C247, C248, C249, C250, C251, C252, C253, C97, C239, C254, C230, C231, C232, C233, C234, C235, C236, C237, C196, C360, C117, C199, C119, C240, C140, C139, C138, C137, C136, C135, C134, C133, C132, C228, C43, C540, C451, C441, C42, C551, C358, C548, C547, C544, C543, C439, C541, C436, C539, C538, C443, C444, C445, C446, C447, C448, C449, C401, C542, C426, C536, C404, C405, C406, C407, C408, C409, C412, C418, C440, C422, C452, C428, C429, C430, C431, C432, C433, C434, C553, C435, C552, C421, C520, C450, C481, C482, C483	371	CAP .01UF 0402 10% 16V X7R	M204200683

Reference Designator	Quantity	Description	Part Number
C484, C537, C485, C486, C509, C479, C516, C478, C526, C527, C528, C529, C530, C531, C532, C533, C534, C535, C515, C467, C453, C454, C455, C456, C457, C458, C459, C460, C461, C480, C464, C400, C468, C469, C470, C471, C472, C473, C474, C475, C476, C477, C463, C352, C2, C342, C343, C344, C345, C346, C347, C348, C349, C339, C351, C8, C353, C354, C355, C356, C357, C200, C359, C7, C442, C350, C32, C41, C40, C39, C38, C37, C36, C35, C34, C33, C341, C334, C3, C31, C30, C24, C338, C23, C22, C20, C17, C13, C330, C554, C571, C361, C570, C569, C568, C567, C566, C562, C558, C557, C363, C555, C572, C385, C386, C387, C388, C389, C390, C395, C397, C398, C399, C556, C379, C364, C365, C366, C367, C368, C369, C370, C371, C378, C383, C377, C384, C382, C381, C91, C72, C73, C80, C94, C93, C84, C256, C85, C265, C92, C262, C258, C259, C90, C260, C261, C255, C264, C89, C263, C257, C316, C294, C59, C57, C303, C304	371	CAP .01UF 0402 10% 16V X7R	M204200683
C127	1	CAP 4.7uf 3216 10% 10V TANT	M204600092
C288, C559, C560, C561, C563	5	CAP .1UF 3216 10% 50V TANT	M204600096
C524, C16, C25, C74, C75, C77, C78, C79, C118, C125, C128, C525, C507, C76, C506, C4, C15	17	CAP 10UF 3528 10% 16V TANT	M204600097

Reference Designator	Quantity	Description	Part Number
C268, C206, C12, C18, C203, C276, C62, C362, C241, C207, C375, C29, C380, C65, C156, C283, C190, C67, C202, C333, C425, C410, C391, C327, C150, C340, C66	27	CAP 47UF 3528 10% 10V TANT	M204600098
C104, C219	2	CAP 470UF 7343 20% 6.3V TANT	M204600100
C27, C10	2	CAP 100uf 7343 20% 20V TANT	M204650008
J12	1	CONN 30 POS.05 STR PCB VRT HDR	M208300874
J11, J7	2	CONN 1 X 6 .100 HEADER	M208300875
J19, J14, J9, J8, J2, J3	6	CONN 8 POS 2 X 4 .100 HEADER	M208300884
J4	1	CONN 10 POS 2 X 5 .100 HEADER	M208300885
J6, J15	2	CONN 14 POS 2 X 7 .100 HEADER	M208300886
J5, J10	2	CONN 20 POS 2 X 10 .100 HEADER	M208300887
J17, J1	2	CONN 4 POS .100 VERT HDR	M208300894
U6	1	VOLTAGE SUPERVISOR .3V/.V	M210100064
U29	1	IC BUS BUFFER 2 WIRE LVL SHFT W EN	M210100111
U28	1	IC HEX SCHMT TRIG INV, .3V	M210200052
U27	1	IC, QUAD 2-IN NAND GATE, .3V	M210200053
U18, U26	2	IC QUAD 2-IN POS AND	M210200057
U21	1	IC QUAD 2-IN POS OR	M210200058
U56, U22	2	IC DIGITAL ISOL 4-CH	M210200071
U59, U20, U9	3	IC PREC REFERENCE 5V5MV	M210300135
U19	1	LINEAR, LDO, .3V, TO263	M210350002
U7	1	LINEAR, LDO, .8V, 3A, TO263	M210350003
U37, U34	2	DSP, 32BIT, FLOATING-PT, .8V	M210700009
U5	1	UP, POWERPC, 823E, .3V, BGA256	M210700010

Reference Designator	Quantity	Description	Part Number
U17	1	IC PROM FLASH 4MB	M210720050
U30	1	IC EEPROM SERIAL 2.7V RoHS	M210720051
U47, U48, U49, U46	4	ADC, 10BIT, 40MSPS, 3.3V	M210740019
U2	1	IC ADC OCTAL 10BIT 350KSPS SER	M210740026
U1	1	DAC, QUAD, 10 BIT, SERIAL, VOLTAGE	M210750009
U8, U10	2	IC DAC OCTAL 12 BIT R-R	M210750015
U50, U52, U51, U45, U44, U15, U14, U43	8	SDRAM, 256MBIT, 4M X 16 X 4 BANK	M210770007
U41, U53, U13, U12	4	IC RAM FLASH 256M 16 X 16	M210770009
U11	1	IC SRAM TIMEKEEPER 256KBIT	M210770010
U24	1	IC SRAM SYNC 128 X 36	M210770011
U35	1	IC FPGA 1.8V 400K	M210780020
U23	1	XCVR, USB 1.1, .3V	M210800047
U33	1	XCVR, EHTERNET, .3V, TQFP80	M210800048
U57	1	XCVR, RS232, .3V, TSOP16	M210800049
U55, U16, U38, U39, U54	5	IC 16BIT BUS TXCVR 48-TSSOP	M210800054
U25	1	IC SERIAL TXCVR 1.5 GB	M210800056
U42, U3	2	IC 3.3V ZERO DELAY BUFFER 133M	M210800057
R161, R160, R158, R157, R162, R156, R176, R177, R178, R180, R181, R155, R230, R128, R69, R183, R72, R58, R59, R60, R61, R62, R63, R64, R65, R66, R67, R130, R71, R139, R116, R123, R125, R126, R127, R129, R135, R136, R137, R138, R68, R229	42	RES ARRAY 43 OHM 5% ISOL	M234150013
R213, R205, R204, R203, R152, R14, R286, R70, R288	9	RES ARRAY 4.7K 5% .031W ISOL	M234150014

Reference Designator	Quantity	Description	Part Number
R114, R132, R140	3	RES ARRAY 10K 5% .0625W BUSS	M234150015
R278, R146	2	RES 0 OHM 1206 5% .25W	M234204130
R182	1	RES 33.0 OHM 5%0 0.1W 0603	M234250509
R86, R222, R193, R101, R5, R100, R99, R98, R97, R315, R88, R102, R2, R3, R4, R85, R84, R7, R6, R89	20	RES 49.9 OHM 1% 0.1W 0603	M234250510
R10, R55, R56, R57, R74, R95, R96, R151, R9	9	RES 150 OHM 5% 0.1W 0603	M234250511
R145, R75, R109, R113, R115, R118, R119, R147, R141, R144, R143, R142, R124, R131, R122	15	RES 1K 1% 0.1W 0603	M234250515
R190, R106, R107, R108, R189, R287, R188	7	RES 4.7K 5% 0.1W THICK FILM	M234250520

Reference Designator	Quantity	Description	Part Number
R185, R197, R196, R195, R194, R192, R199, R187, R79, R179, R175, R220, R221, R173, R171, R191, R210, R214, R212, R211, R216, R217, R134, R198, R170, R215, R219, R209, R208, R207, R206, R200, R218, R1, R149, R92, R91, R90, R87, R83, R103, R81, R104, R8, R11, R13, R48, R76, R77, R82, R201, R168, R167, R166, R165, R163, R159, R93, R148, R169, R133, R121, R120, R112, R111, R110, R223, R255, R265, R264, R263, R262, R261, R260, R259, R258, R305, R256, R297, R253, R252, R251, R250, R249, R292, R303, R304, R257, R274, R291, R283, R293, R294, R282, R281, R280, R279, R266, R275, R299, R273, R272, R271, R270, R269, R268, R295, R224, R248, R277, R237, R306, R285, R300, R314, R243, R242, R241, R240, R313, R238, R284, R235, R234, R233, R232, R231, R228, R227, R226, R225, R239, R311, R309, R312, R244, R245, R246, R247, R307, R310	141	RES 10K 1% 0.1W THICK FILM	M234250521
R47, R52, R50	3	RES 33.0 OHM 0603 1% 0.1W	M234250523
R25, R36, R32, R31, R28, R27, R15, R26, R44, R24, R21, R20, R19, R16, R43, R164, R150, R80, R78, R254, R236, R184, R37, R172, R117	25	RES 0.0 OHM 0603 5% .0625W	M234250528
R267, R174	2	RES 10.0 OHM 0603 5% 0.1W	M234250529
R94	1	RES 25.5 OHM 0603 1% 0.1W	M234250531
R302, R301, R296, R73, R298	5	RES 100 OHM 0603 1% 0.1W	M234250533
R51	1	RES 1.5K 0603 1% 0.1W	M234250536

Service Parts


Reference Designator	Quantity	Description	Part Number
SW1	1	SW SPST 4MM SQ 100MA MOM	M236200120
D14	1	DIODE, 1N4148	M239350009
D6	1	DIODE SCHOTTKY 2A 20V	M239350011
D1	1	DIODE SCHOTTKY 1A 20V	M239350012
D13, D12, D11, D10, D9, D8, D7, D5, D4, D2, D3	11	LED 2.1V GREEN-CLEAR	M239750141
U32, U58	2	OSC 25MHZ HCMOS .3V	M250010047
U36	1	OSC 50.0MHZ 3.3V	M250010053
U60	1	OSC 48.0 MHz 3.3V	M250010055
FER12, FER64, FER16, FER29, FER14, FER27, FER26, FER25, FER24, FER23, FER22, FER21, FER20, FER19, FER63, FER17, FER30, FER15, FER13, FER11, FER10, FER9, FER8, FER7, FER6, FER5, FER4, FER3, FER18, FER45, FER60, FER59, FER58, FER54, FER53, FER52, FER51, FER50, FER49, FER48, FER28, FER46, FER31, FER40, FER32, FER33, FER34, FER35, FER36, FER37, FER47, FER39, FER44, FER41, FER42, FER43, FER38	57	FERRITE 600 OHM 0402 300MA	M251100190
FER1, FER2, FER55, FER56, FER61, FER62, FER57	7	FERRITE 33 OHM @ 100M 0603 BEAD	M251100216
U4	1	TYPT-T EMI FILTER, 20V, 1.5A	M251400016
C174, C173, C171, C168, C110, C179, C122, C124, C116, C180, C120, C121	12	CAP .1UF 0603 10% 16V X7R	M204200671
C1, C129	2	CAP 4.7uf 3216 10% 10V TANT	M204600092
R154	1	RES ARRAY 43 OHM 5% ISOL	M234150013

Reference Designator	Quantity	Description	Part Number
R105, R289	2	RES ARRAY 4.7K 5% .031W ISOL	M234150014
R153	1	RES 10K 1% 0.1W THICK FILM	M234250521
R35, R42, R41, R40, R38, R18, R34, R33, R30, R29, R23, R22, R17, R12, R45, R39, R276, R308, R49, R290, R53, R202, R54, R186, R46	25	RES 0.0 OHM 0603 5% .0625W	M234250528

Cable Assemblies

Cable Assemblies Parts List

Reference Designator	Quantity	Description	Part Number
16	1	ASSY CABLE MOD PLUG 8 POS	207500859
15	3	CABLE LCD-INVERTER FORCETRIAD	207500865
17	1	CABLE AC SWITCH HVPS FORCETRIAD	207500868
26	1	ASSY CABLE NHP STEER DISPLAY	207500872
25	4	FLAT FLEX CABLE 12COND	207500889
32	1	ASSY CABLE NHP FRNT-AC SWT	207500986
36	1	CABLE RF FOOTSWITCH FORCETRIAD	207500834
45	1	CABLE RETURN FORCETRIAD	207500862
38	1	CABLE RF-LVPS FORCETRIAD	207500867
37	1	CABLE HVPS-LVPS FORCETRIAD	207500869
17	1	ASSY CABLE CHASSIS-GND NHP	207500870
44	1	CABLE MONO OUT FORCETRIAD	207500871
40	1	ASSY CABLE NHP AUTO-BIPOLAR	207500874
15	1	ASSY CABLE LIGASURE 2 FT SWTCH	207500875
16	1	ASSY LIGASURE 1 FT SWTICH	207500876
41	1	ASSY CABLE NHP RF-STEER	207500878
14	1	ASSY CBL NHP SPKR	207500881
39	1	ASSY CABLE NHP ACTIVE BIPOLAR	207500949
35	1	ASSY CABLE NHP SHIELD-RF	207500950
34	1	ASSY CABLE NHP FILTER-AC SW	207500985

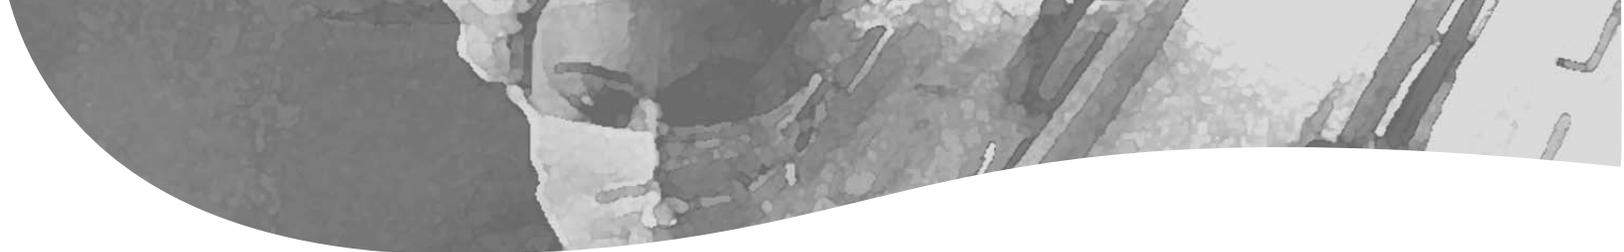


Schematics Supplement


This supplement contains the assembly drawings and schematics for the printed circuit board assemblies listed below:


- HVDC PCBA
- RF PCBA
- Steering Relay PCBA
- Display PCBA
- Footswitch/Audio PCBA
- Controller PCBA





HVDC PCBA

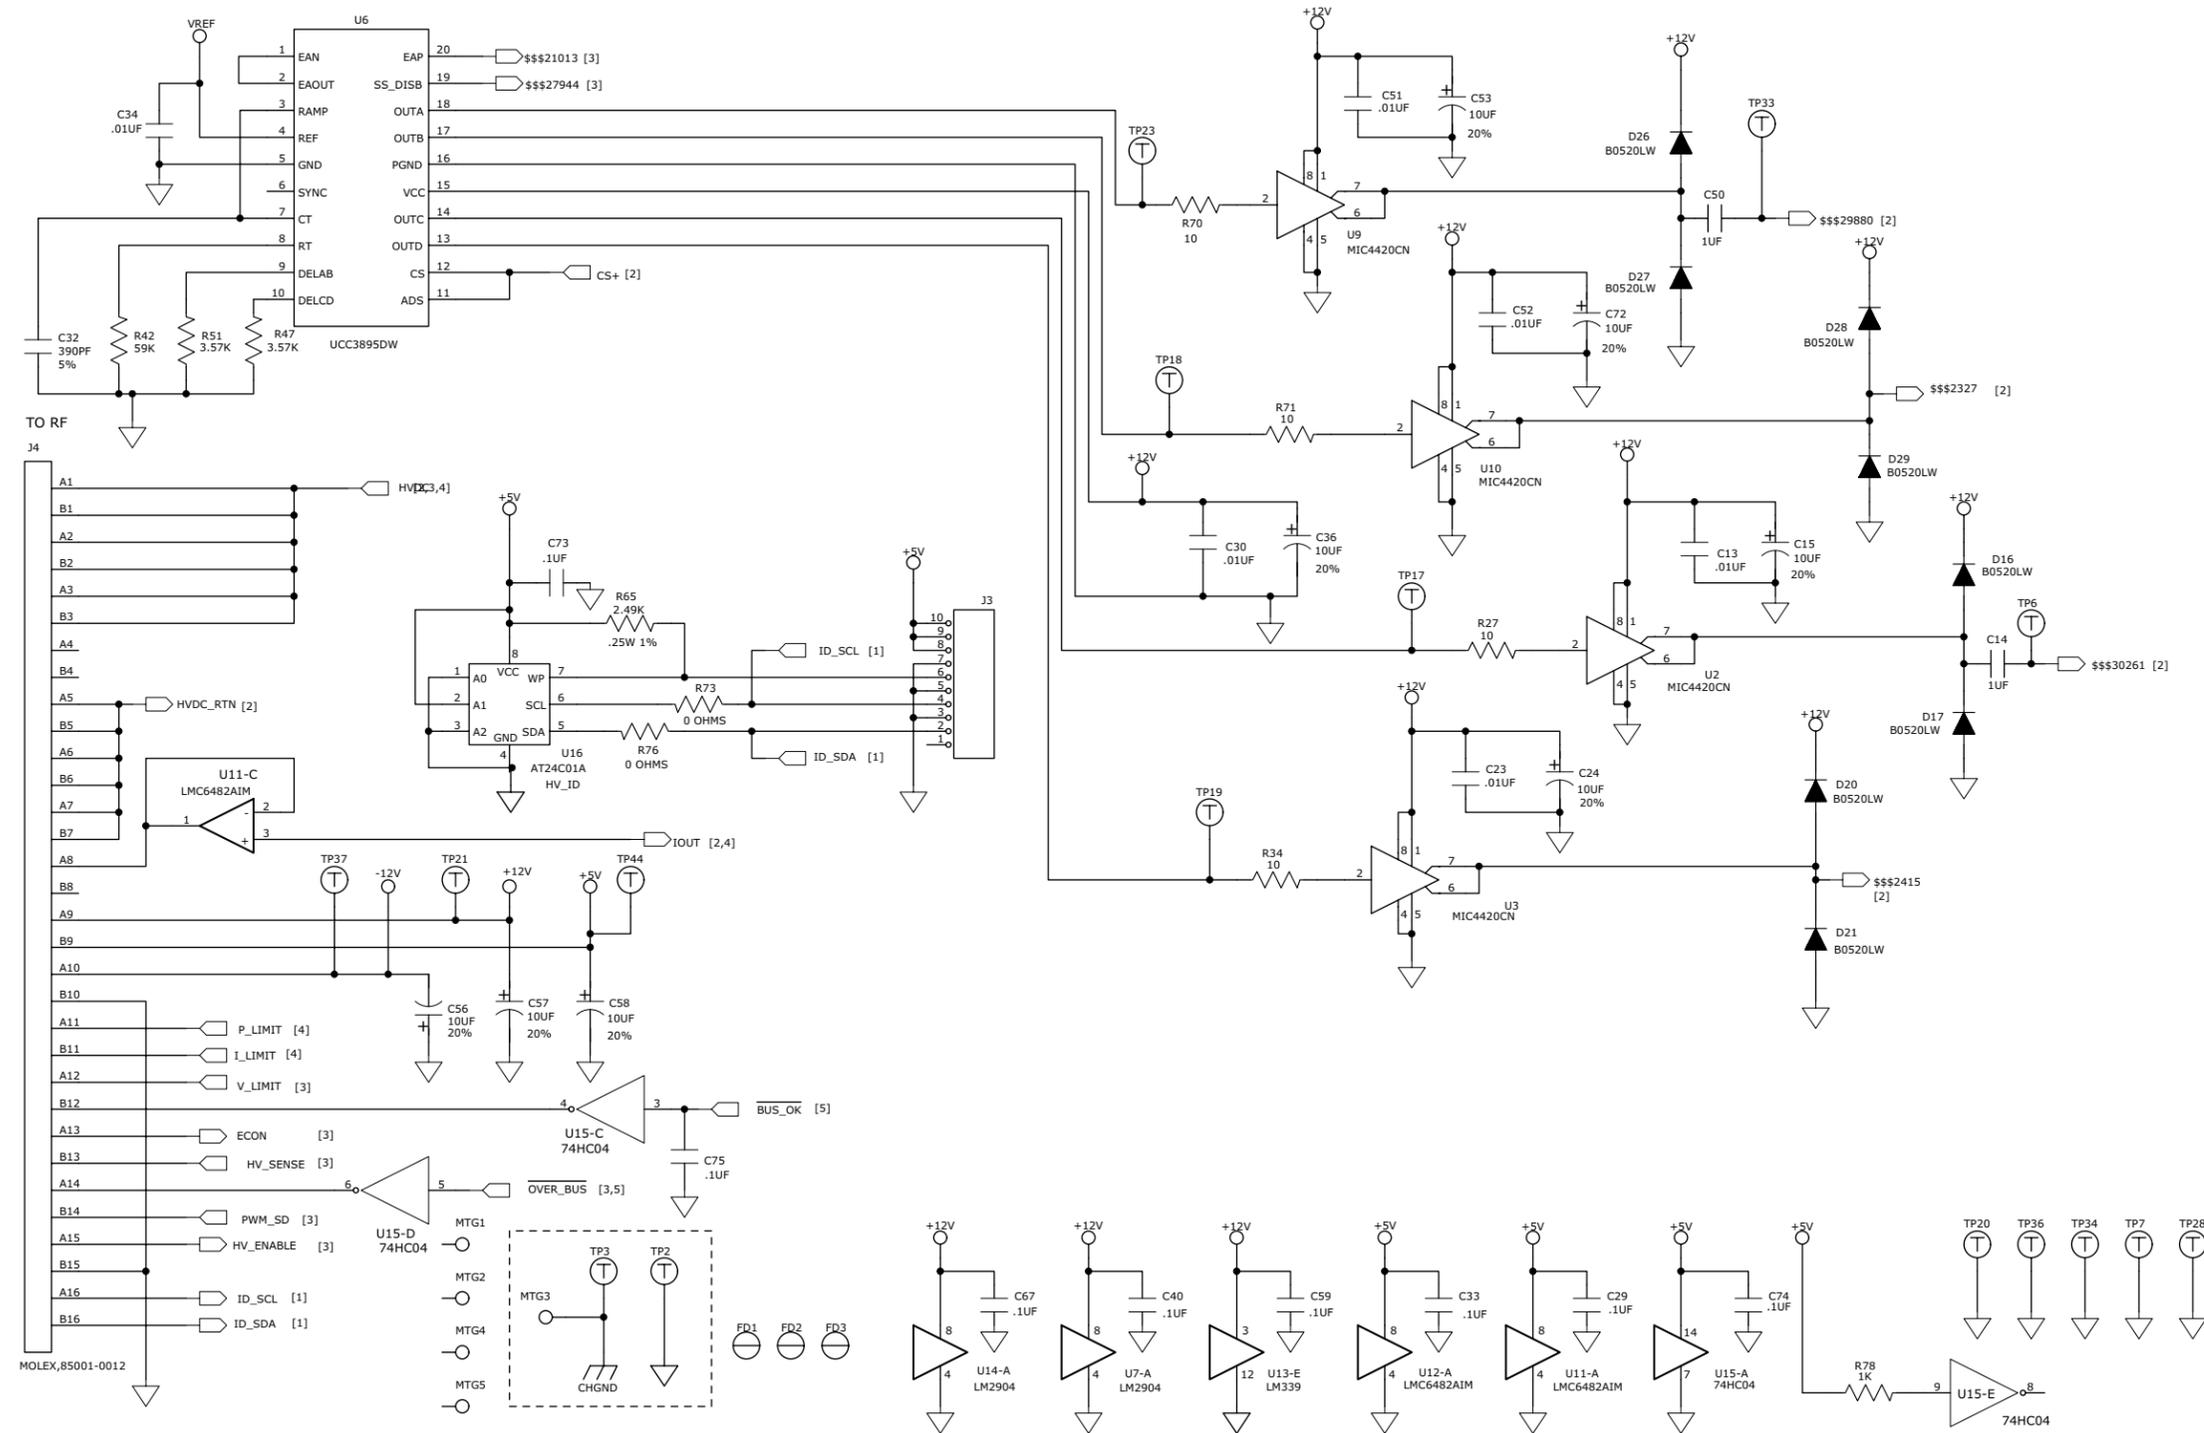


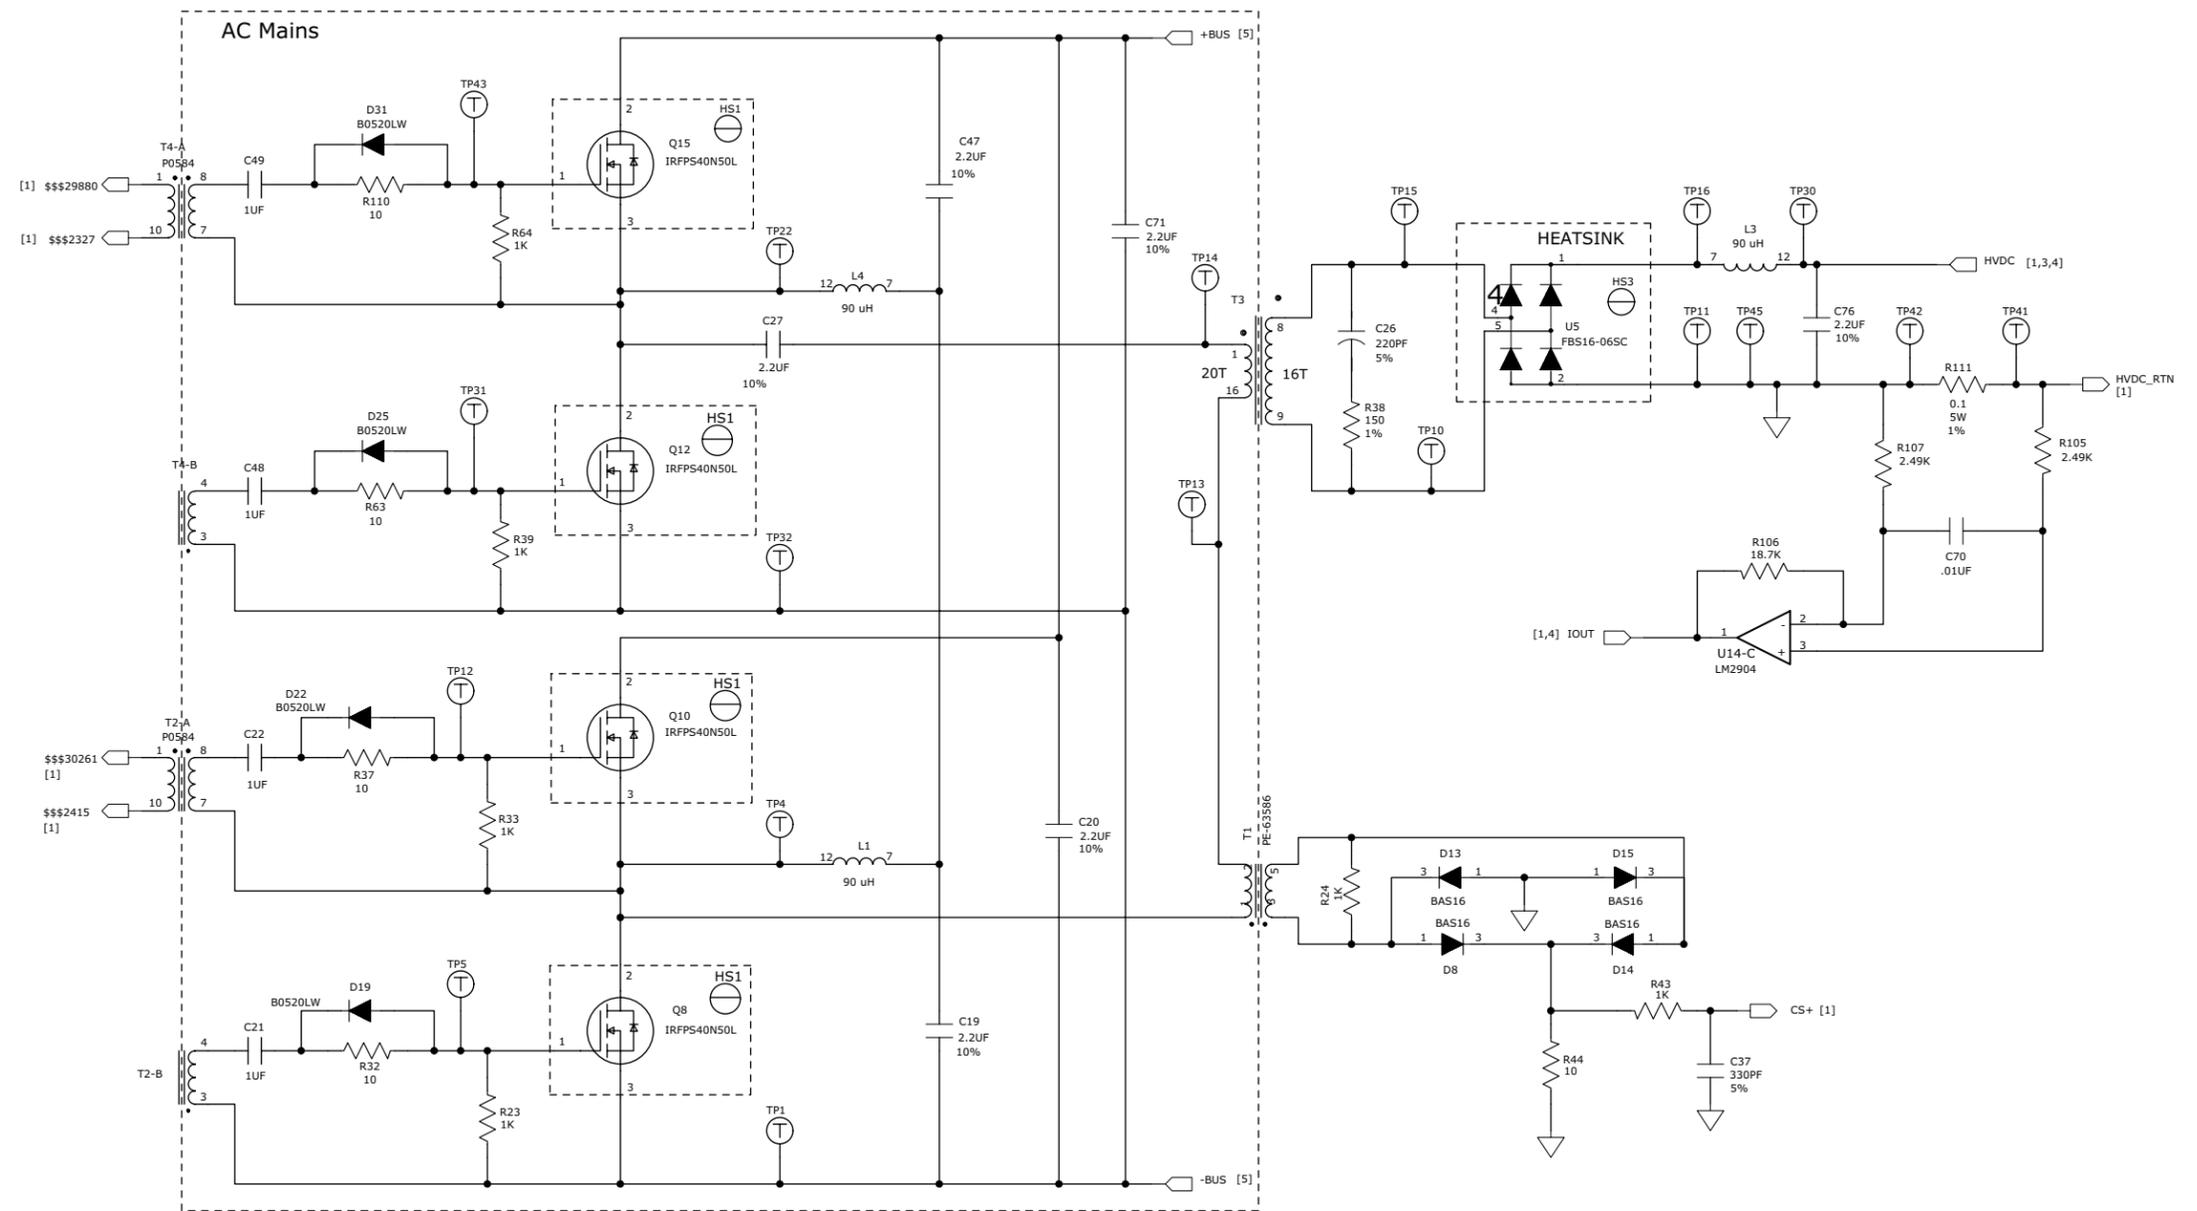







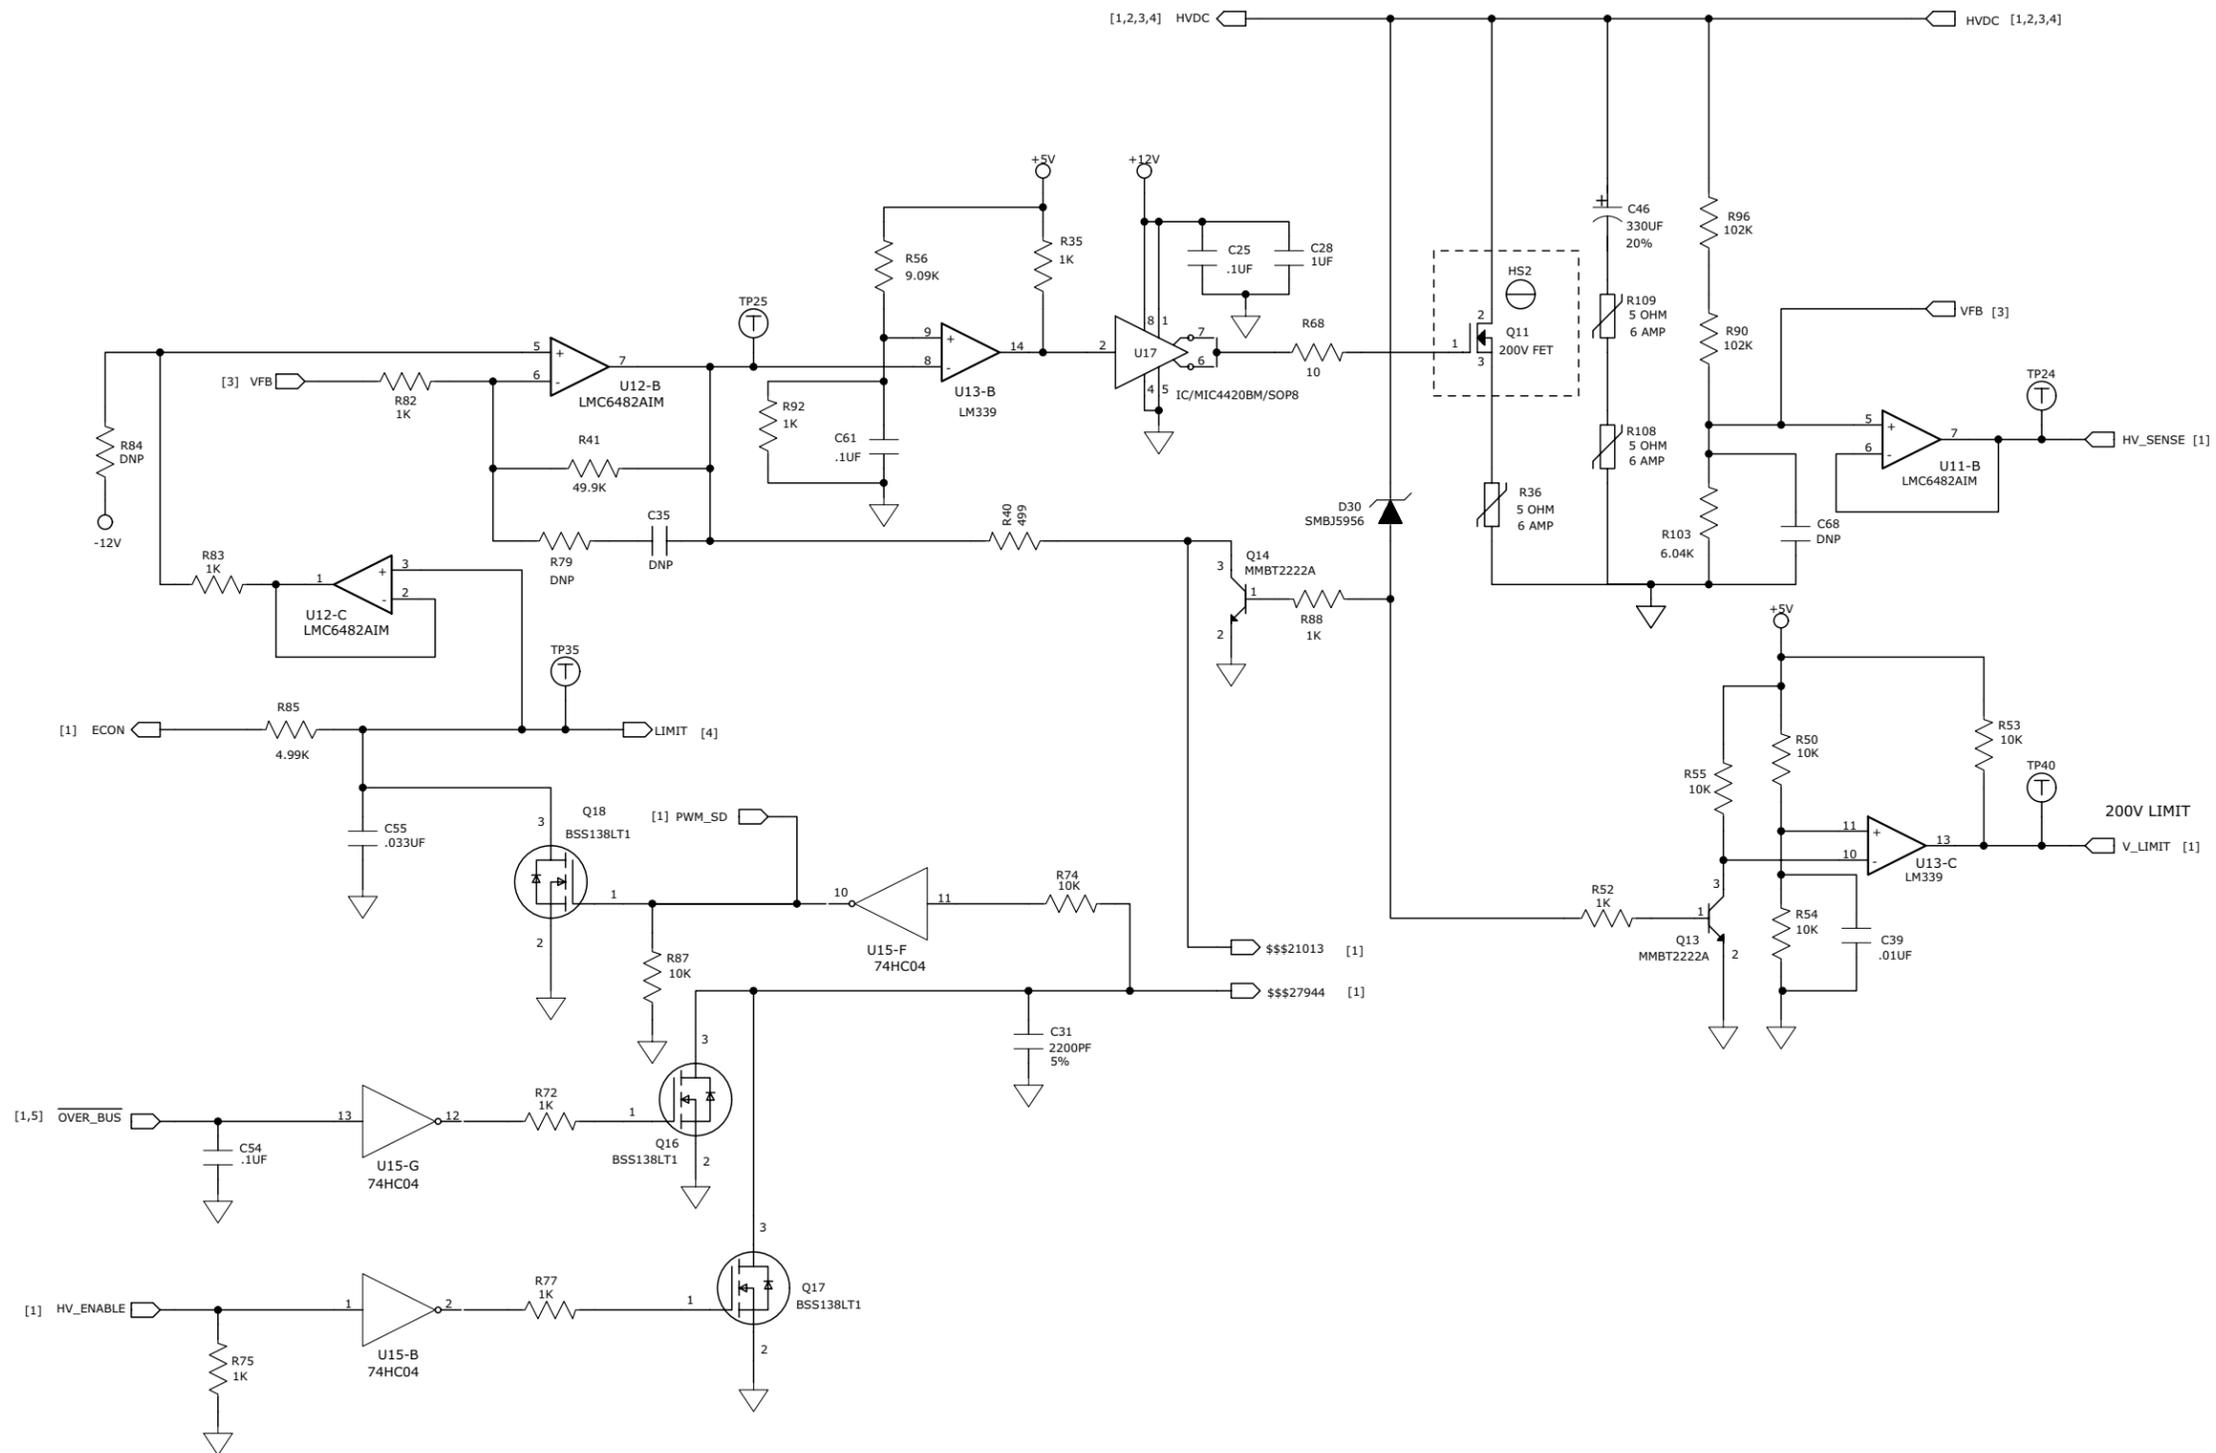


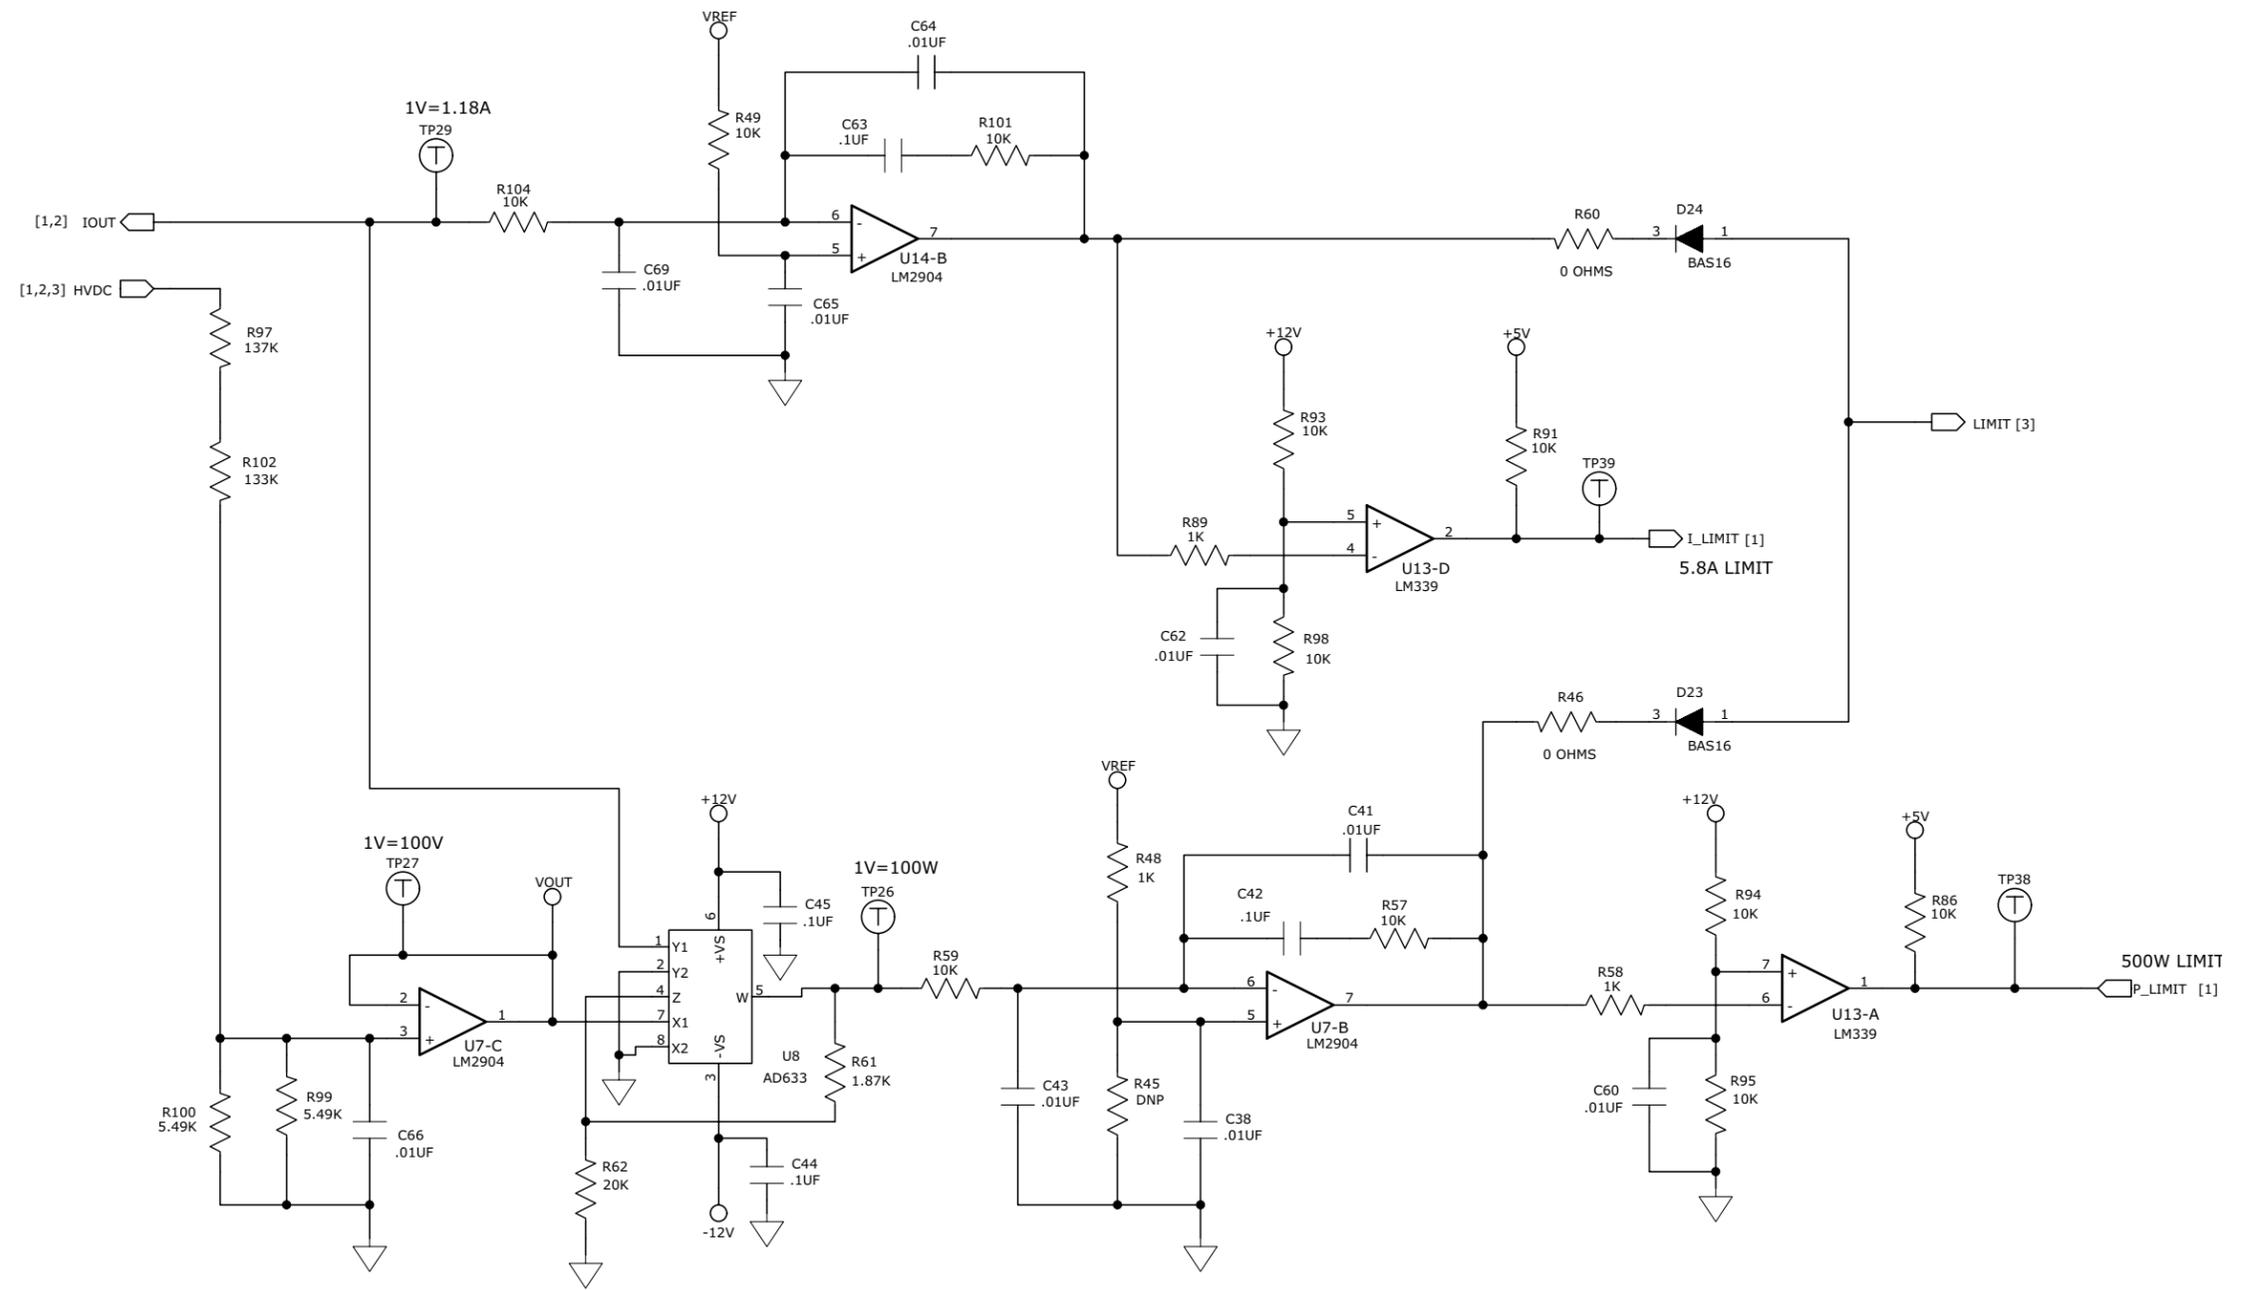


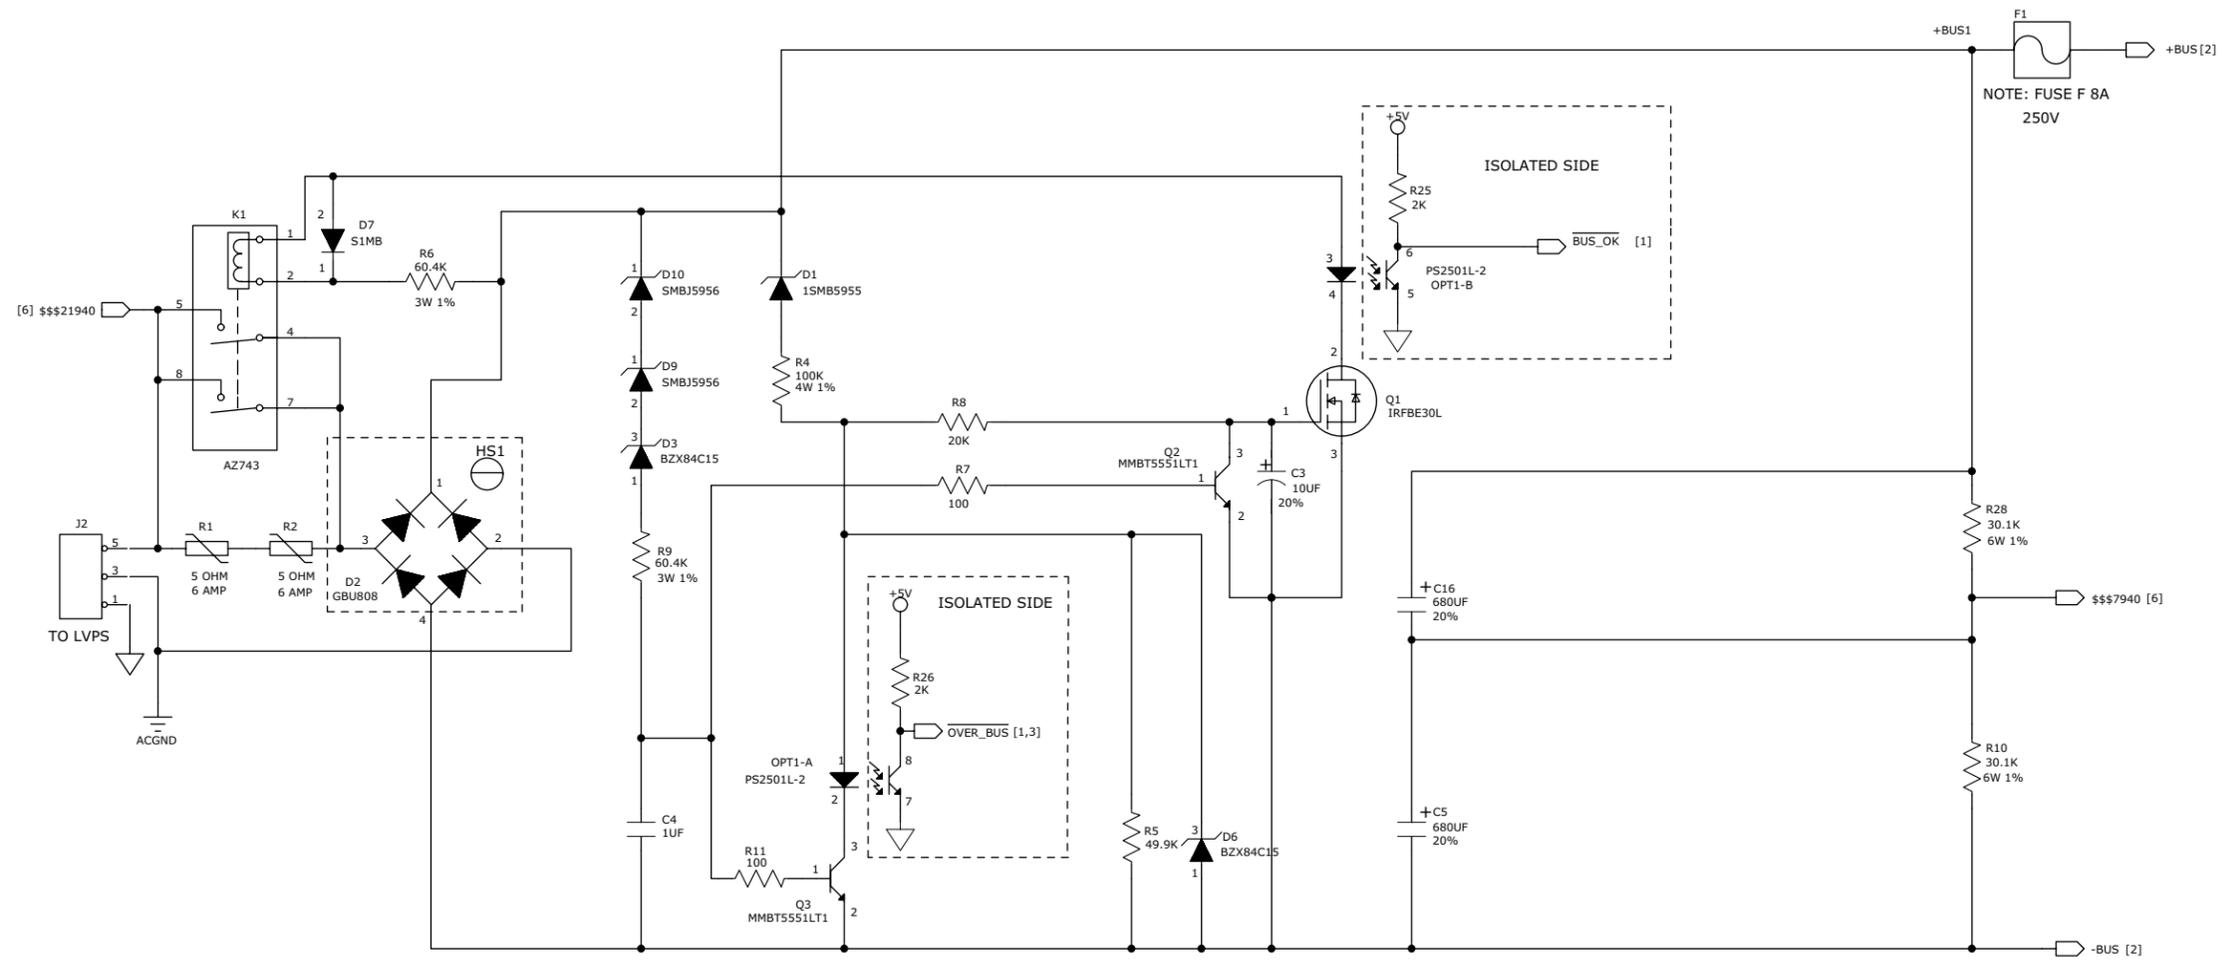


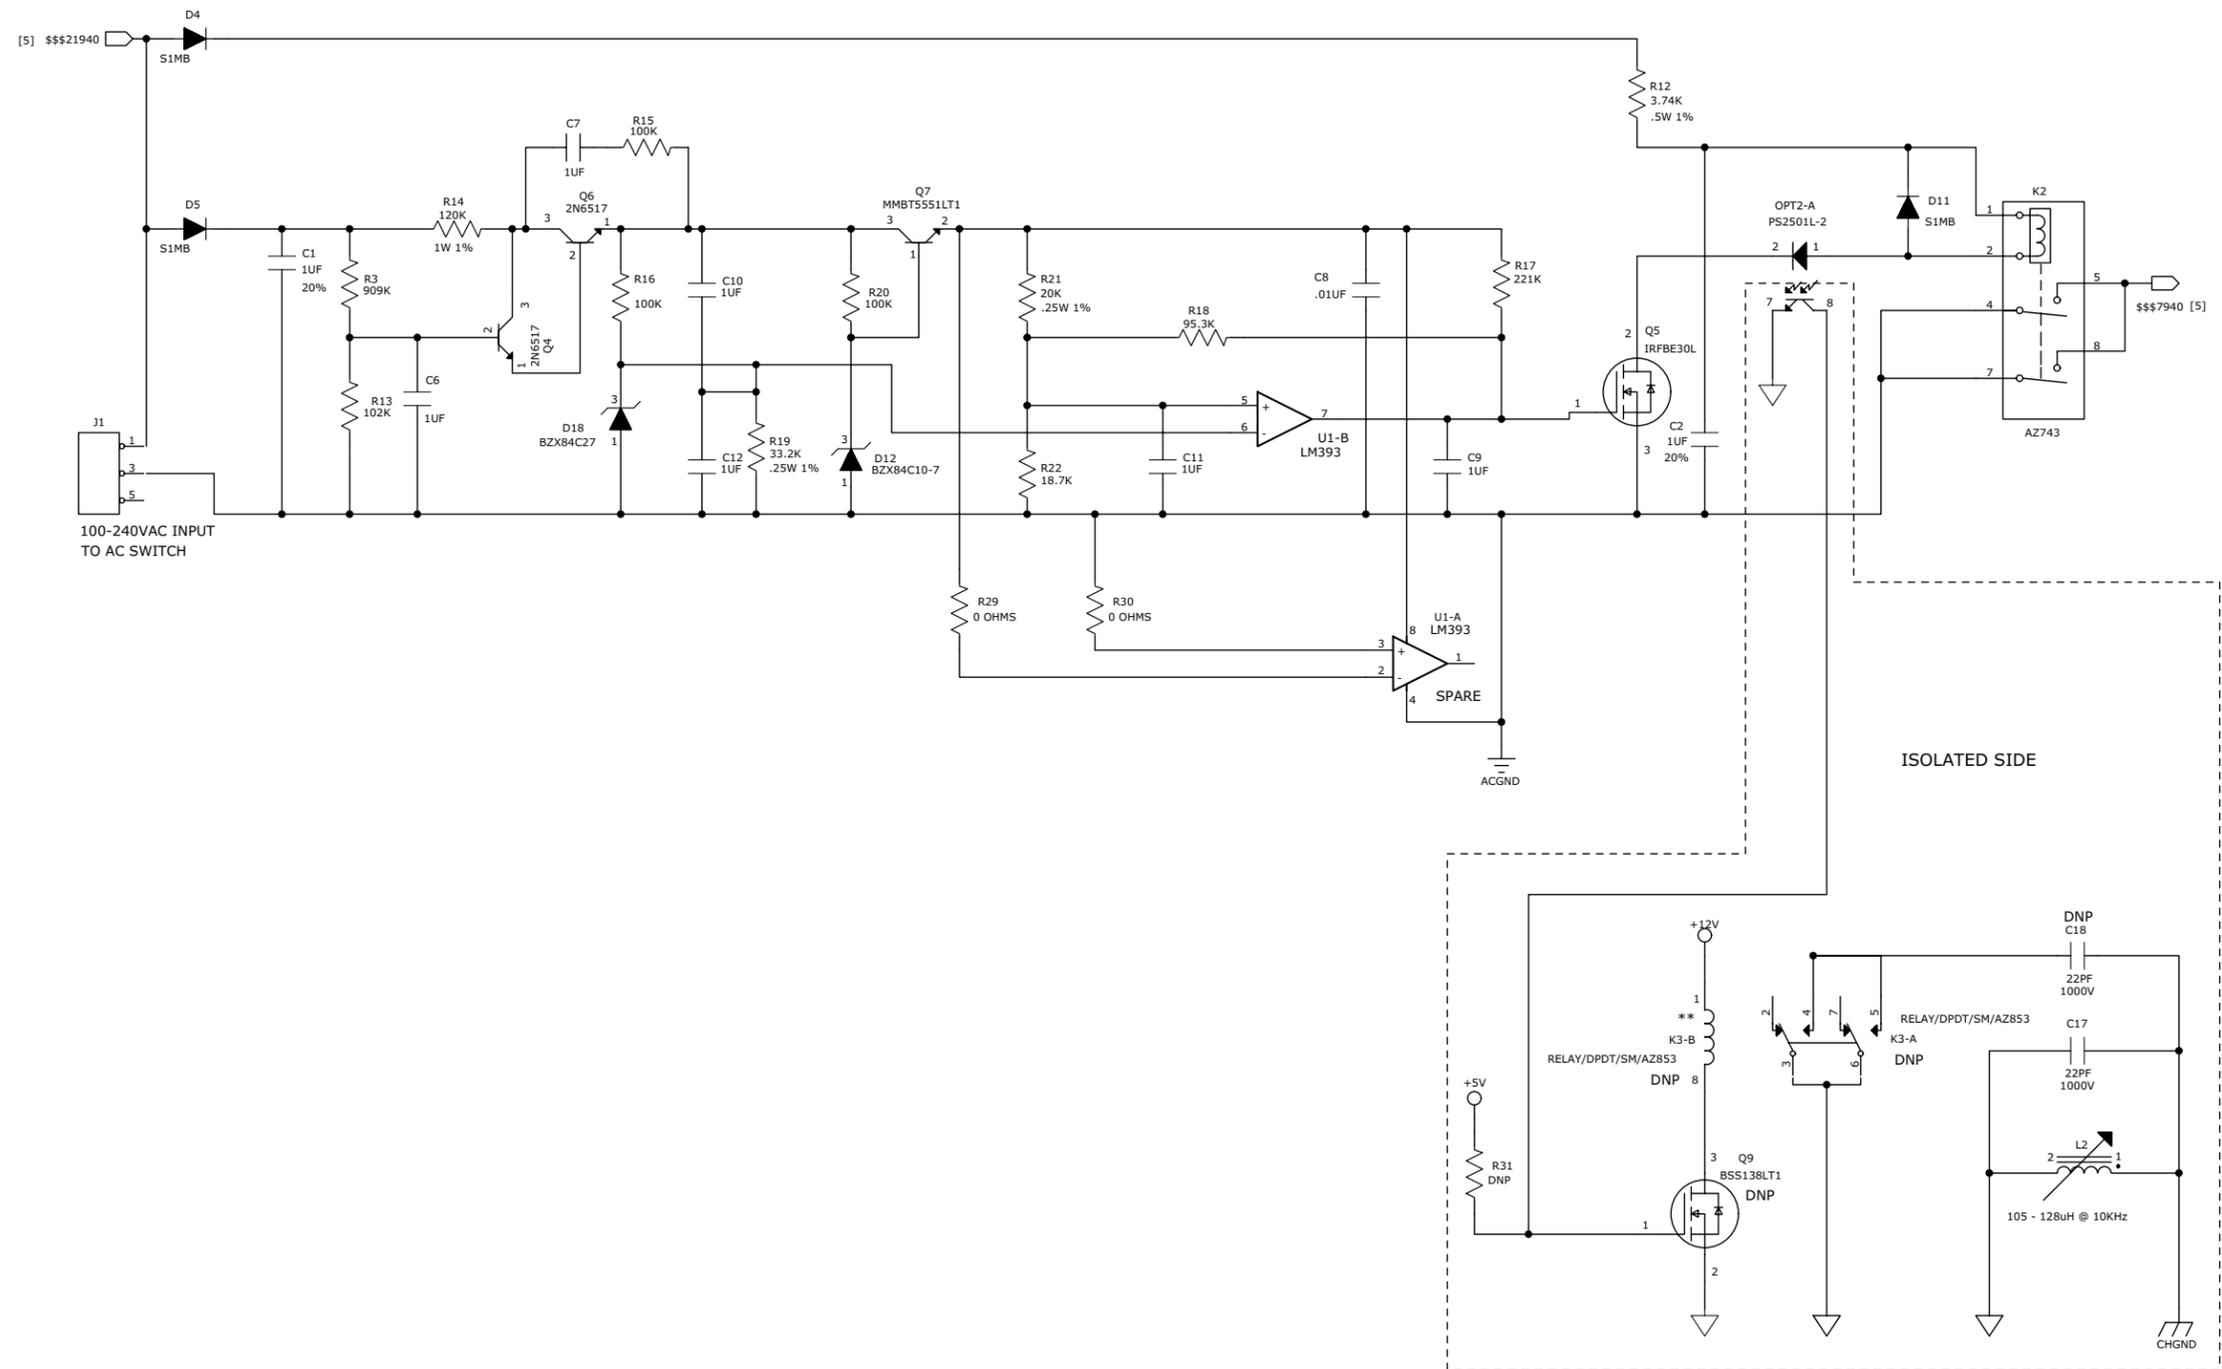



RF PCBA

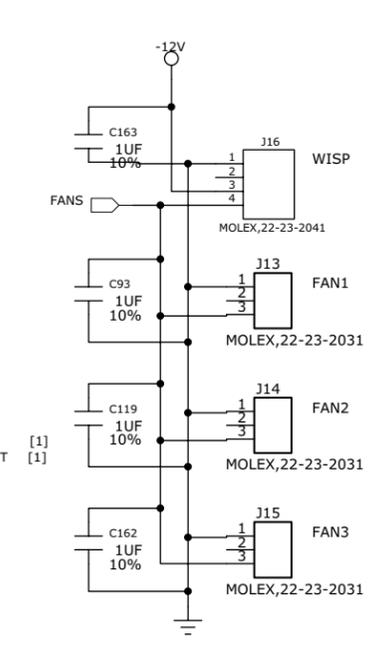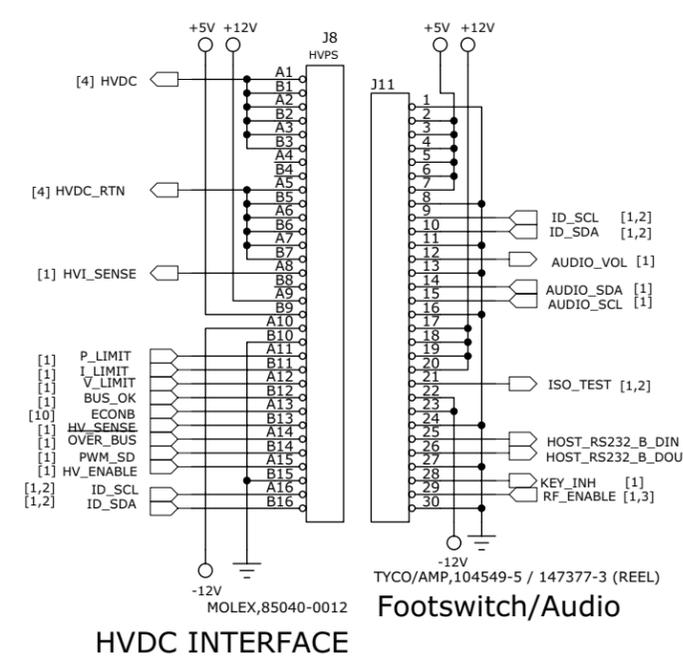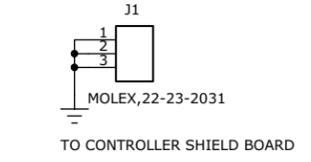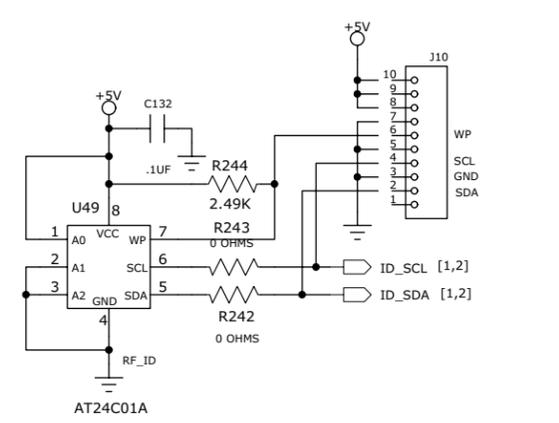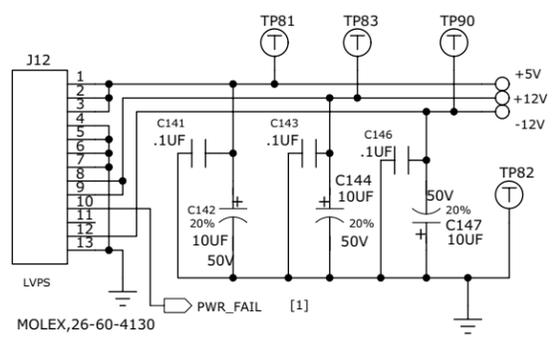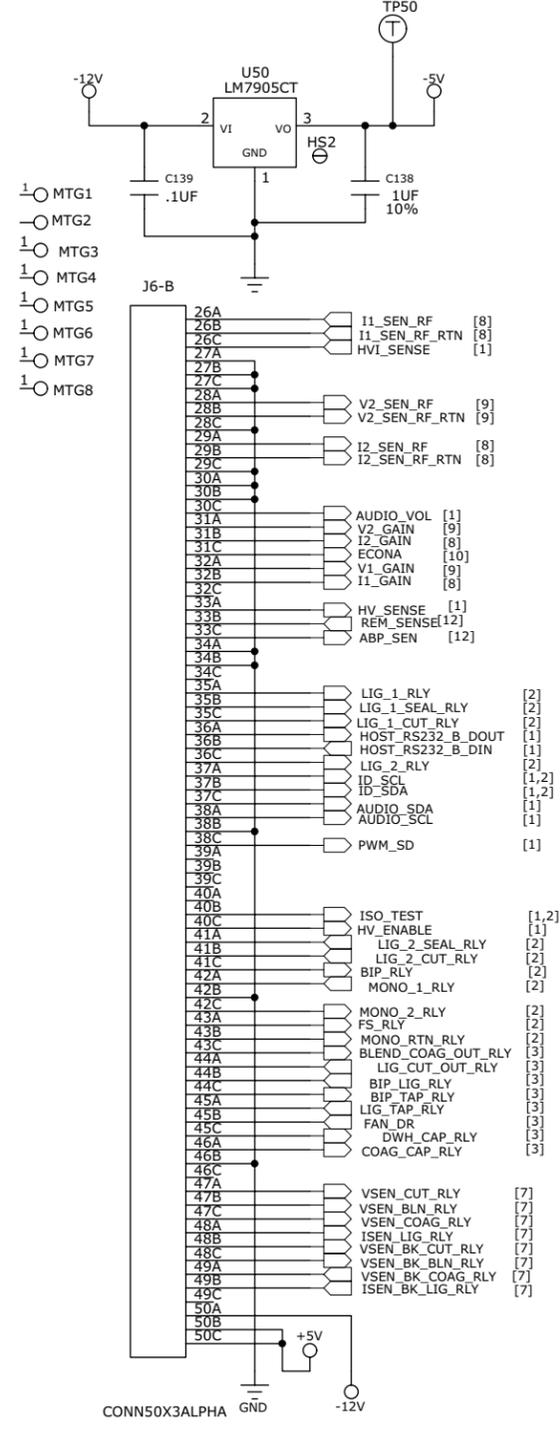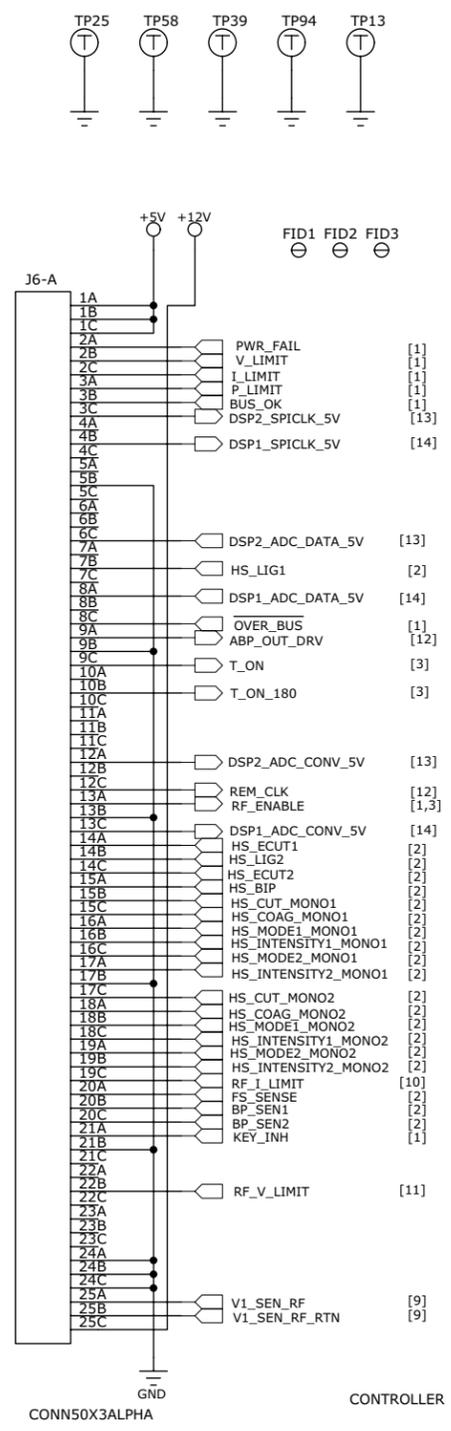


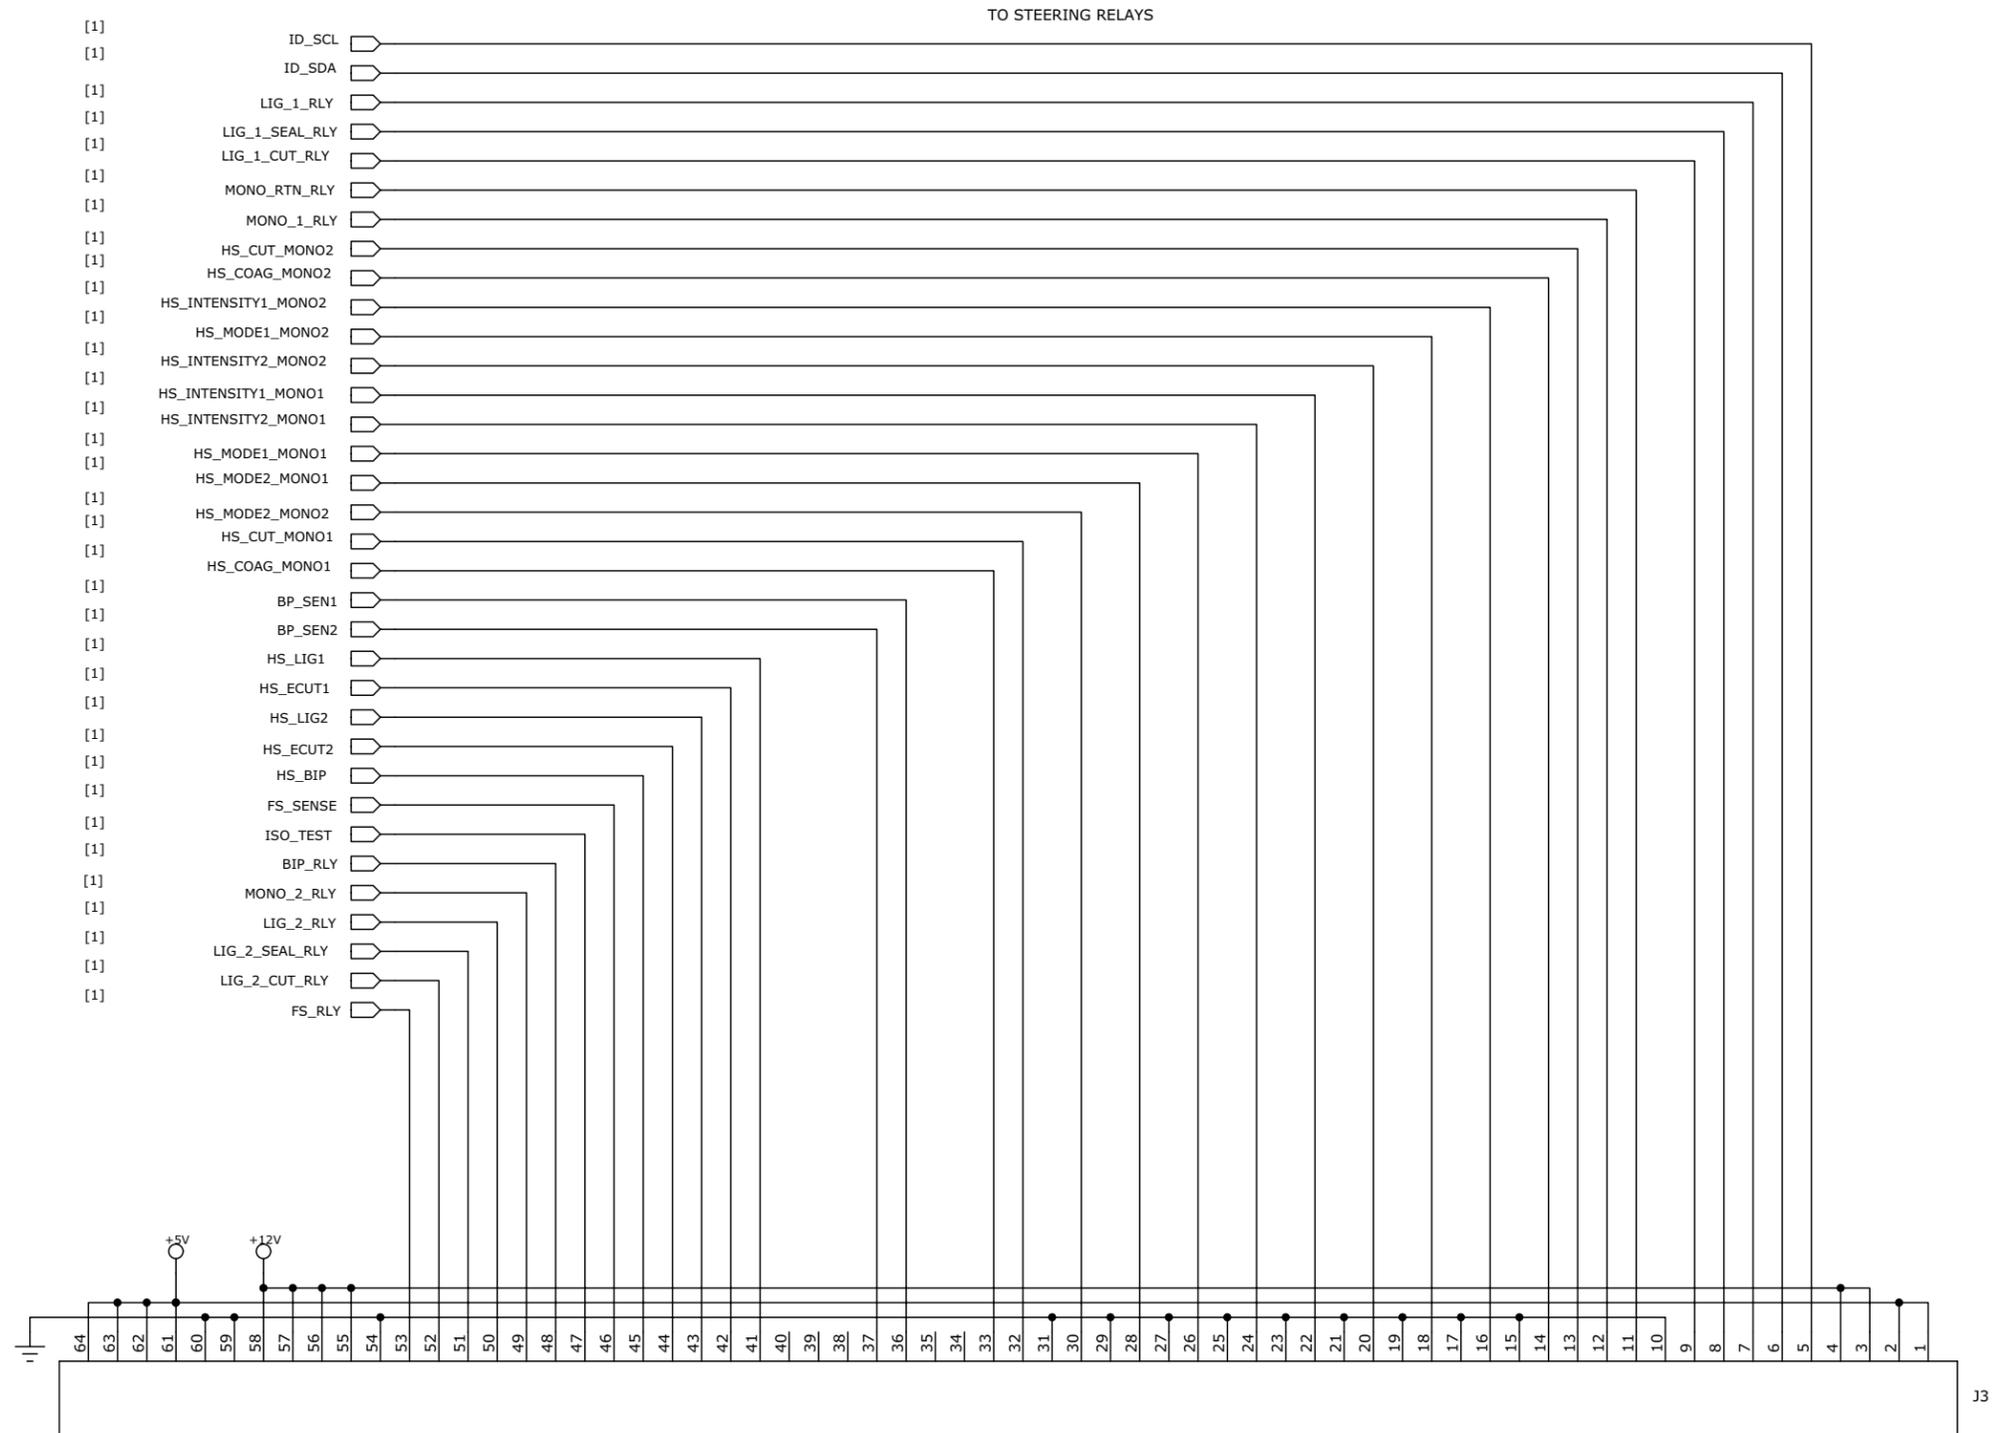

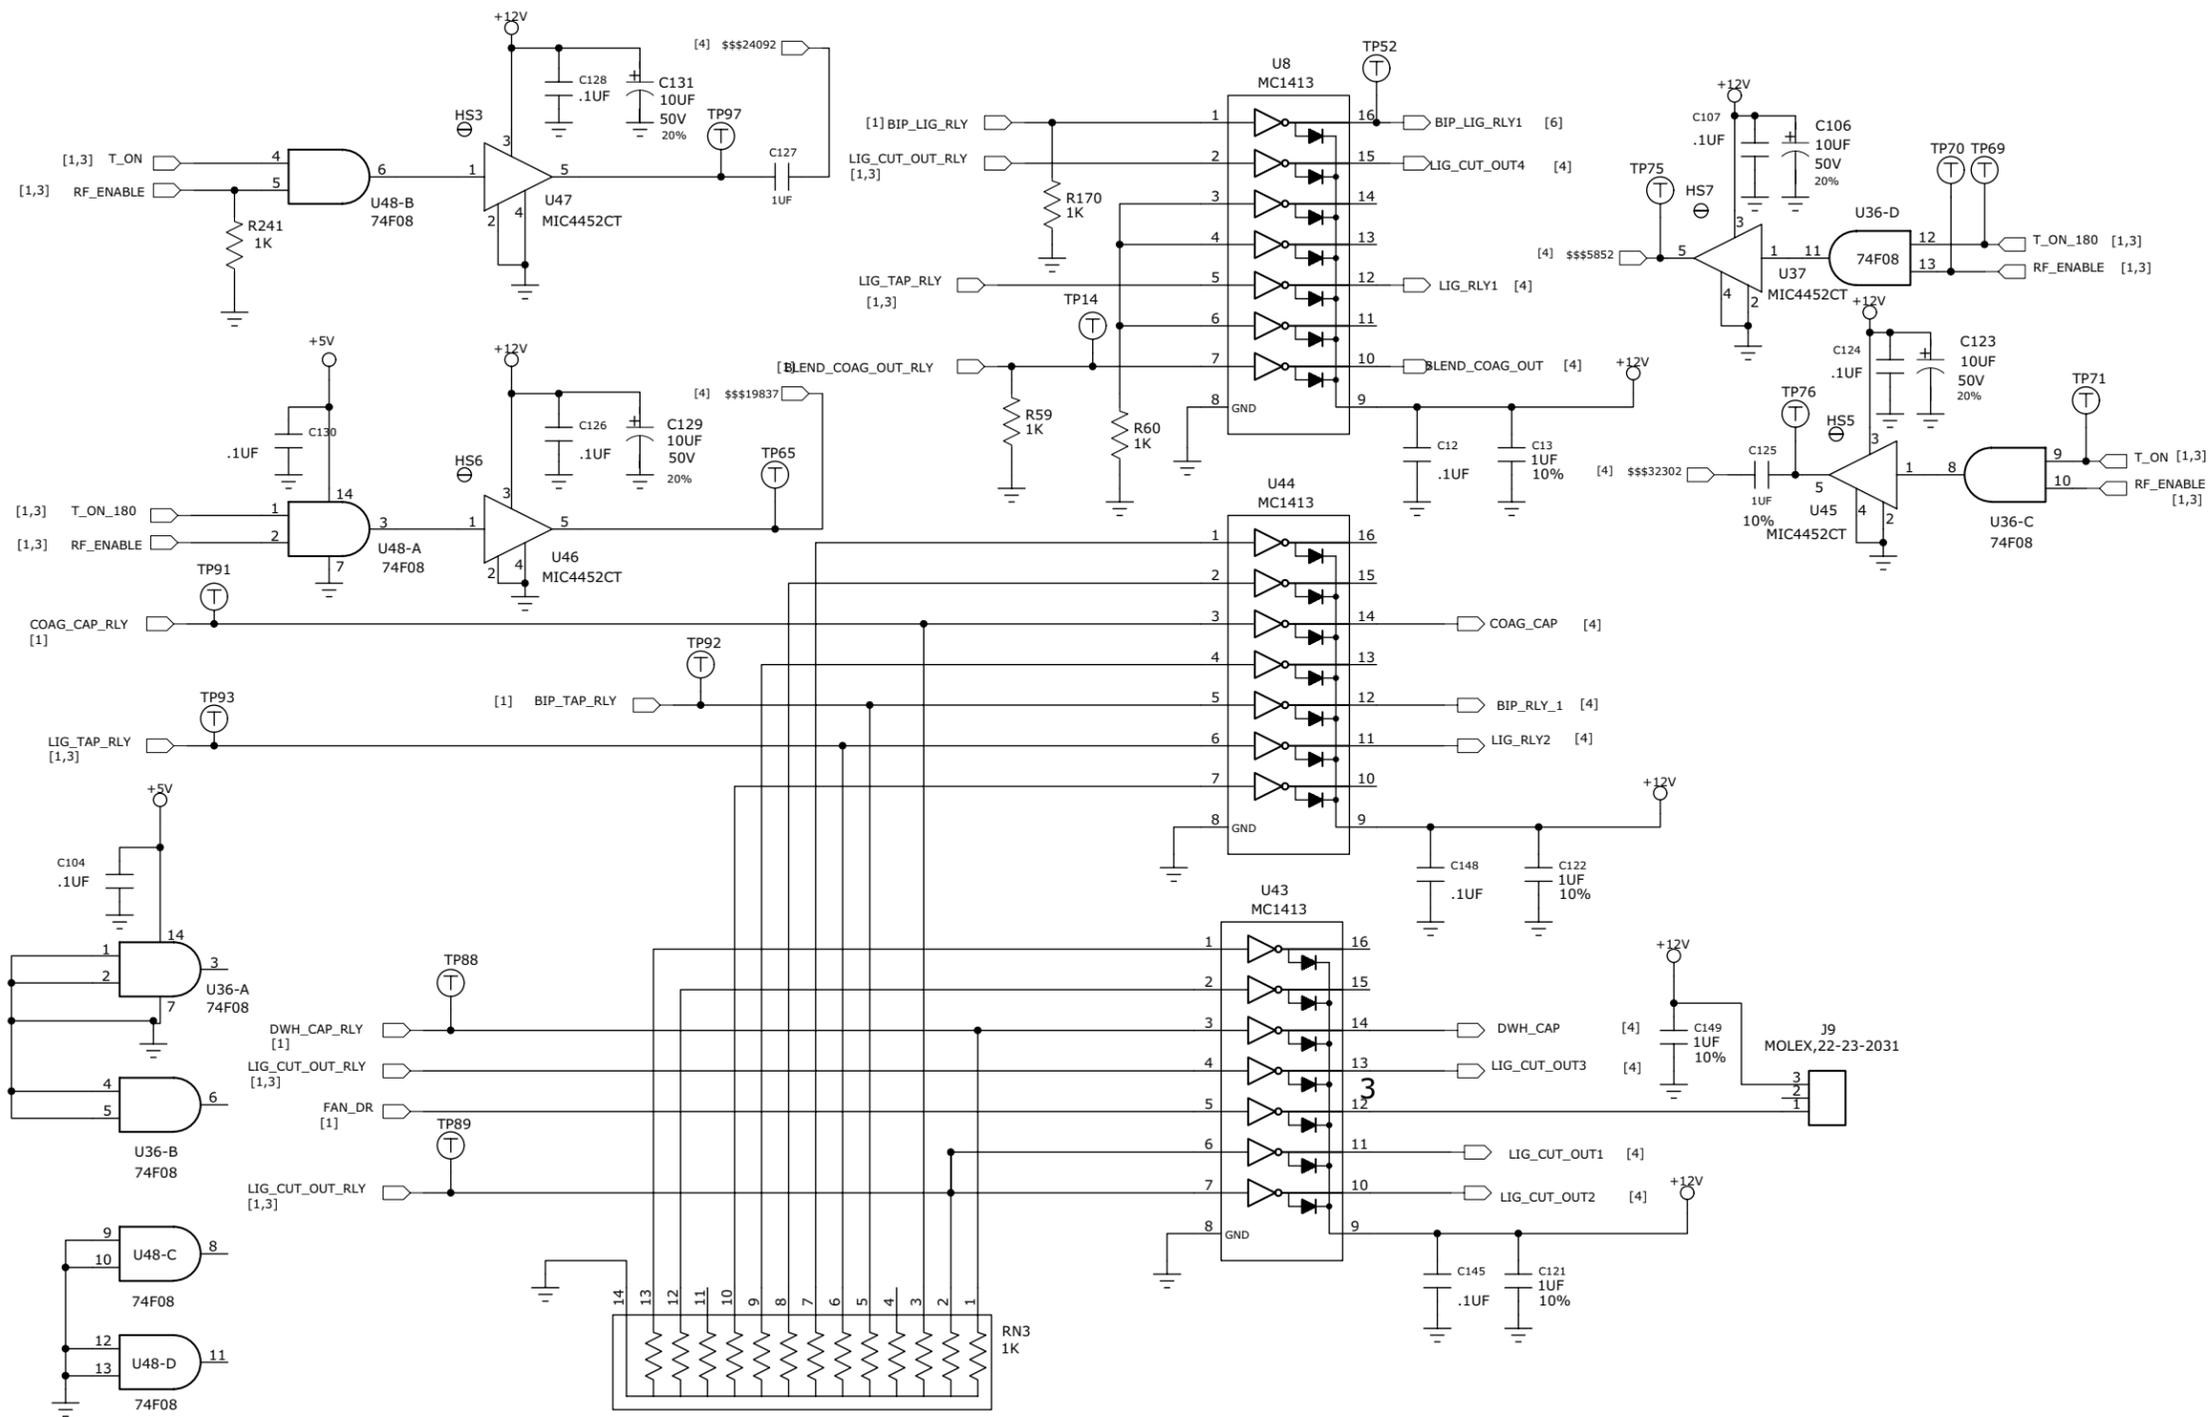




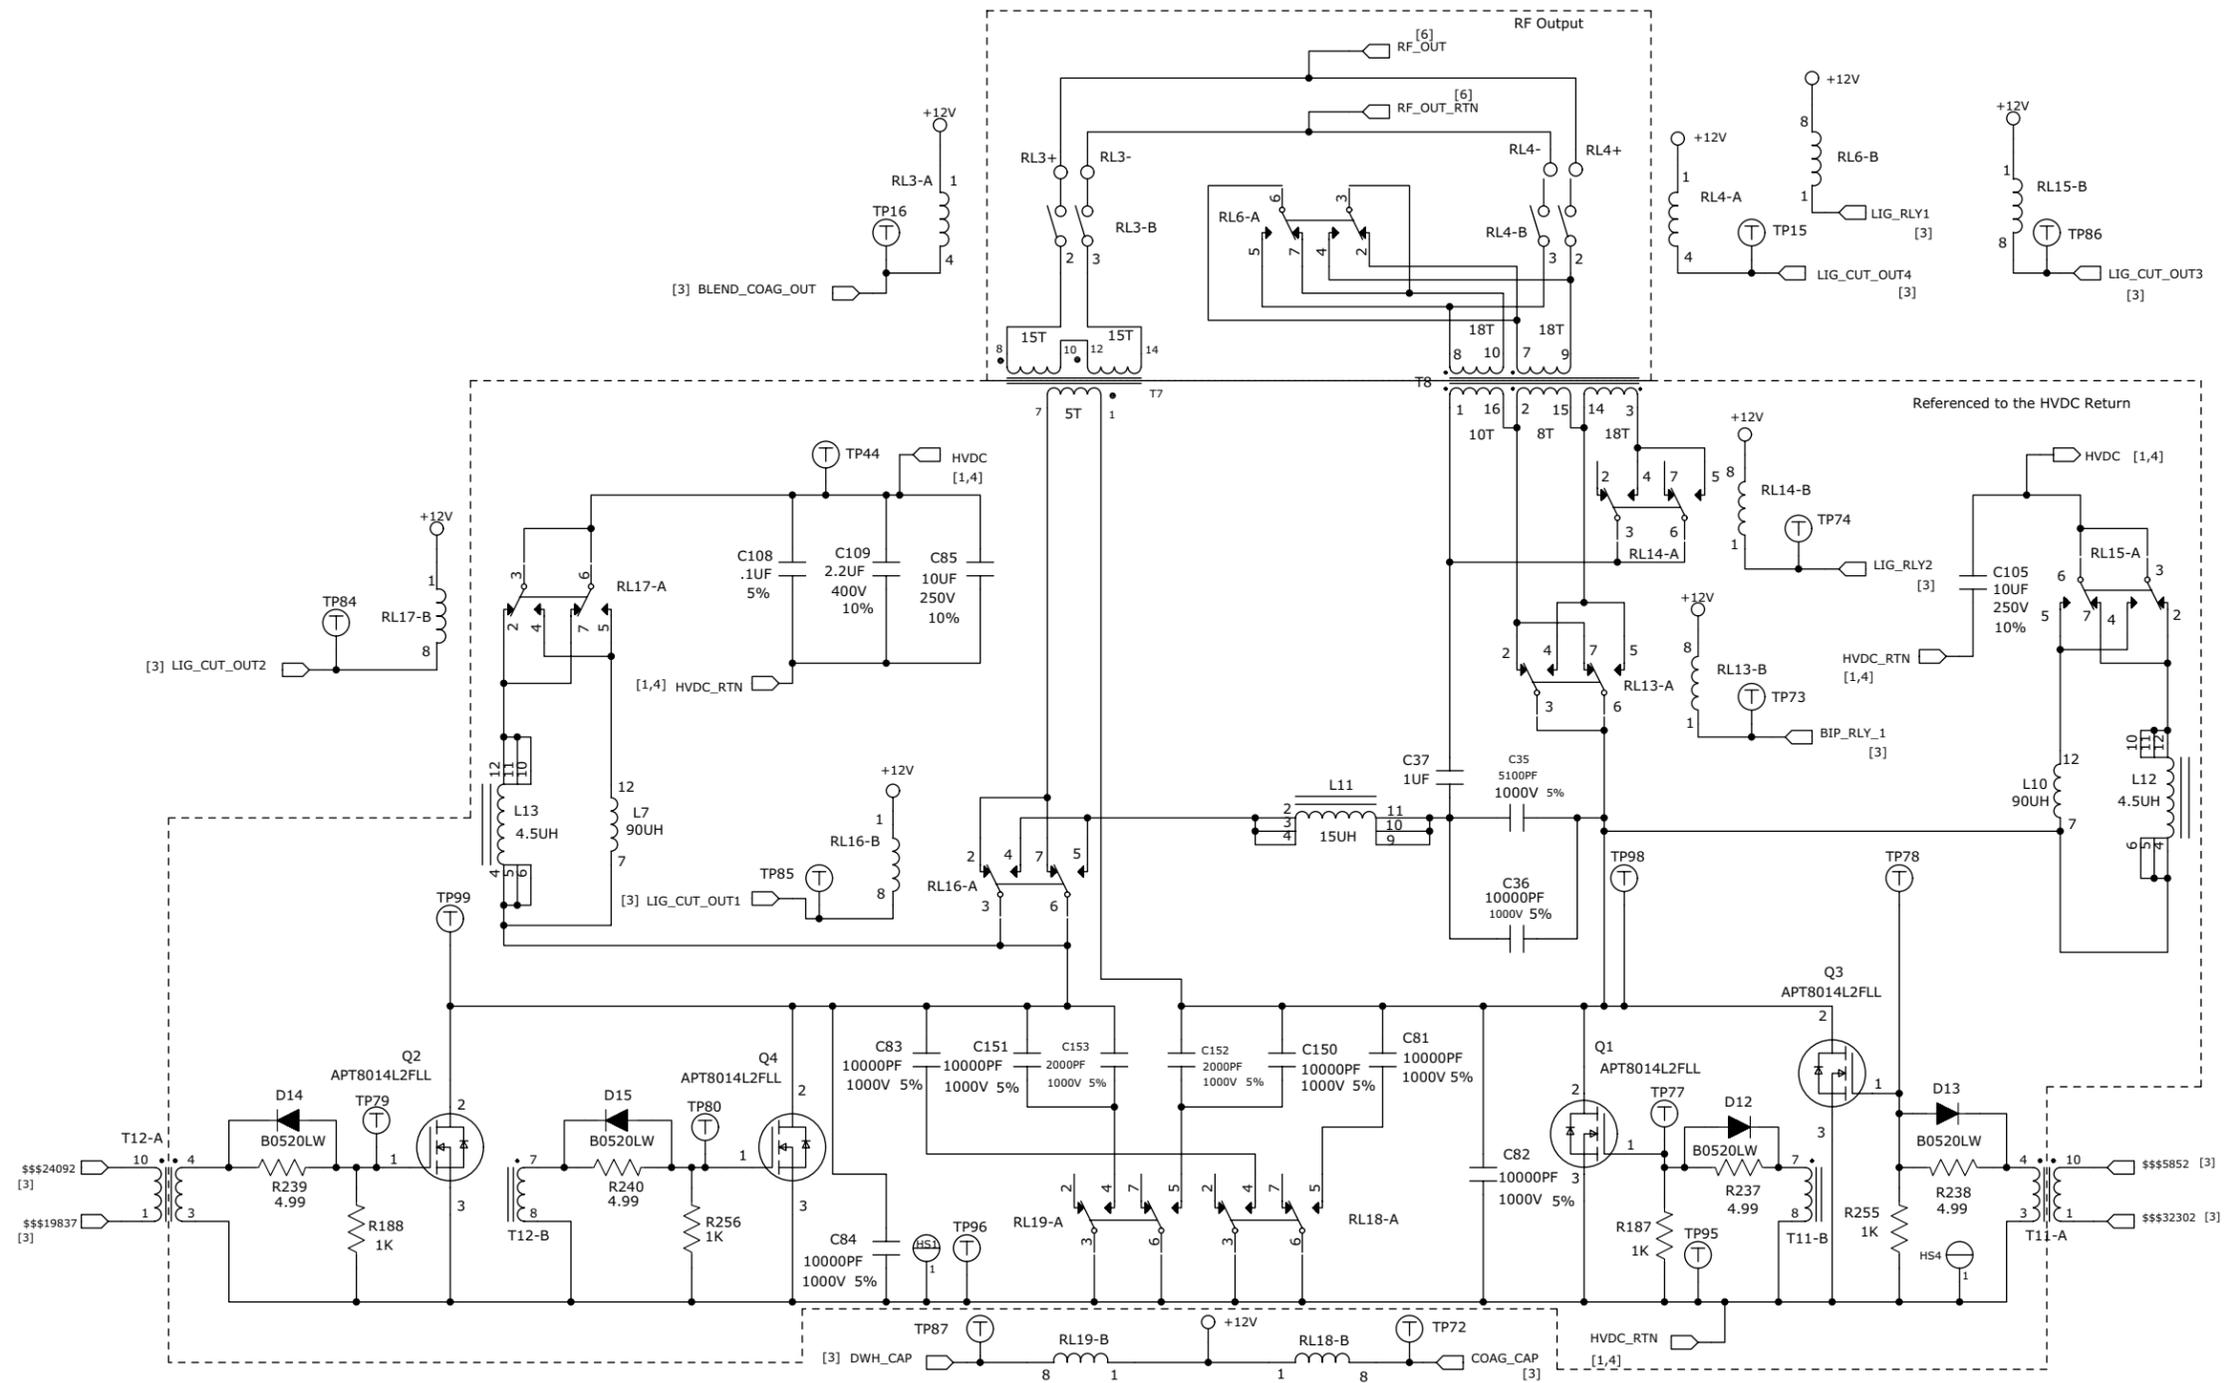


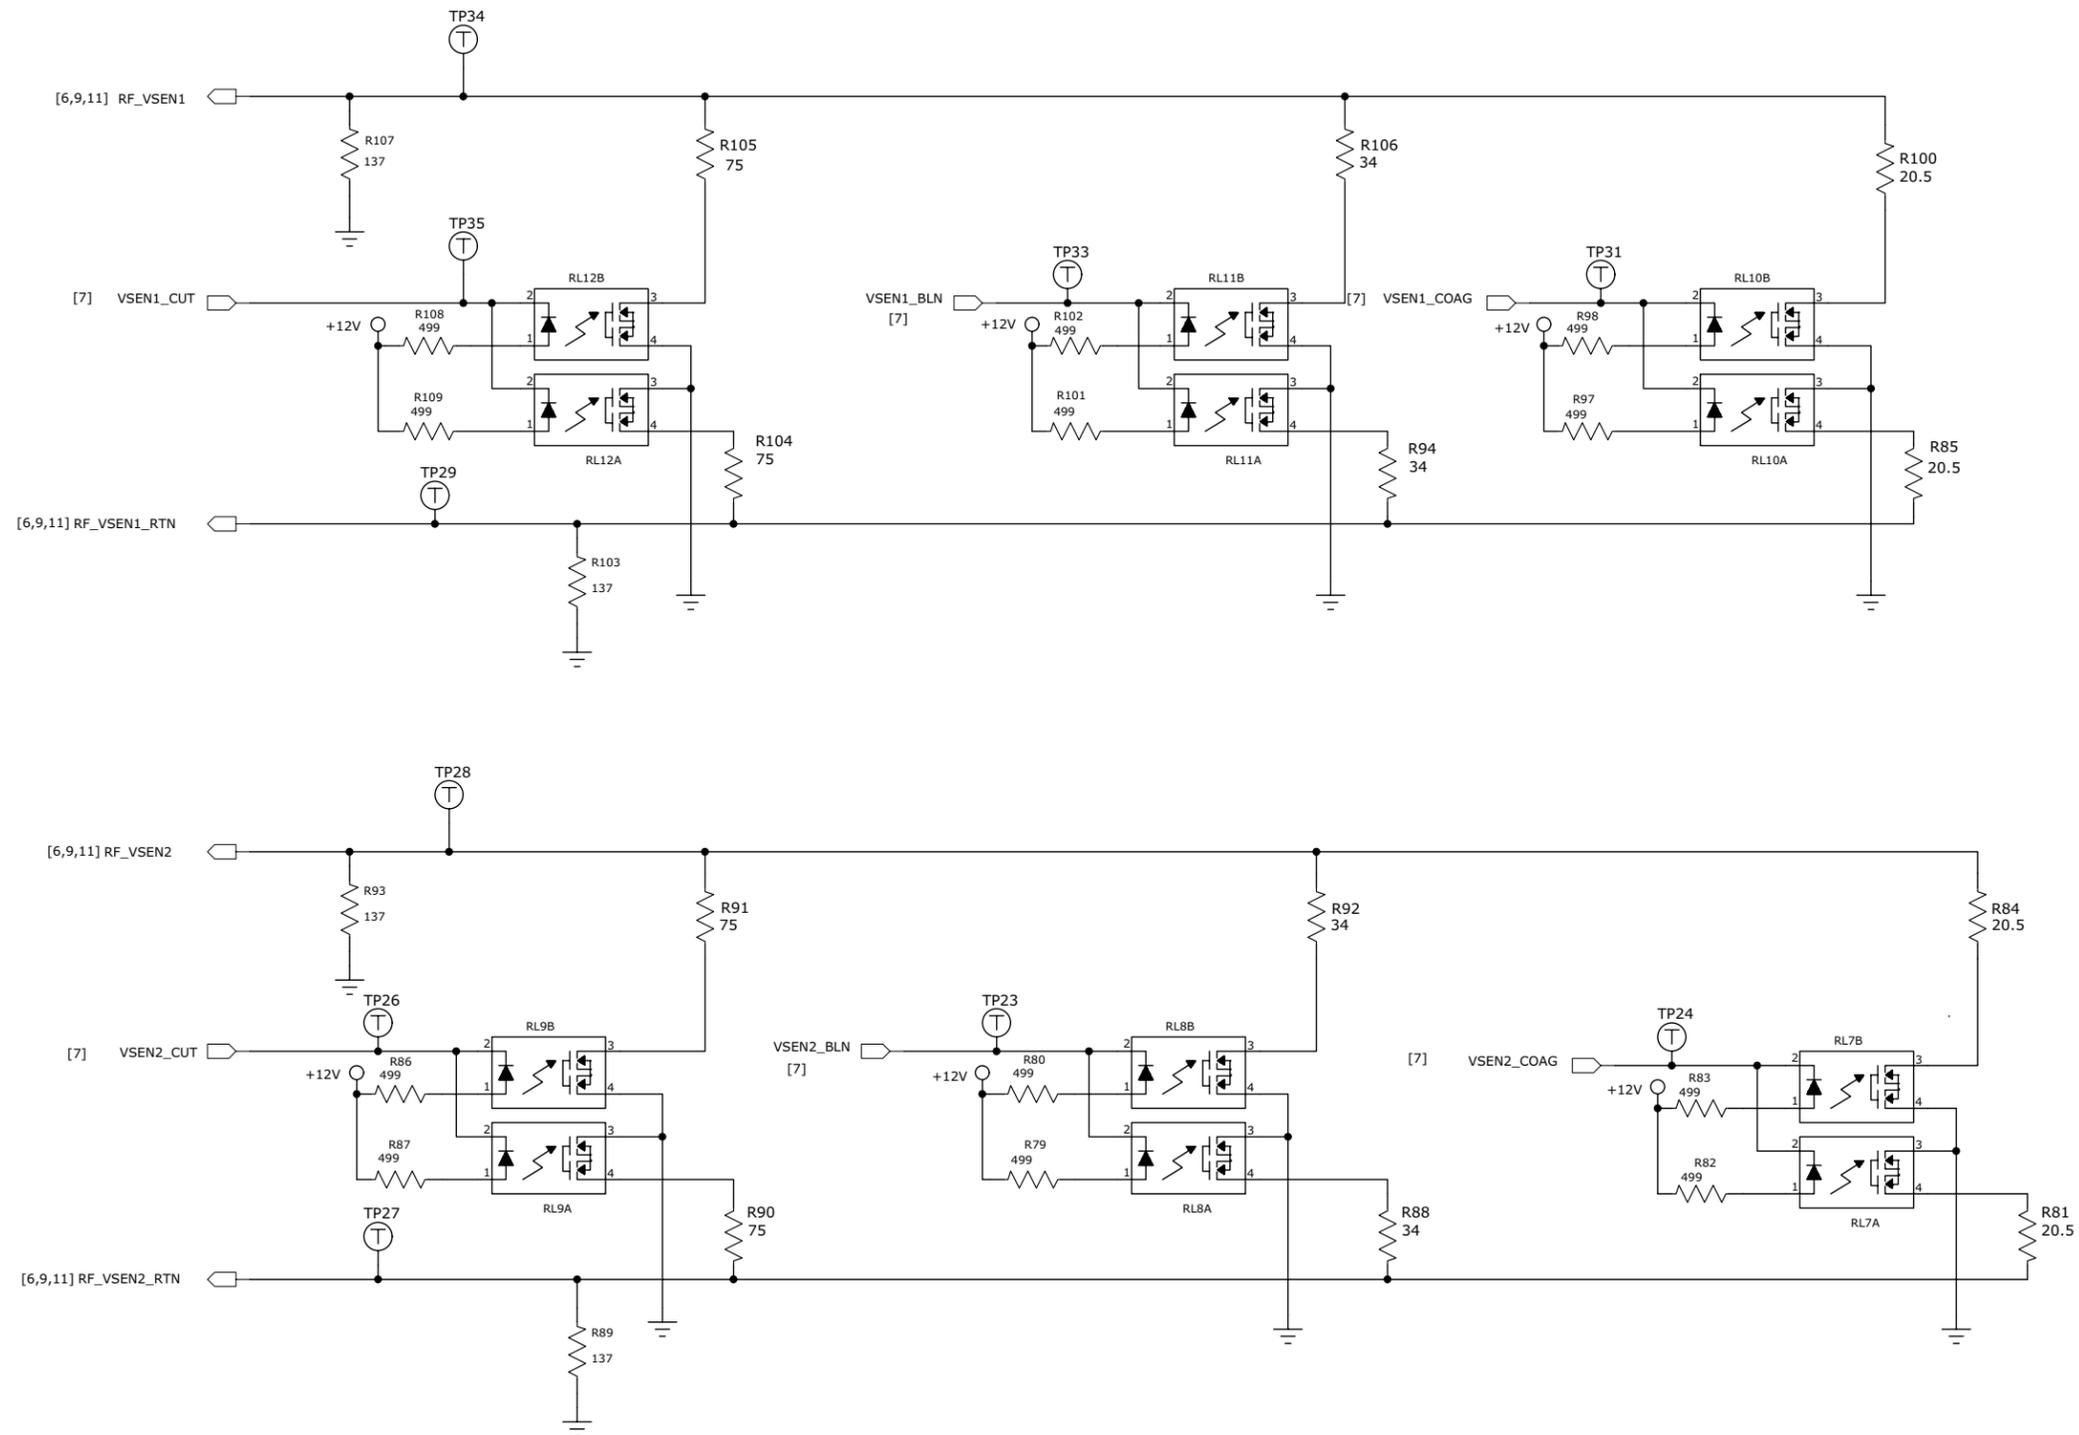



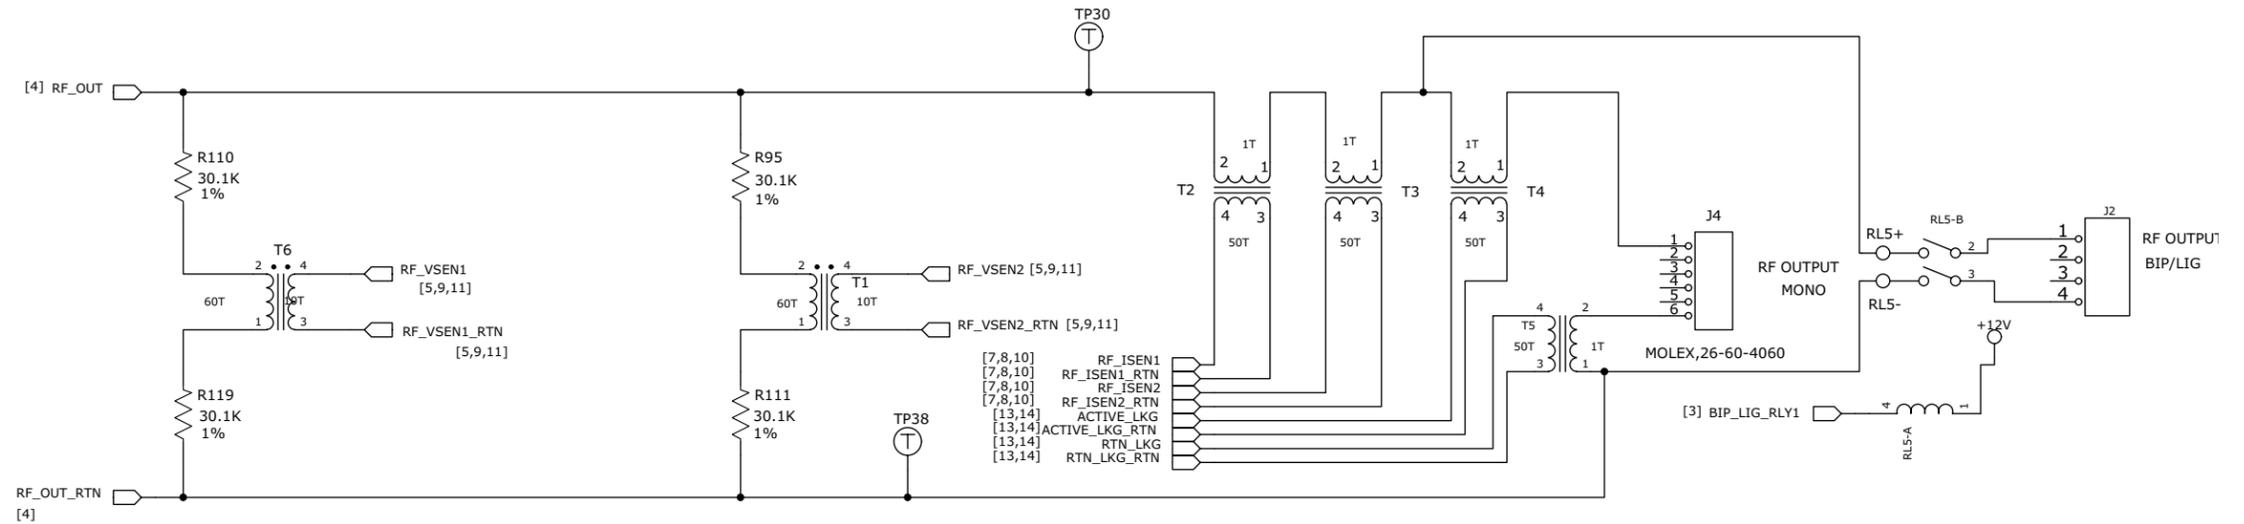



ACTIVE RELAYS	SCALE PER OUTPUT VSEN
NONE	1V = 42.6V
VSEN_CUT	1V = 109.5V
VSEN_BLN	1V = 190.2V
VSEN_COAG	1V = 287.3V
VSEN_CUT, VSEN_BLN	1V = 257.1V
VSEN_CUT, VSEN_COAG	1V = 354.2V
VSEN_BLN, VSEN_COAG	1V = 434.9V
VSEN_CUT, VSEN_BLN, VSEN_COAG	1V = 501.8V


ACTIVE RELAYS	SCALE PER OUTPUT ISEN
NONE	1V = .342A
ISEN_LIG	1V = 1.34A

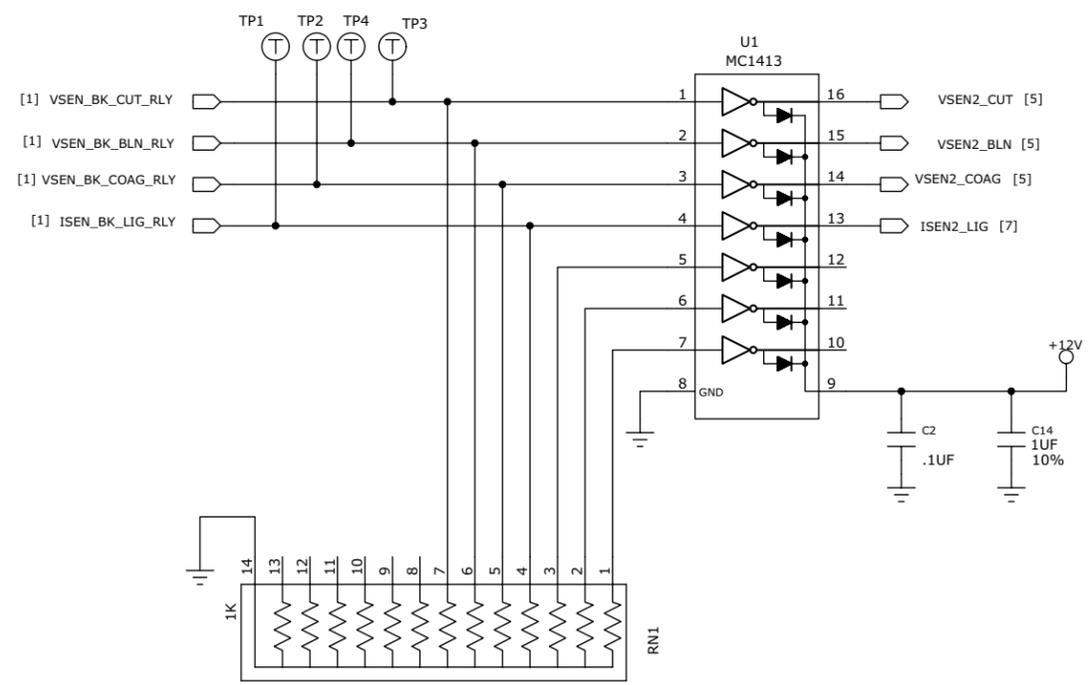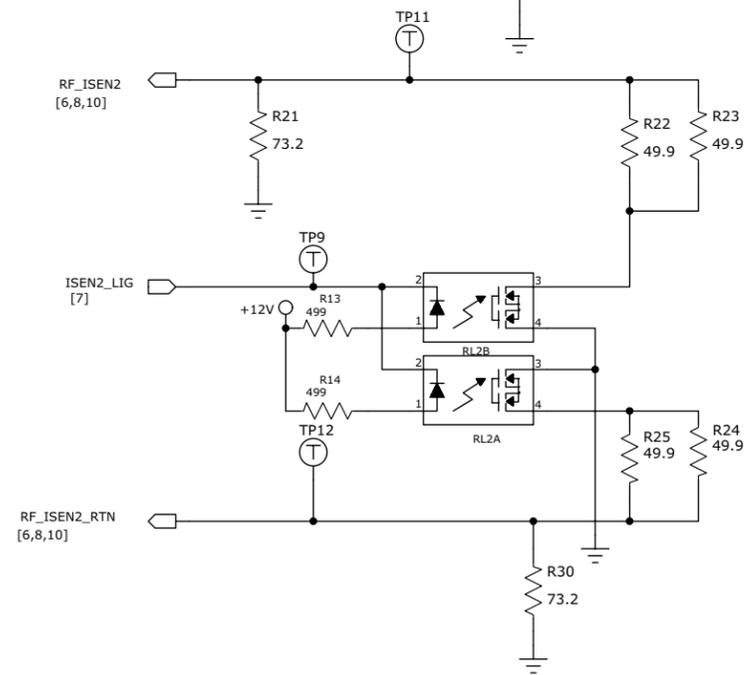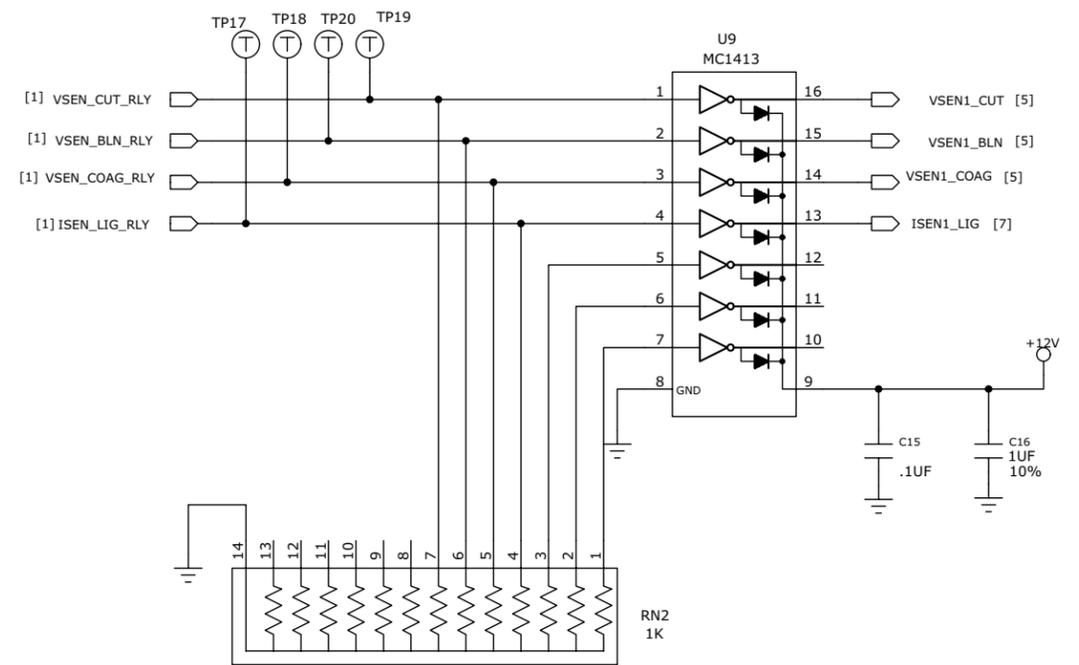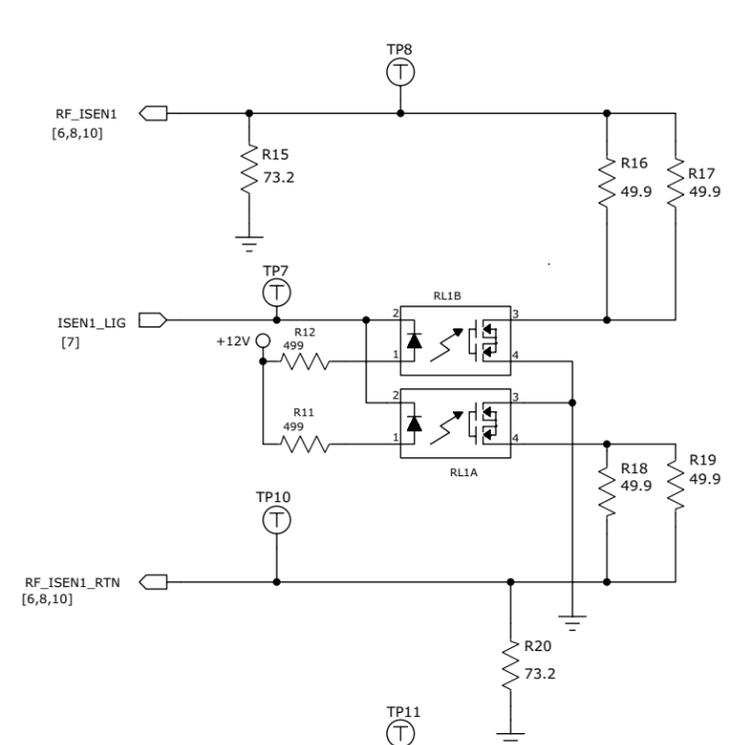


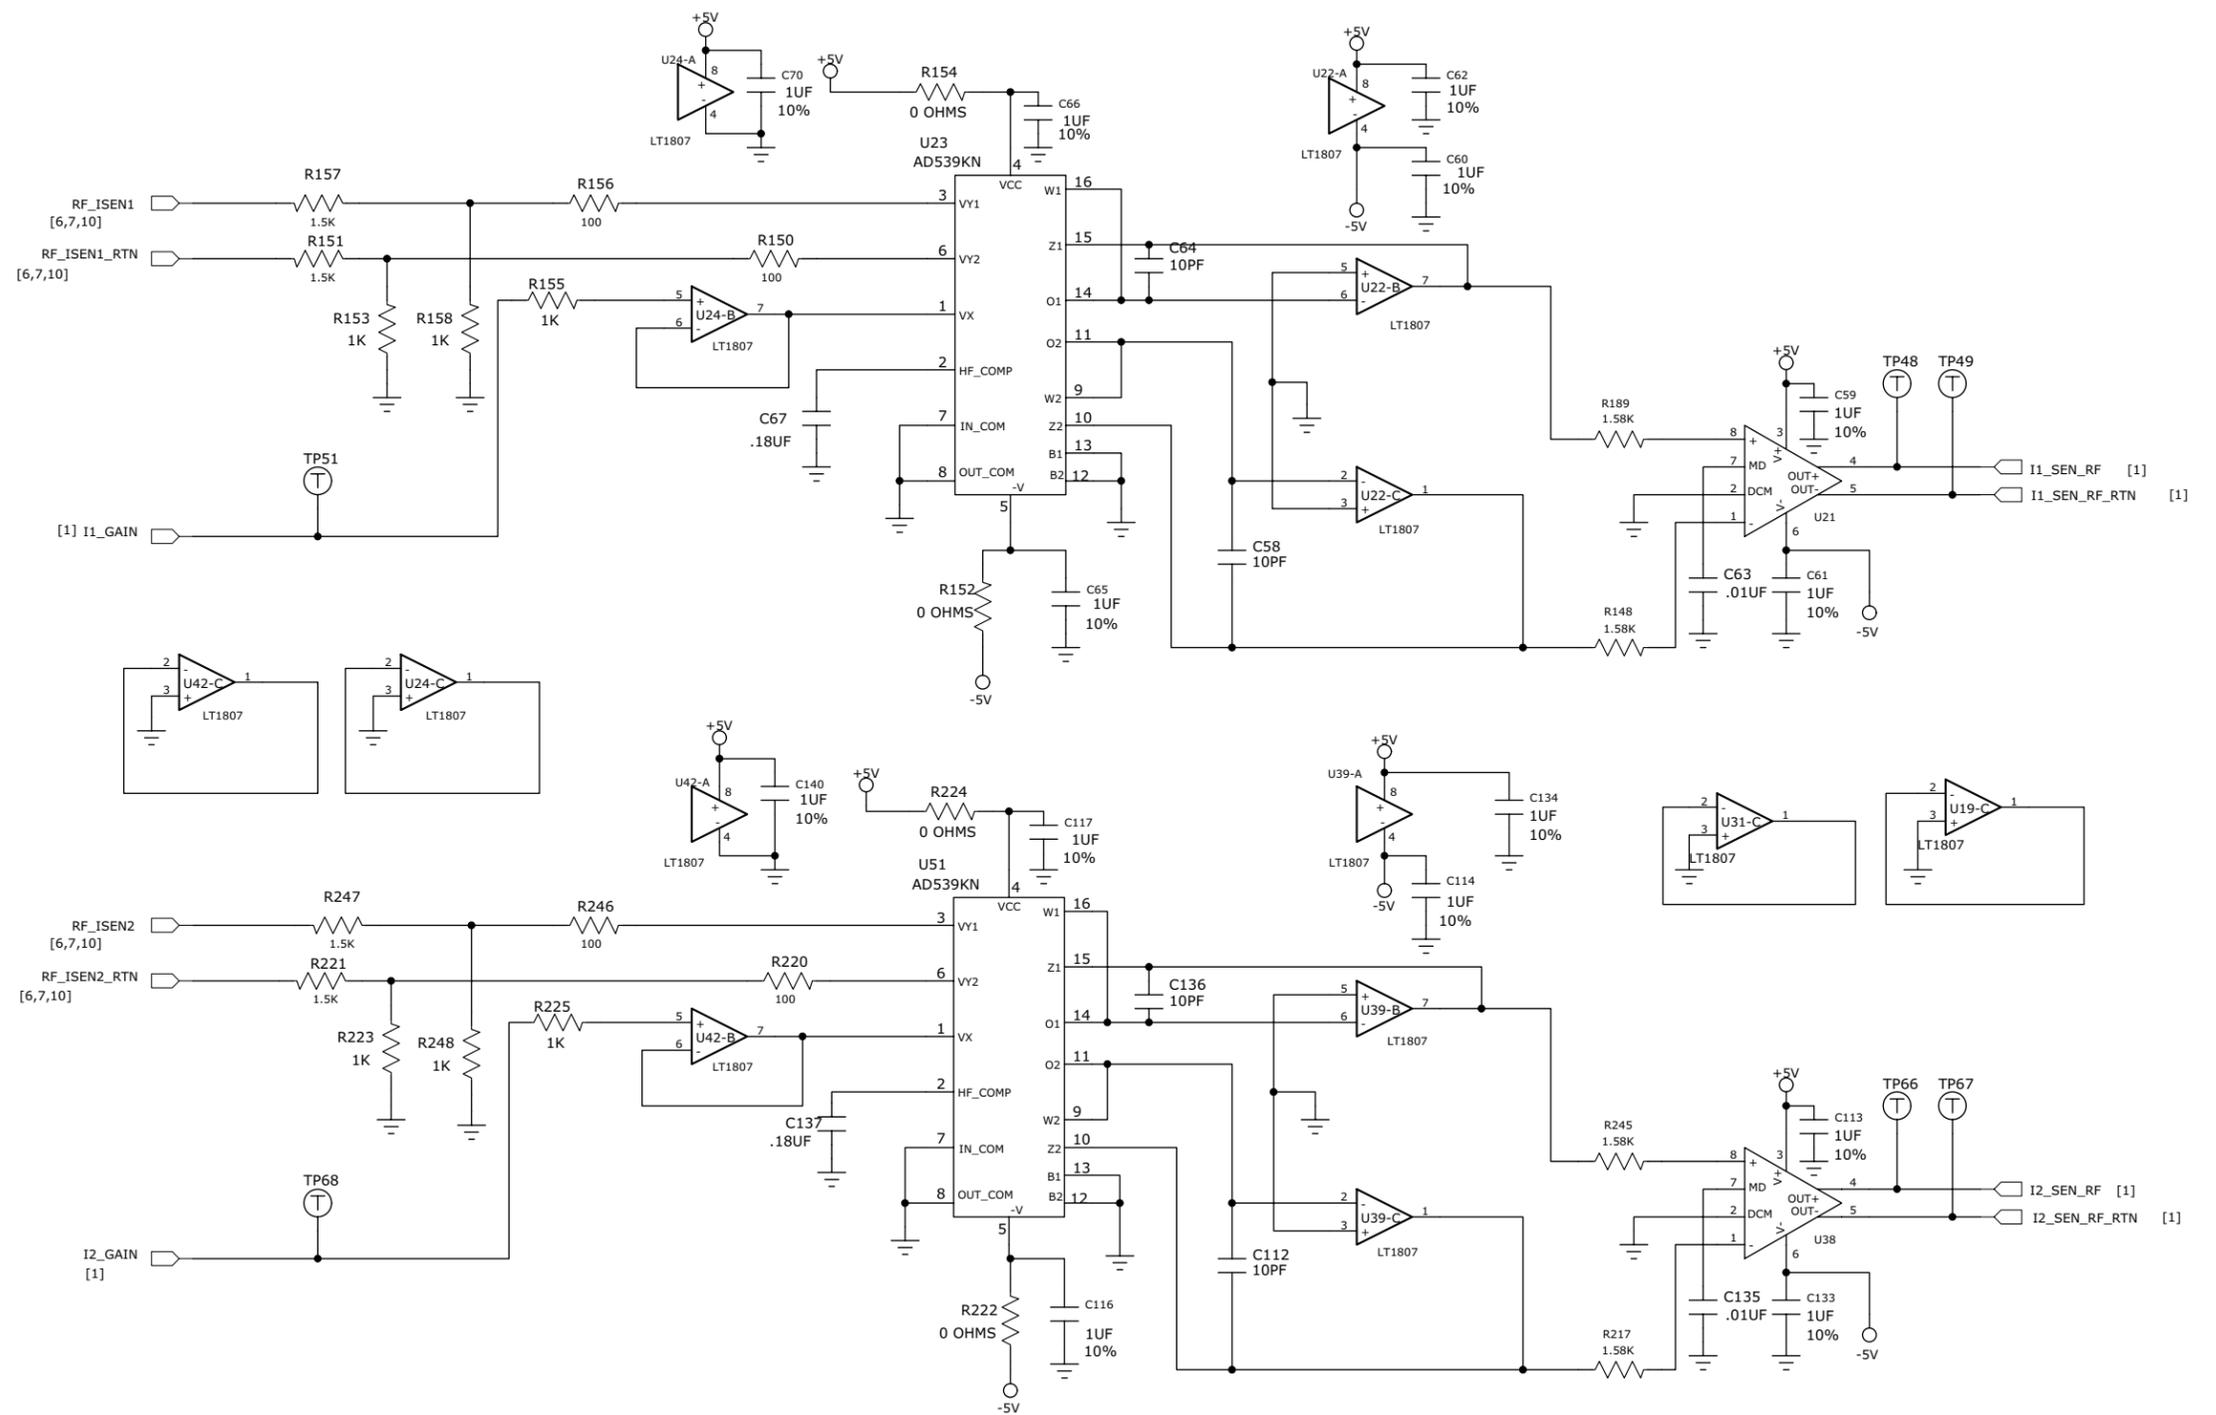


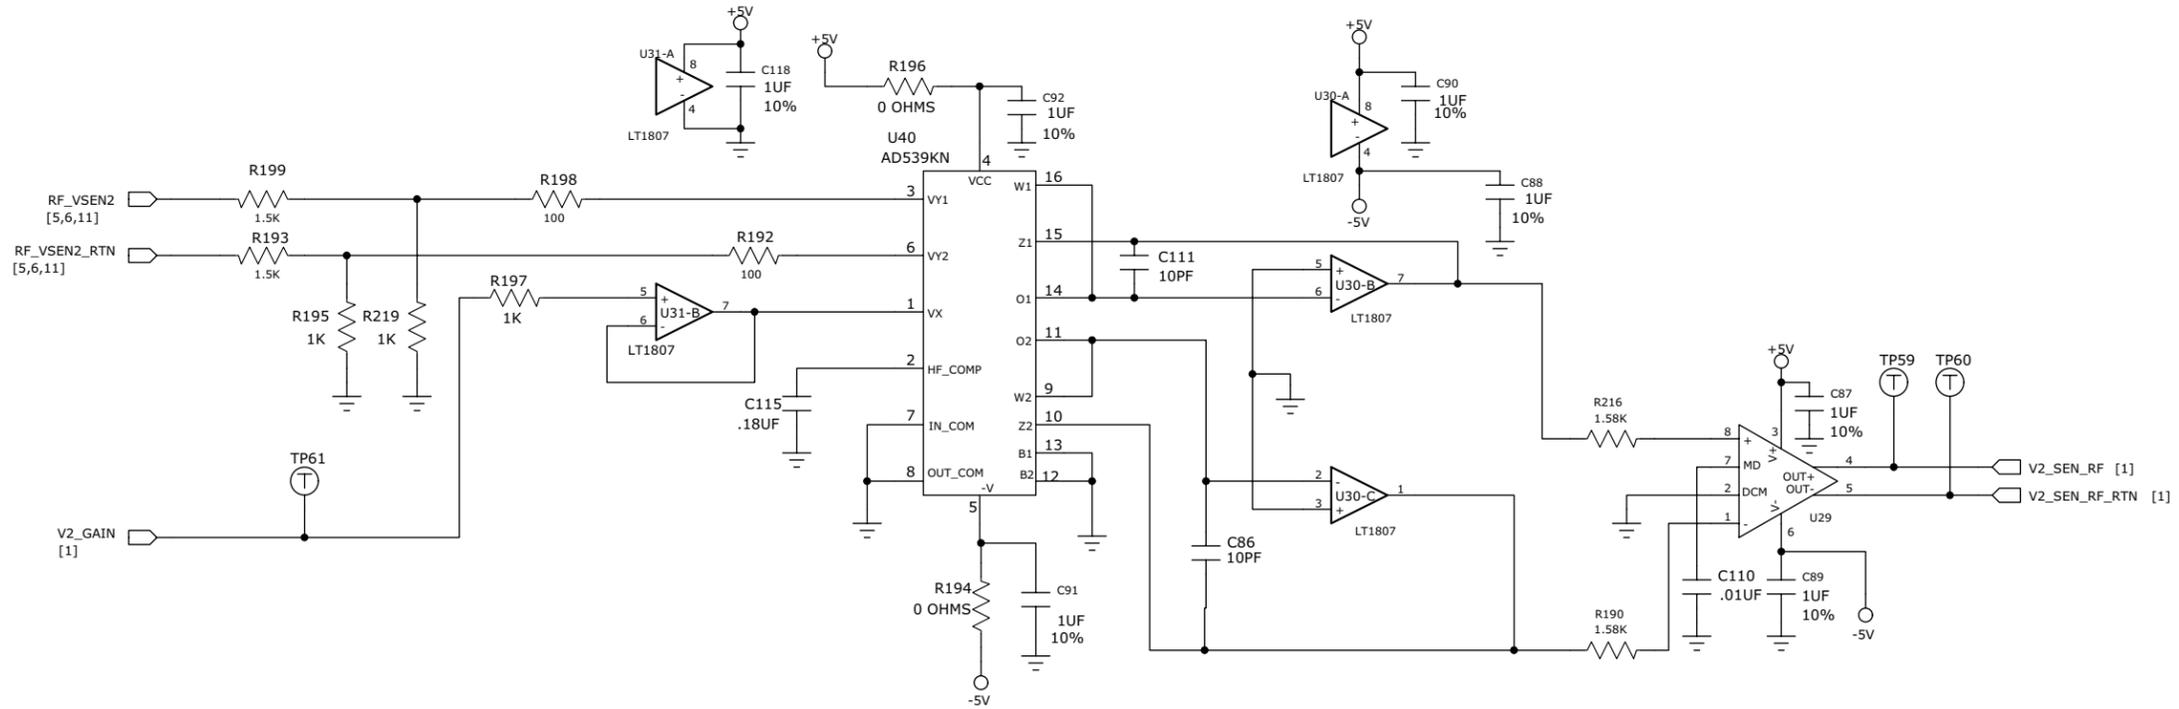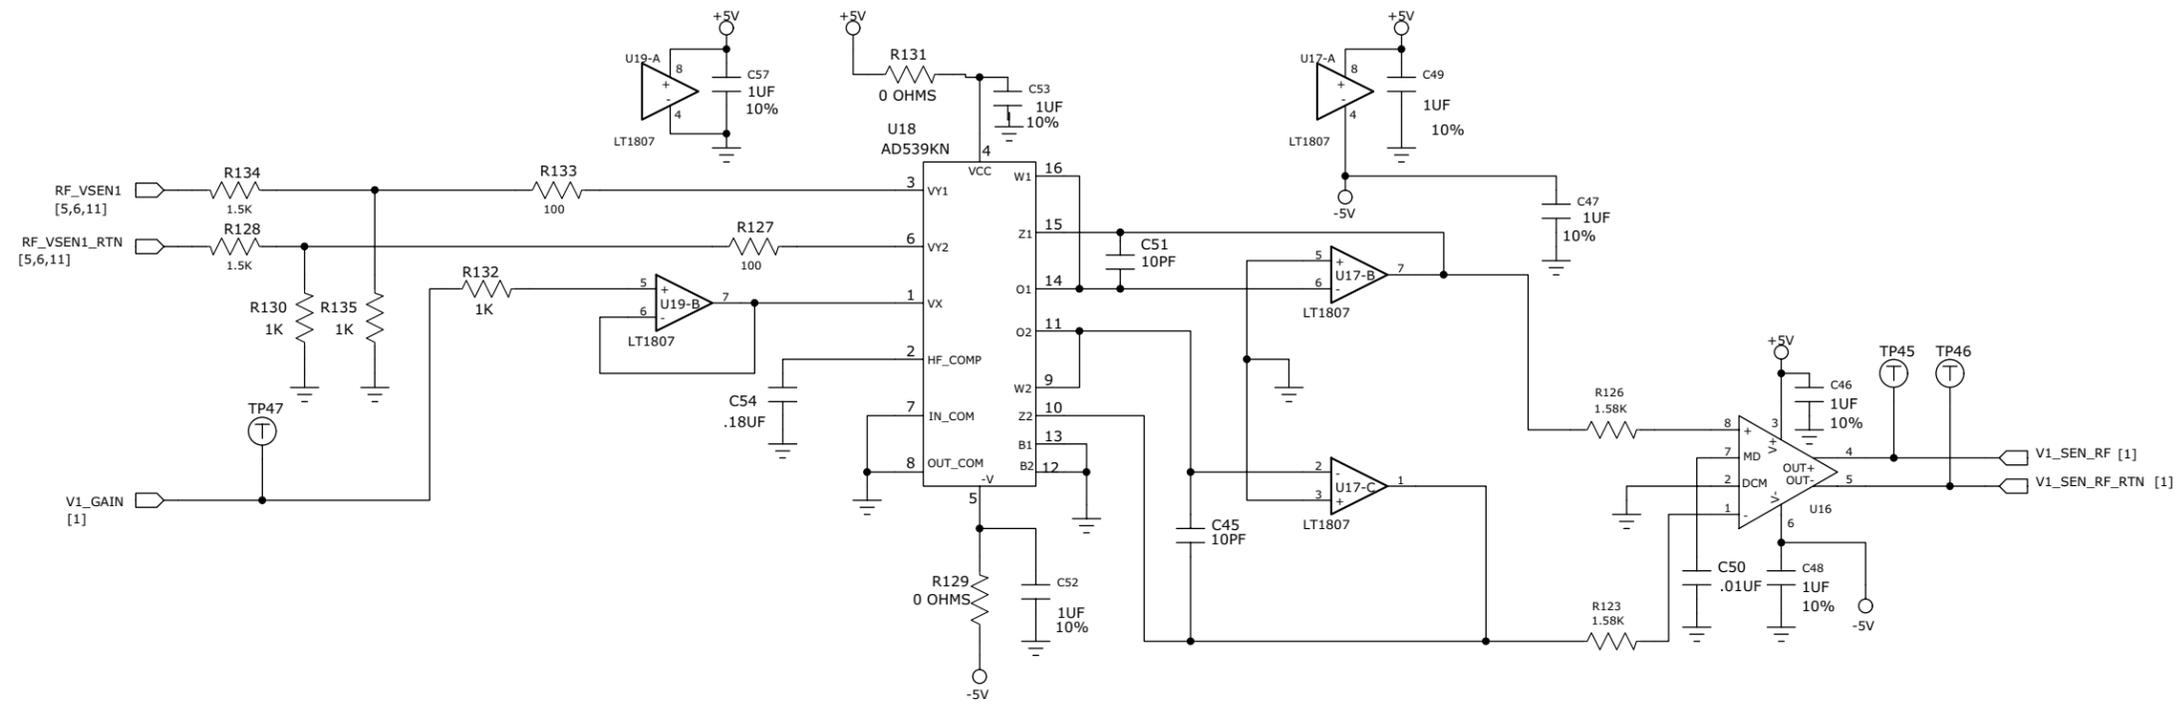


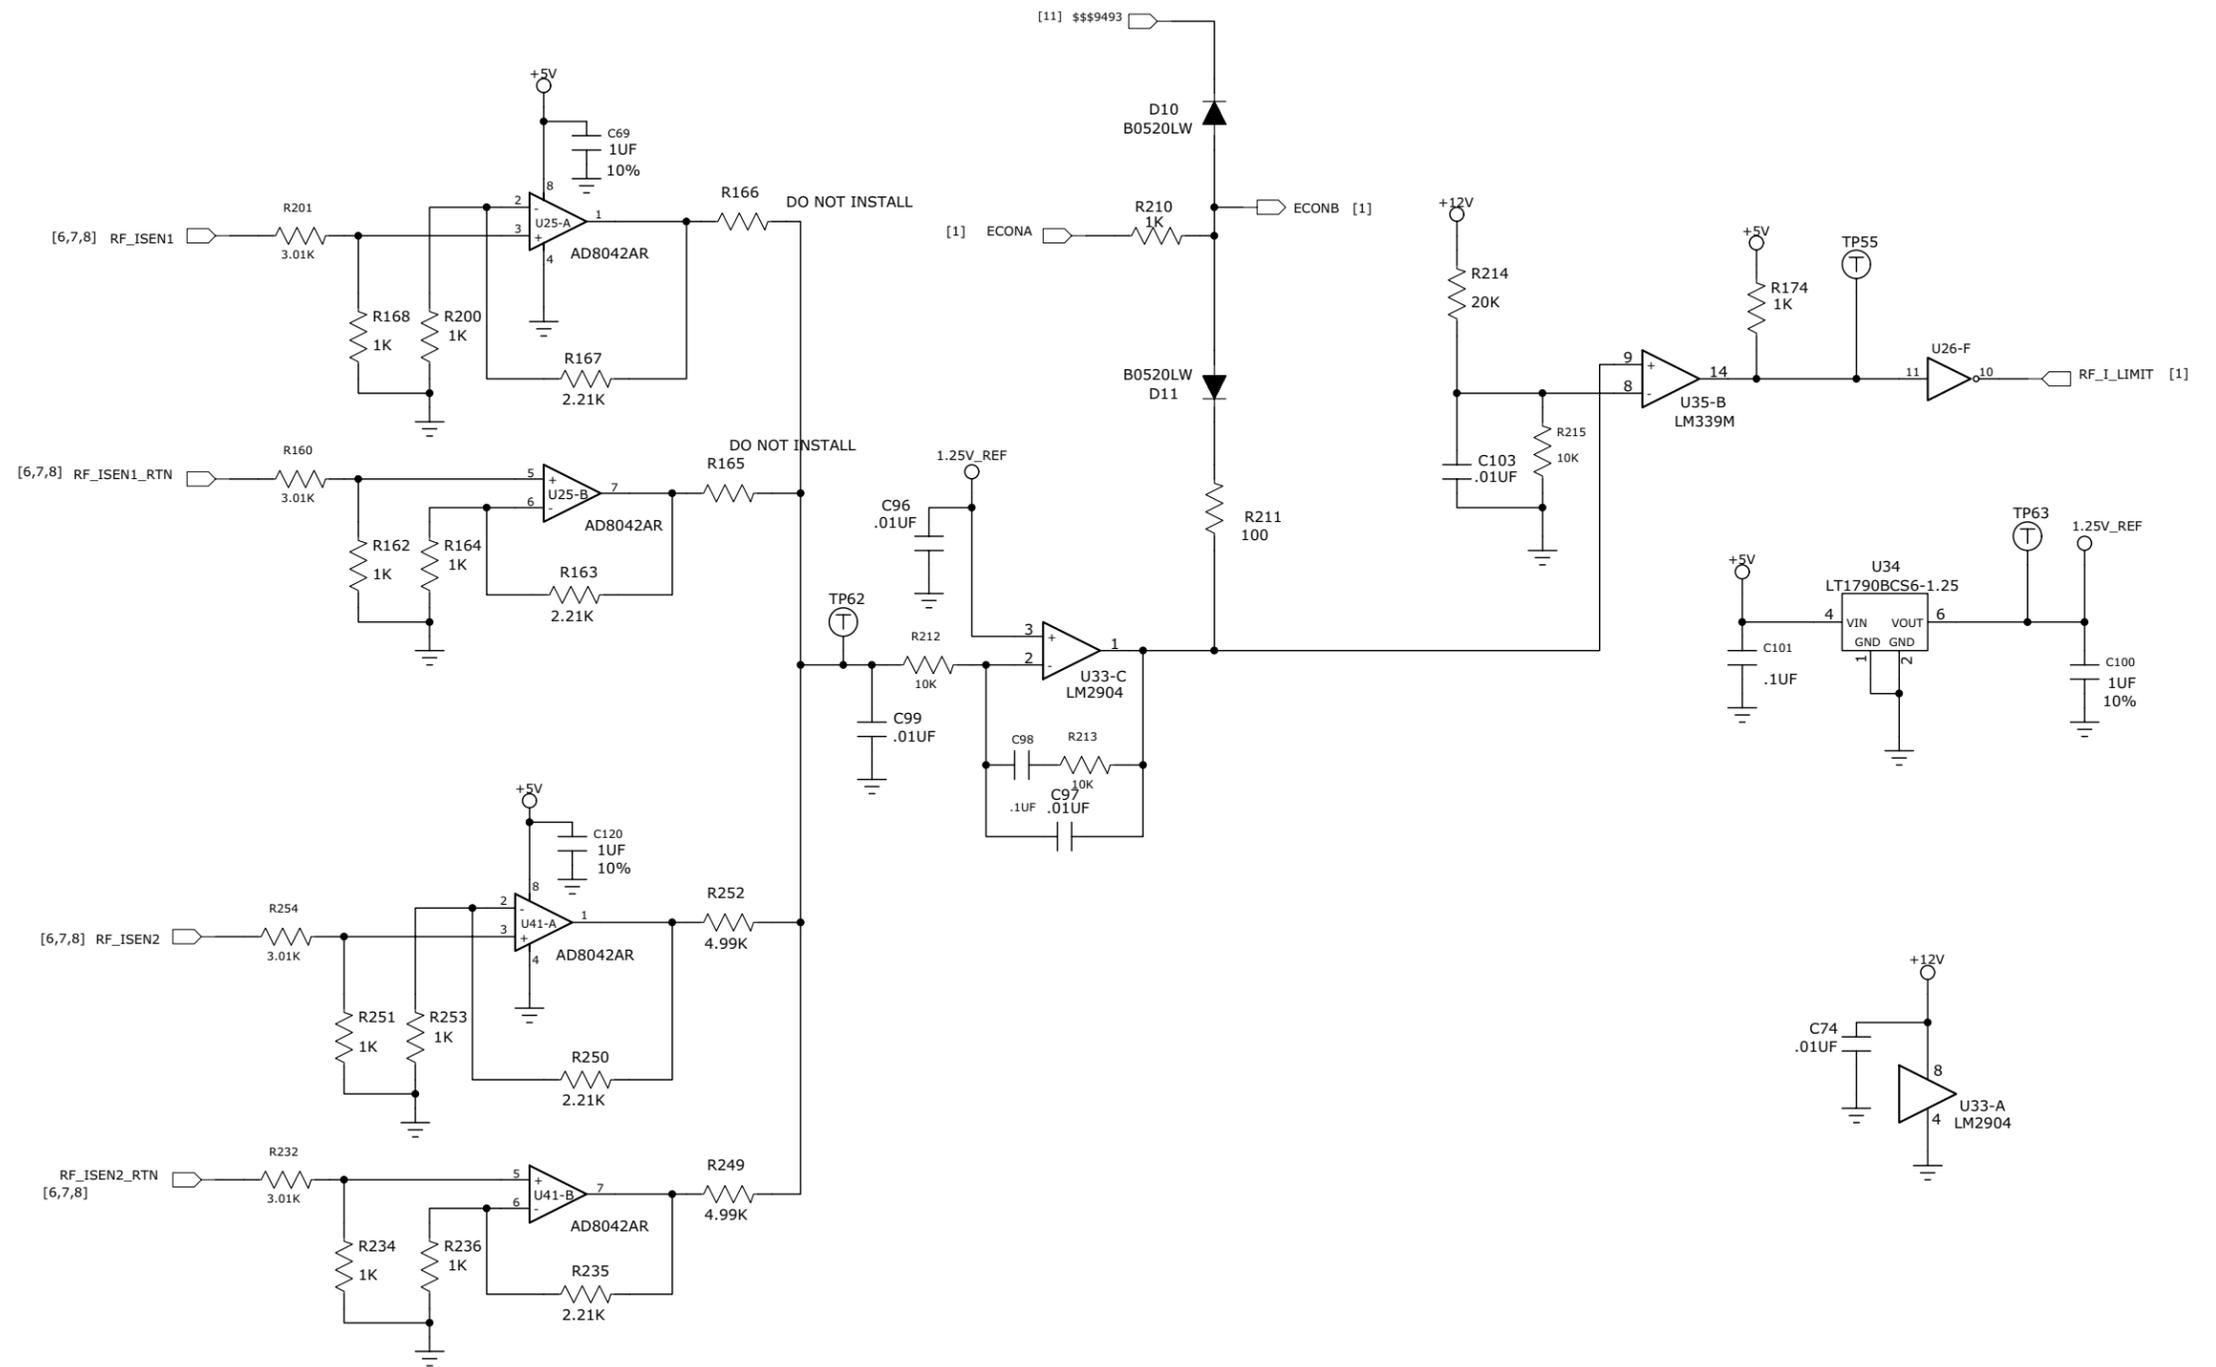

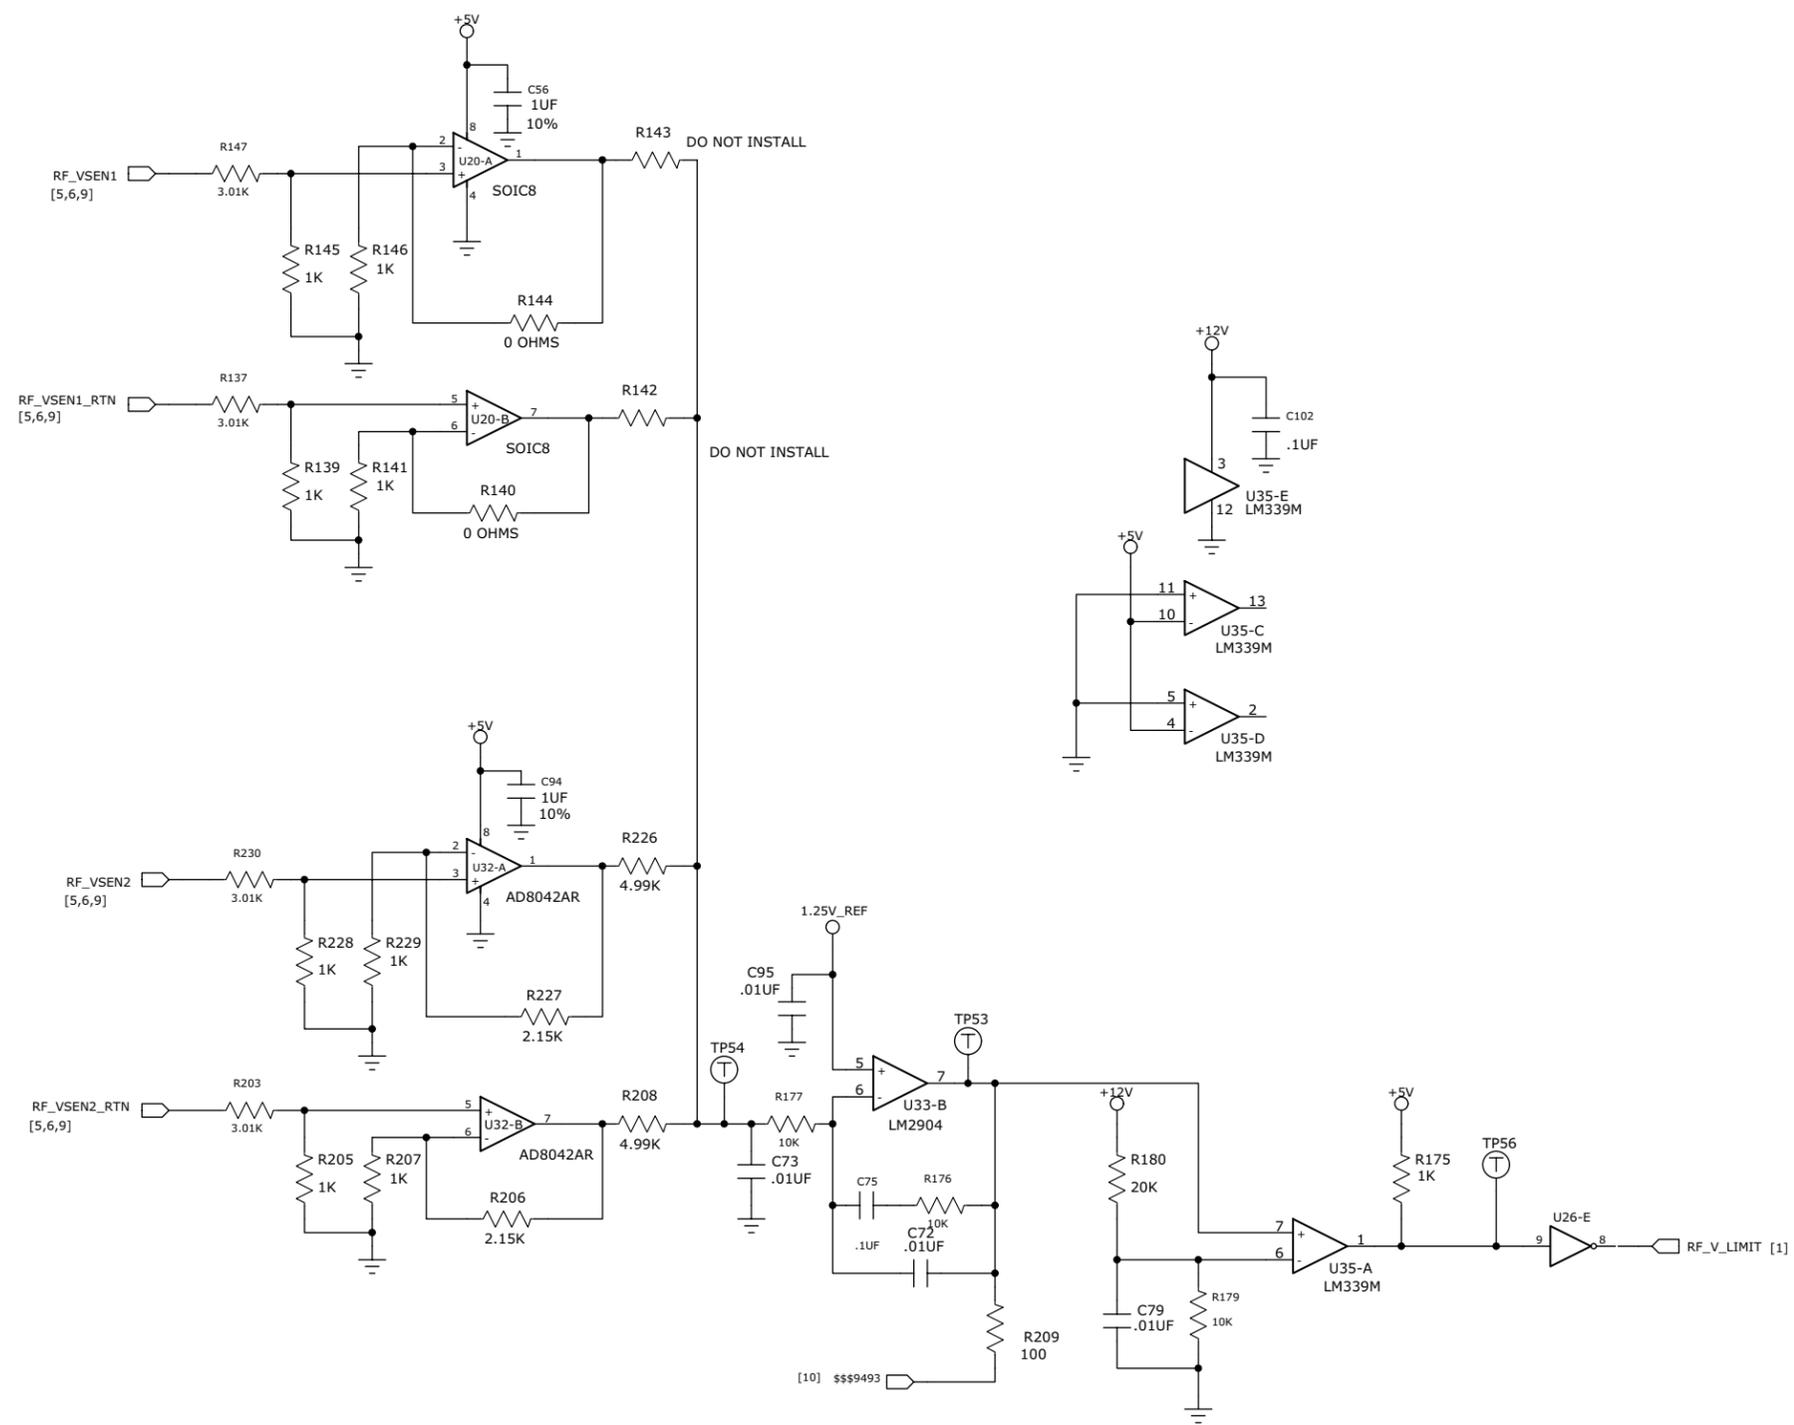




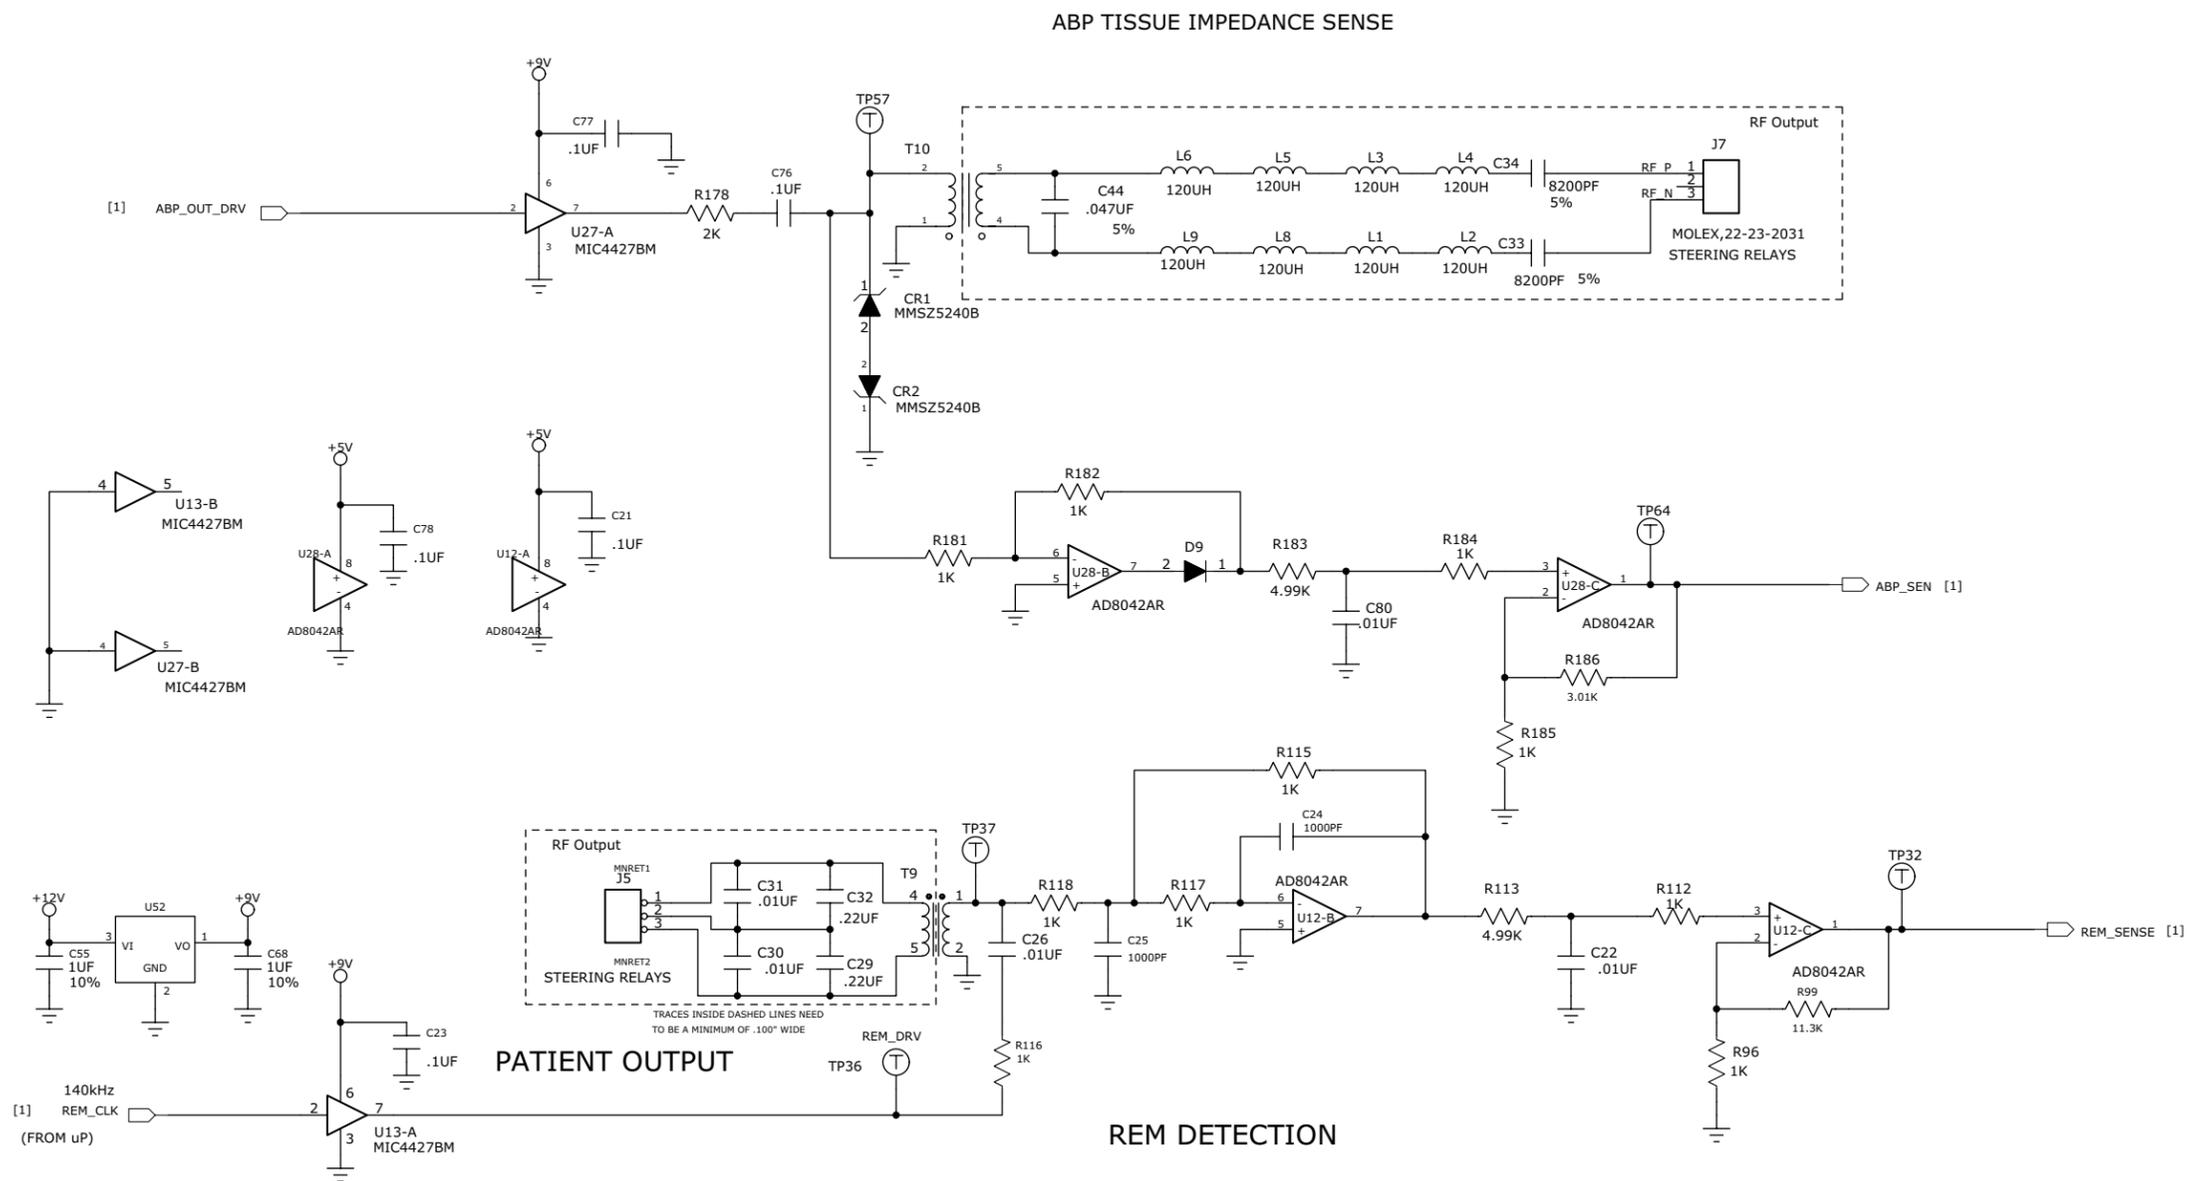




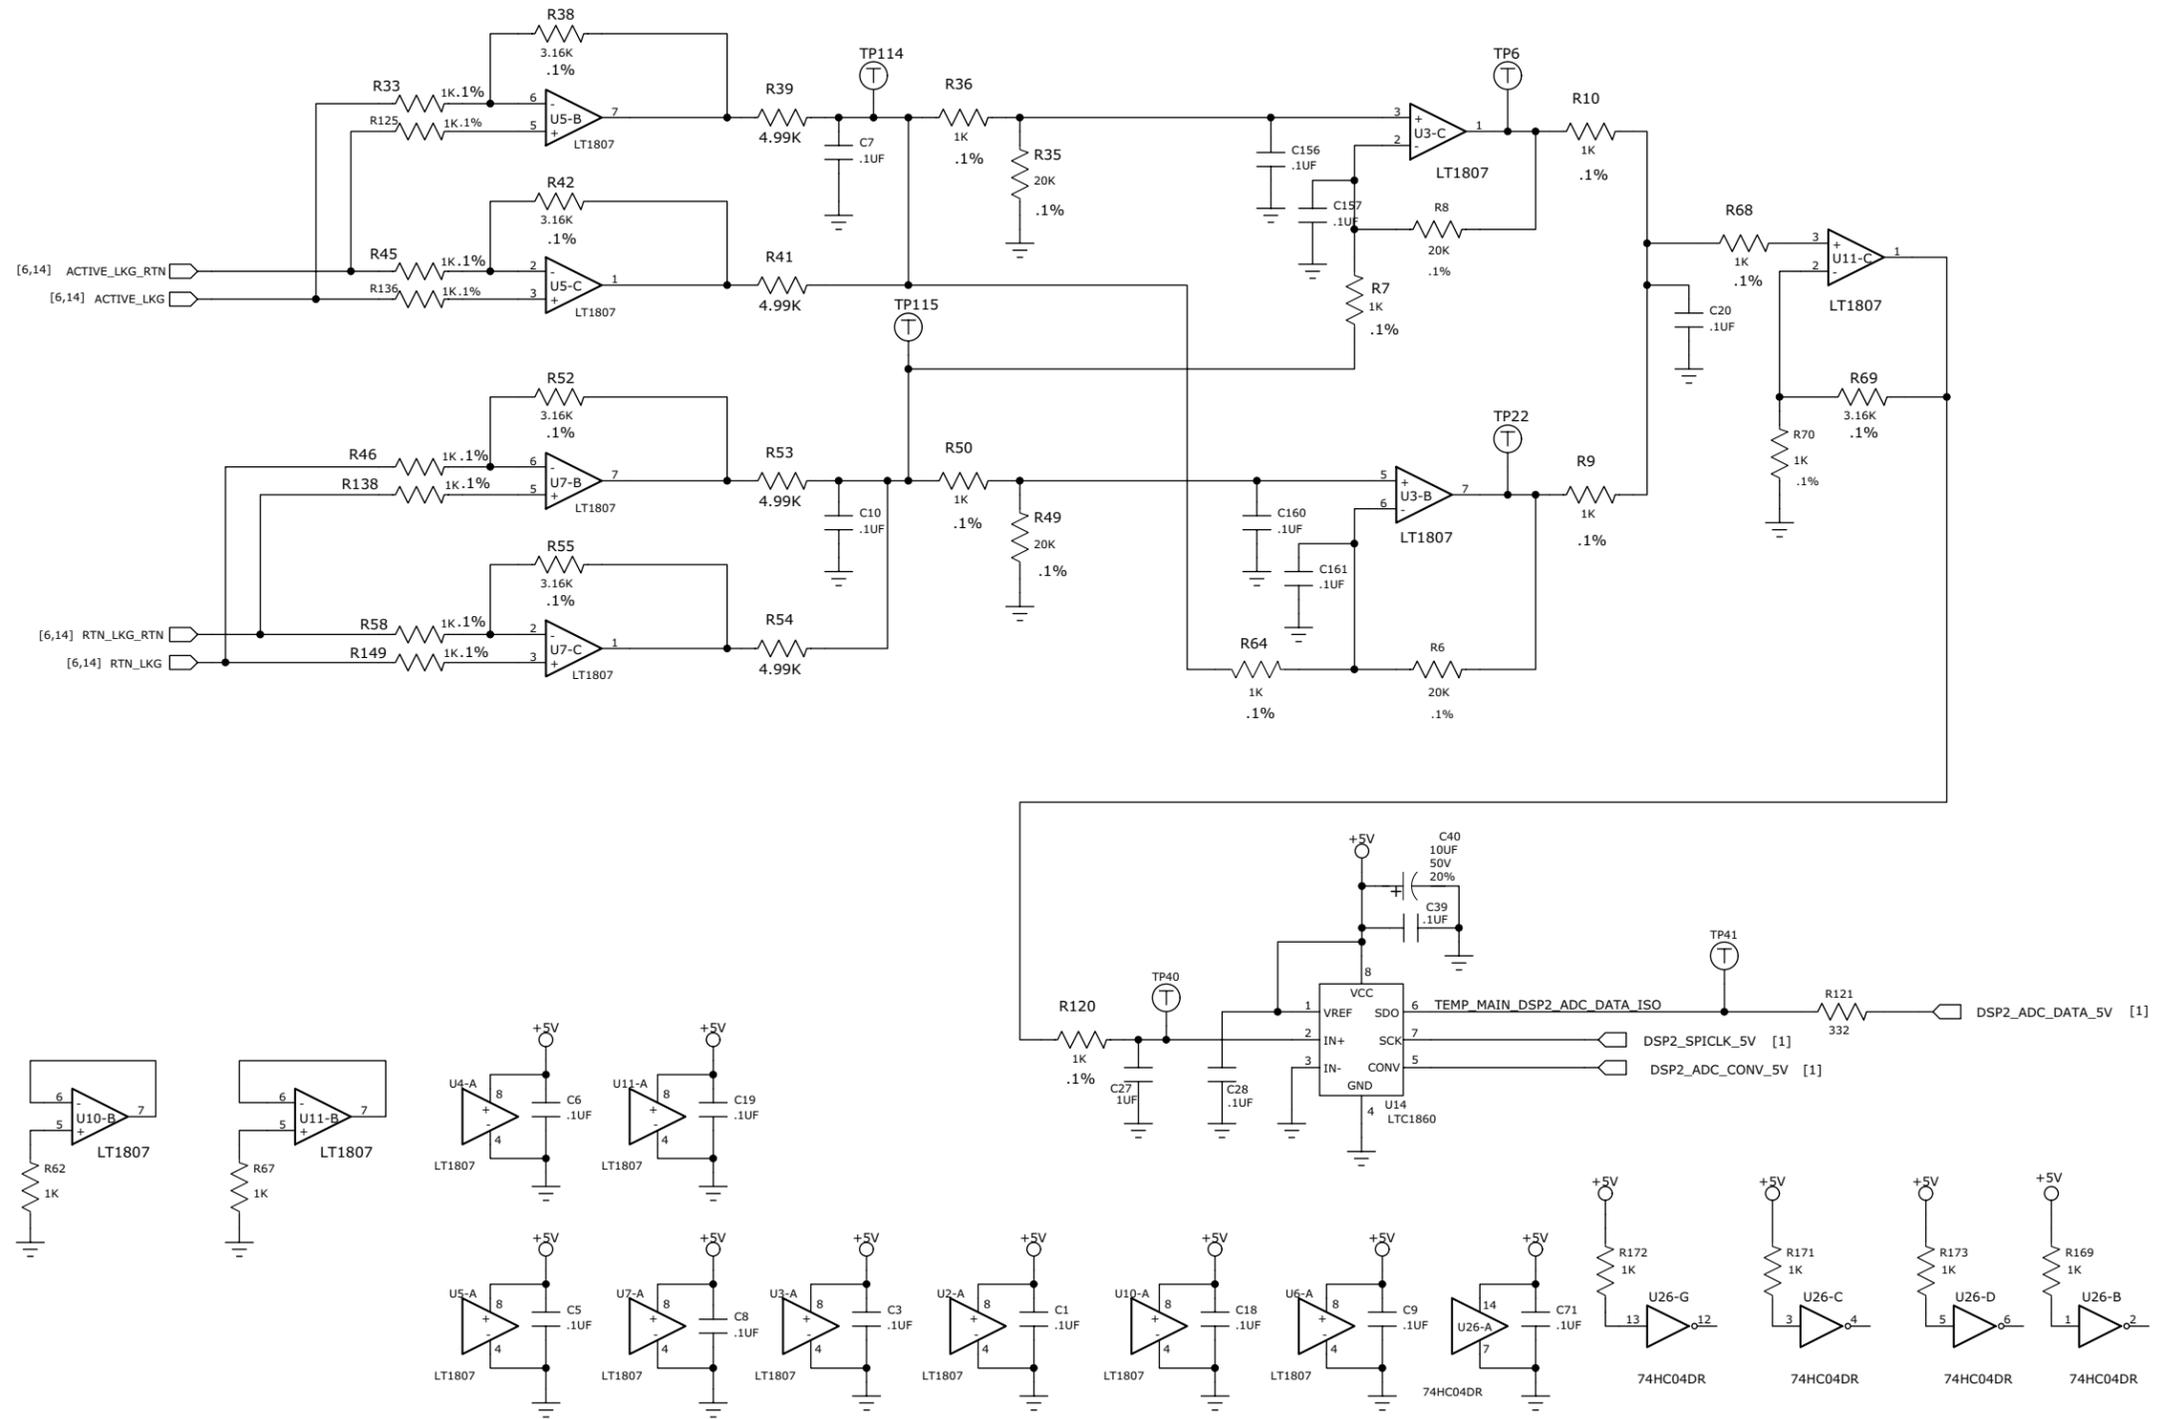


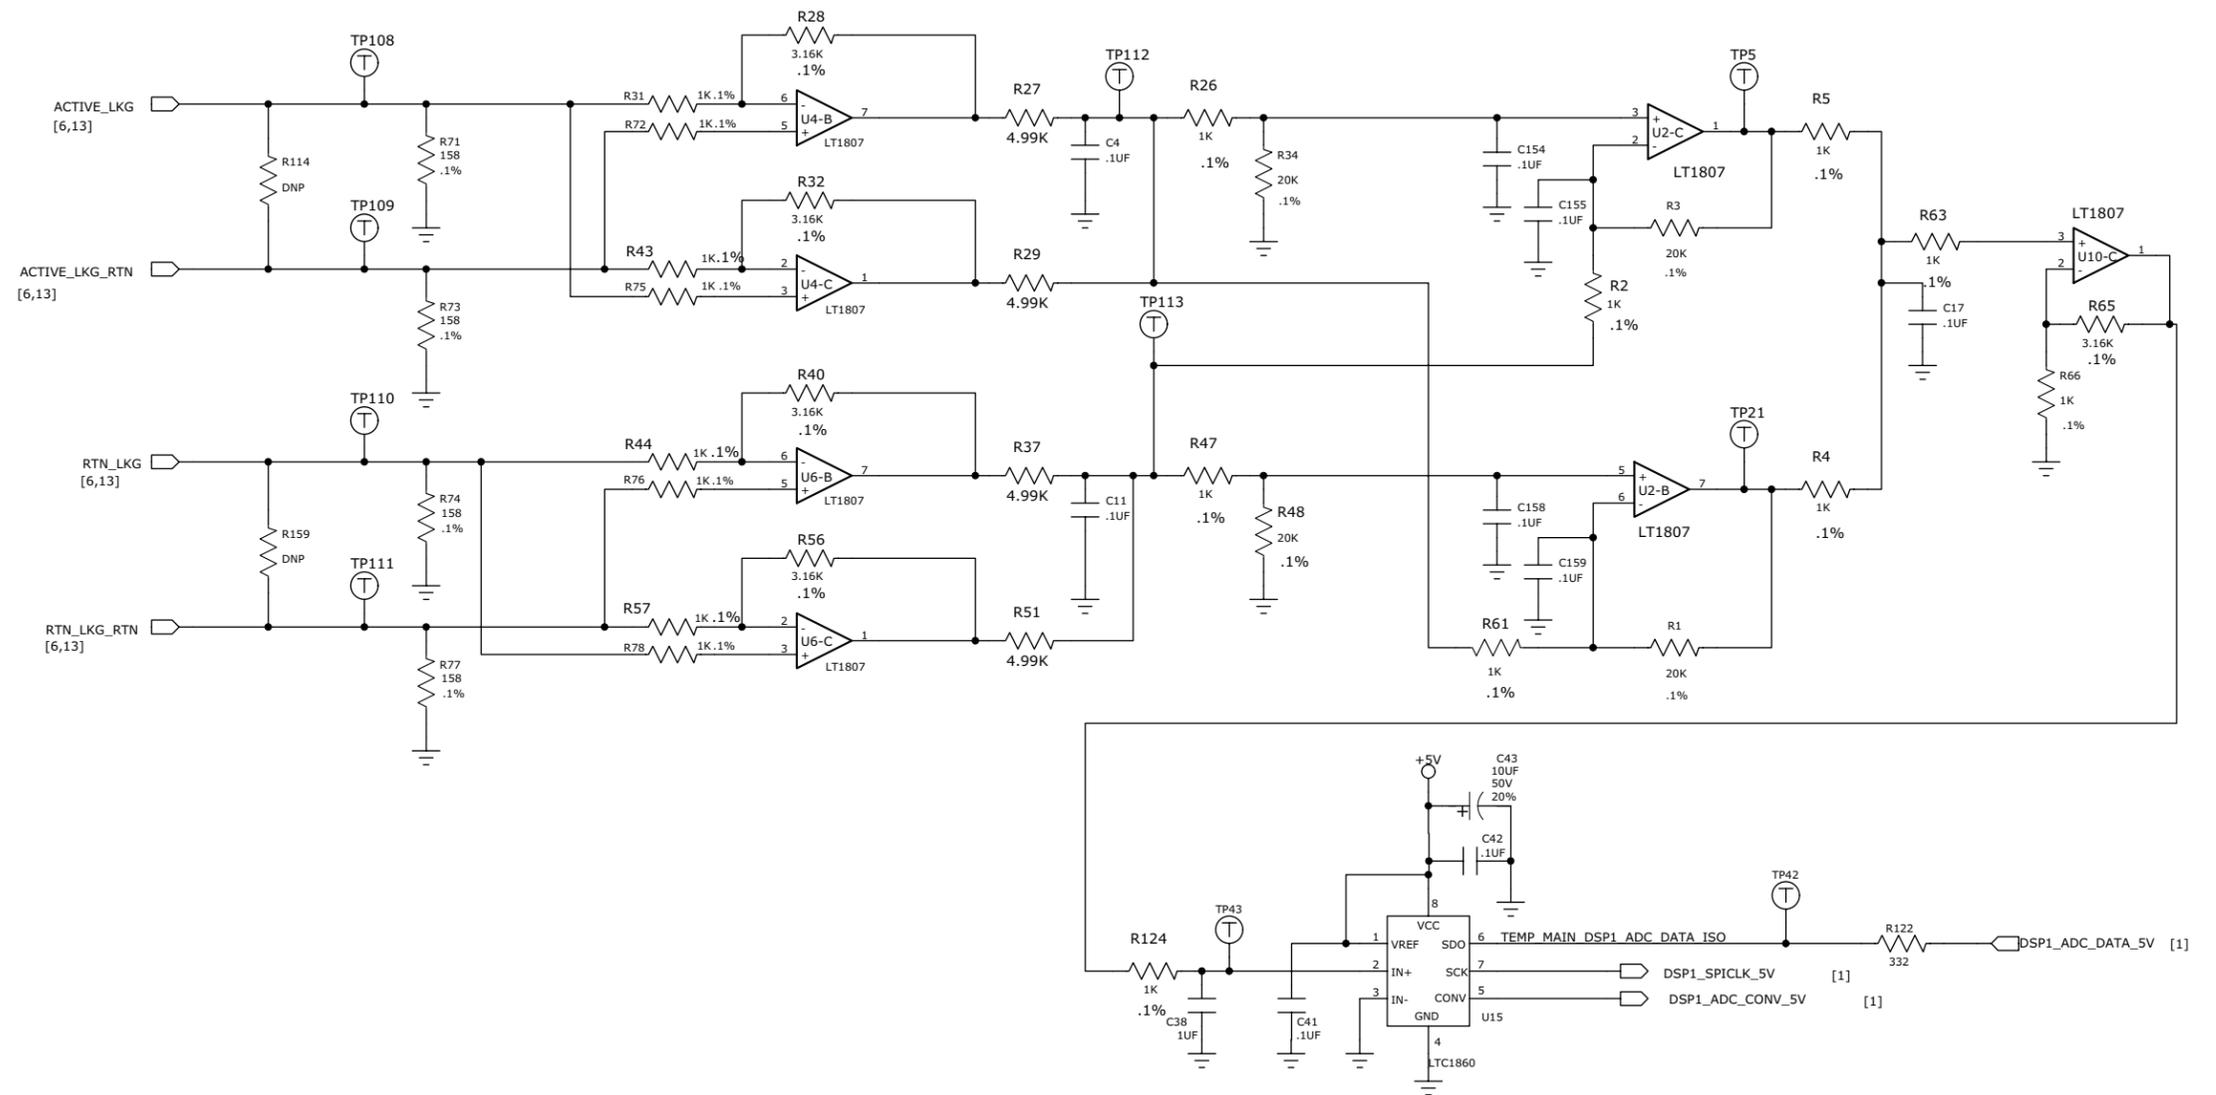


Steering Relay PCBA

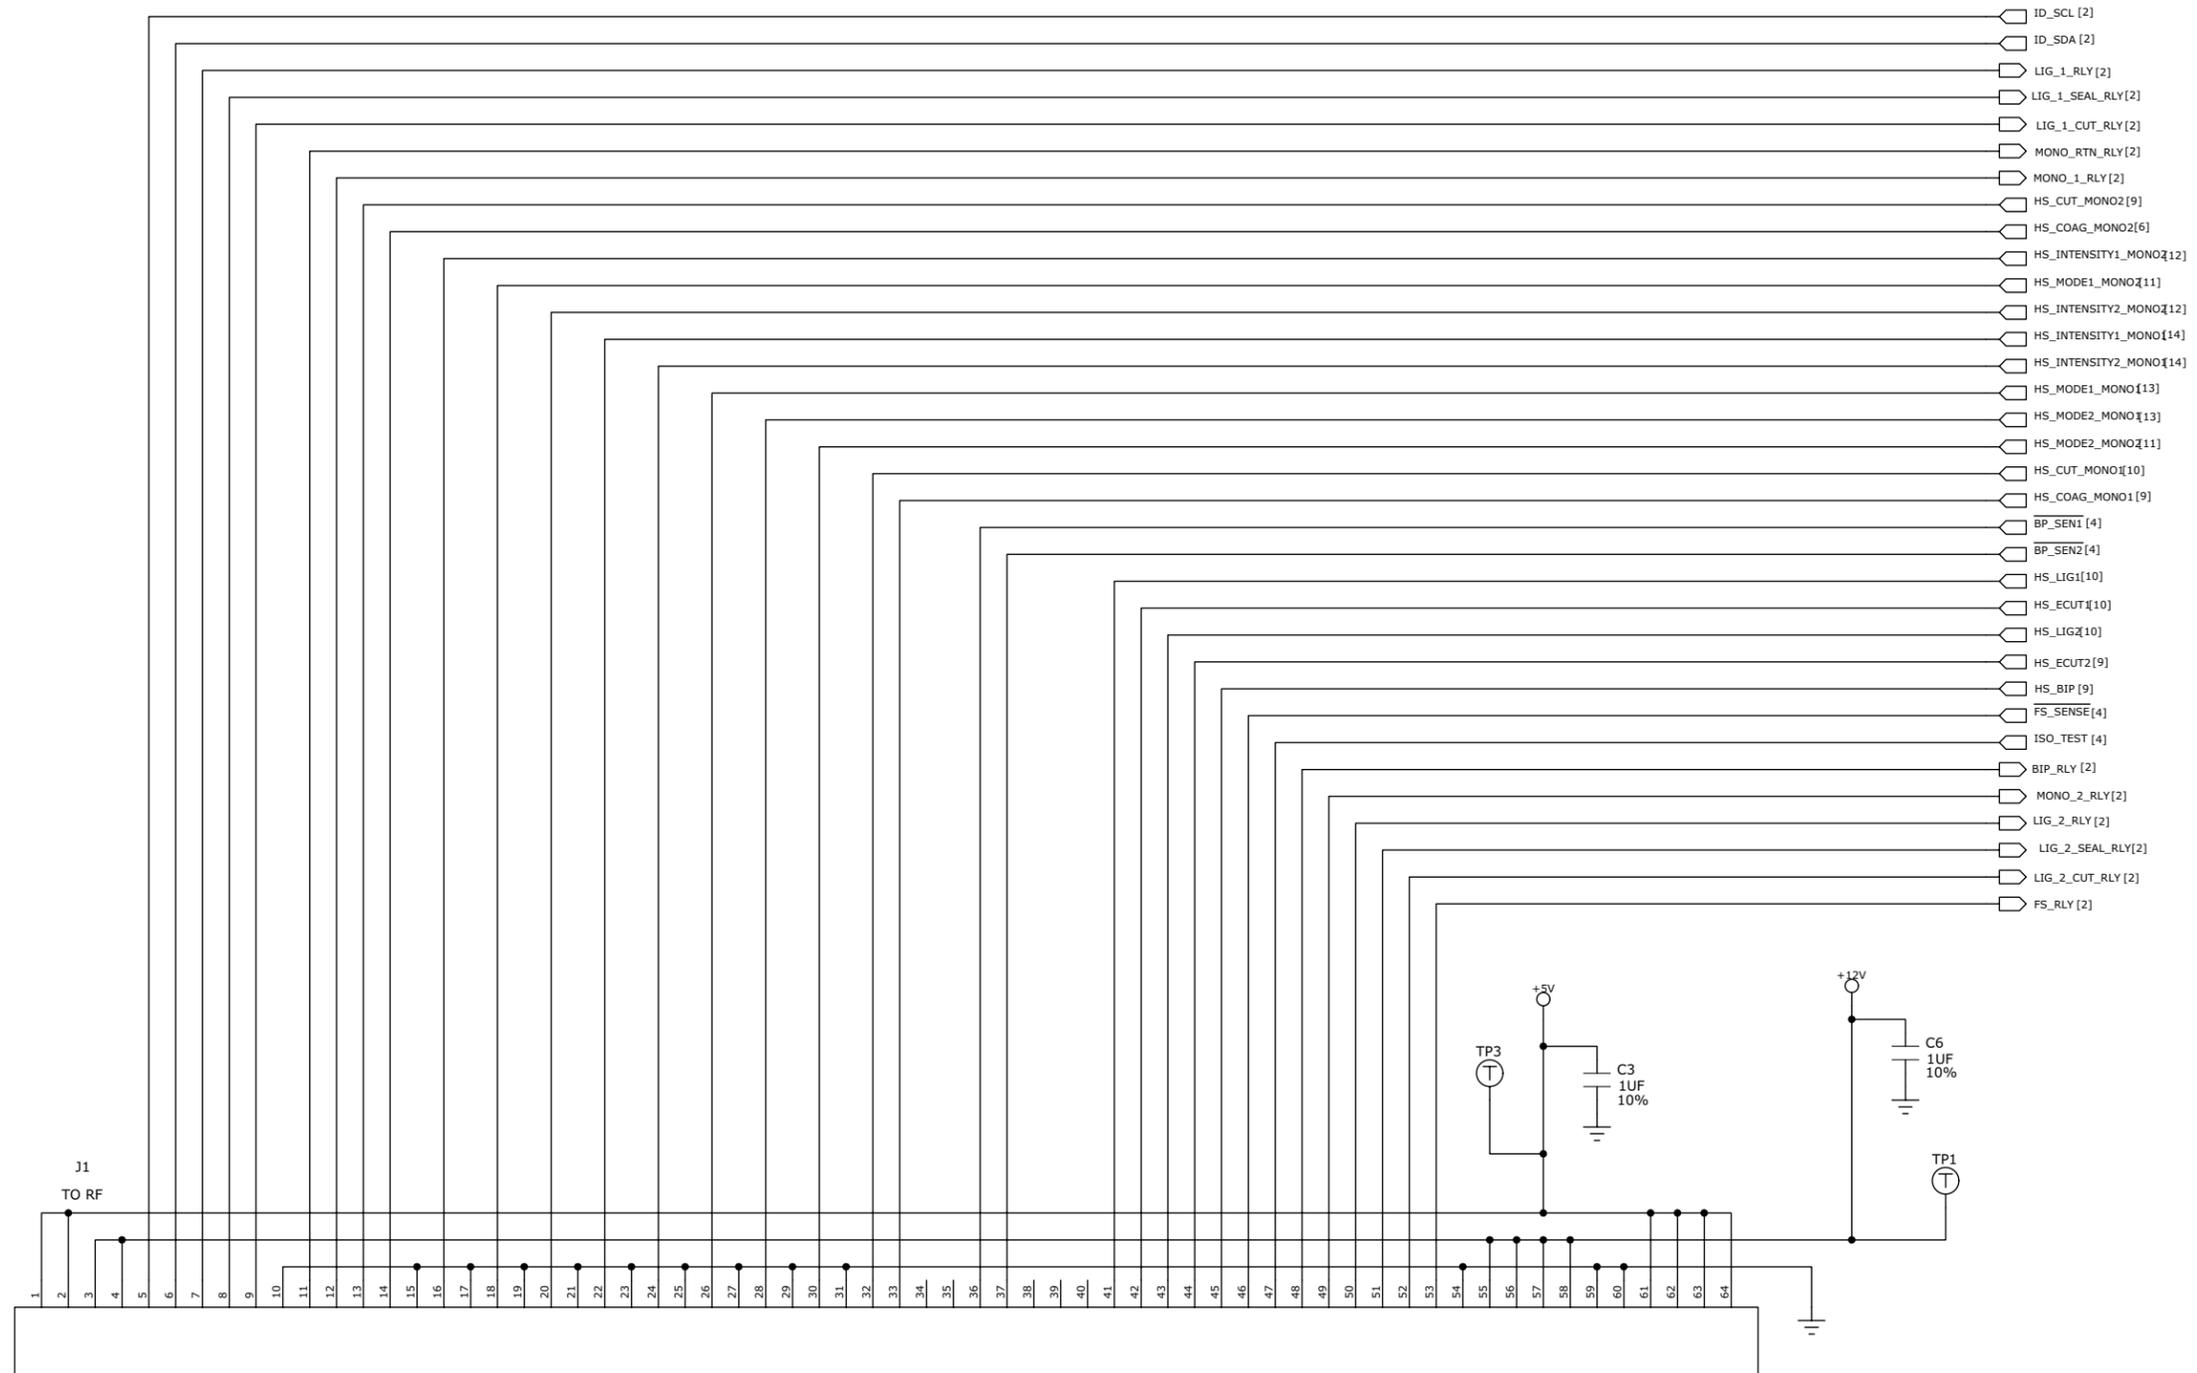


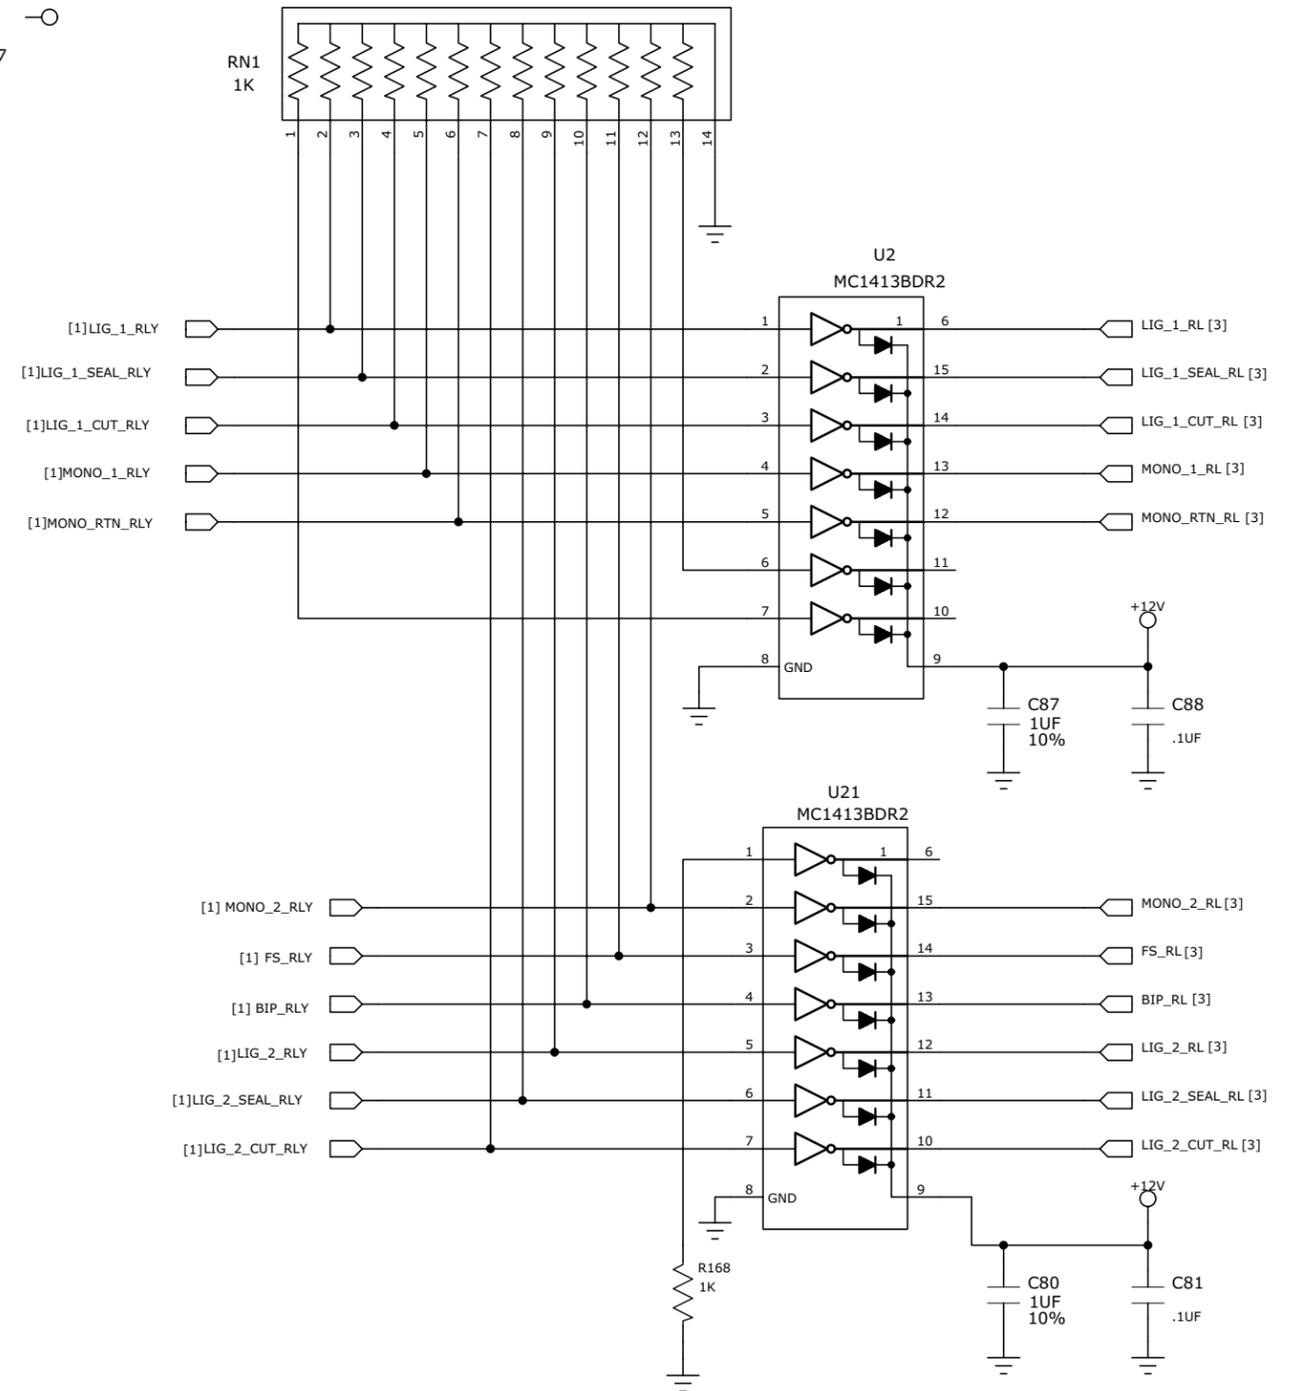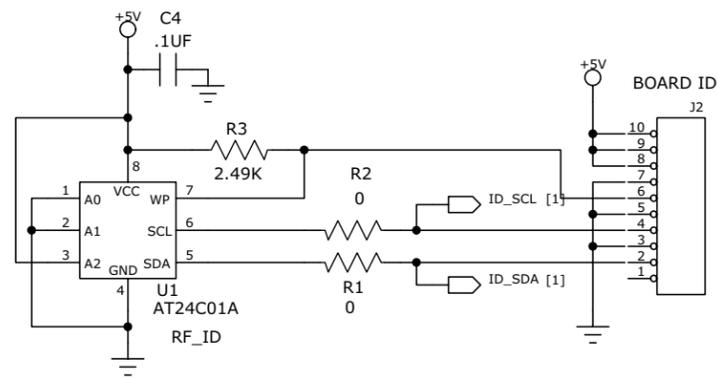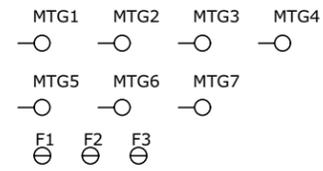


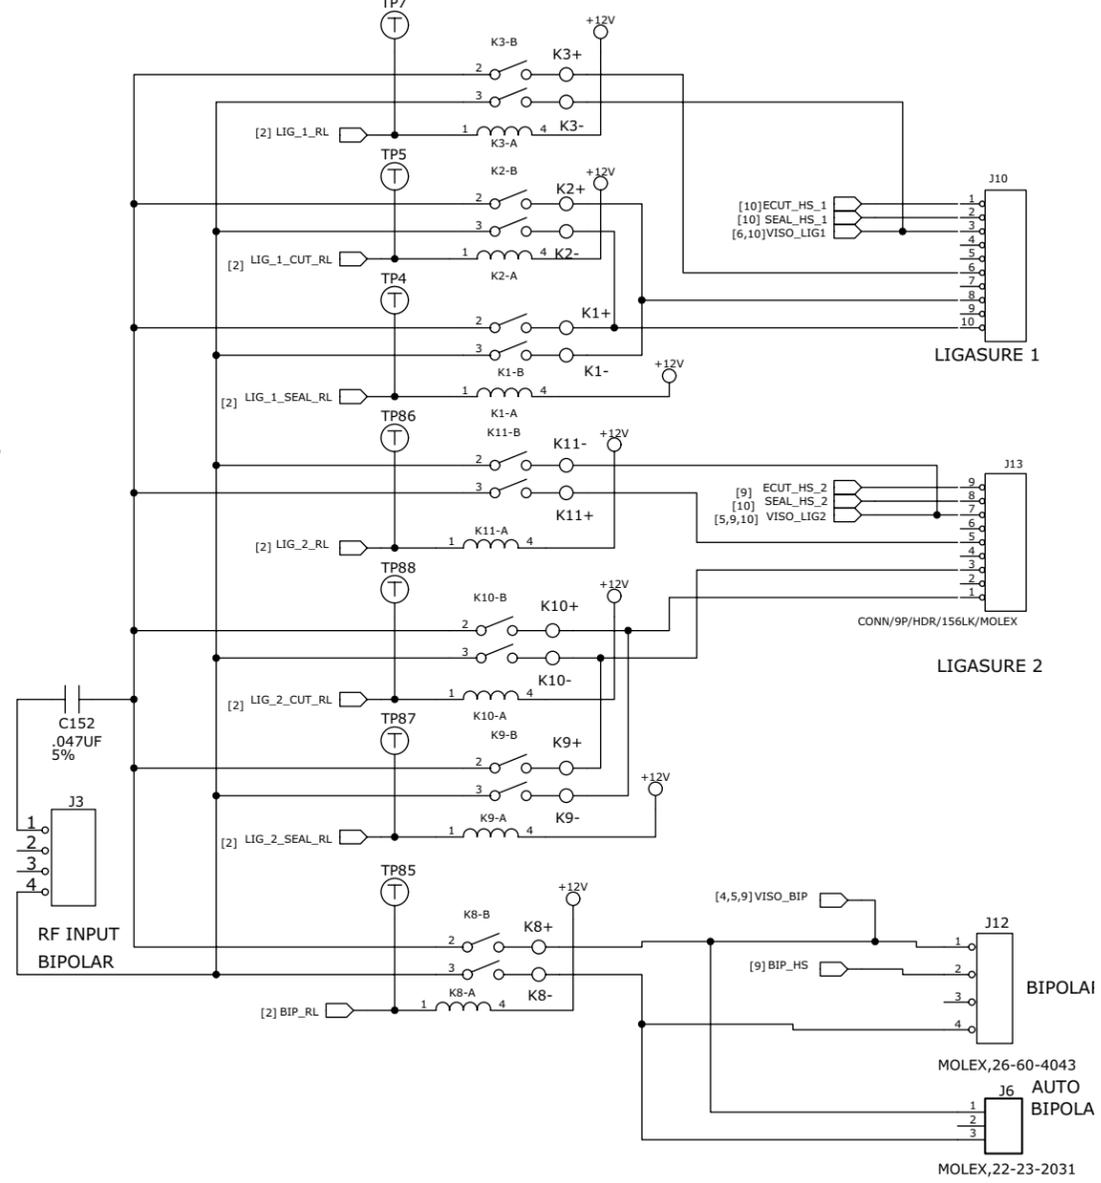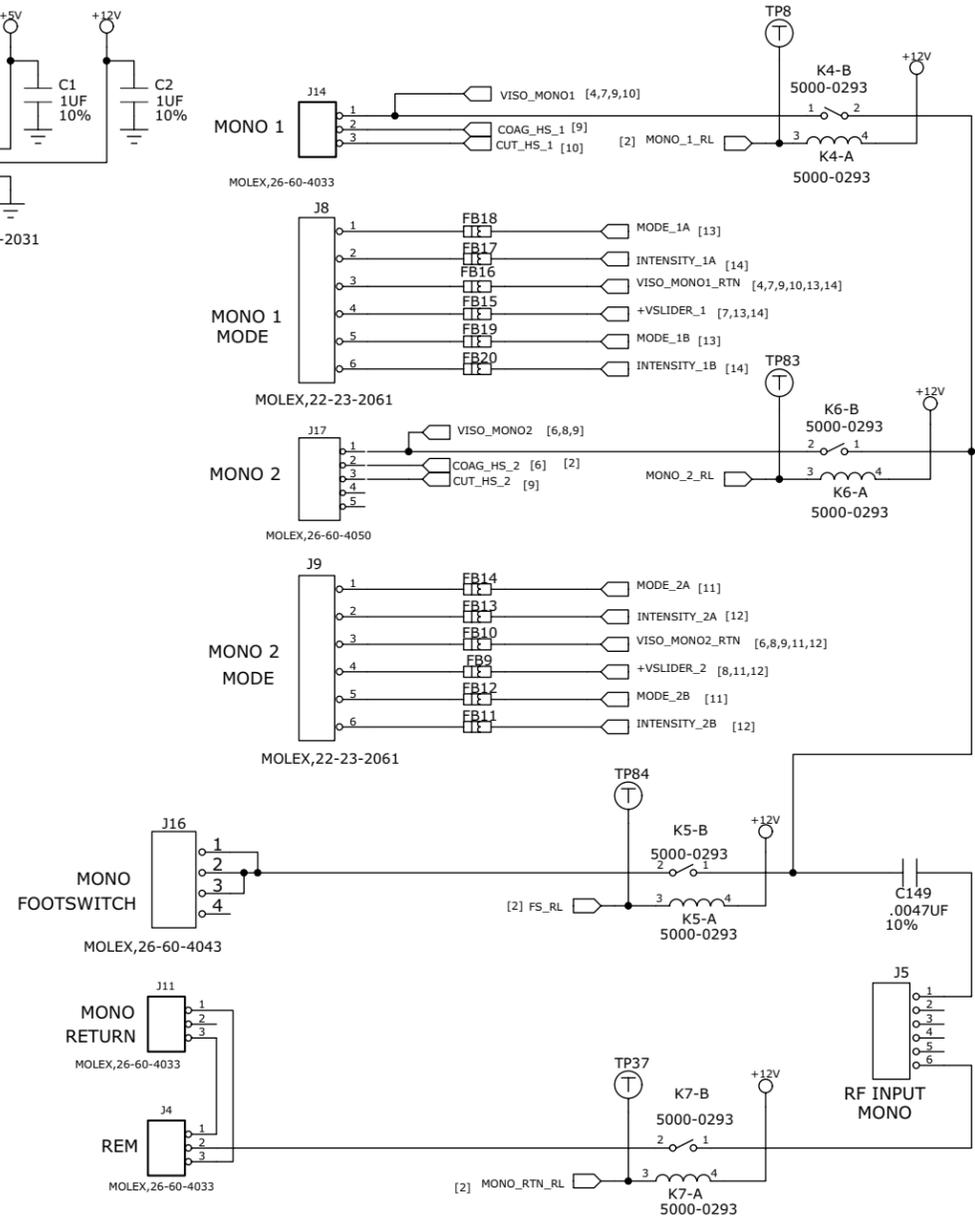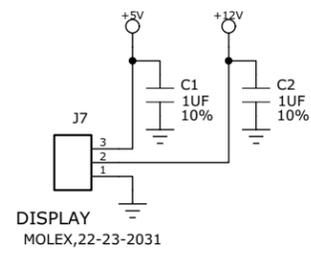


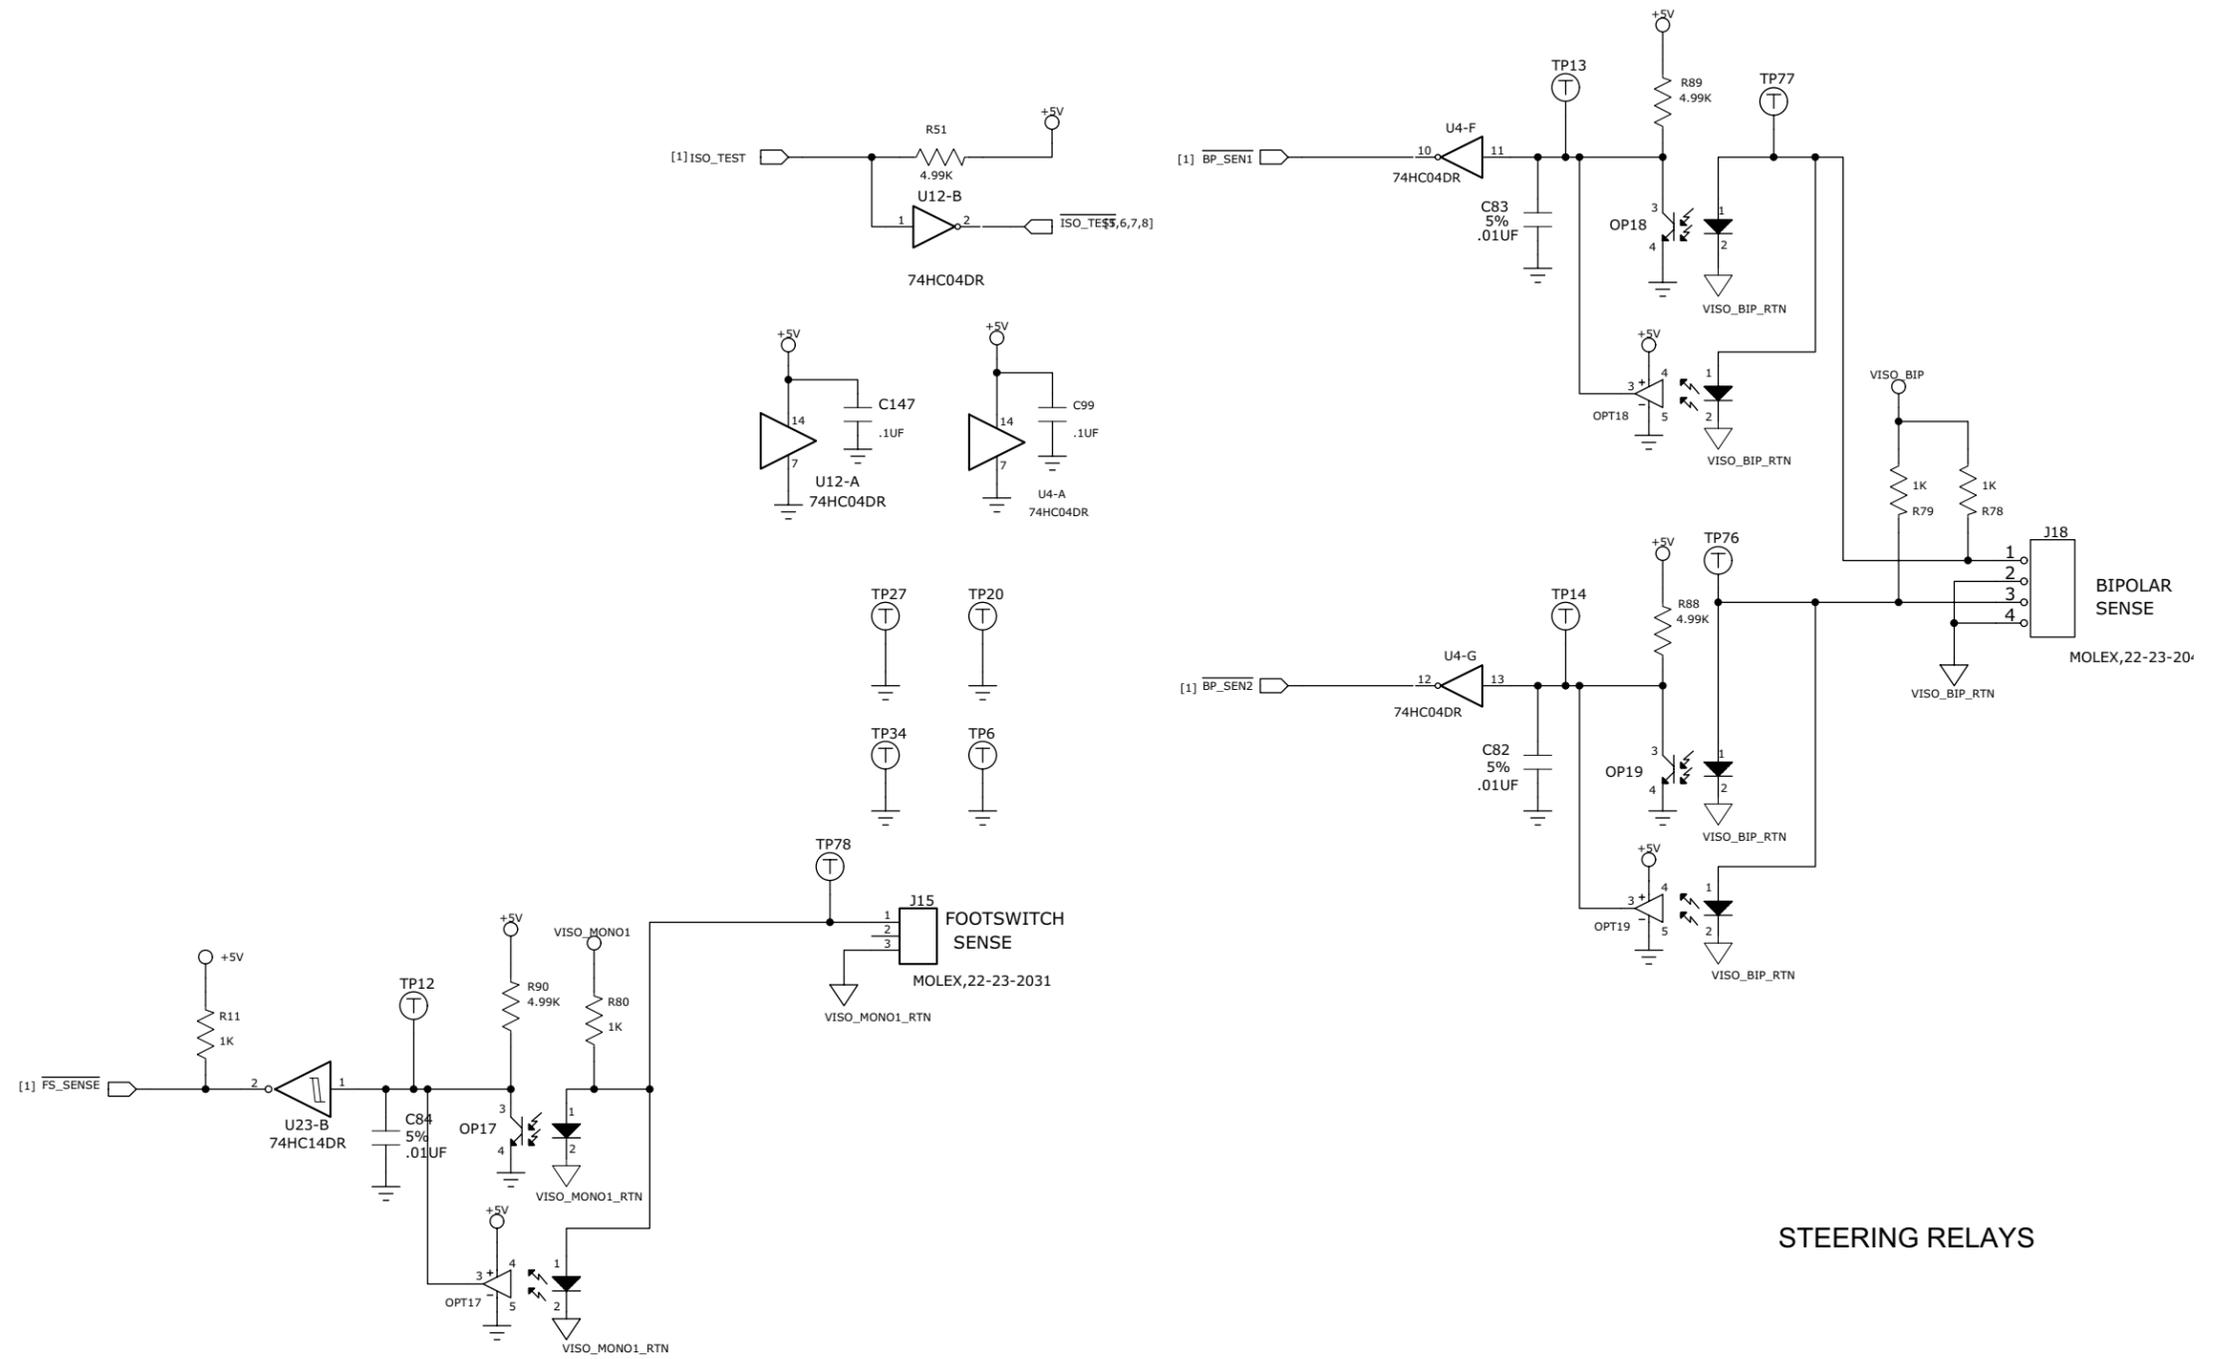



STEERING RELAYS

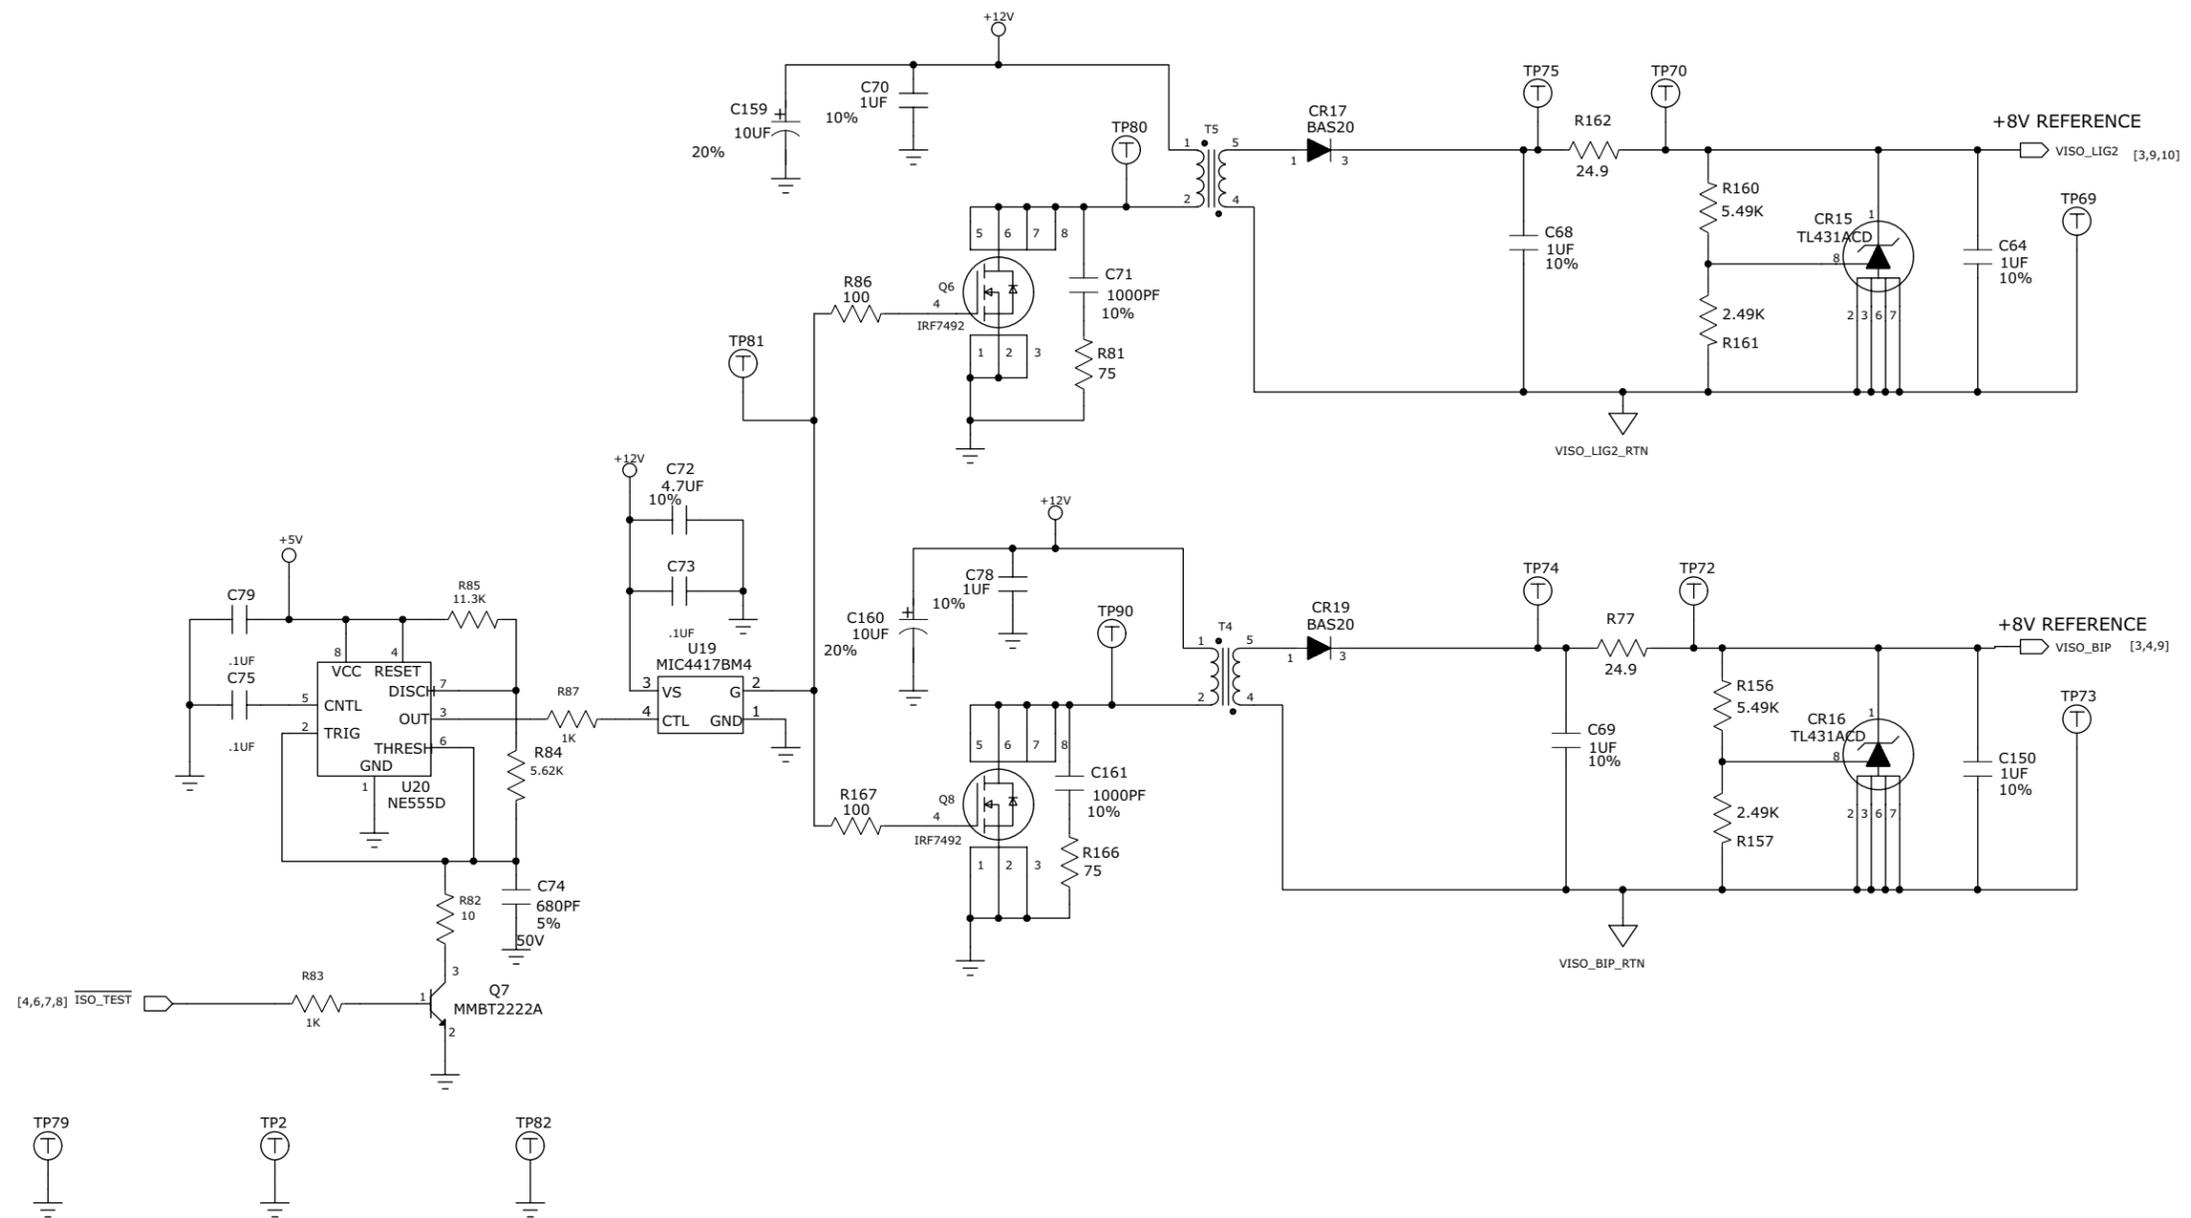


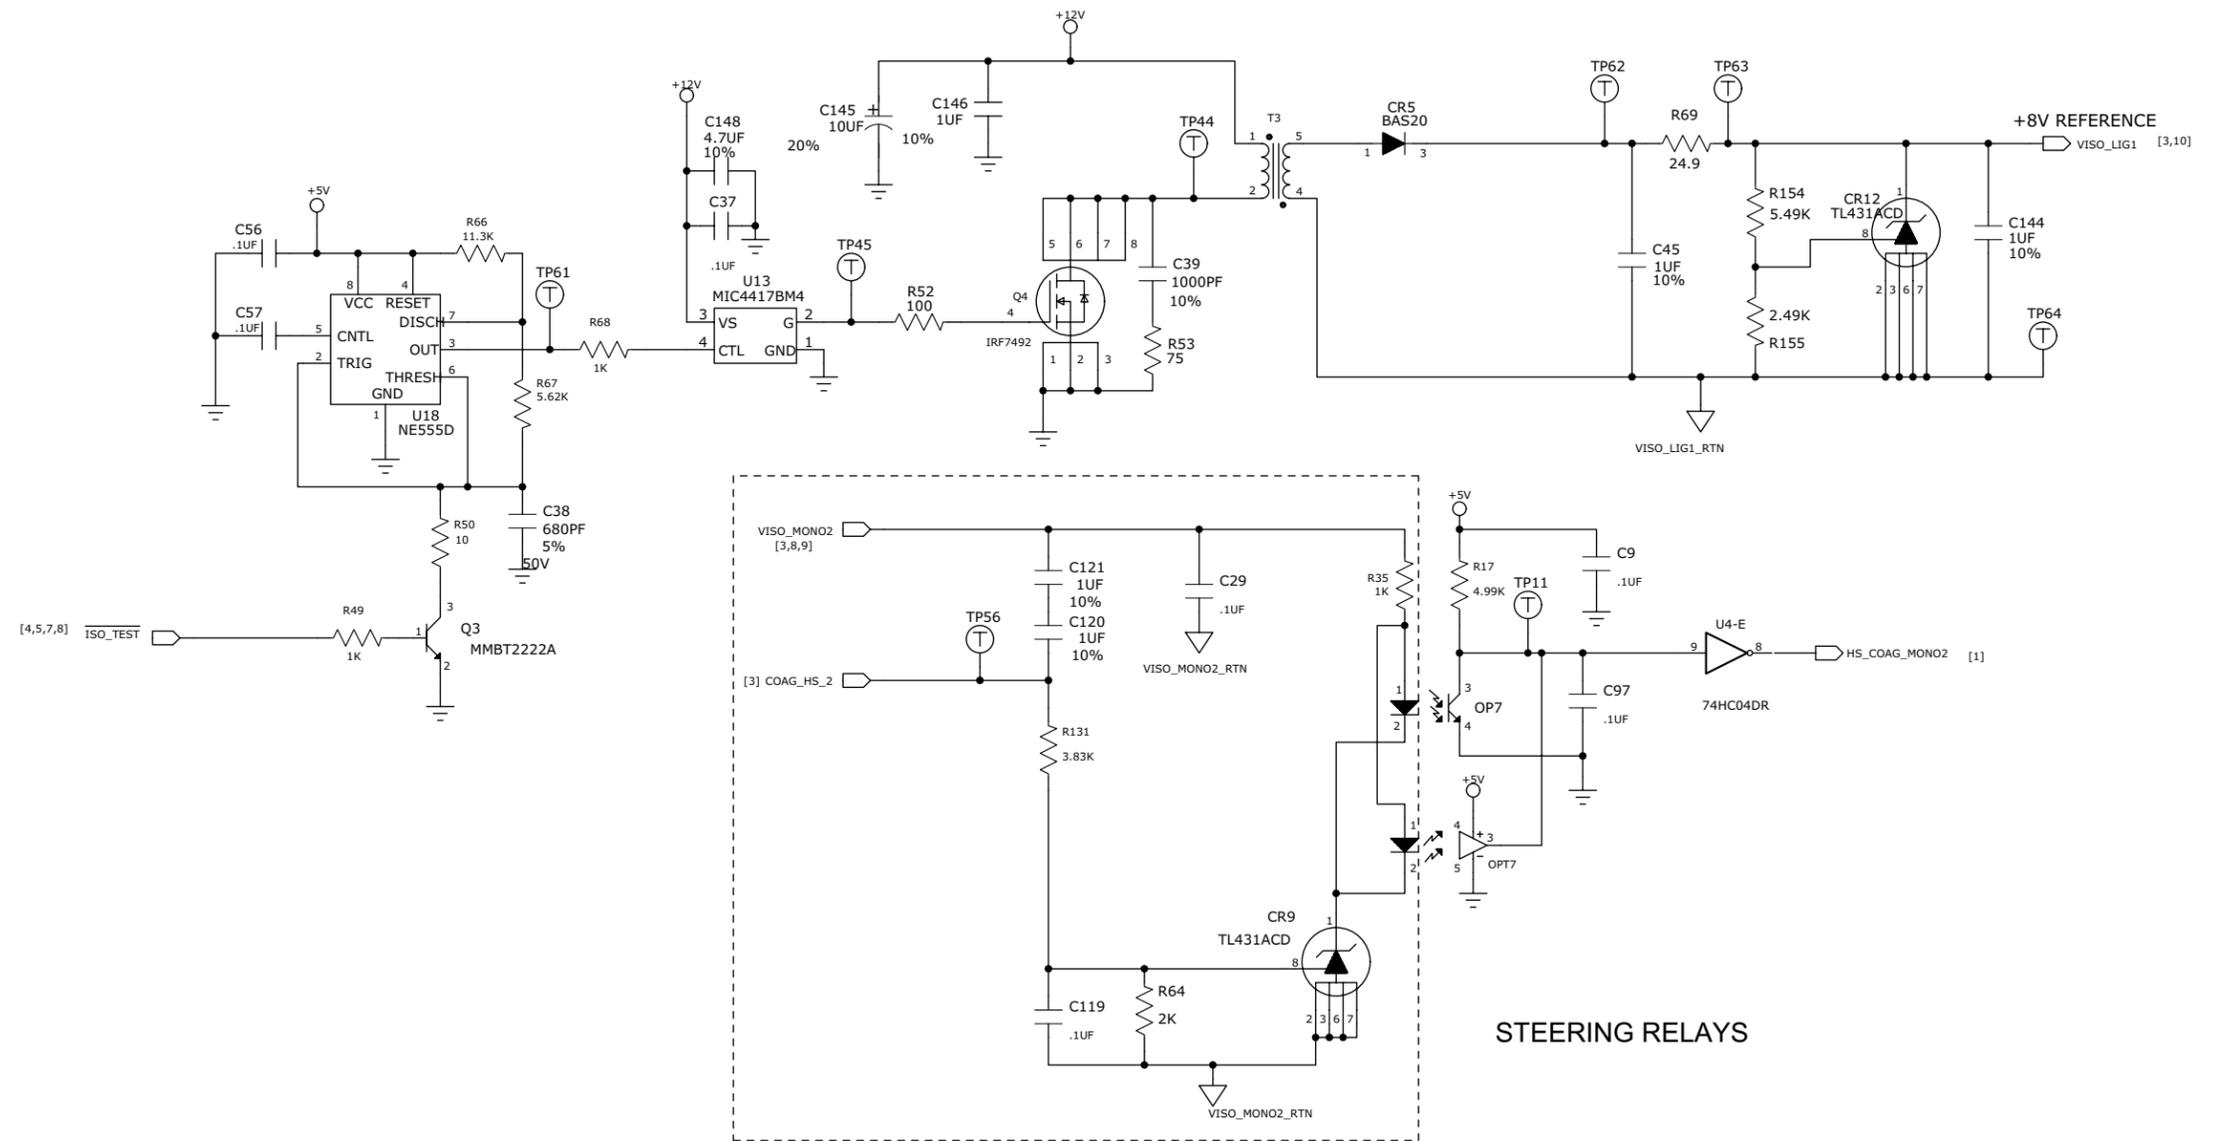

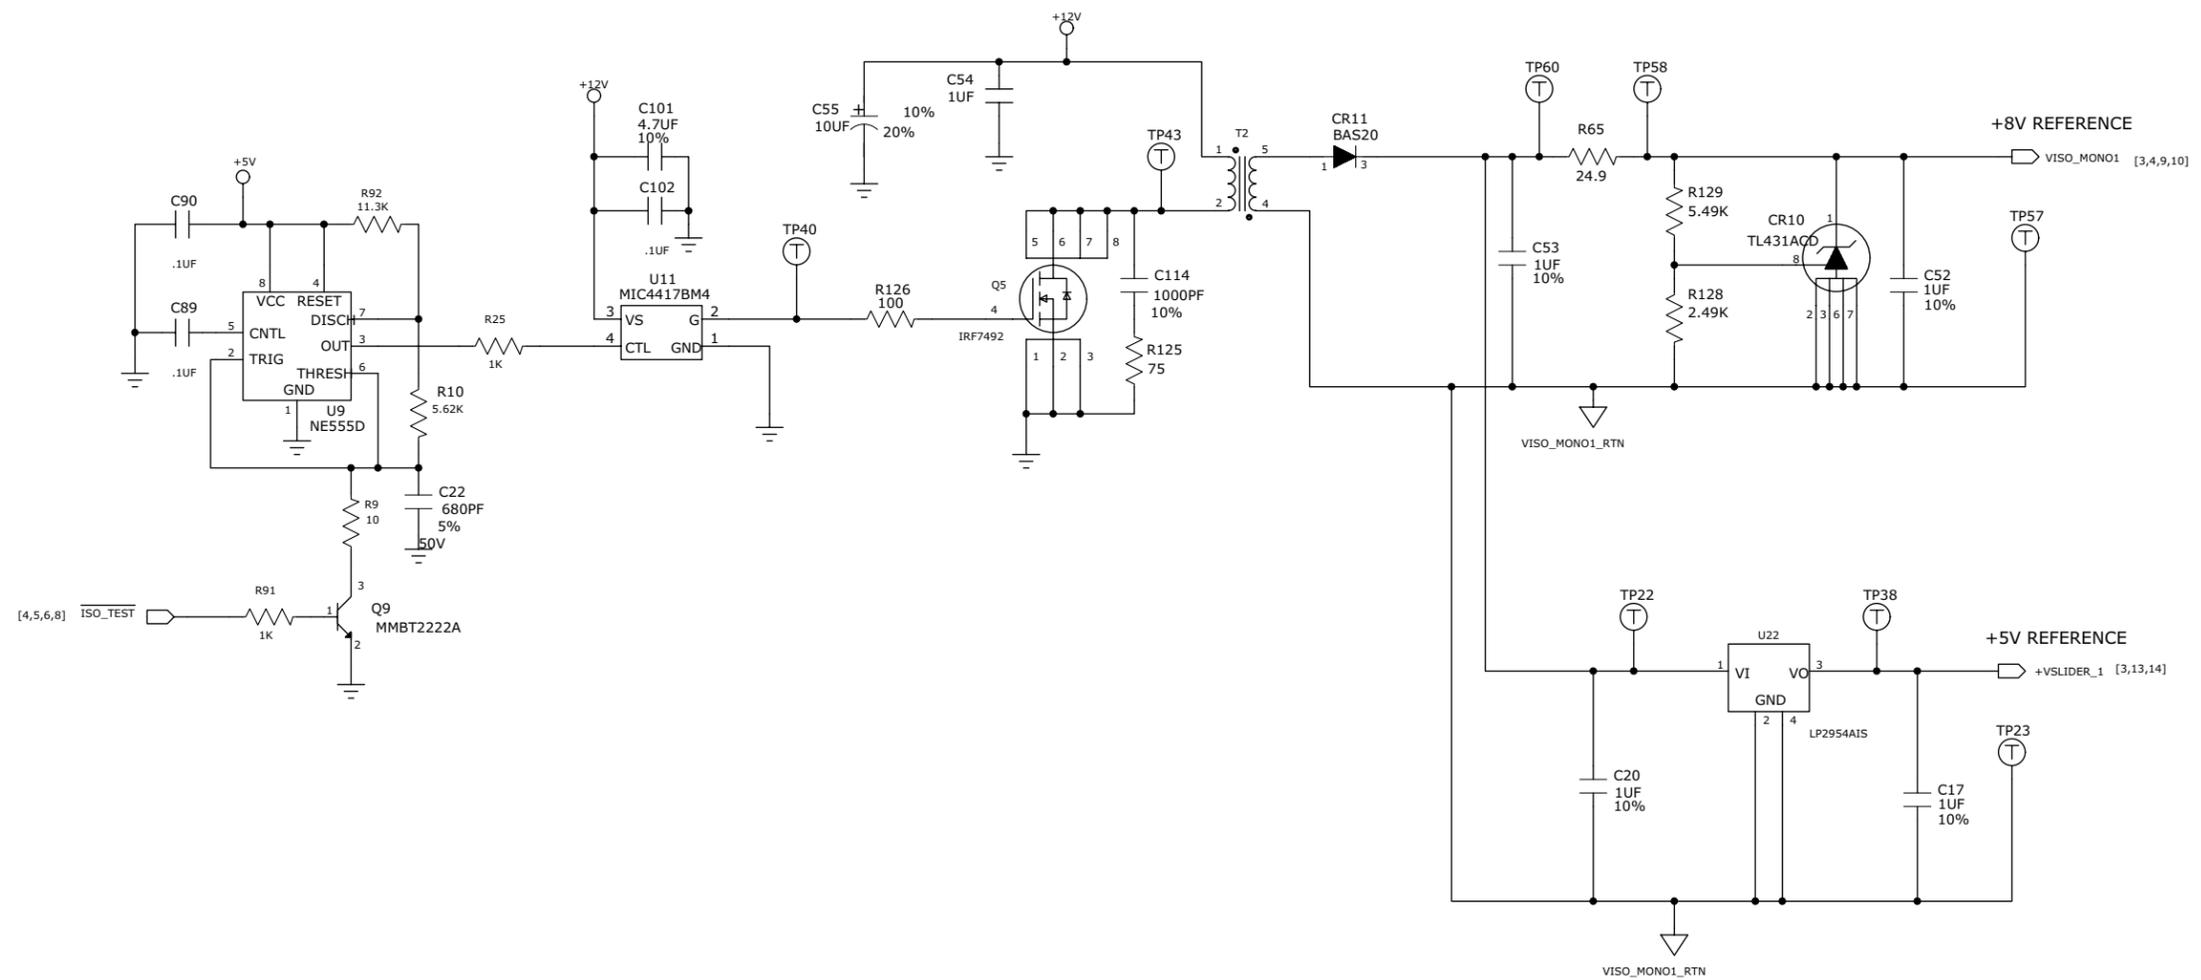


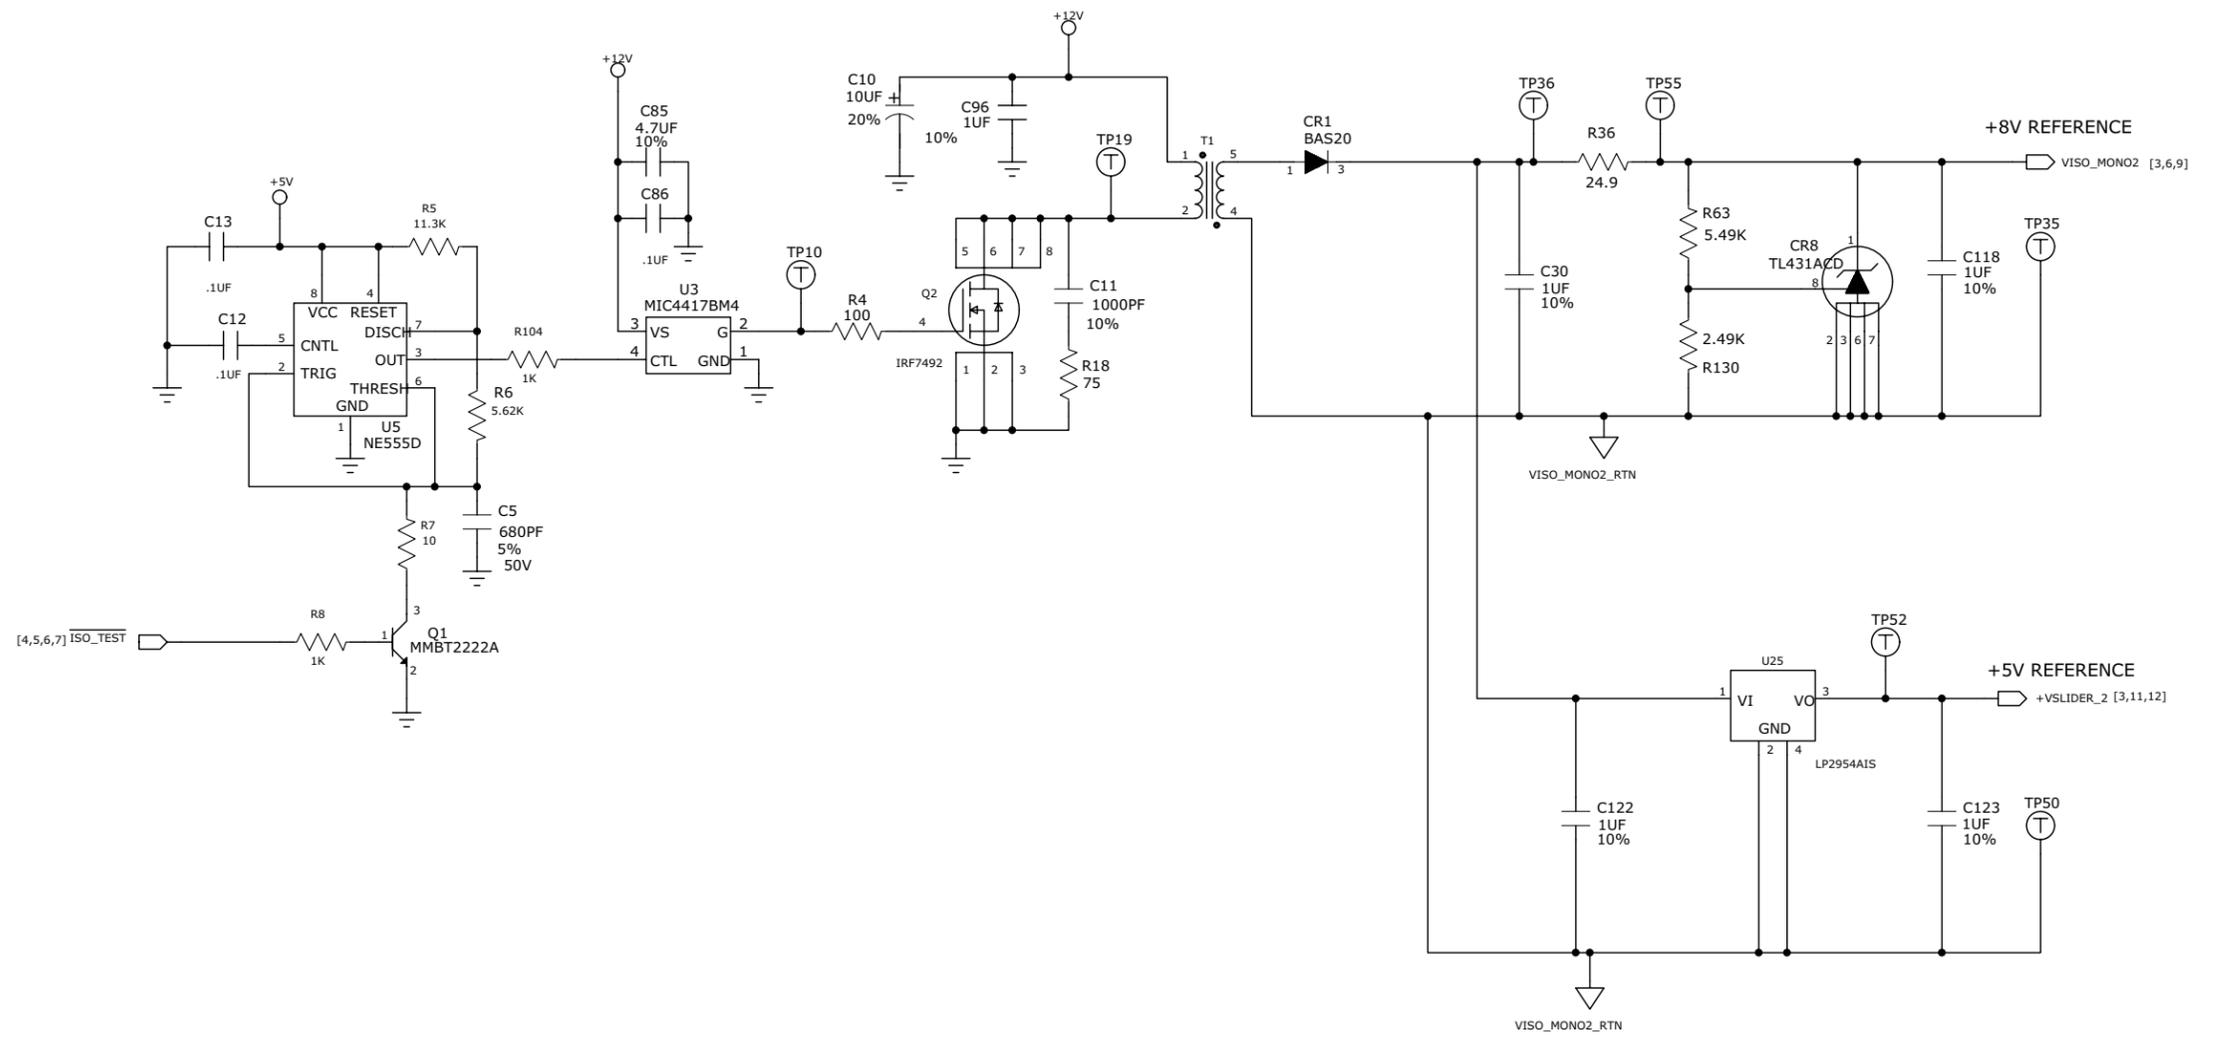


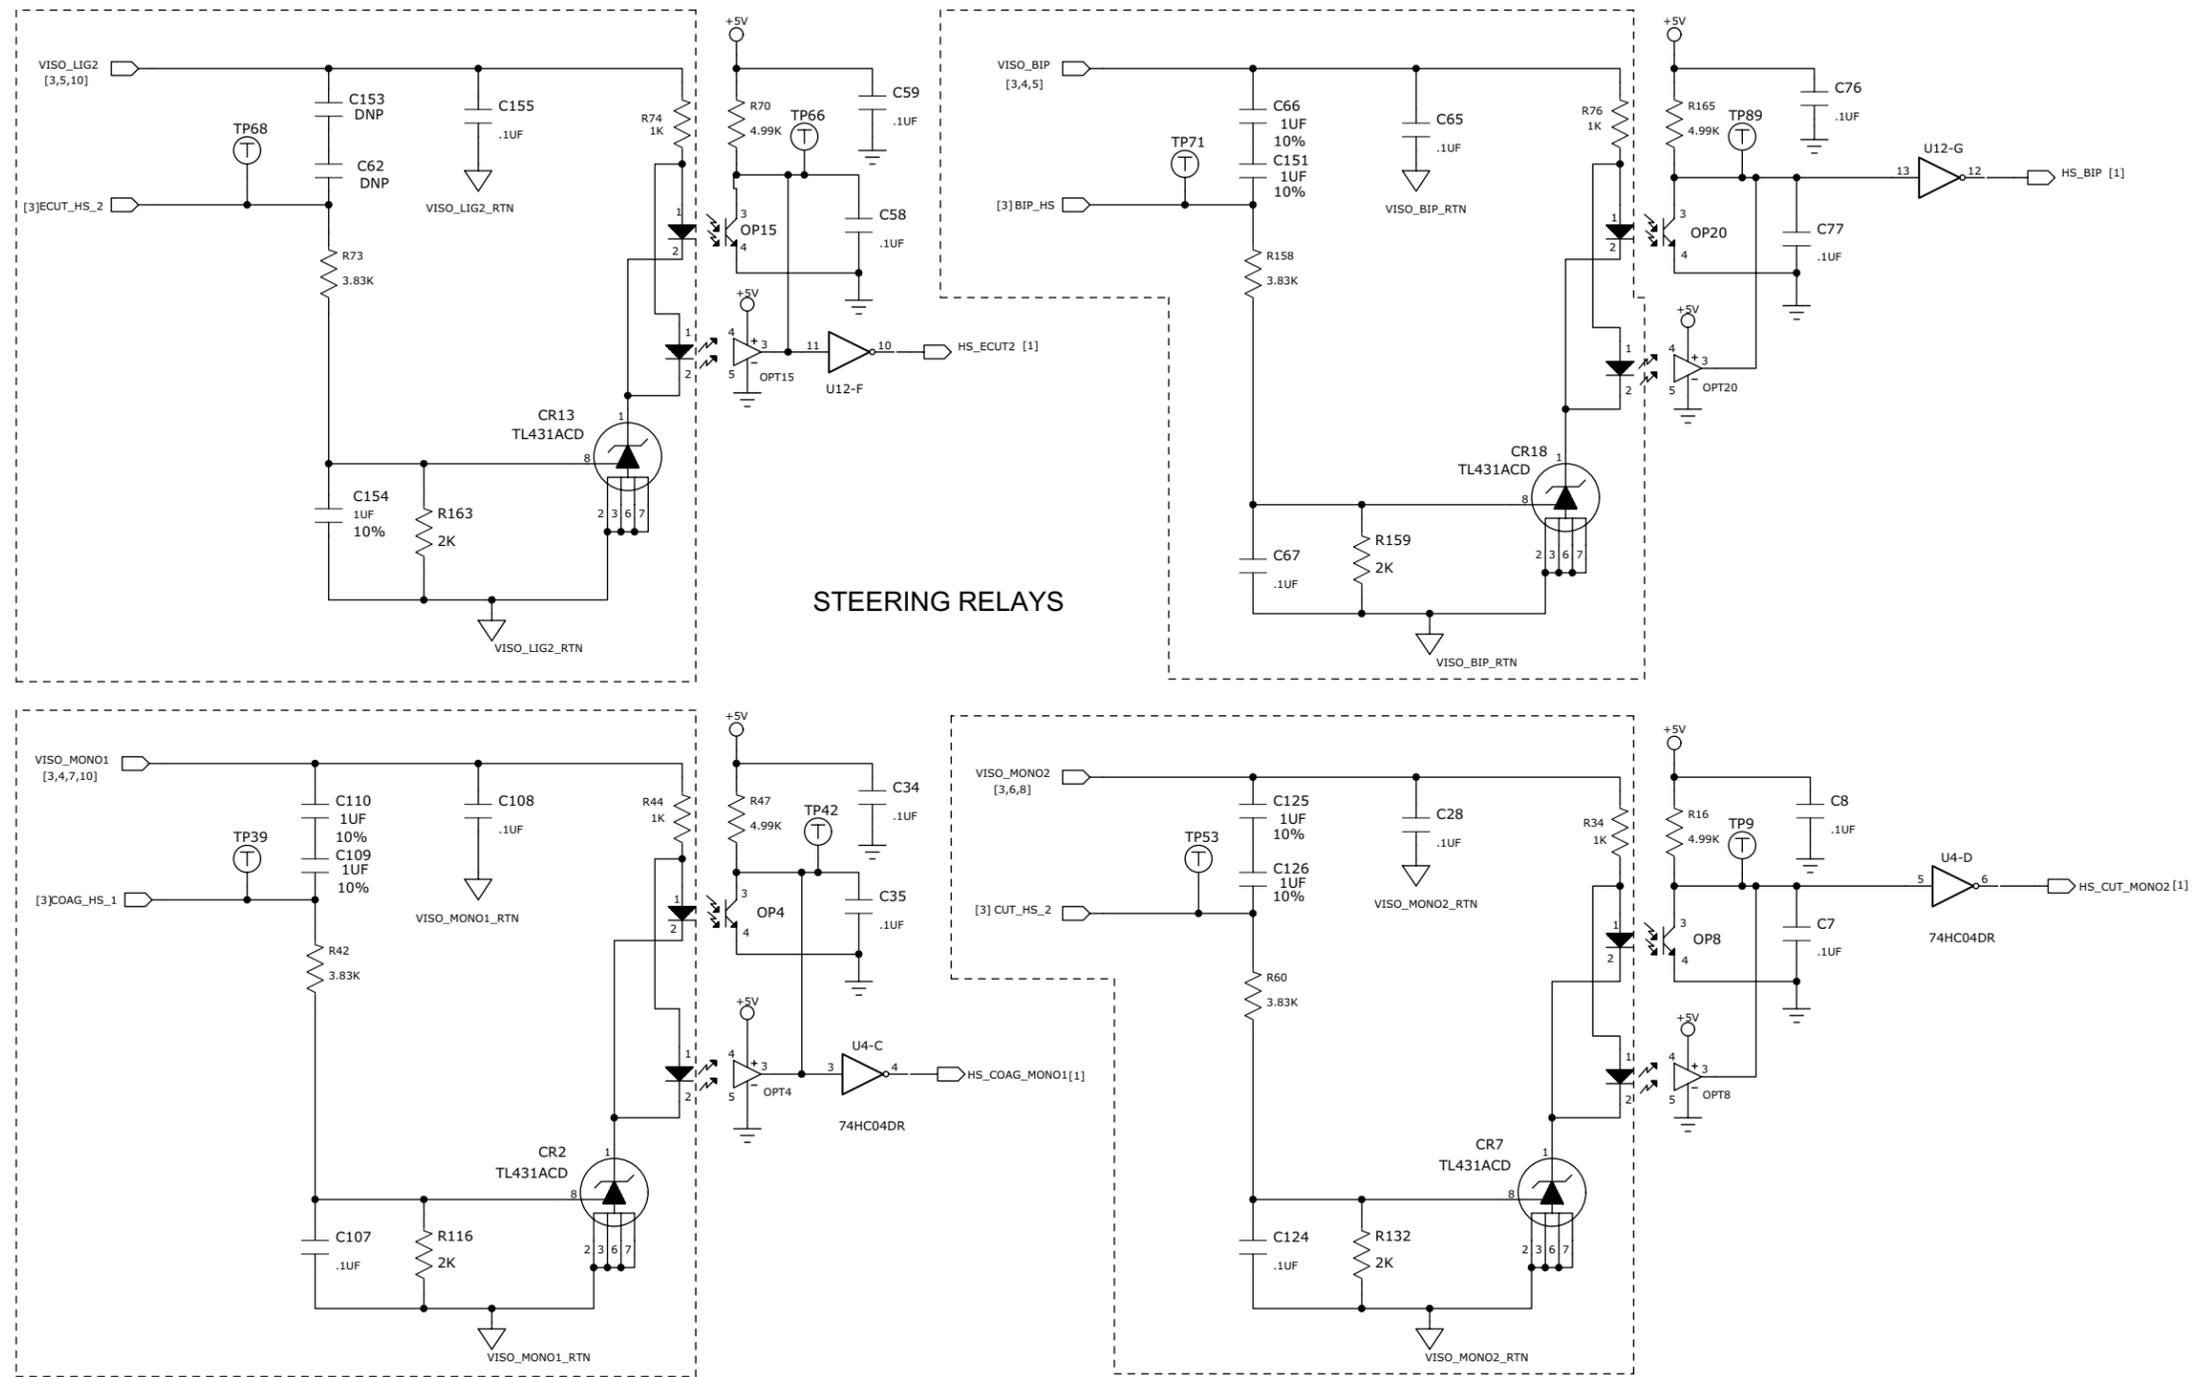

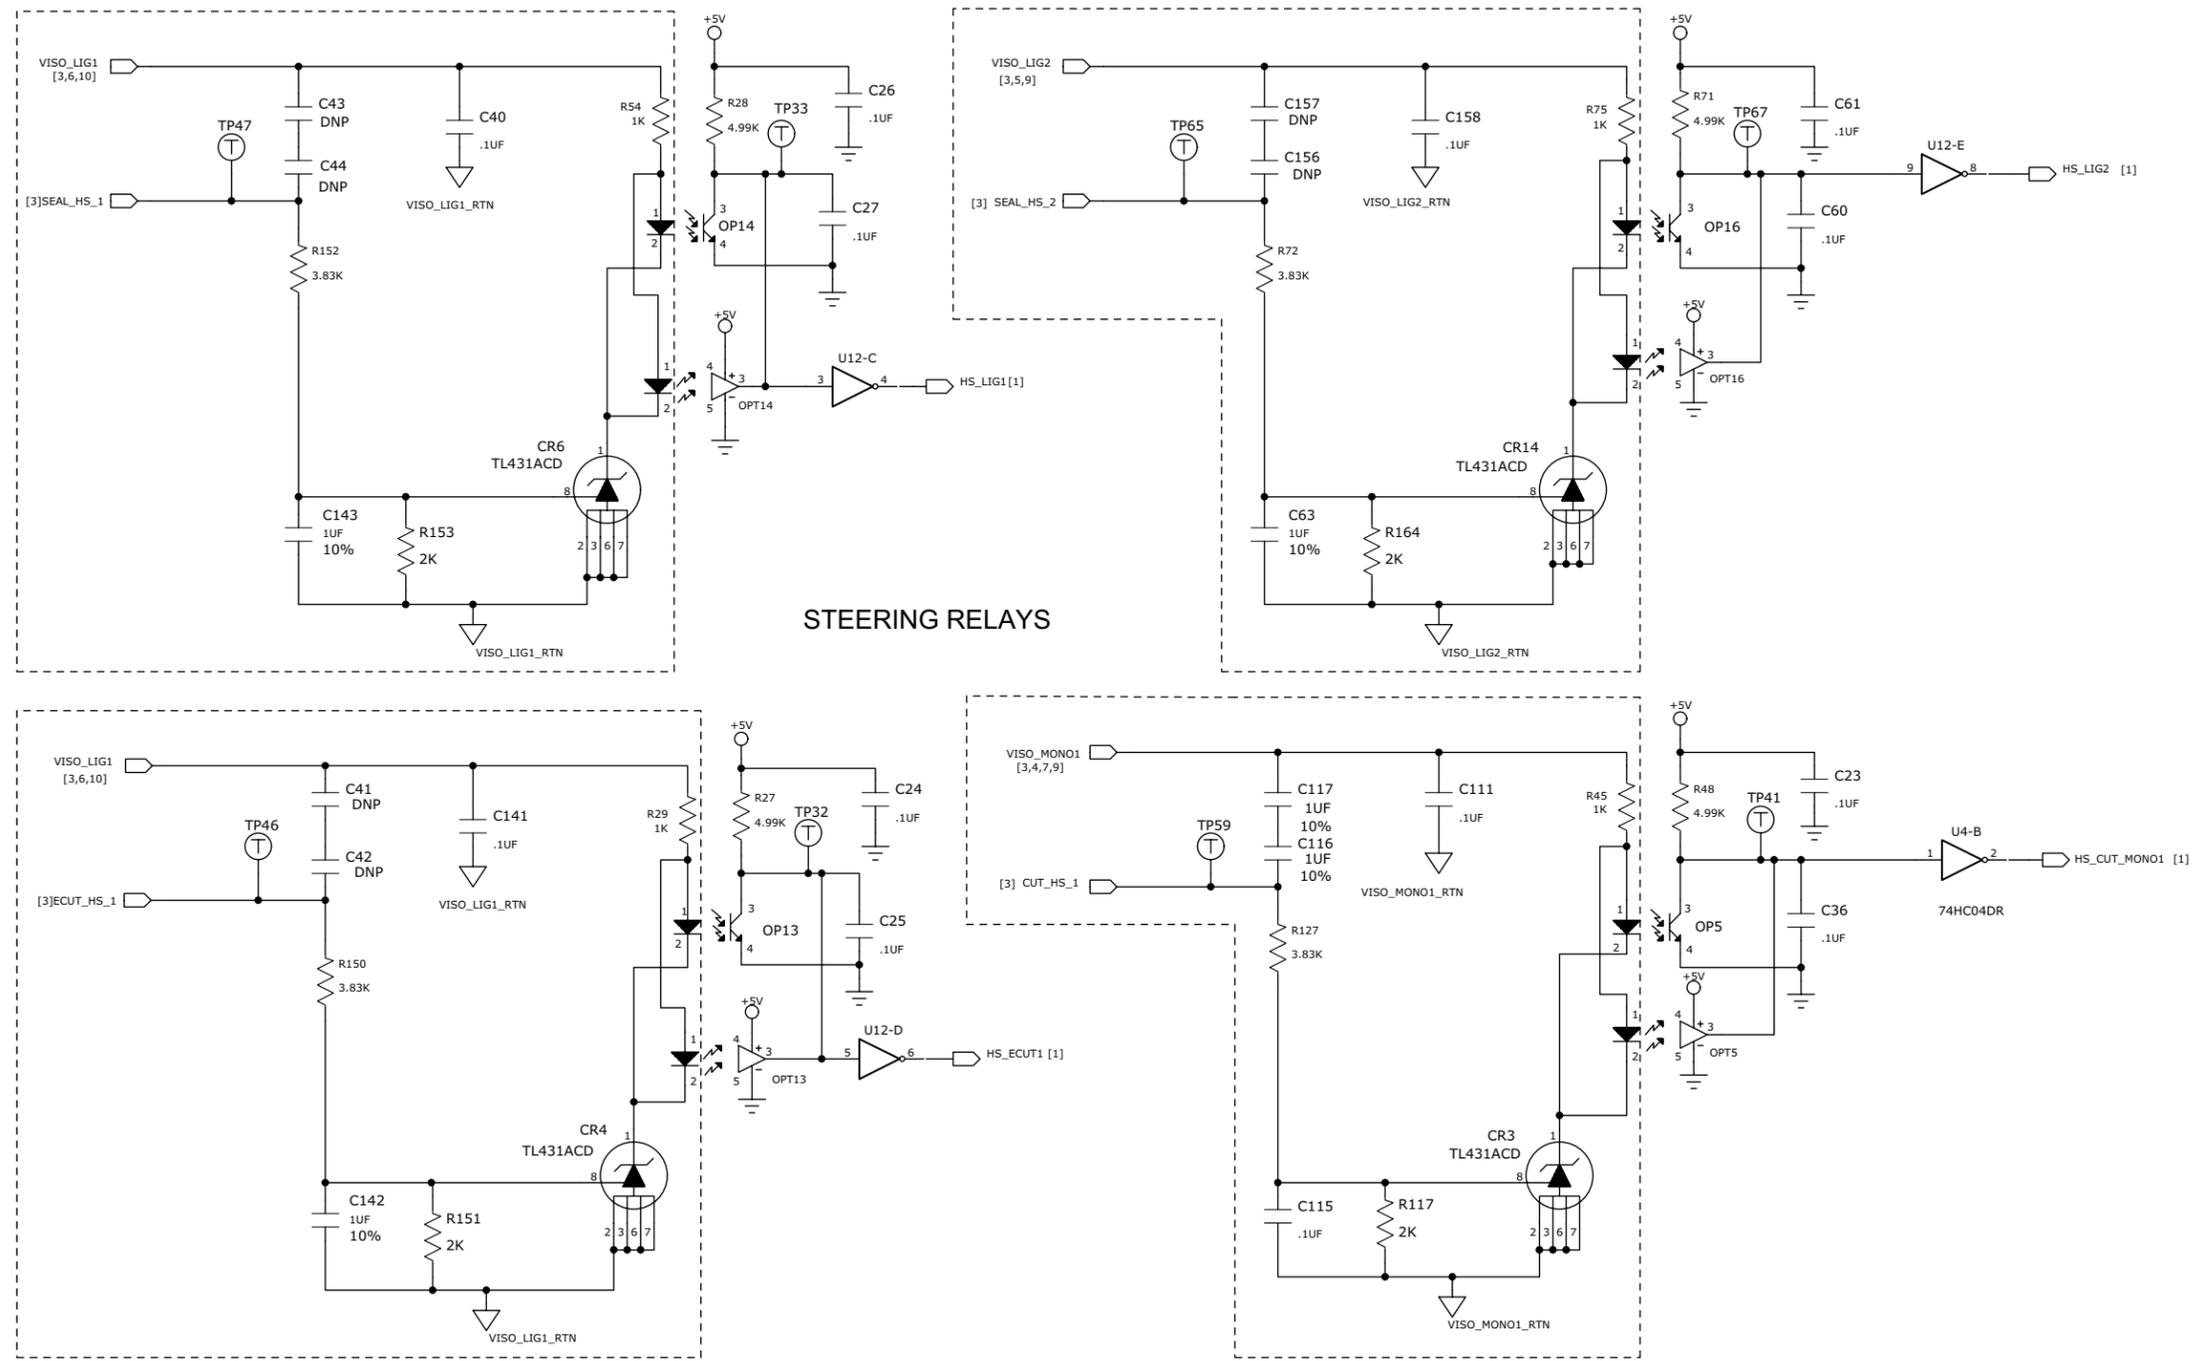



STEERING RELAYS

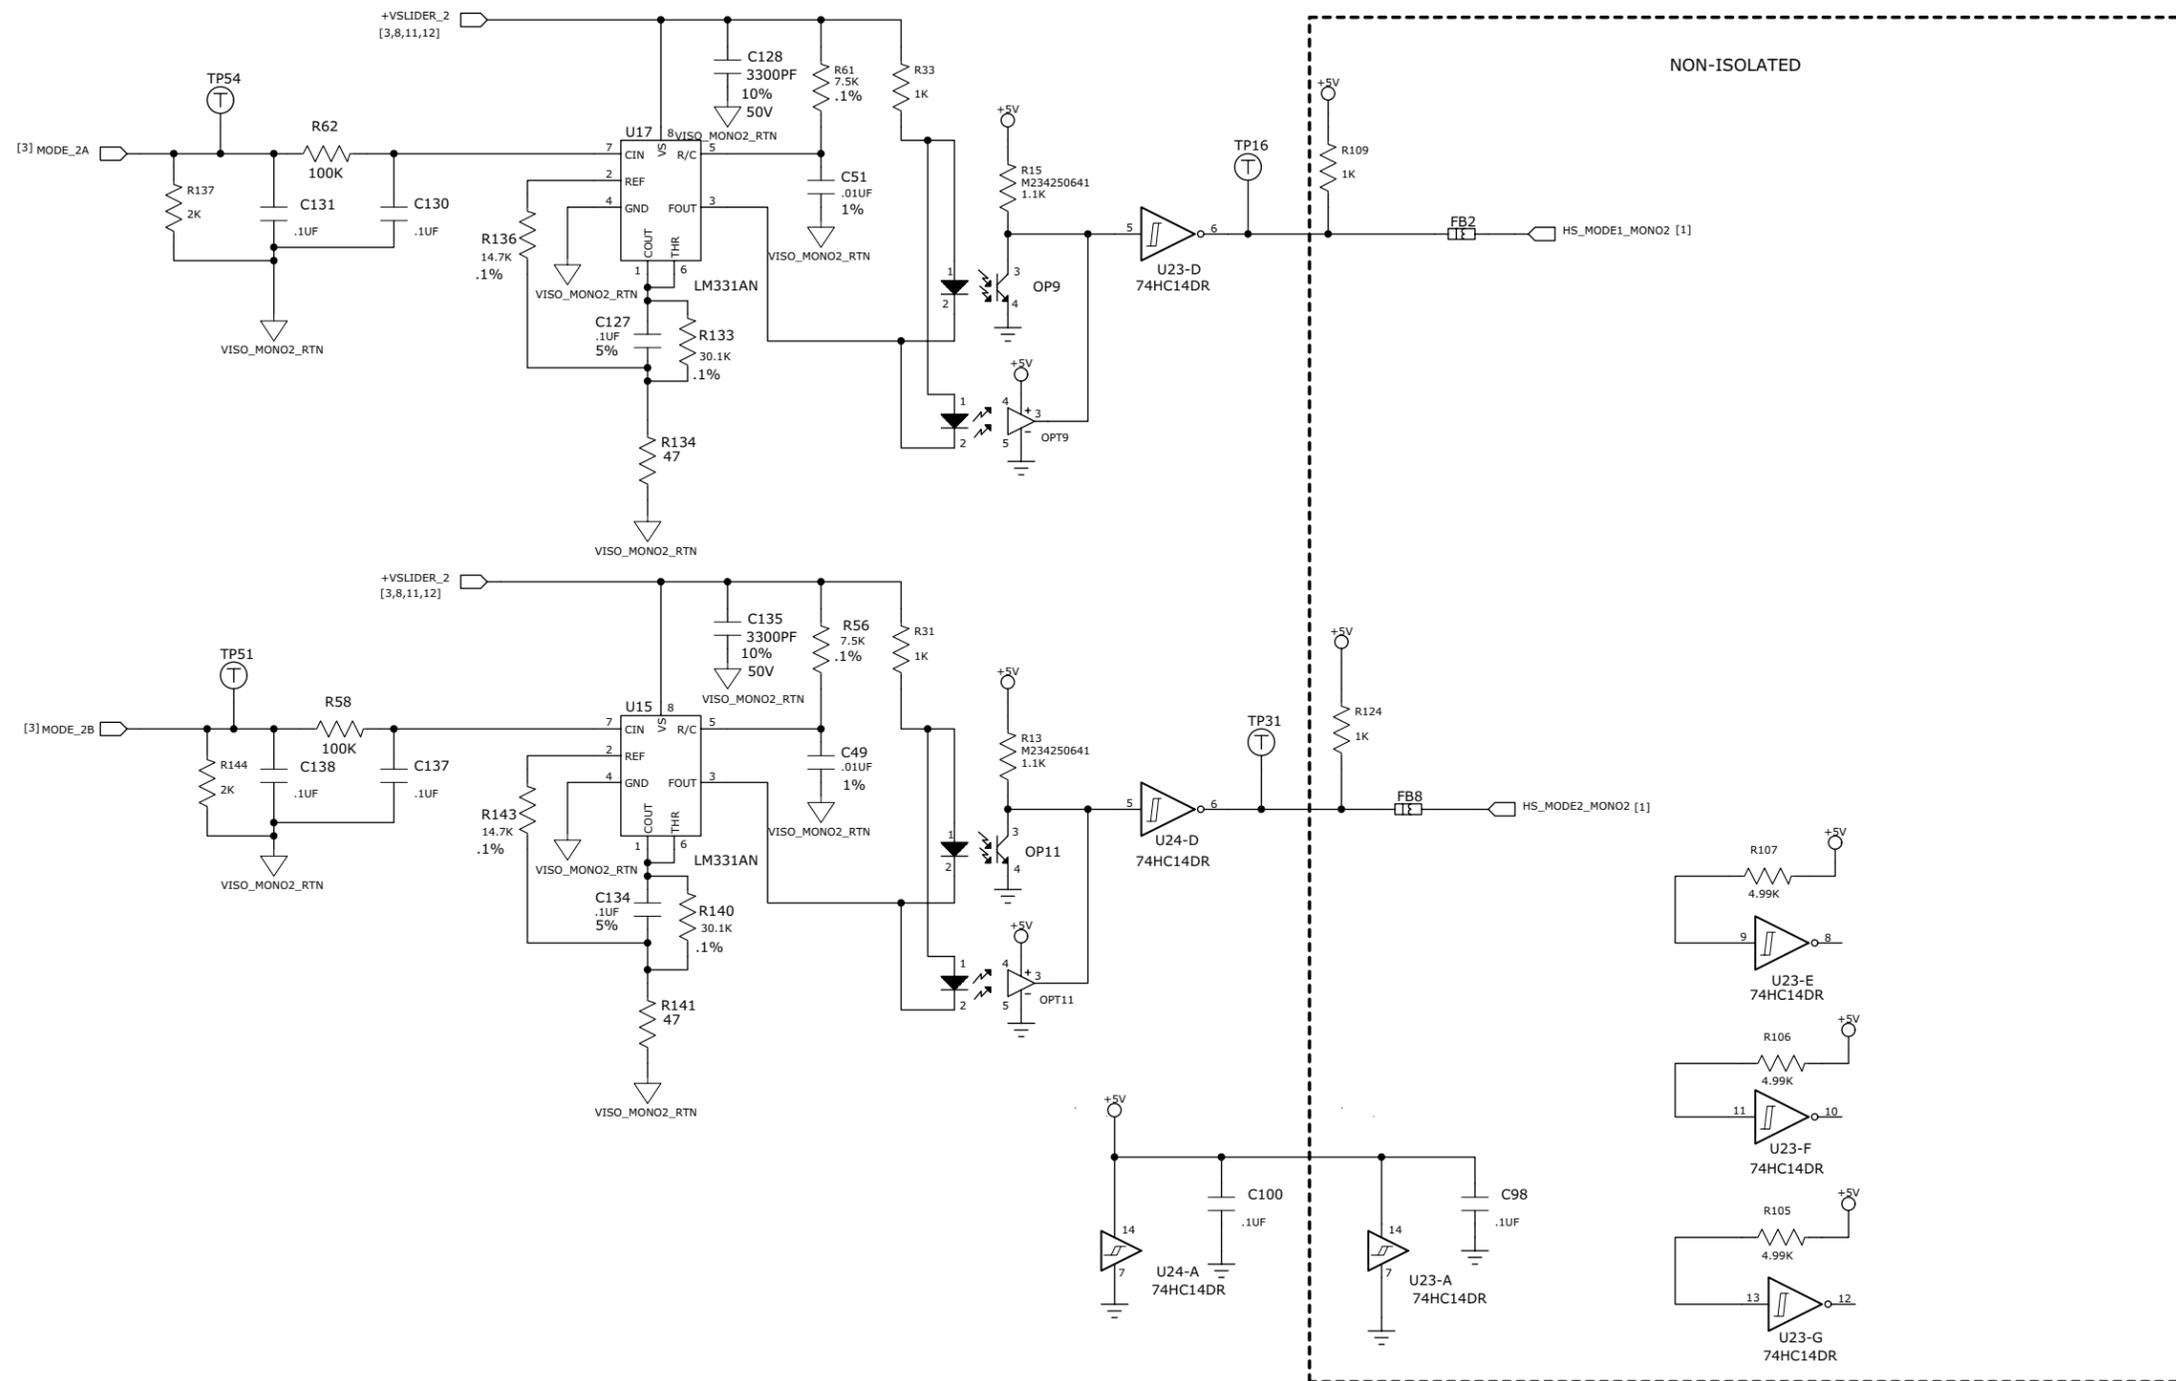

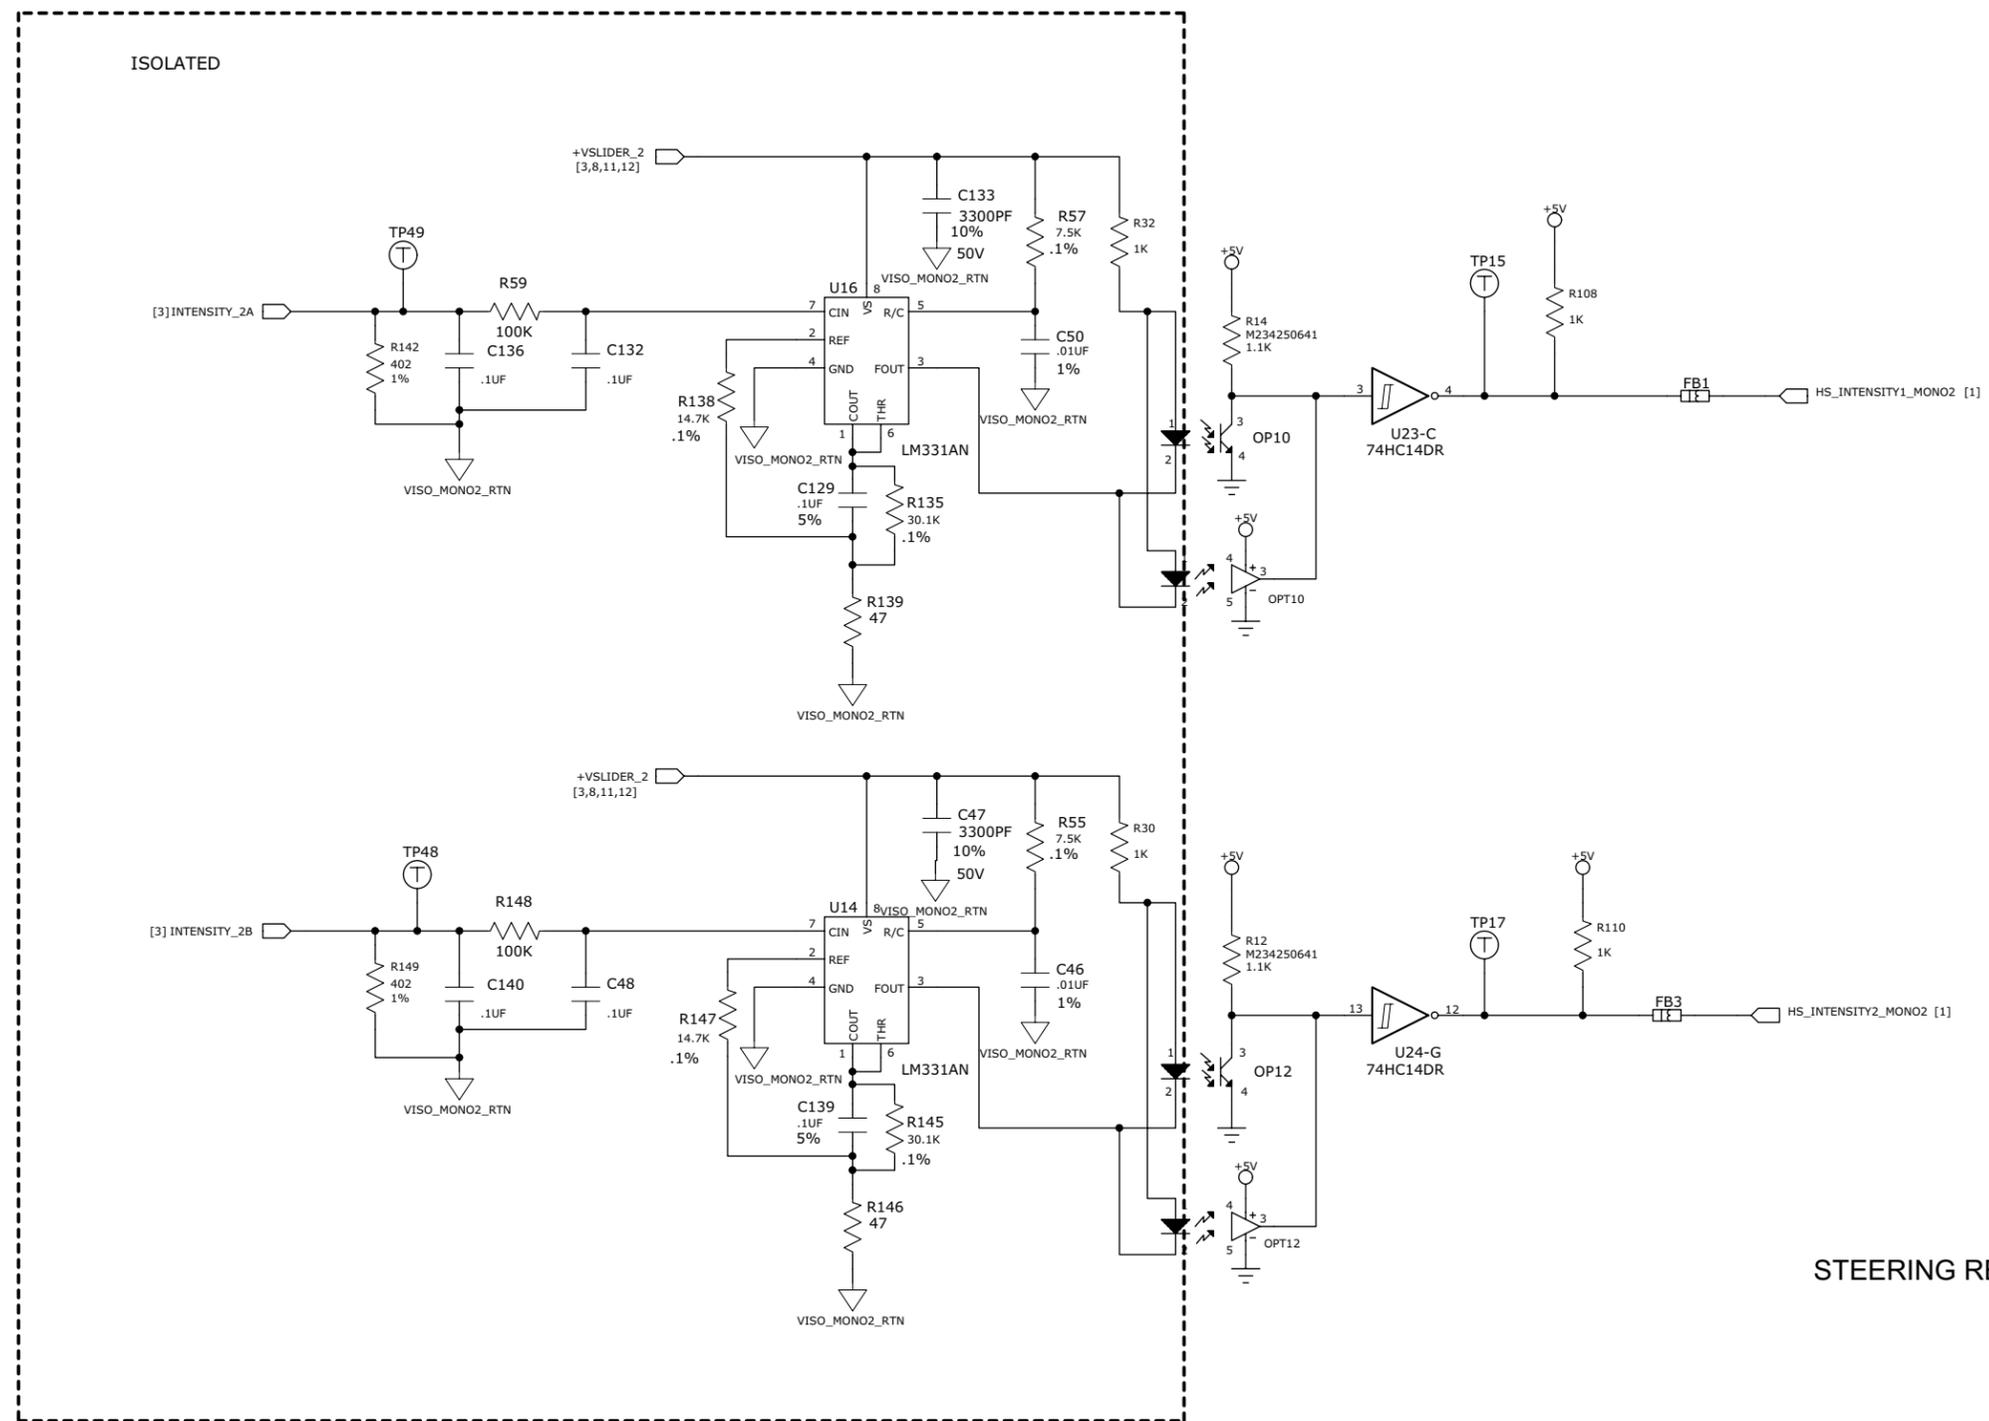


STEERING RELAYS

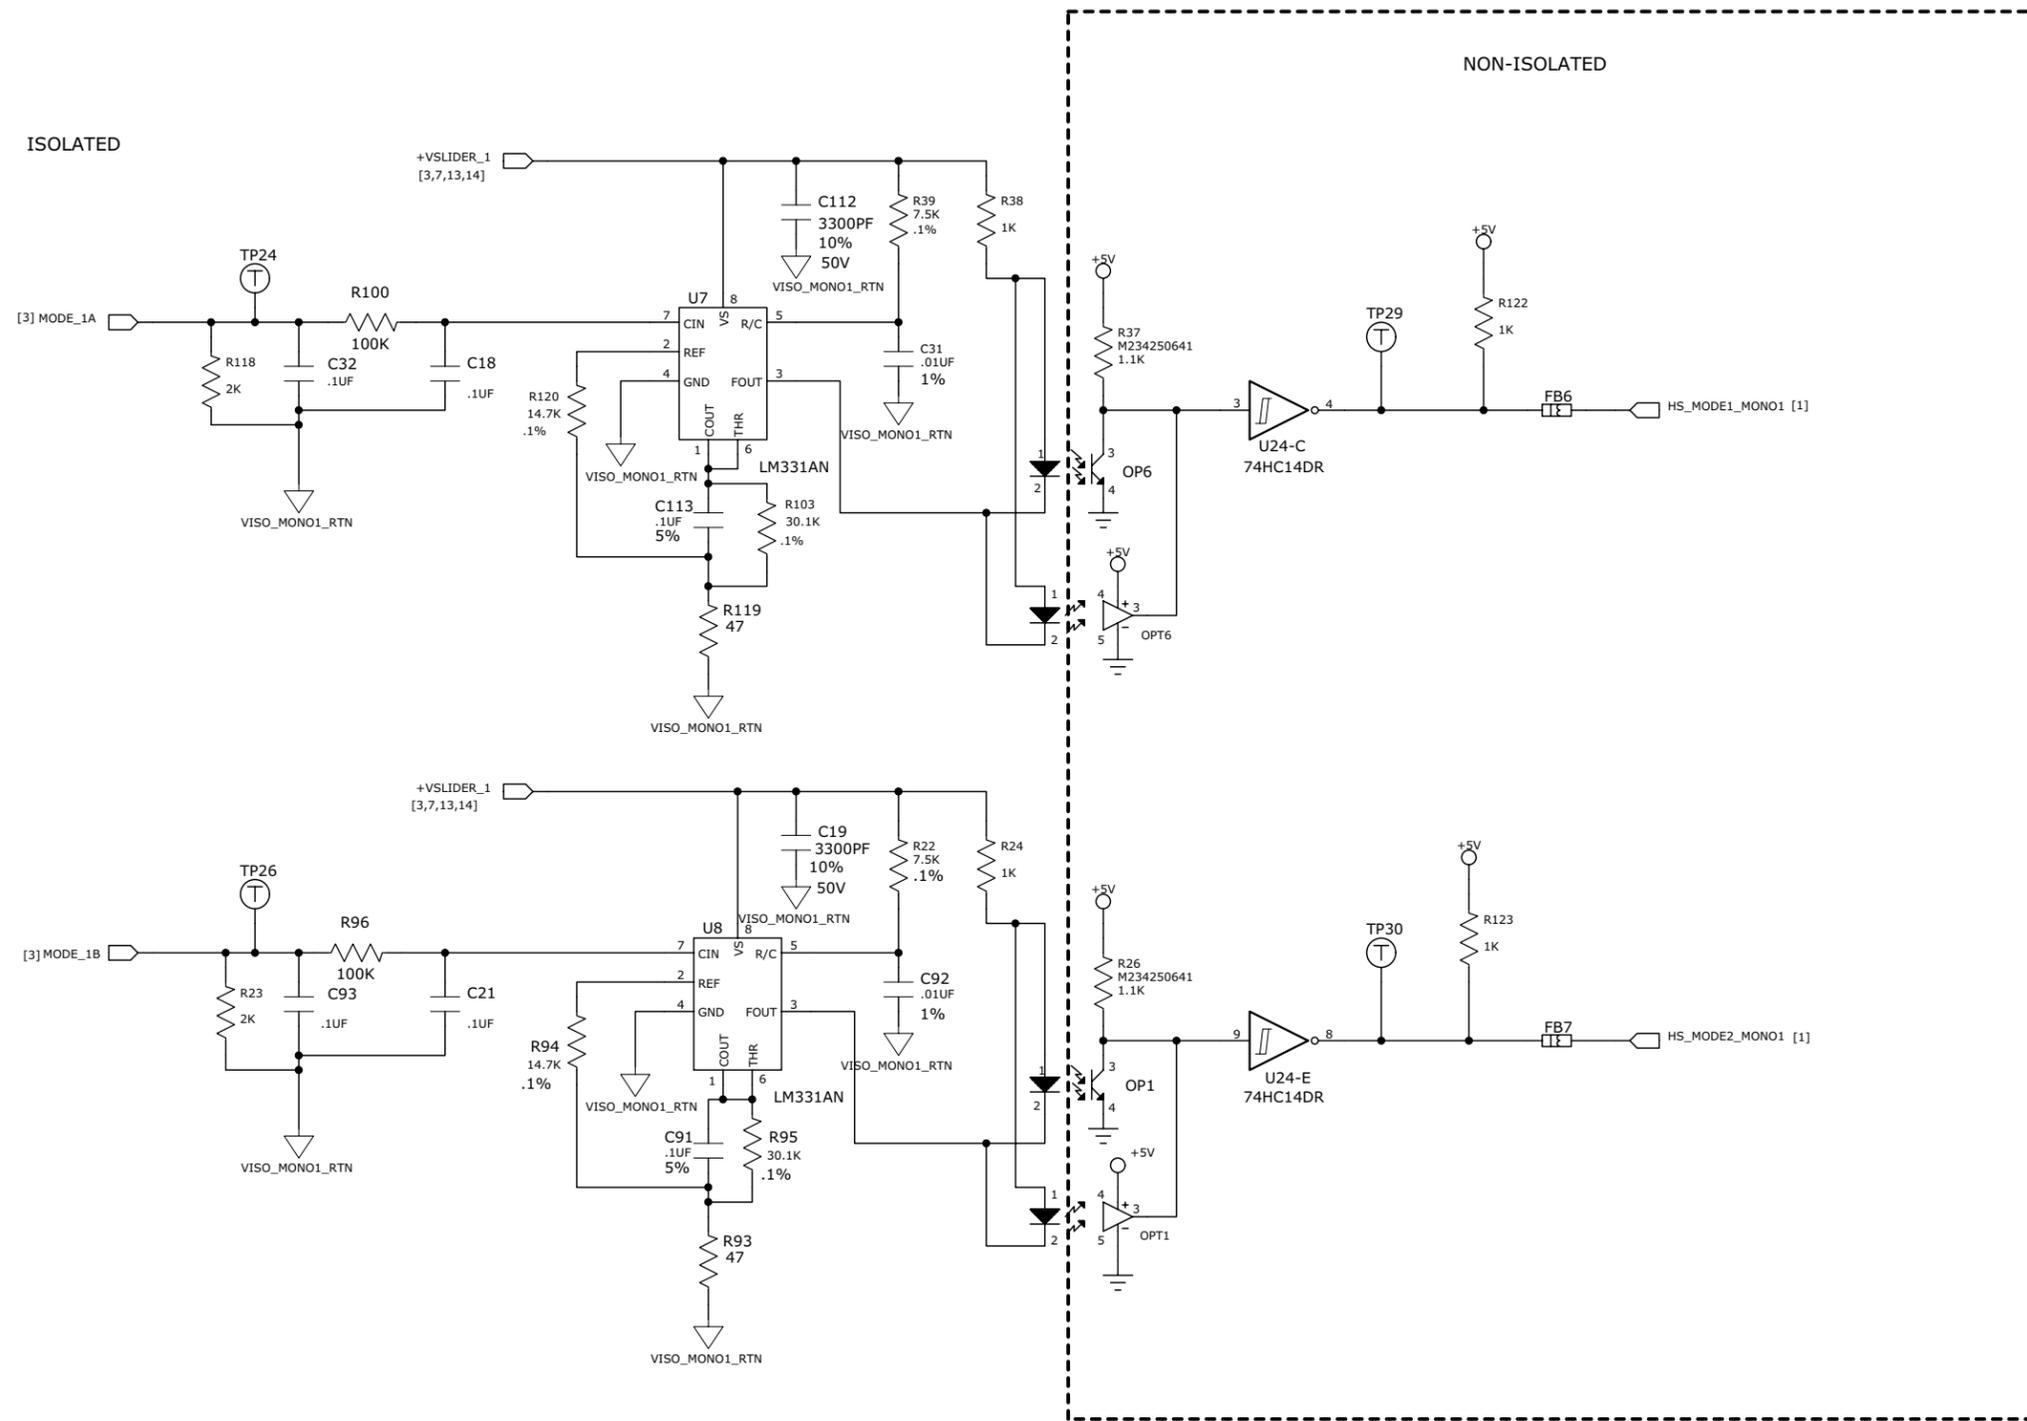

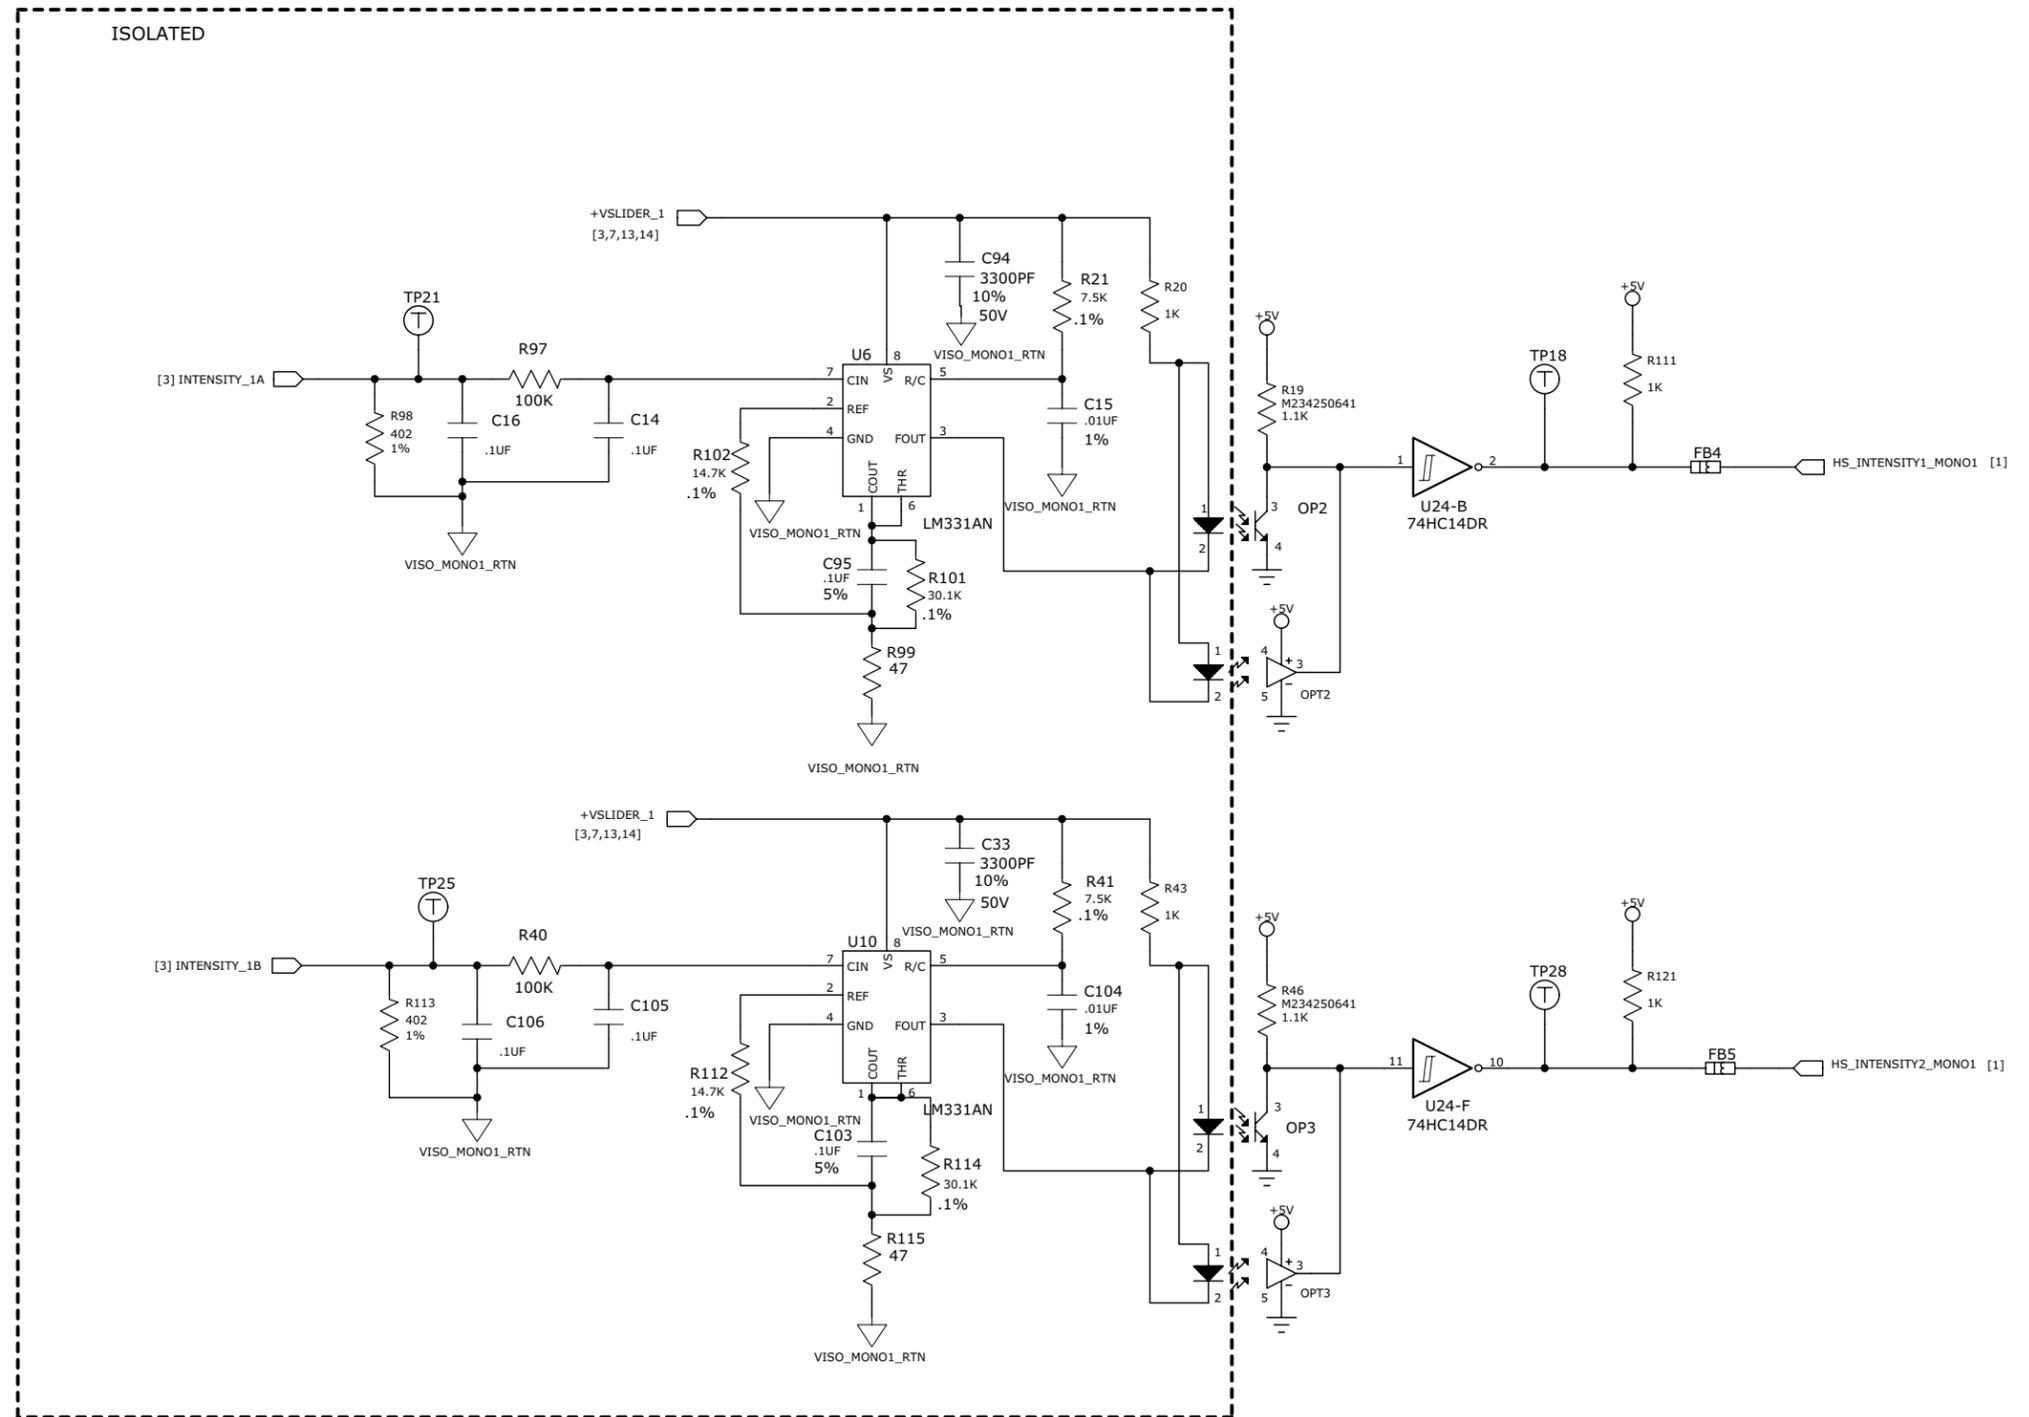


Display PCBA

PLACE R12,R45 AND R91 NEAR FPGA

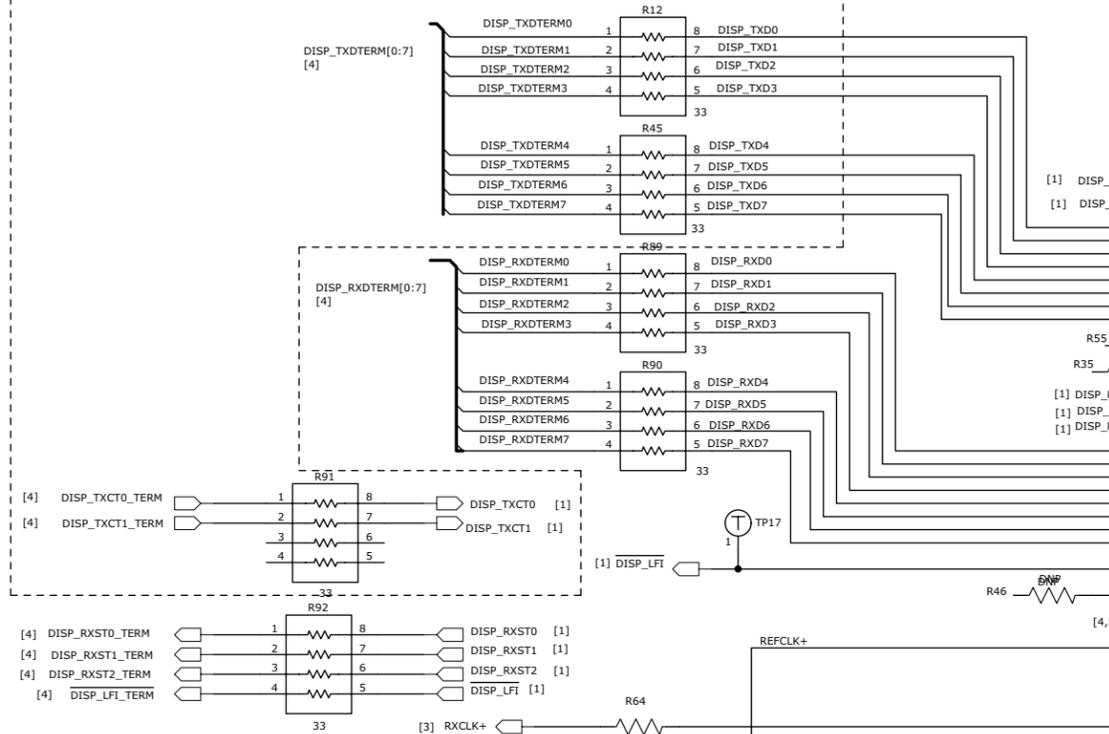

PLACE R58 CLOSE TO FPGA


PLACE R64 AND R47 CLOSE TO U1

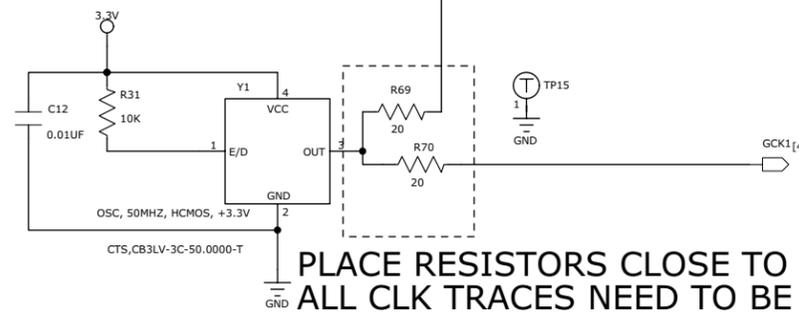

PLACE RESISTORS CLOSE TO THE CRYSTAL
ALL CLK TRACES NEED TO BE 50 OHM TRACES

NOTE: C112-C115 NEED TO BE CLOSE TO THE HOTLINK CHIP U1
TWO VIAS FREE OF SOLDERMASK NEEDS TO BE BETWEEN C112 AND C113
TWO VIAS FREE OF SOLDERMASK NEEDS TO BE BETWEEN C114 AND C115

HOTLINK TO FPGA

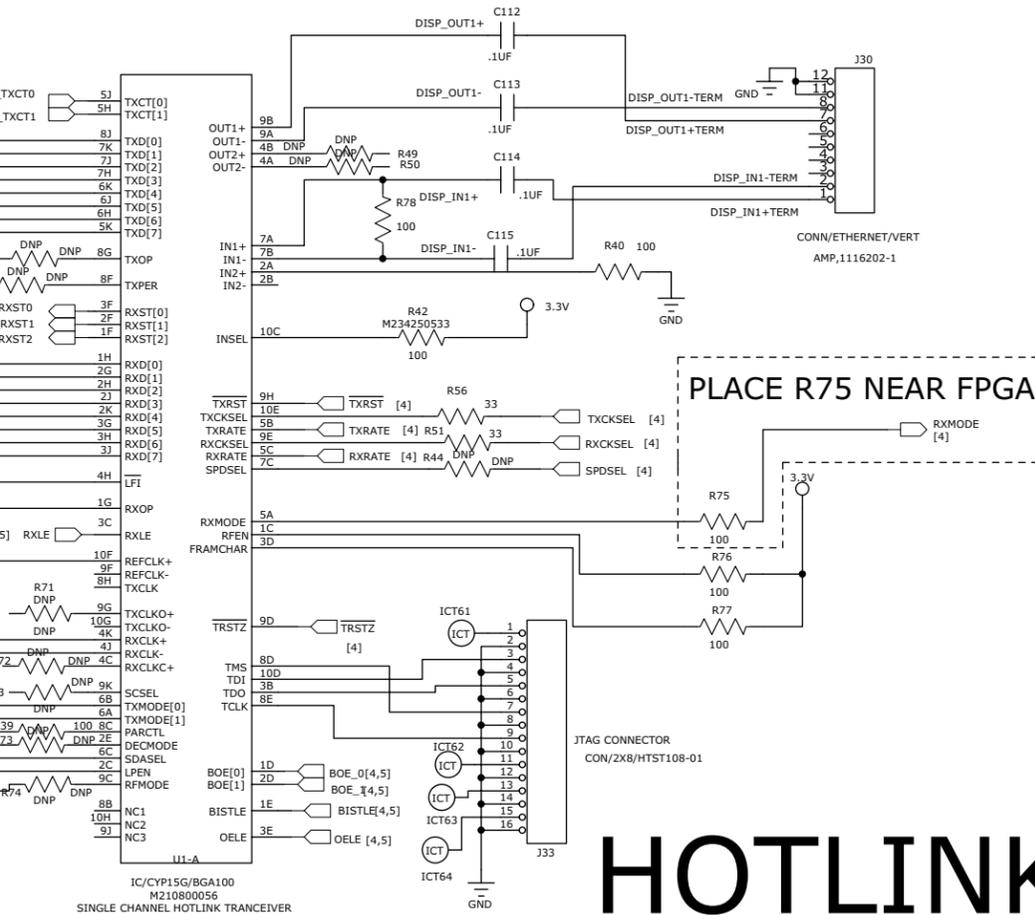


PLACE R75 NEAR FPGA


HOTLINK

NETS OUT1+, OUT1- FROM J30 TO U1 NEED TO BE ON TOP LAYER
NETS IN1+, IN1- FROM J30 TO U1 NEED TO BE ON TOP LAYER
EACH PAIR NEED TO BE EQUAL LENGTH
50 OHM TRACES W/3W KEEP OUT RULE




SMBUS DRIVER

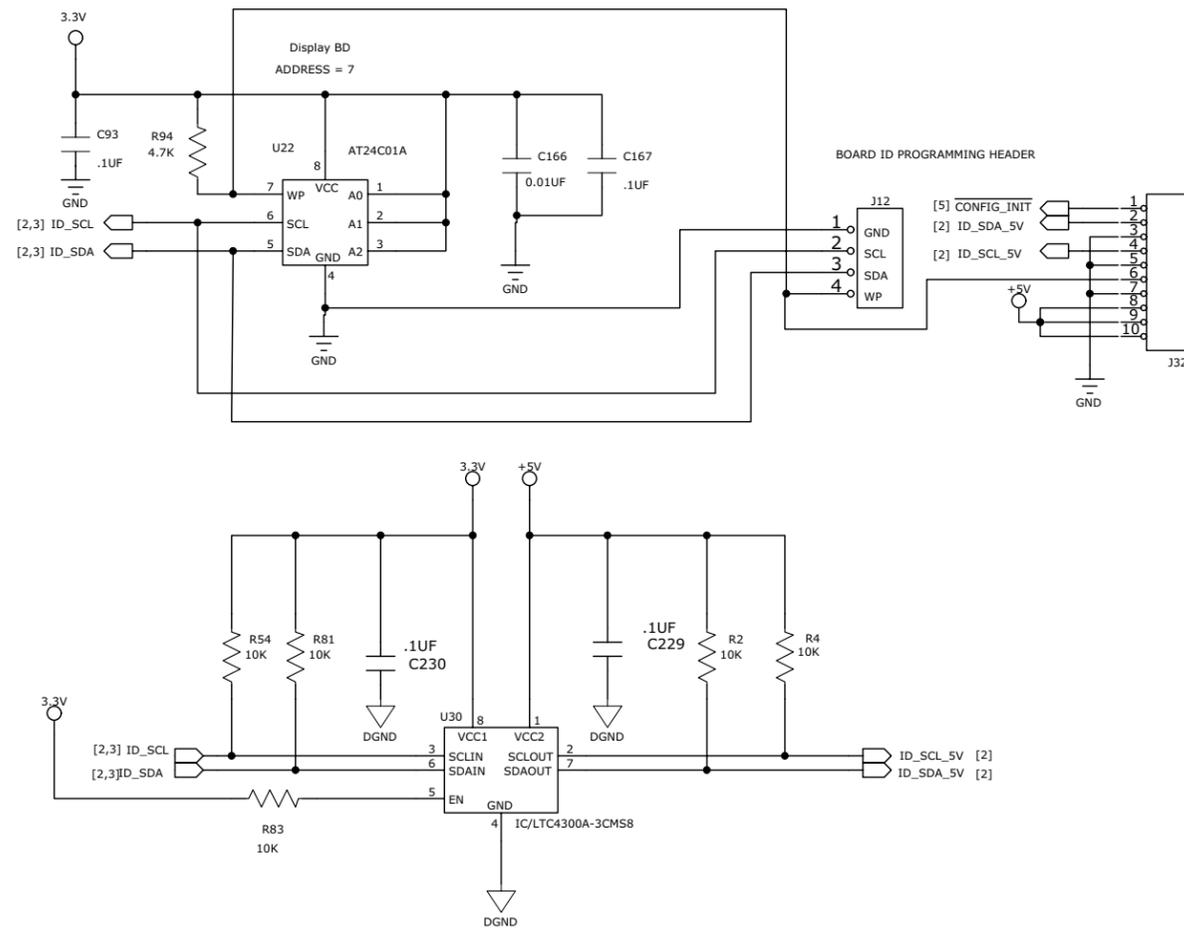


MOUNTING HOLES

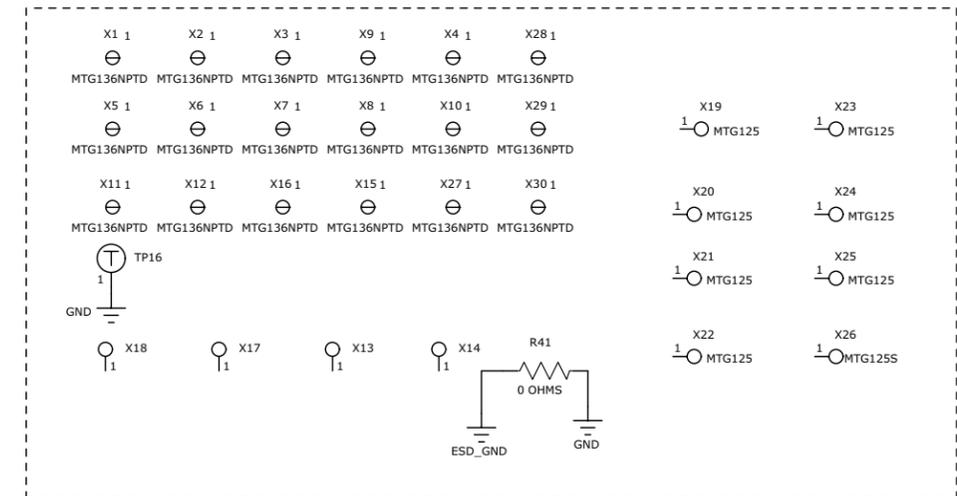


ZBT SRAM FOR DISPLAY BUFFER

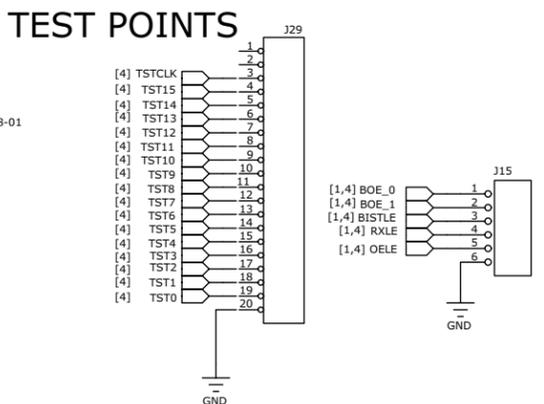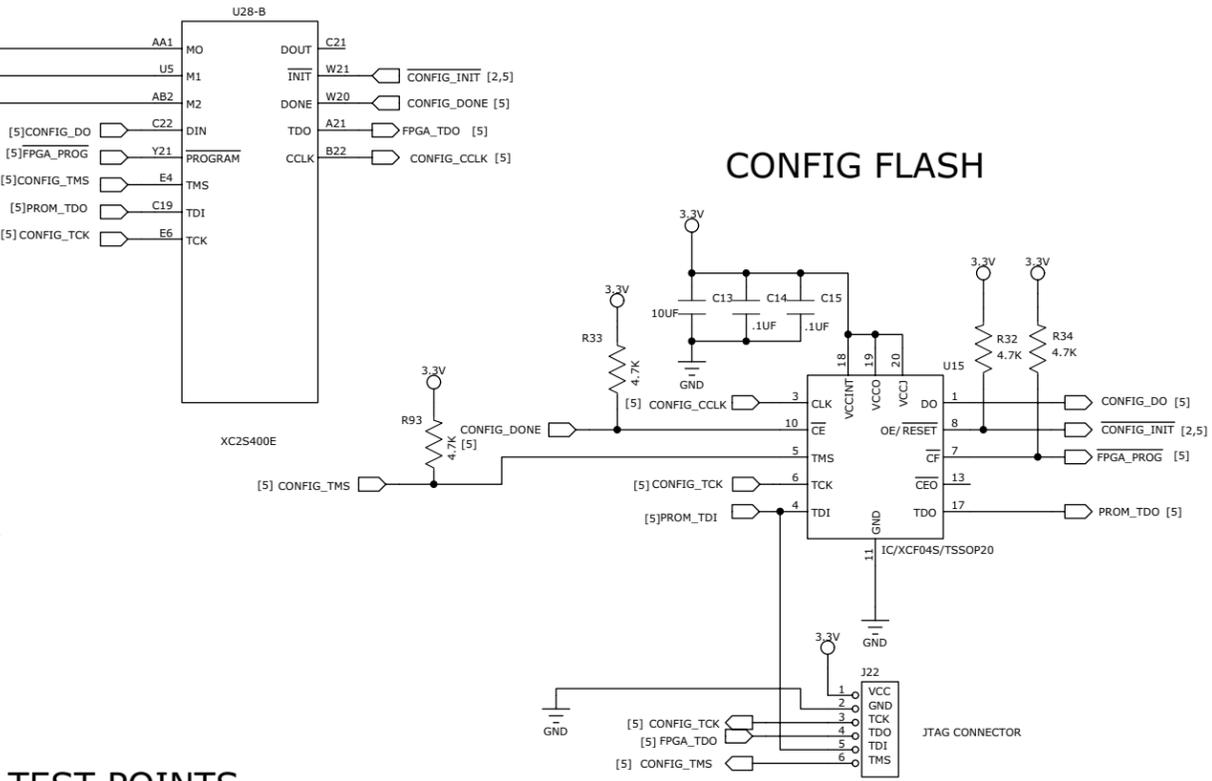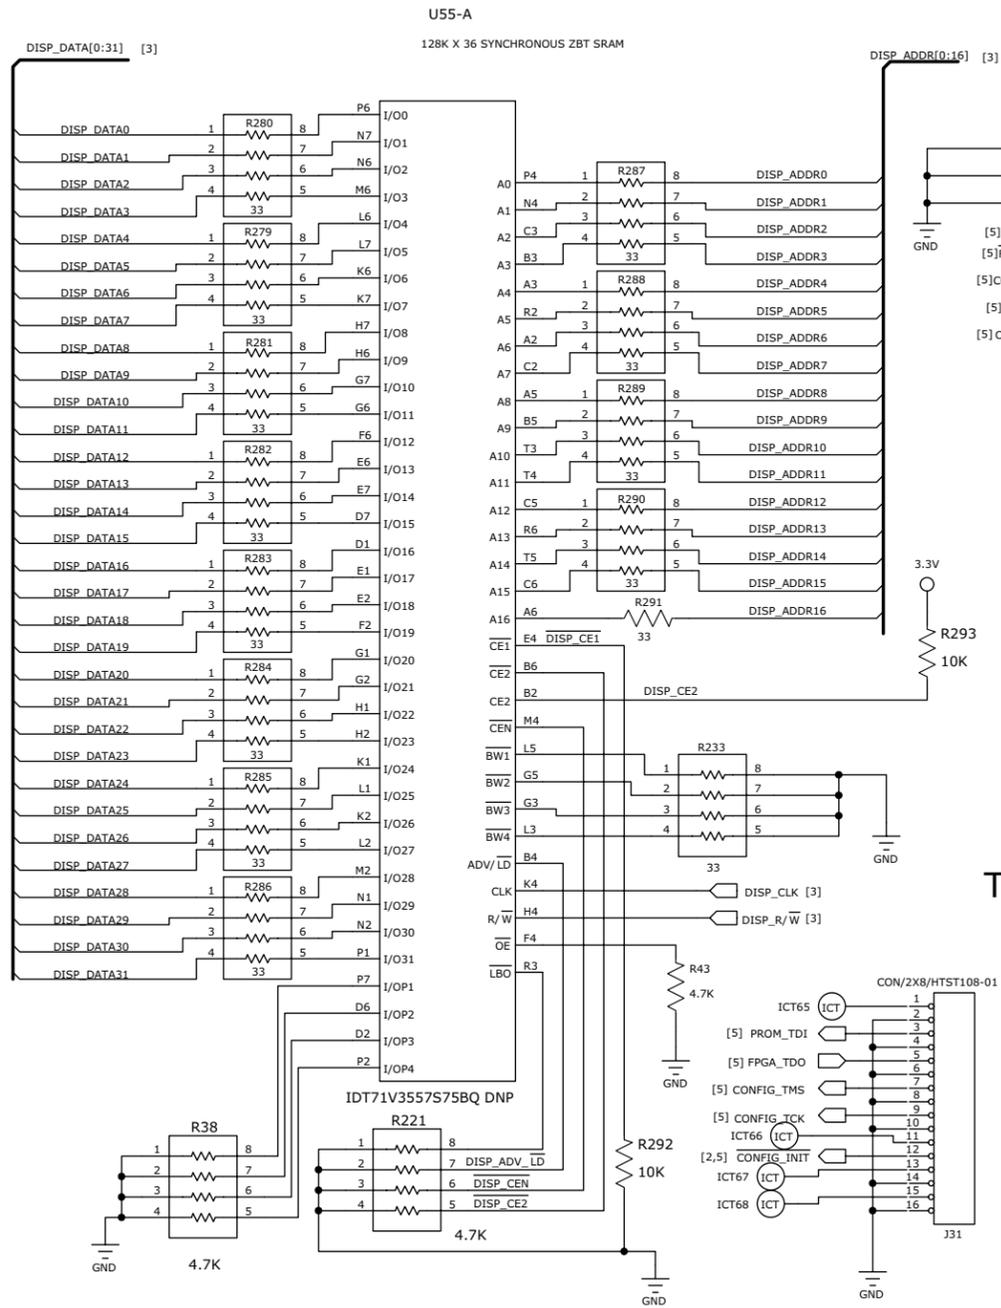


TOUCHSCREEN

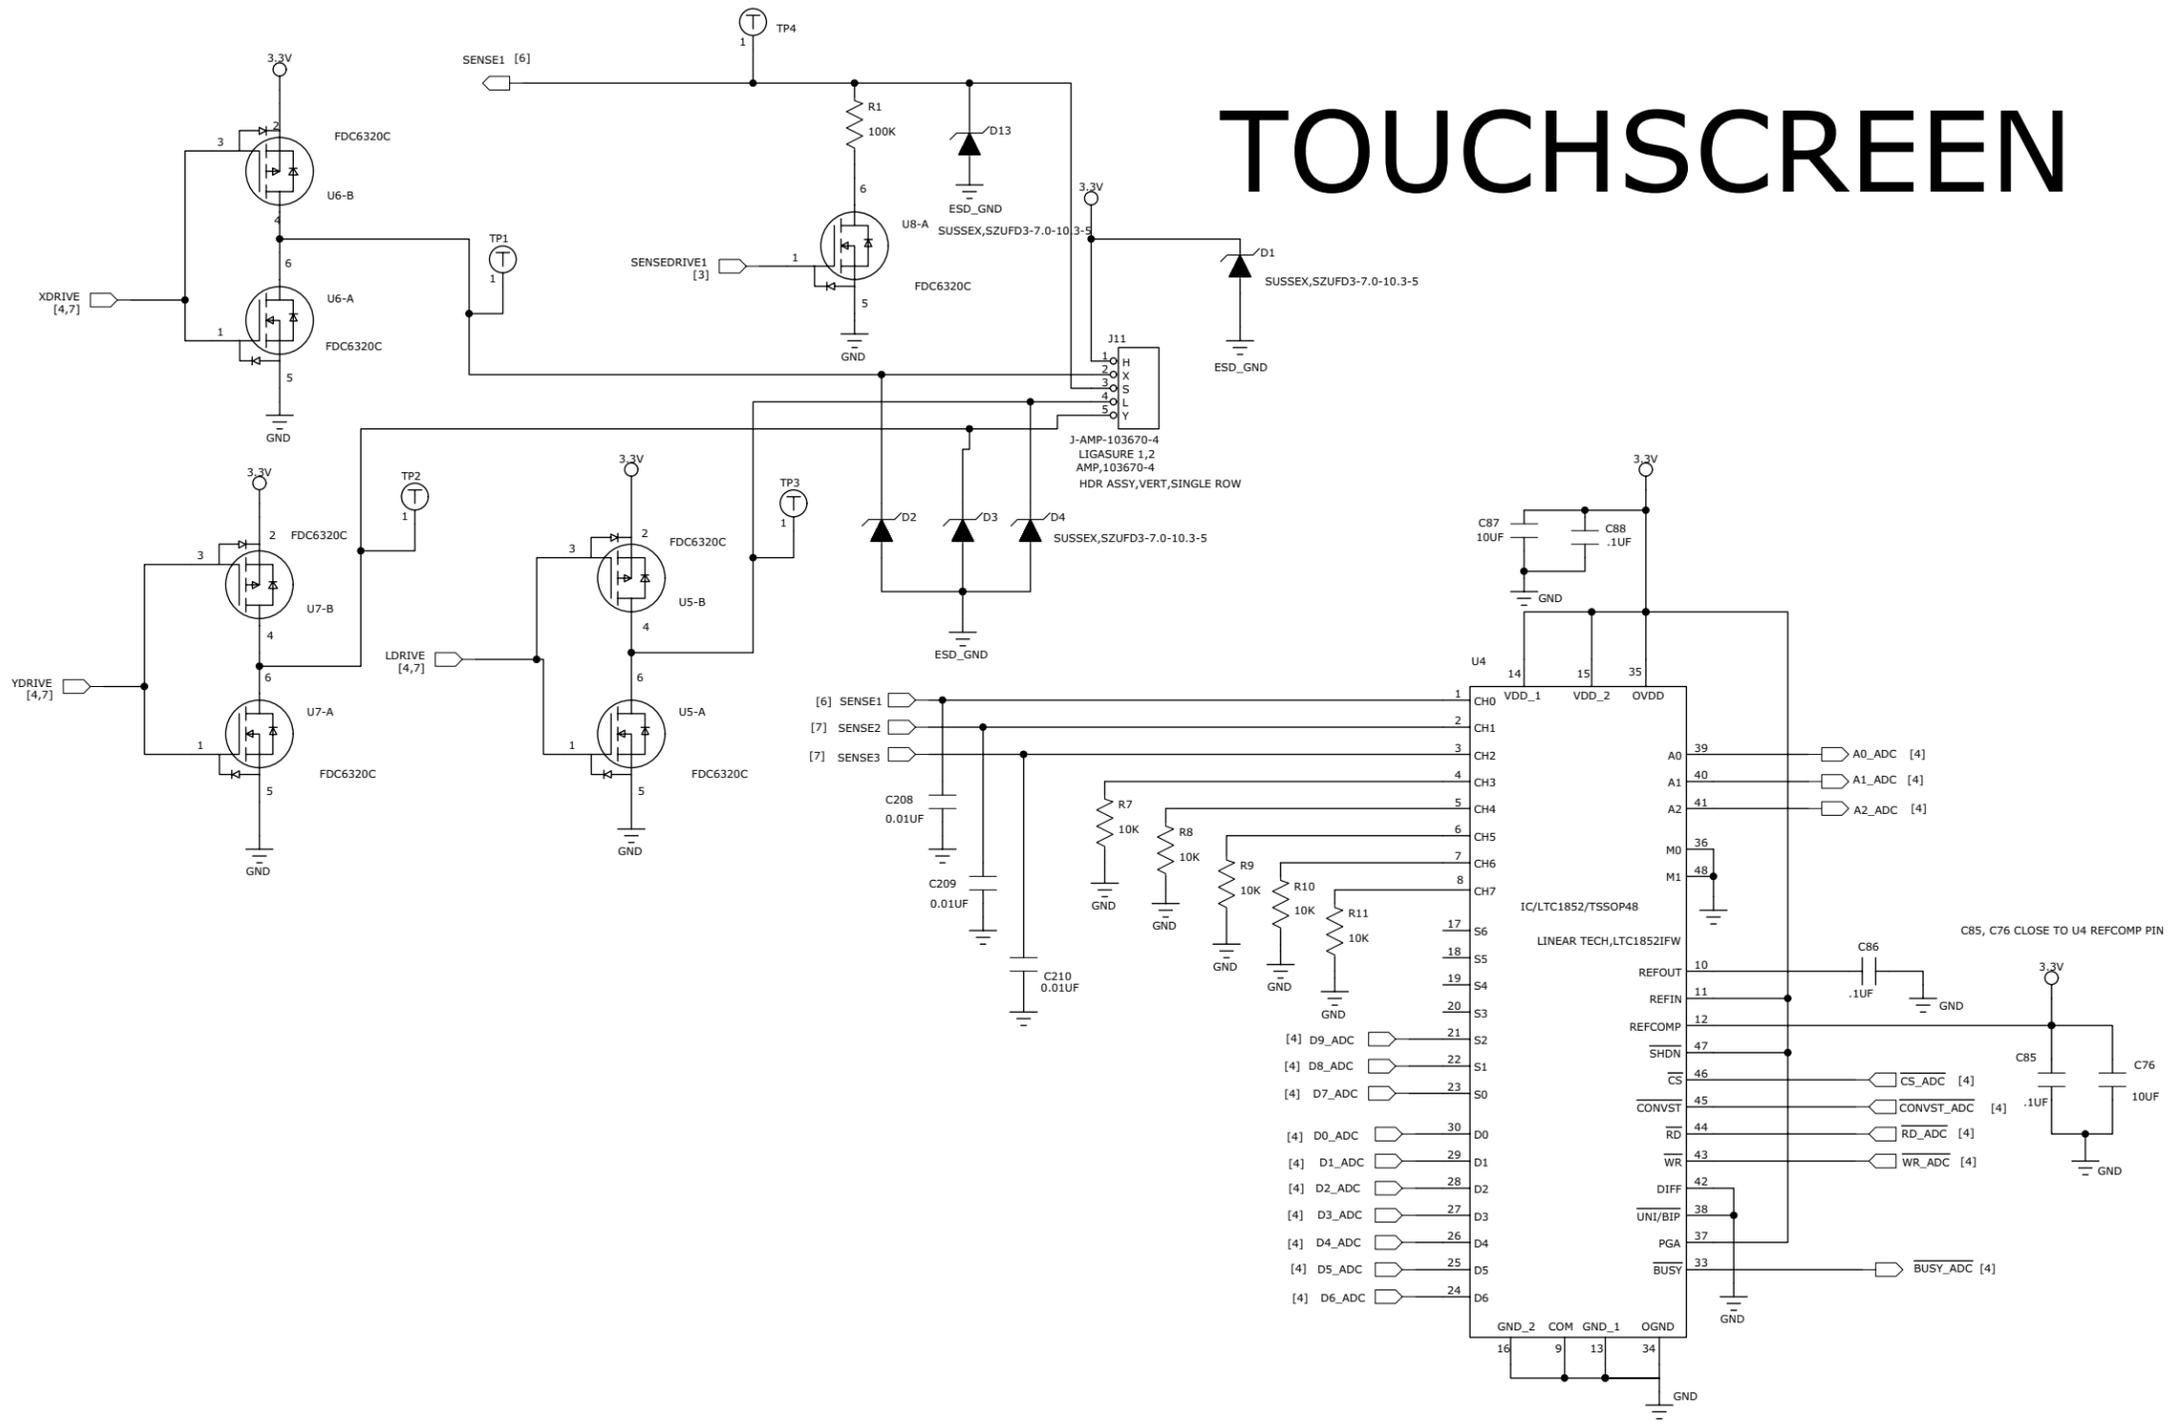


TOUCHSCREEN



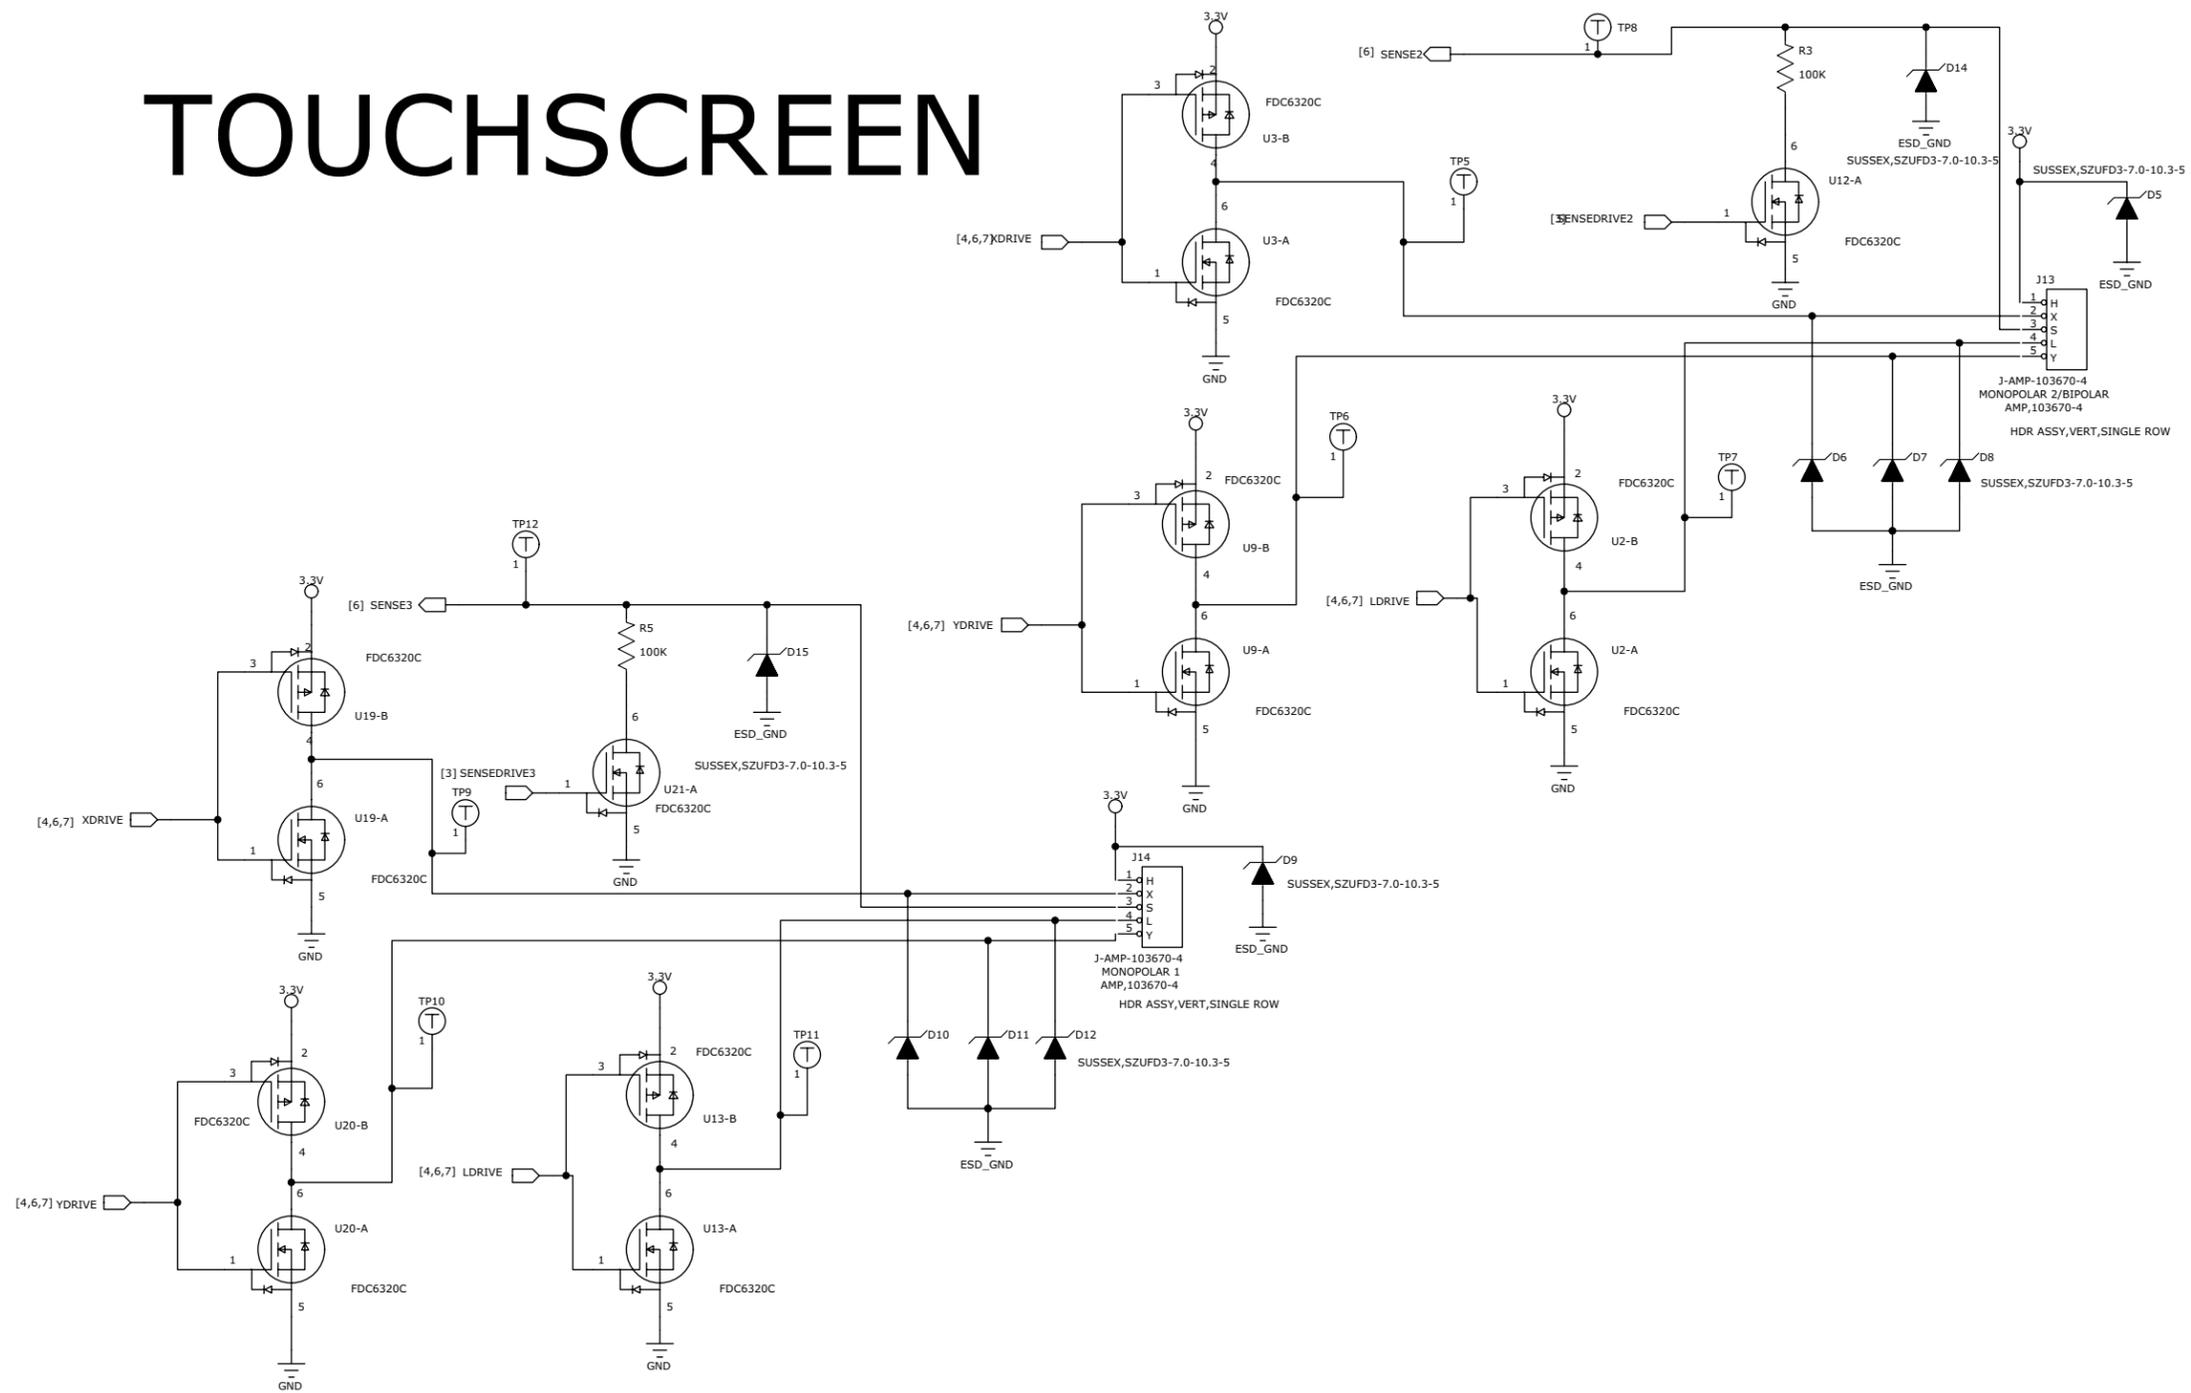


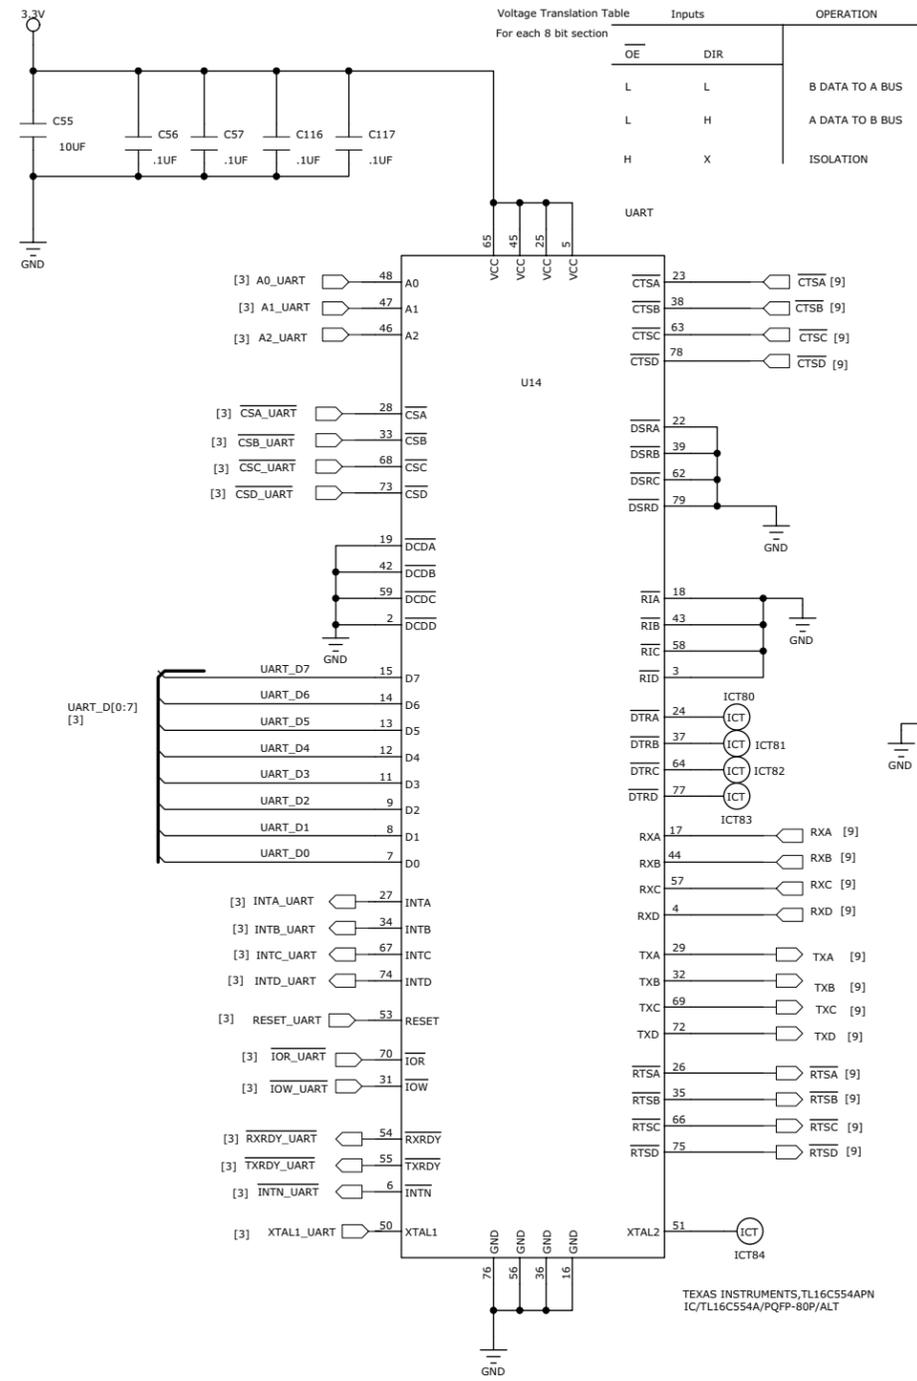






ALL 232INV AND AIM/NWAKE LINES ARE PULLED UP INSIDE THE FPGA

BARCODE

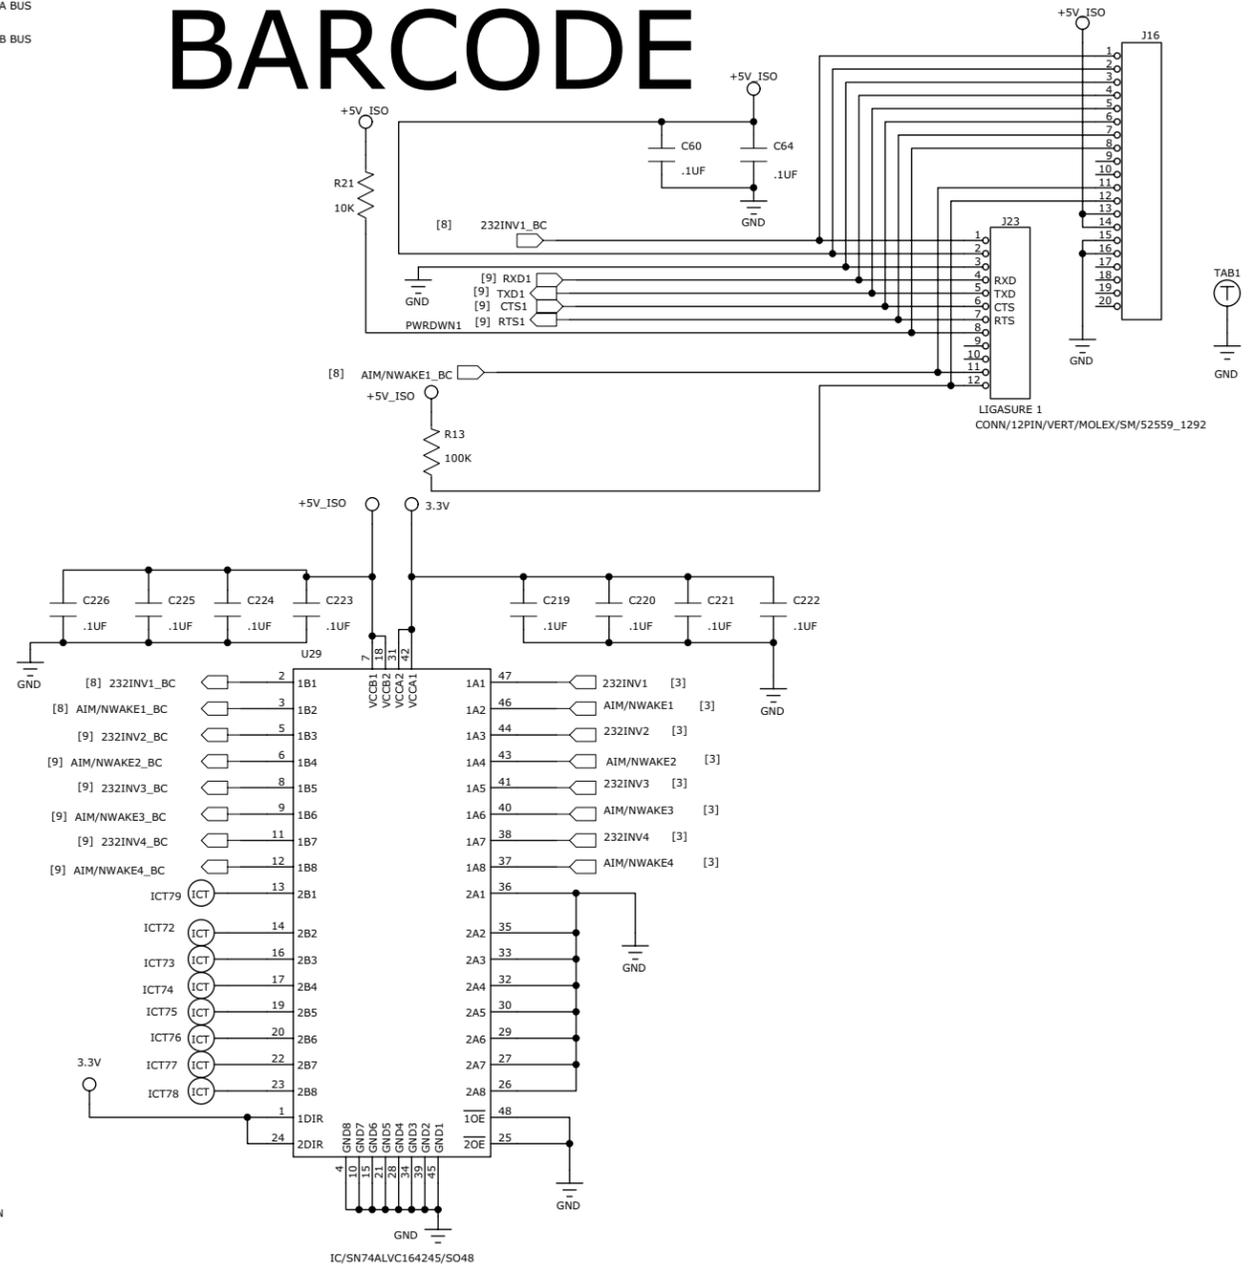


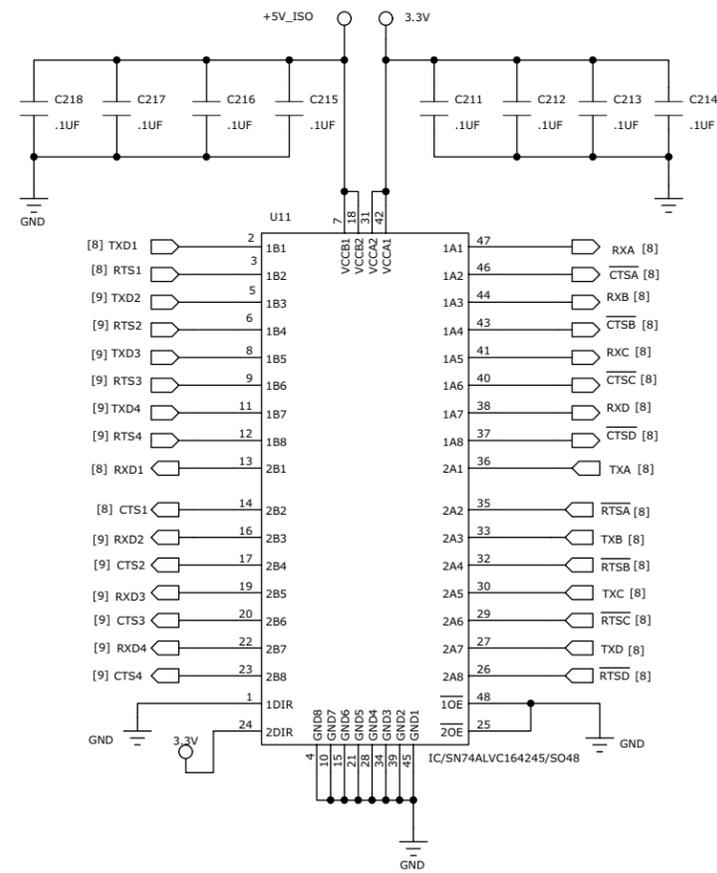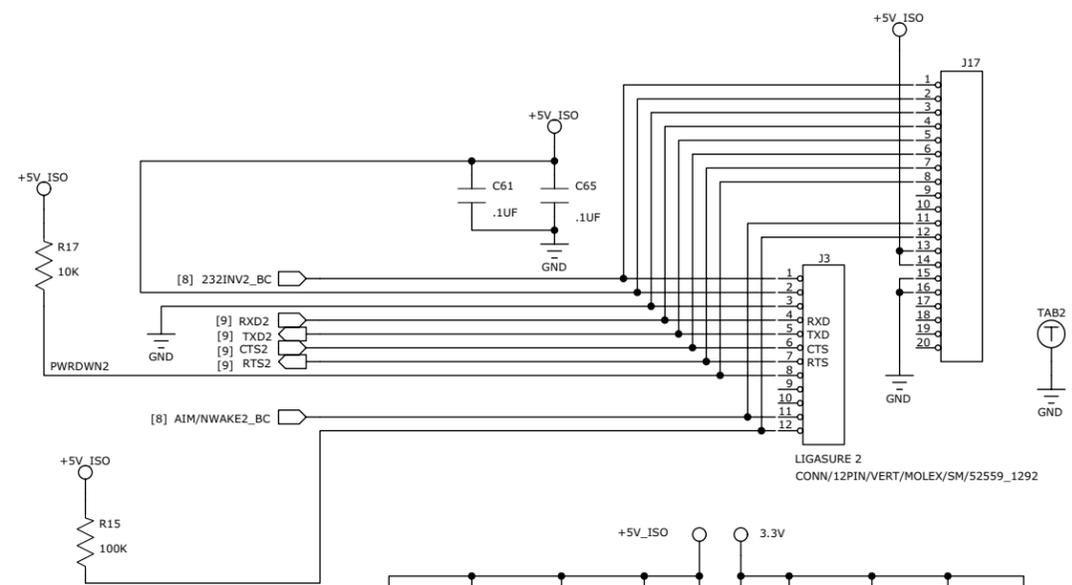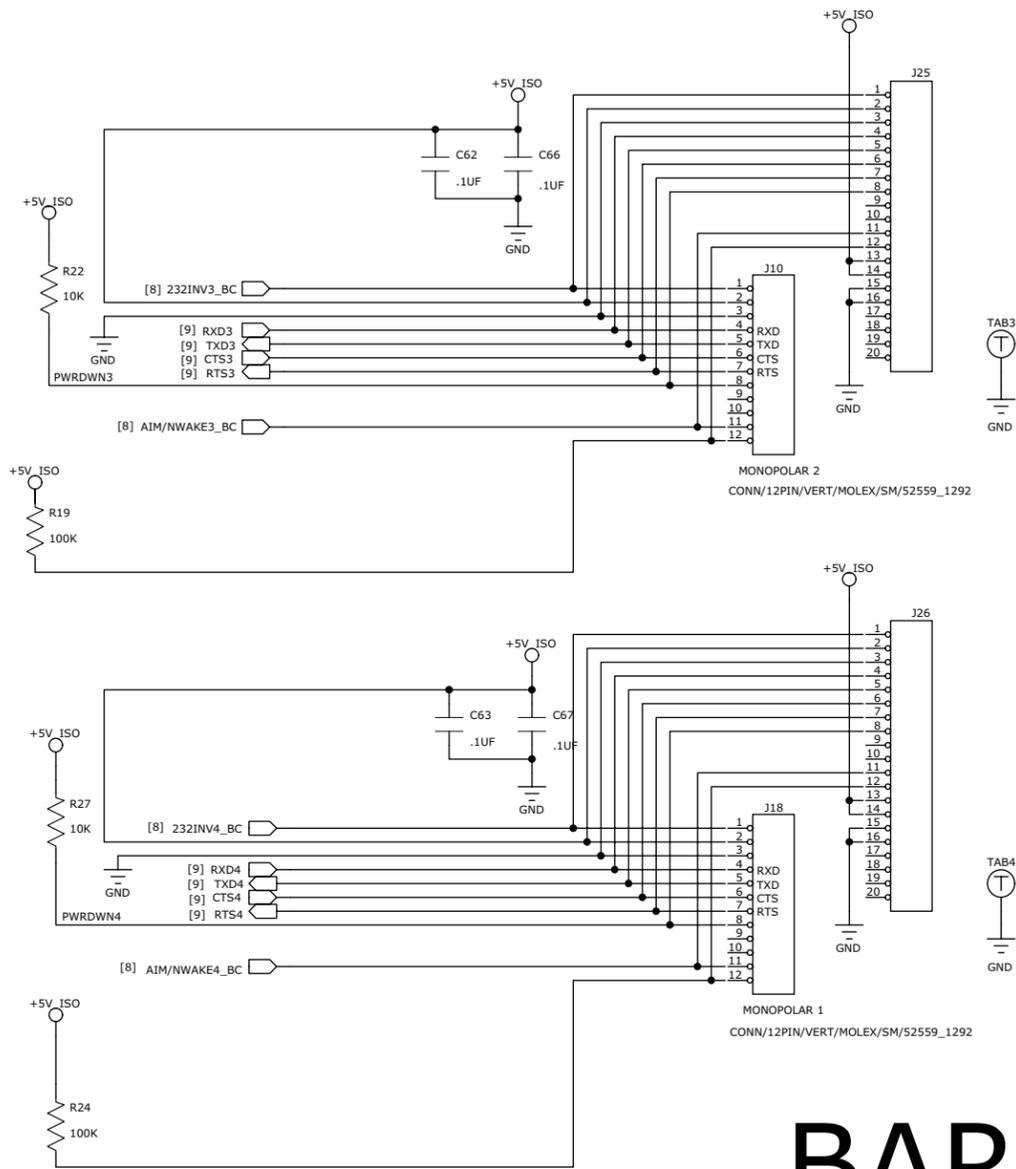


BARCODE

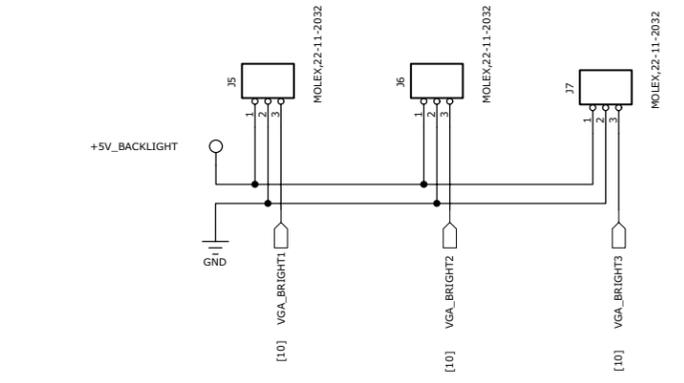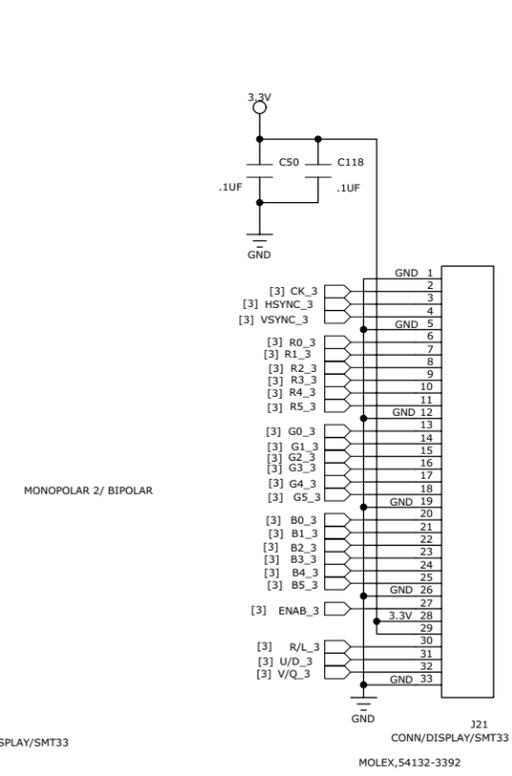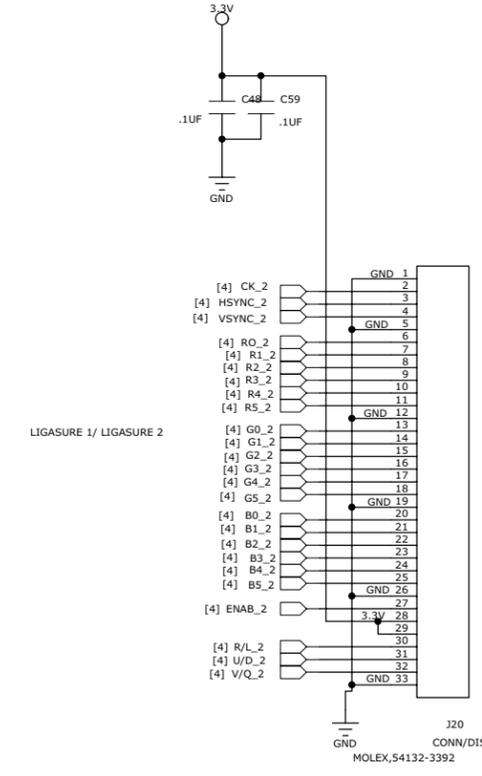
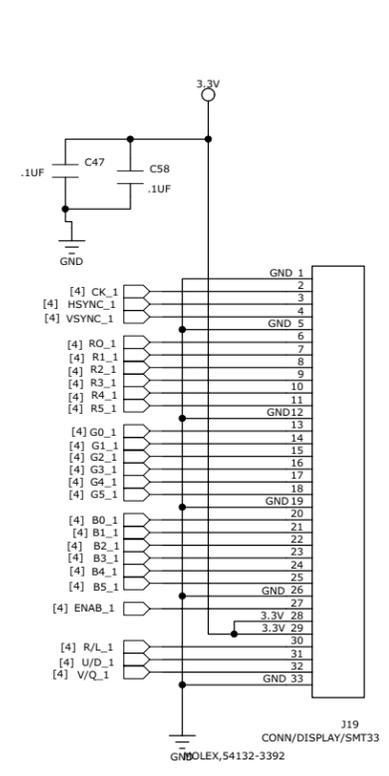
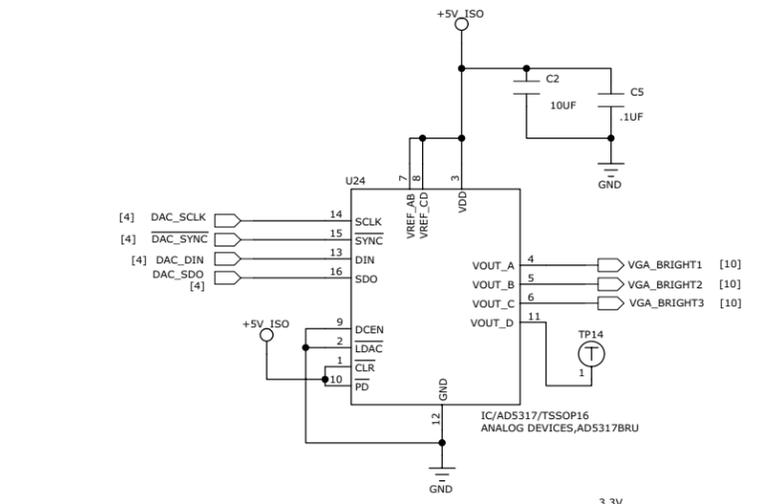




Memory Switch on Front Panel Overlay

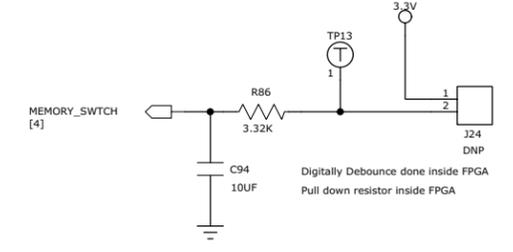

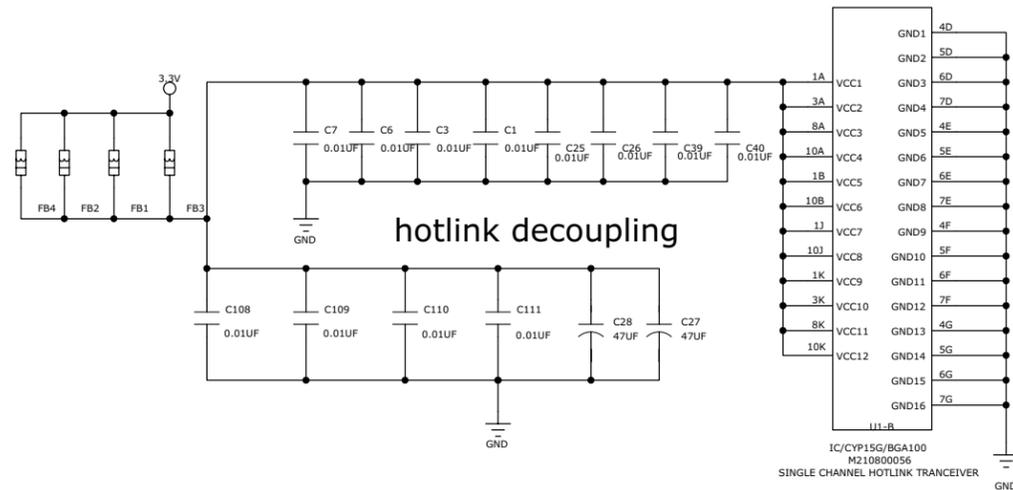


PWR/GND

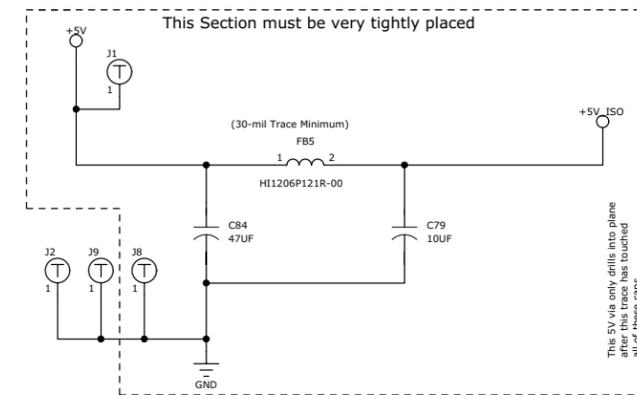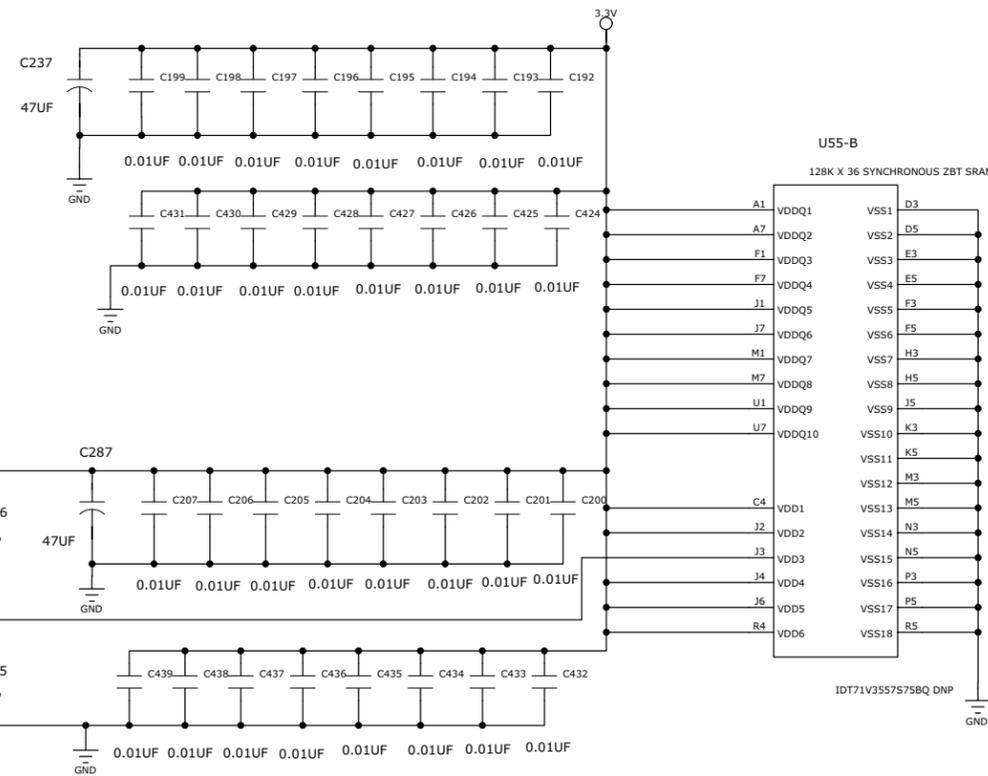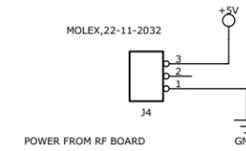

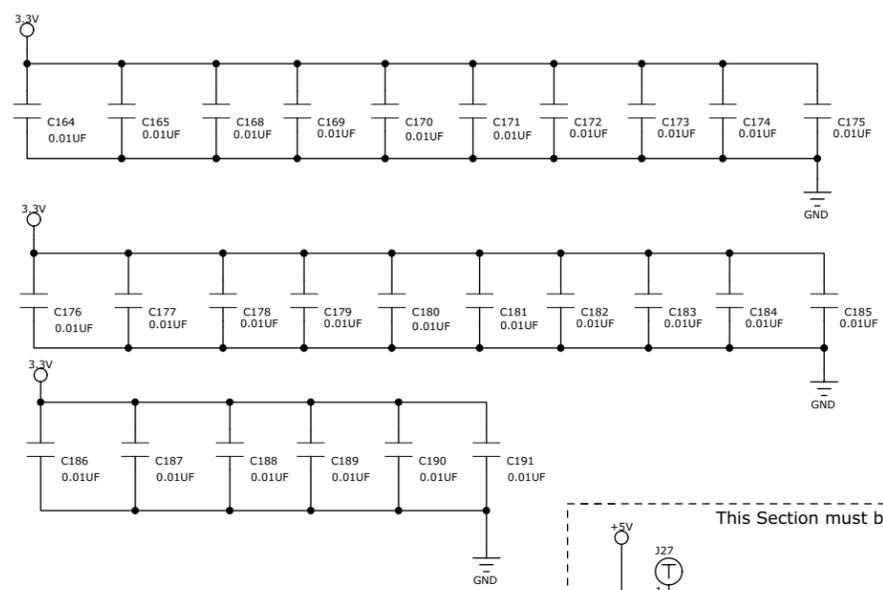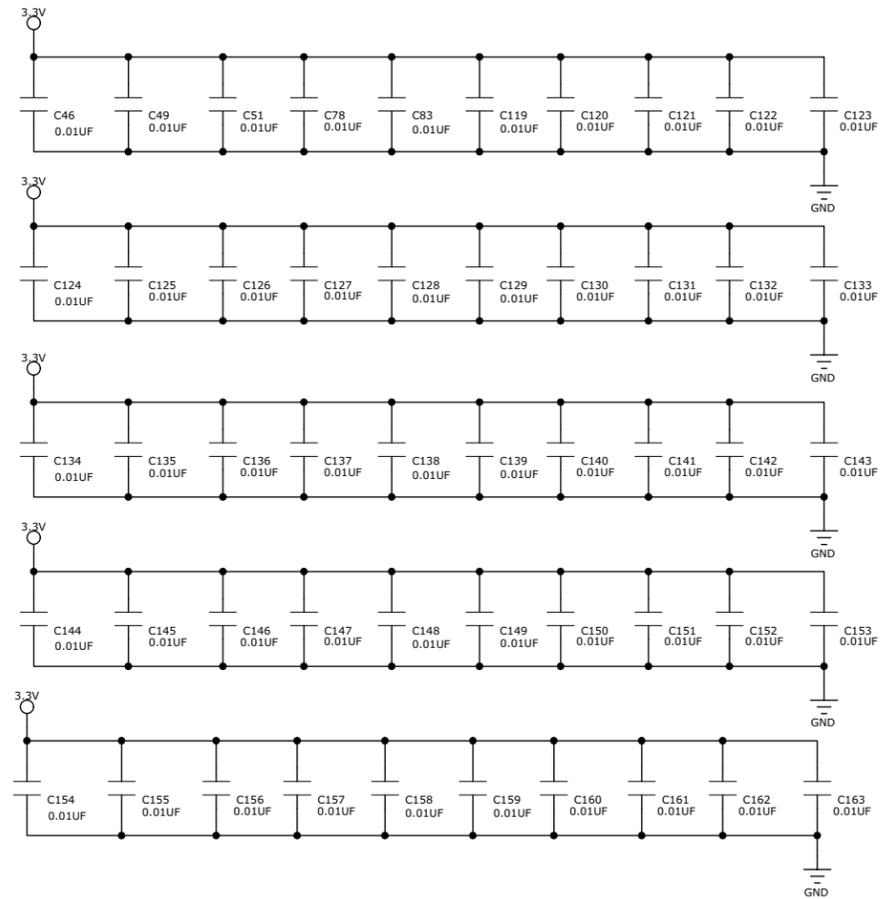


PWR/GND


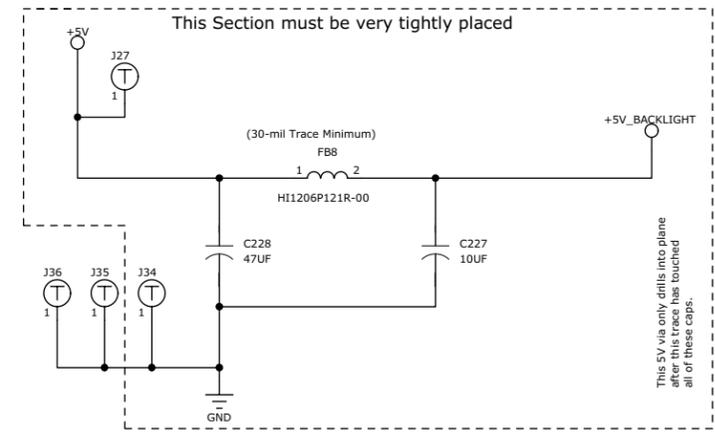



FPGA DECOUPLING

PWR/GND

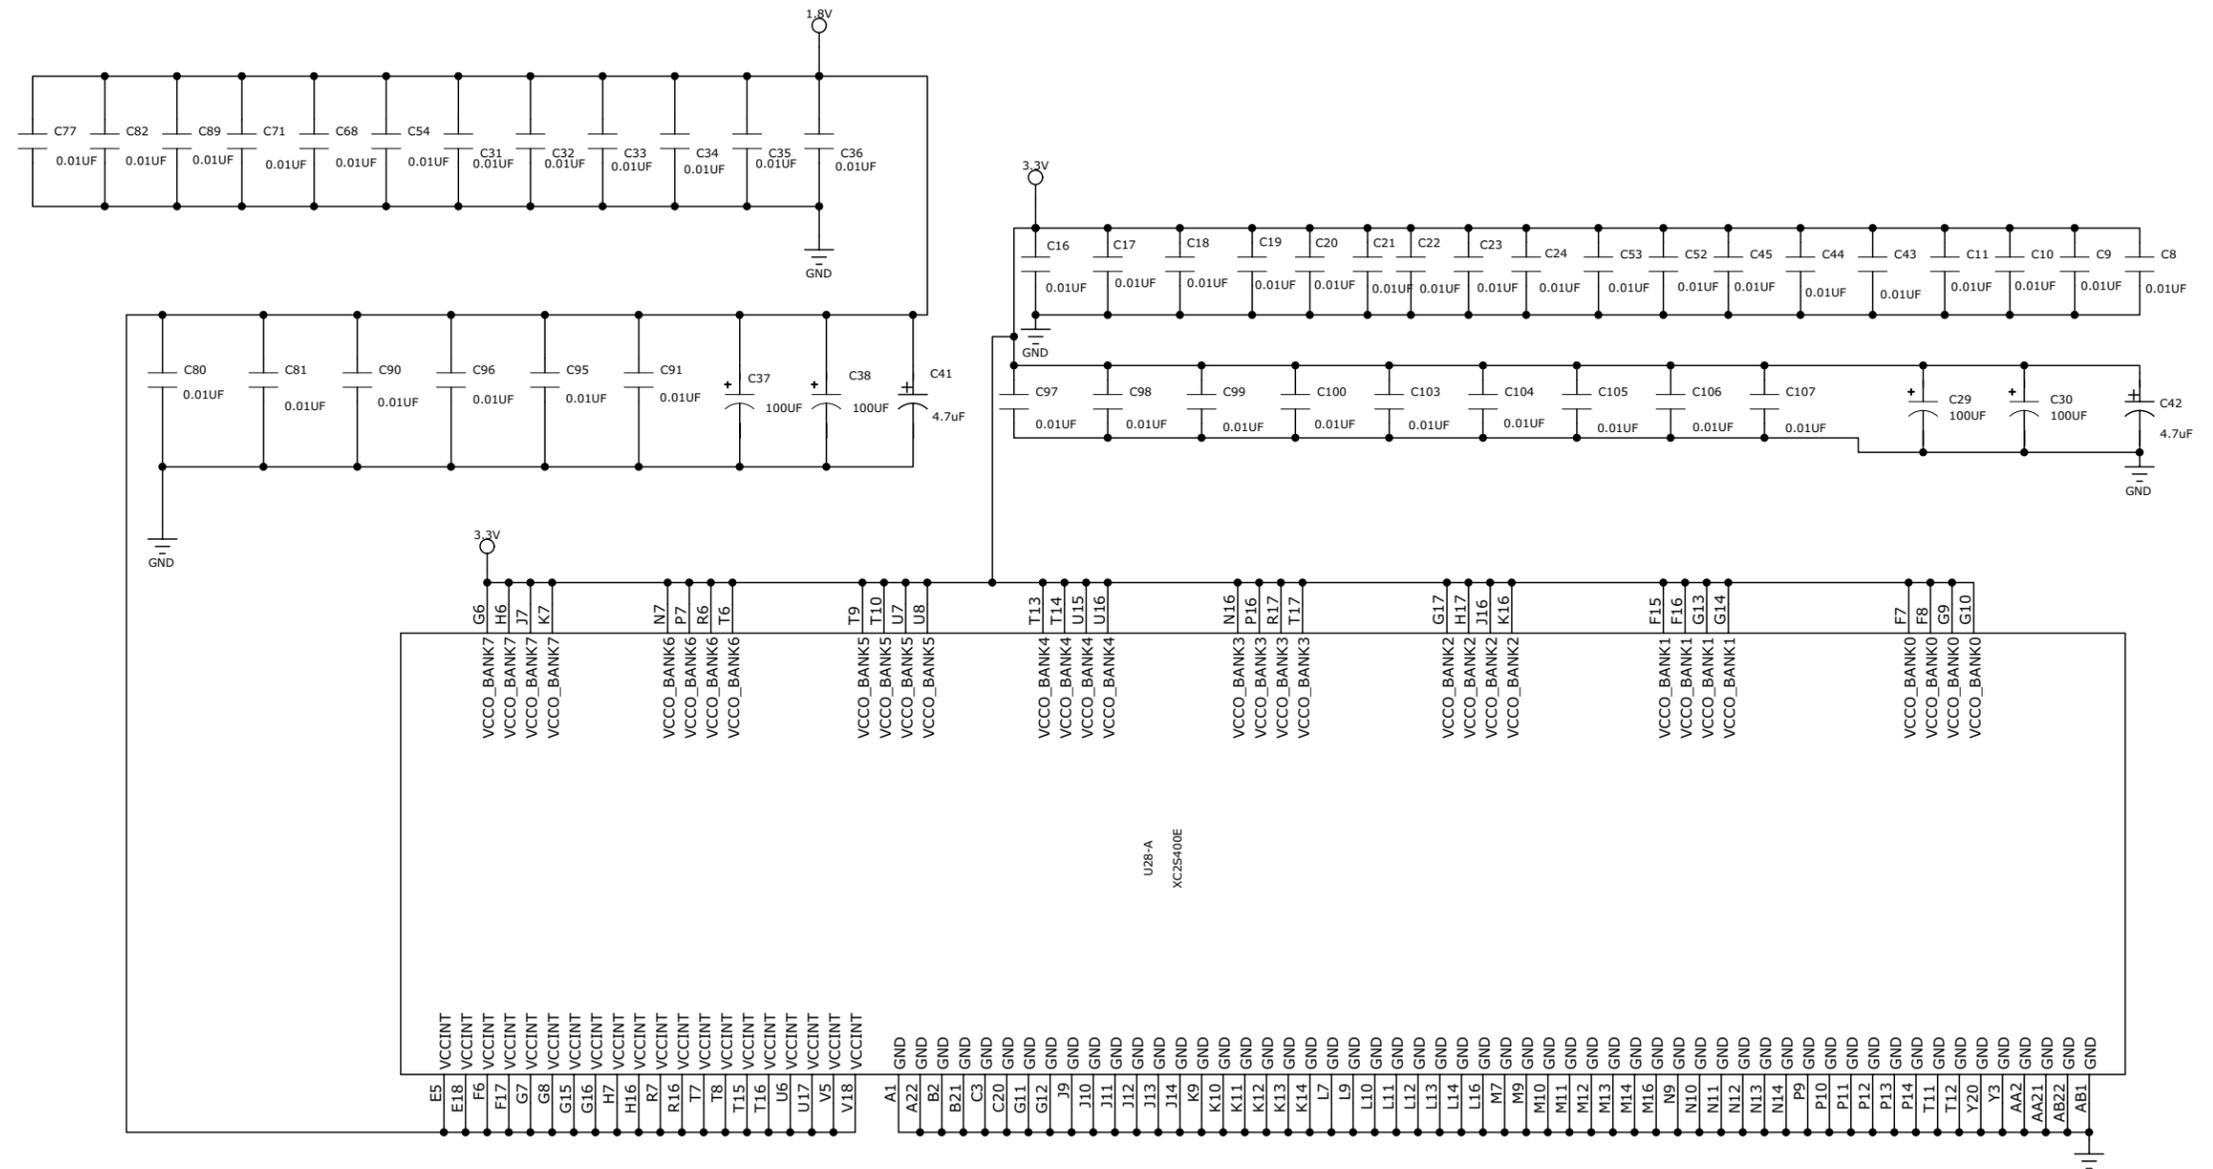

Footswitch/Audio PCBA

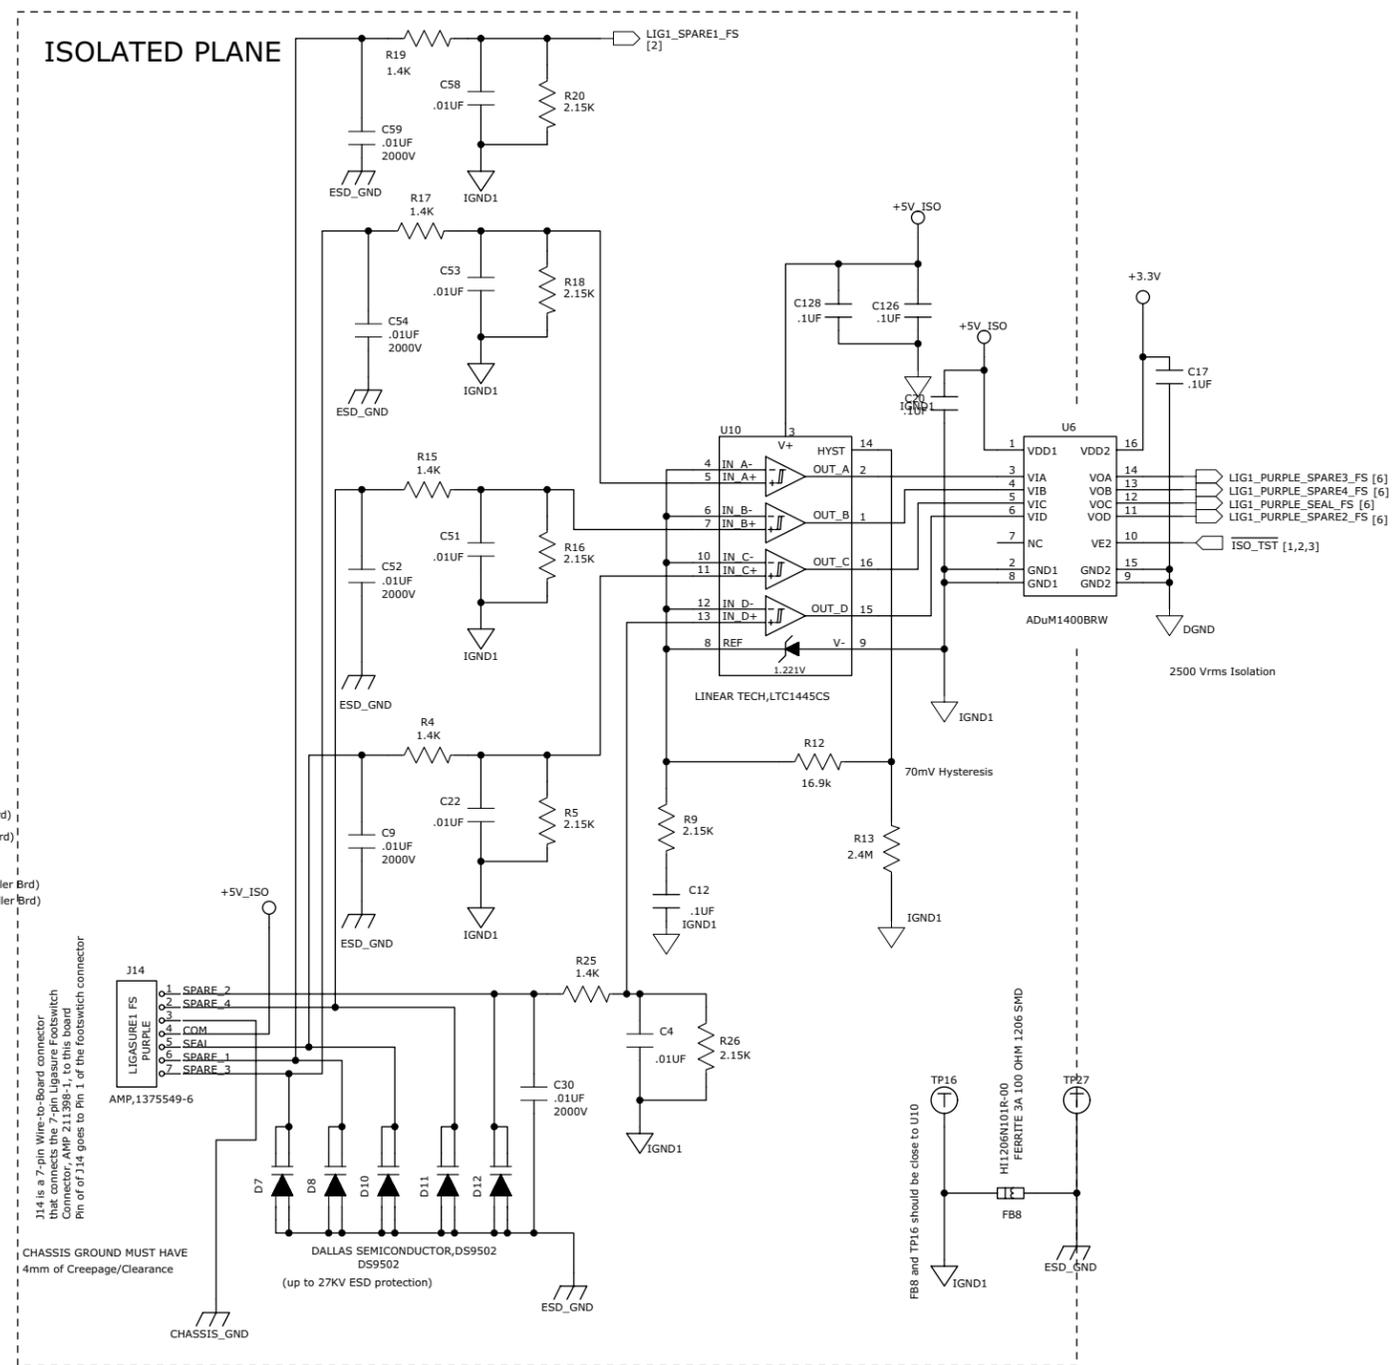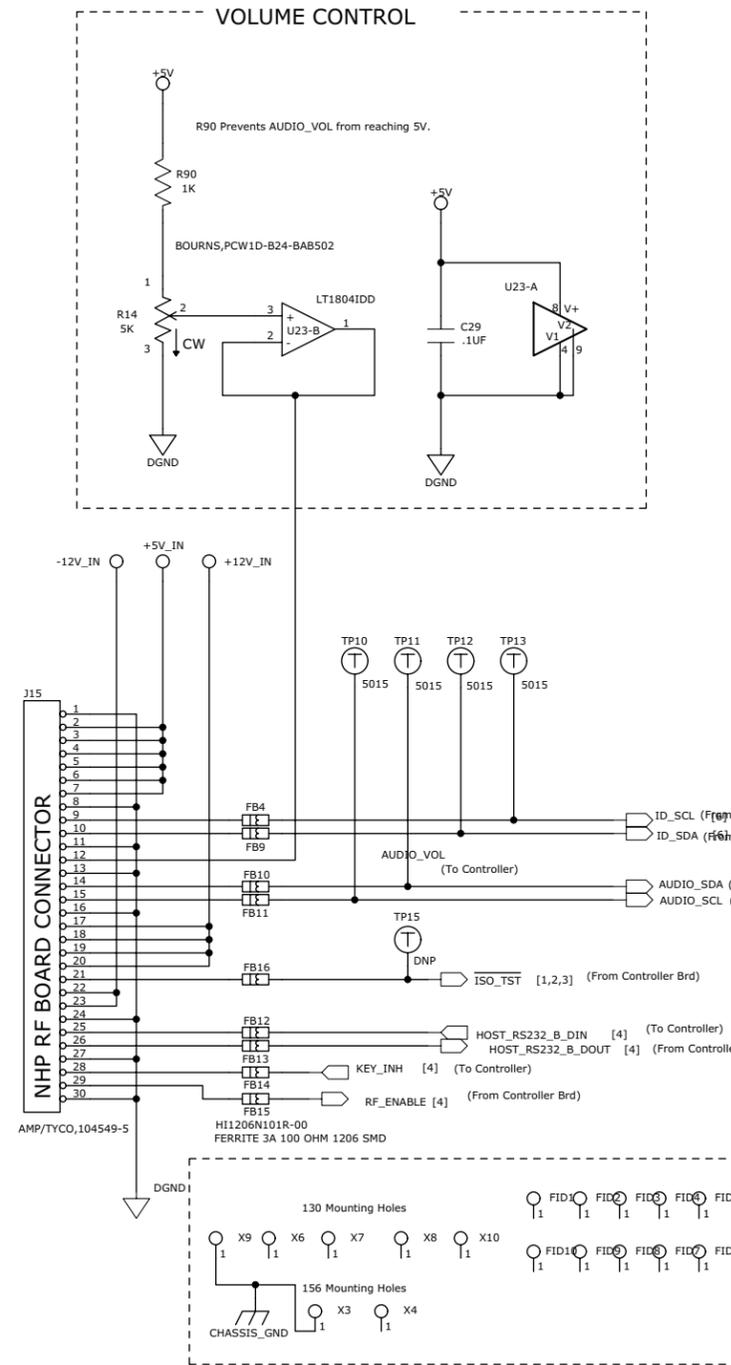


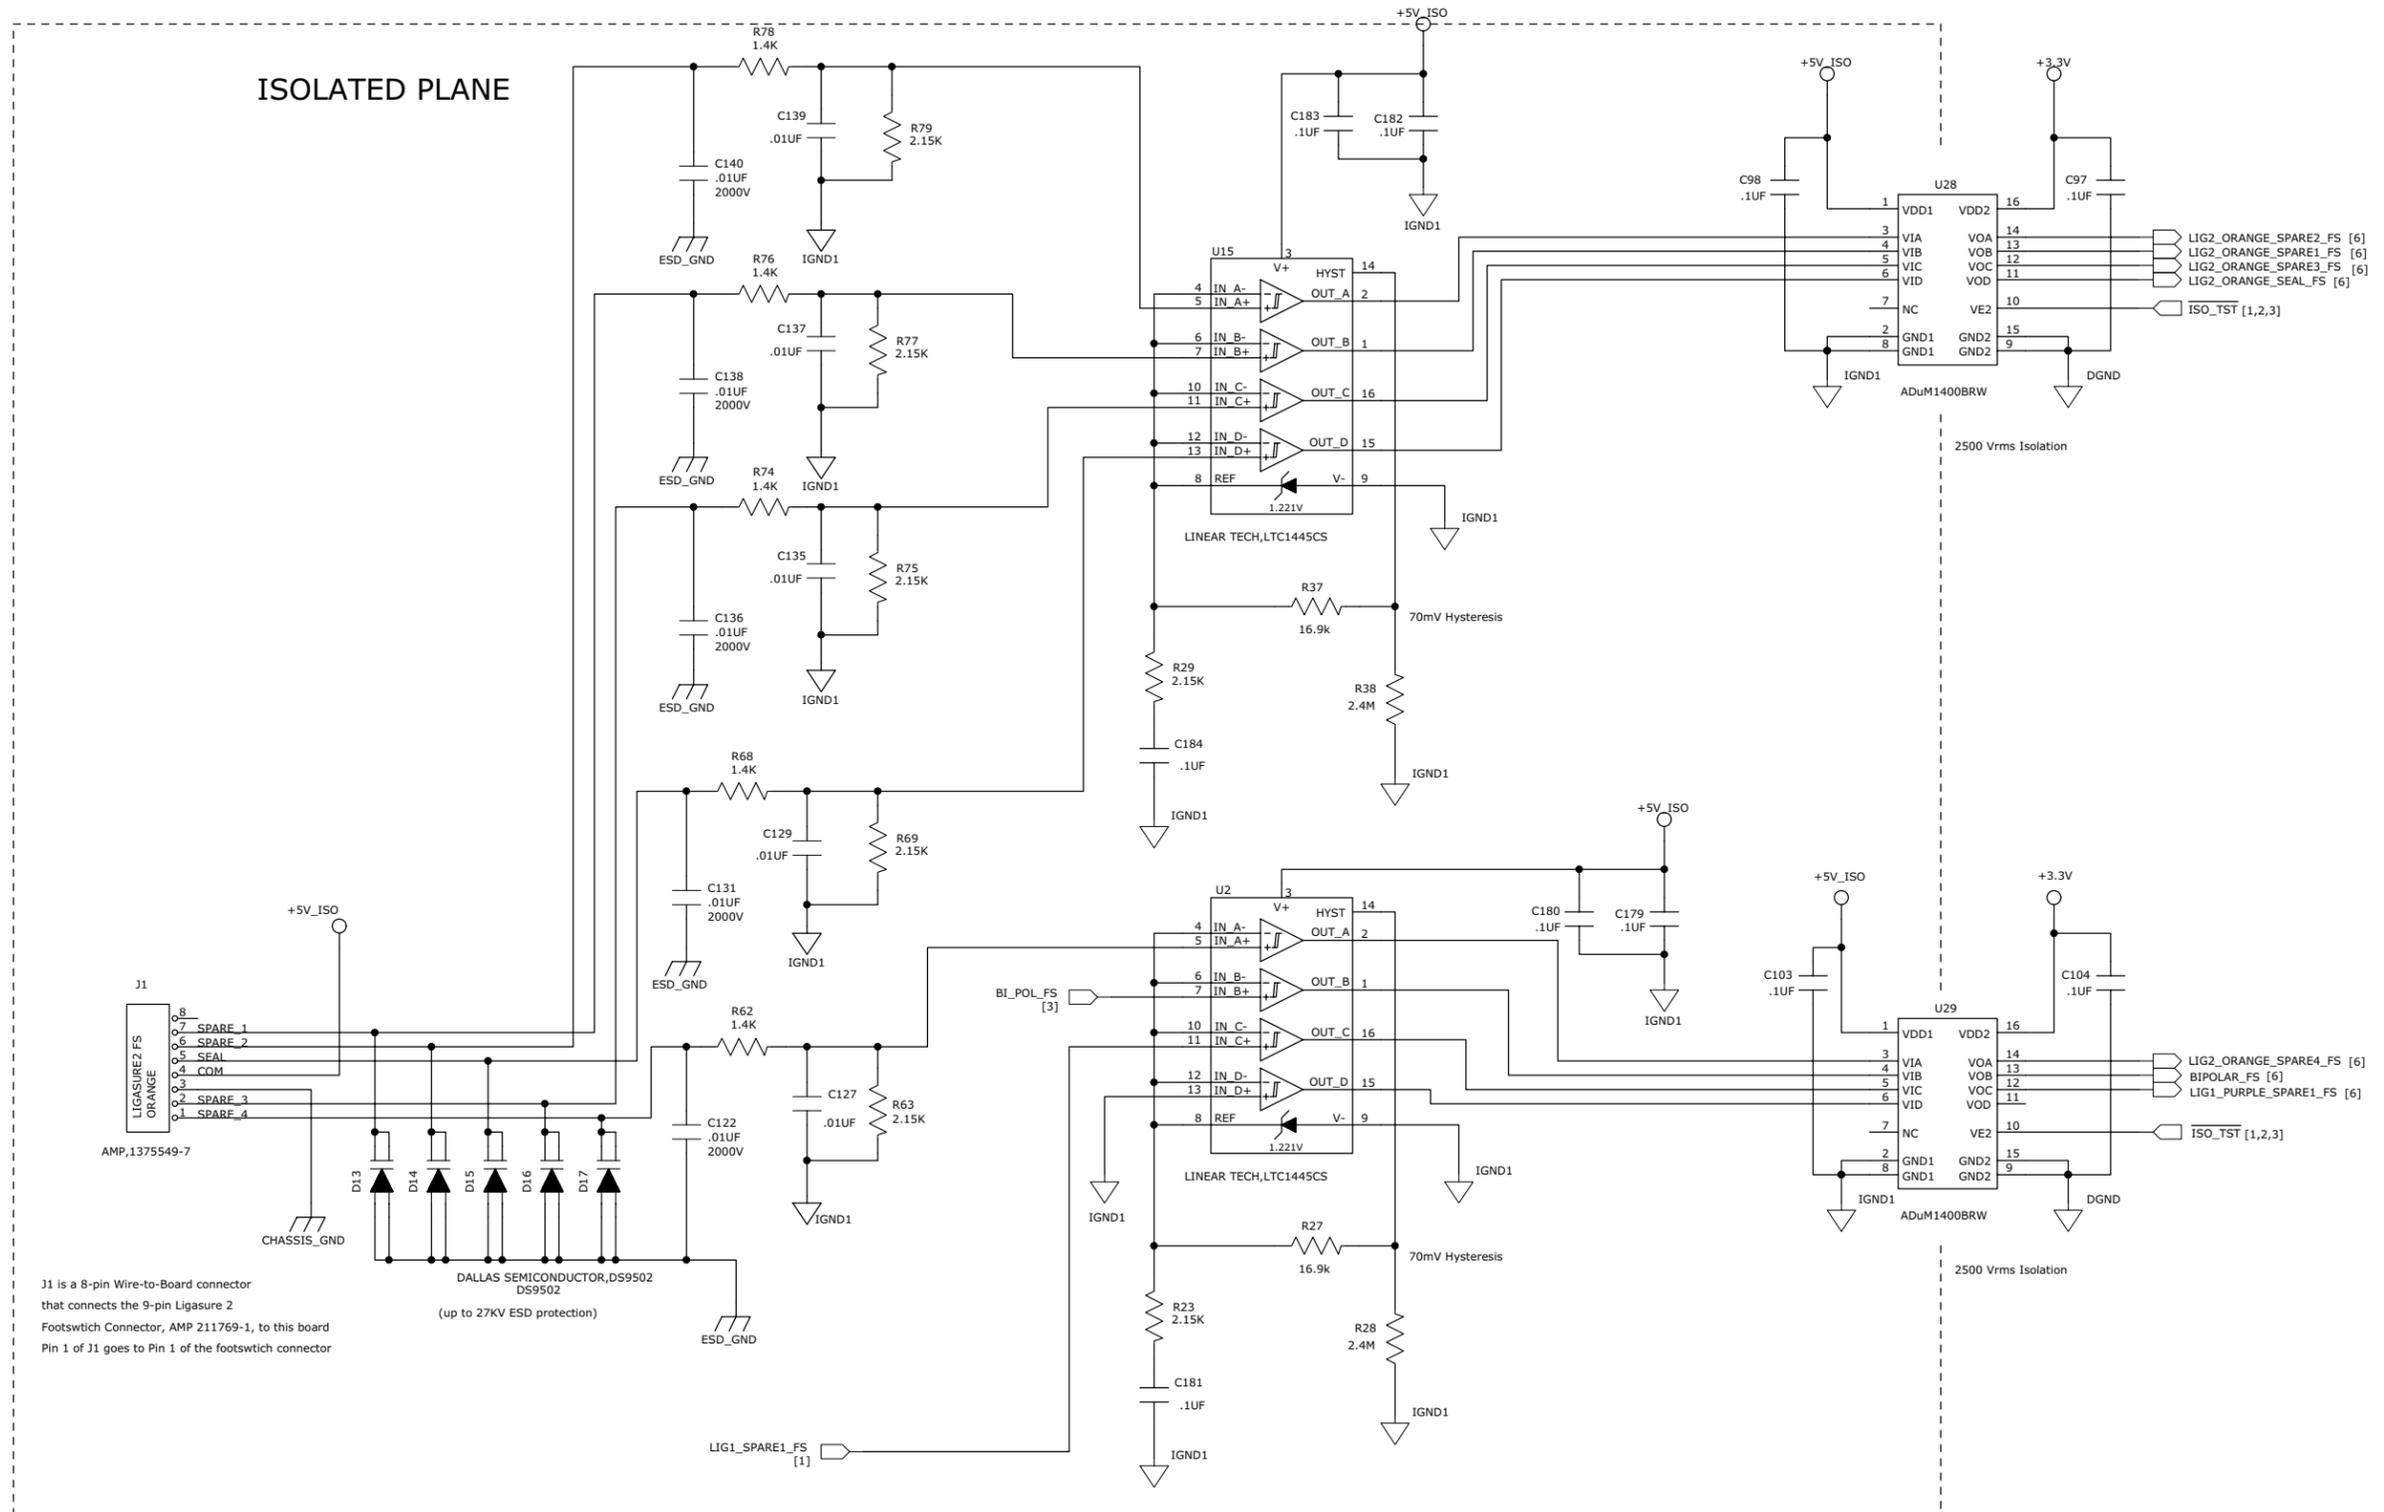



J1 is a 8-pin Wire-to-Board connector that connects the 9-pin Ligasure 2 Footswitch Connector, AMP 211769-1, to this board. Pin 1 of J1 goes to Pin 1 of the footswitch connector.


Footswitch/Audio PCBA Sheet 2 of 9



THESE FS CONNECTORS ARE DNP

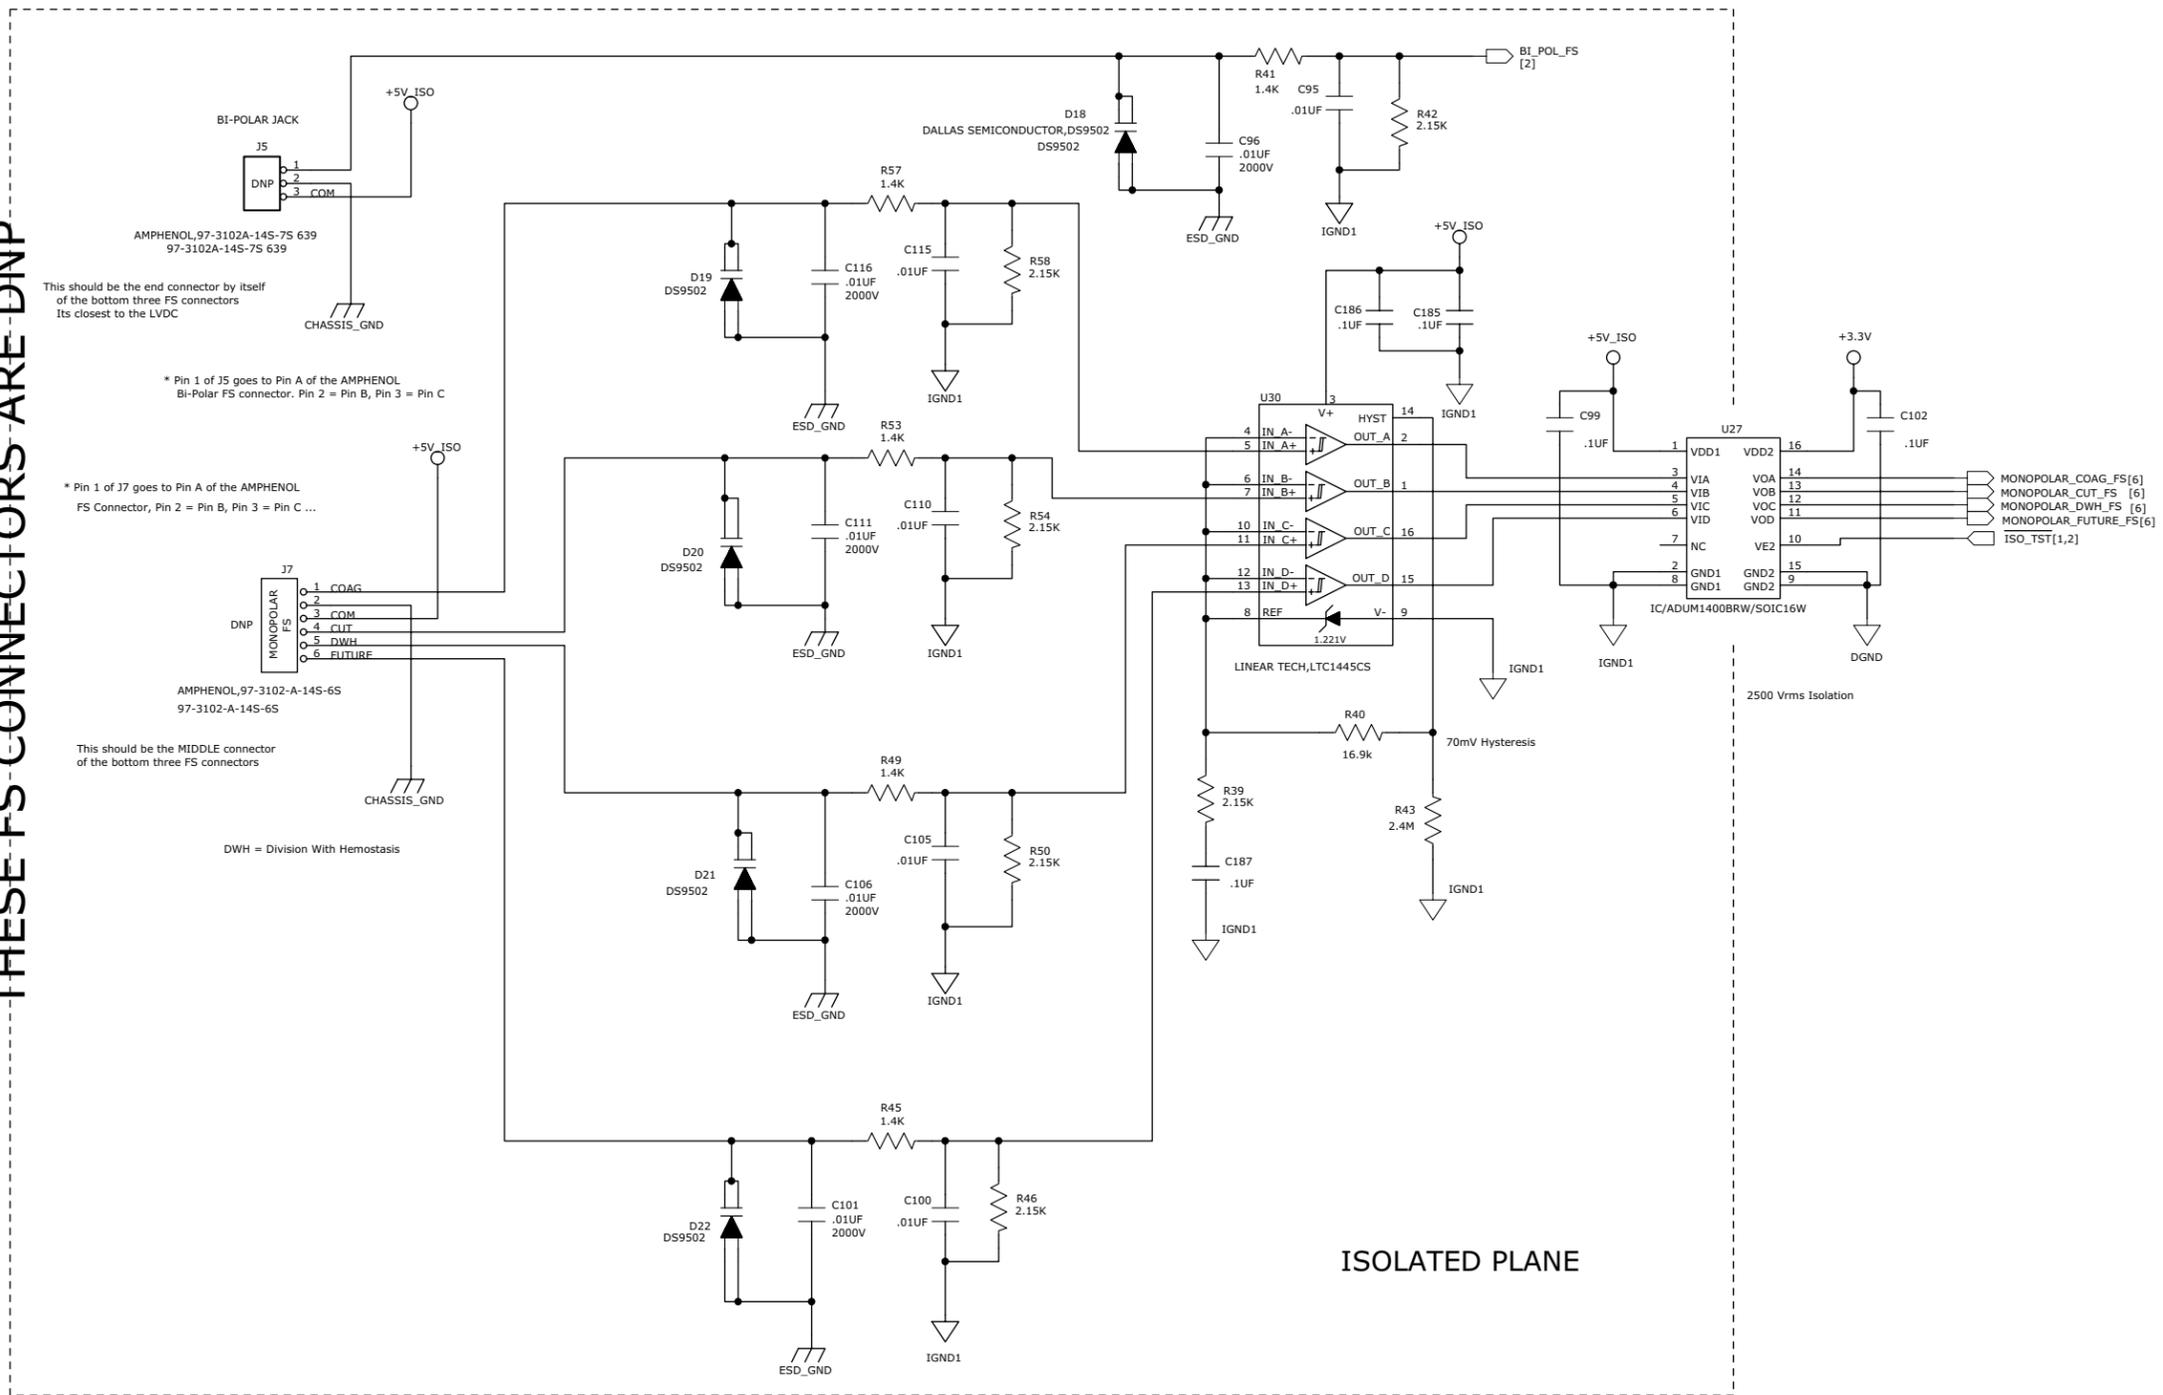



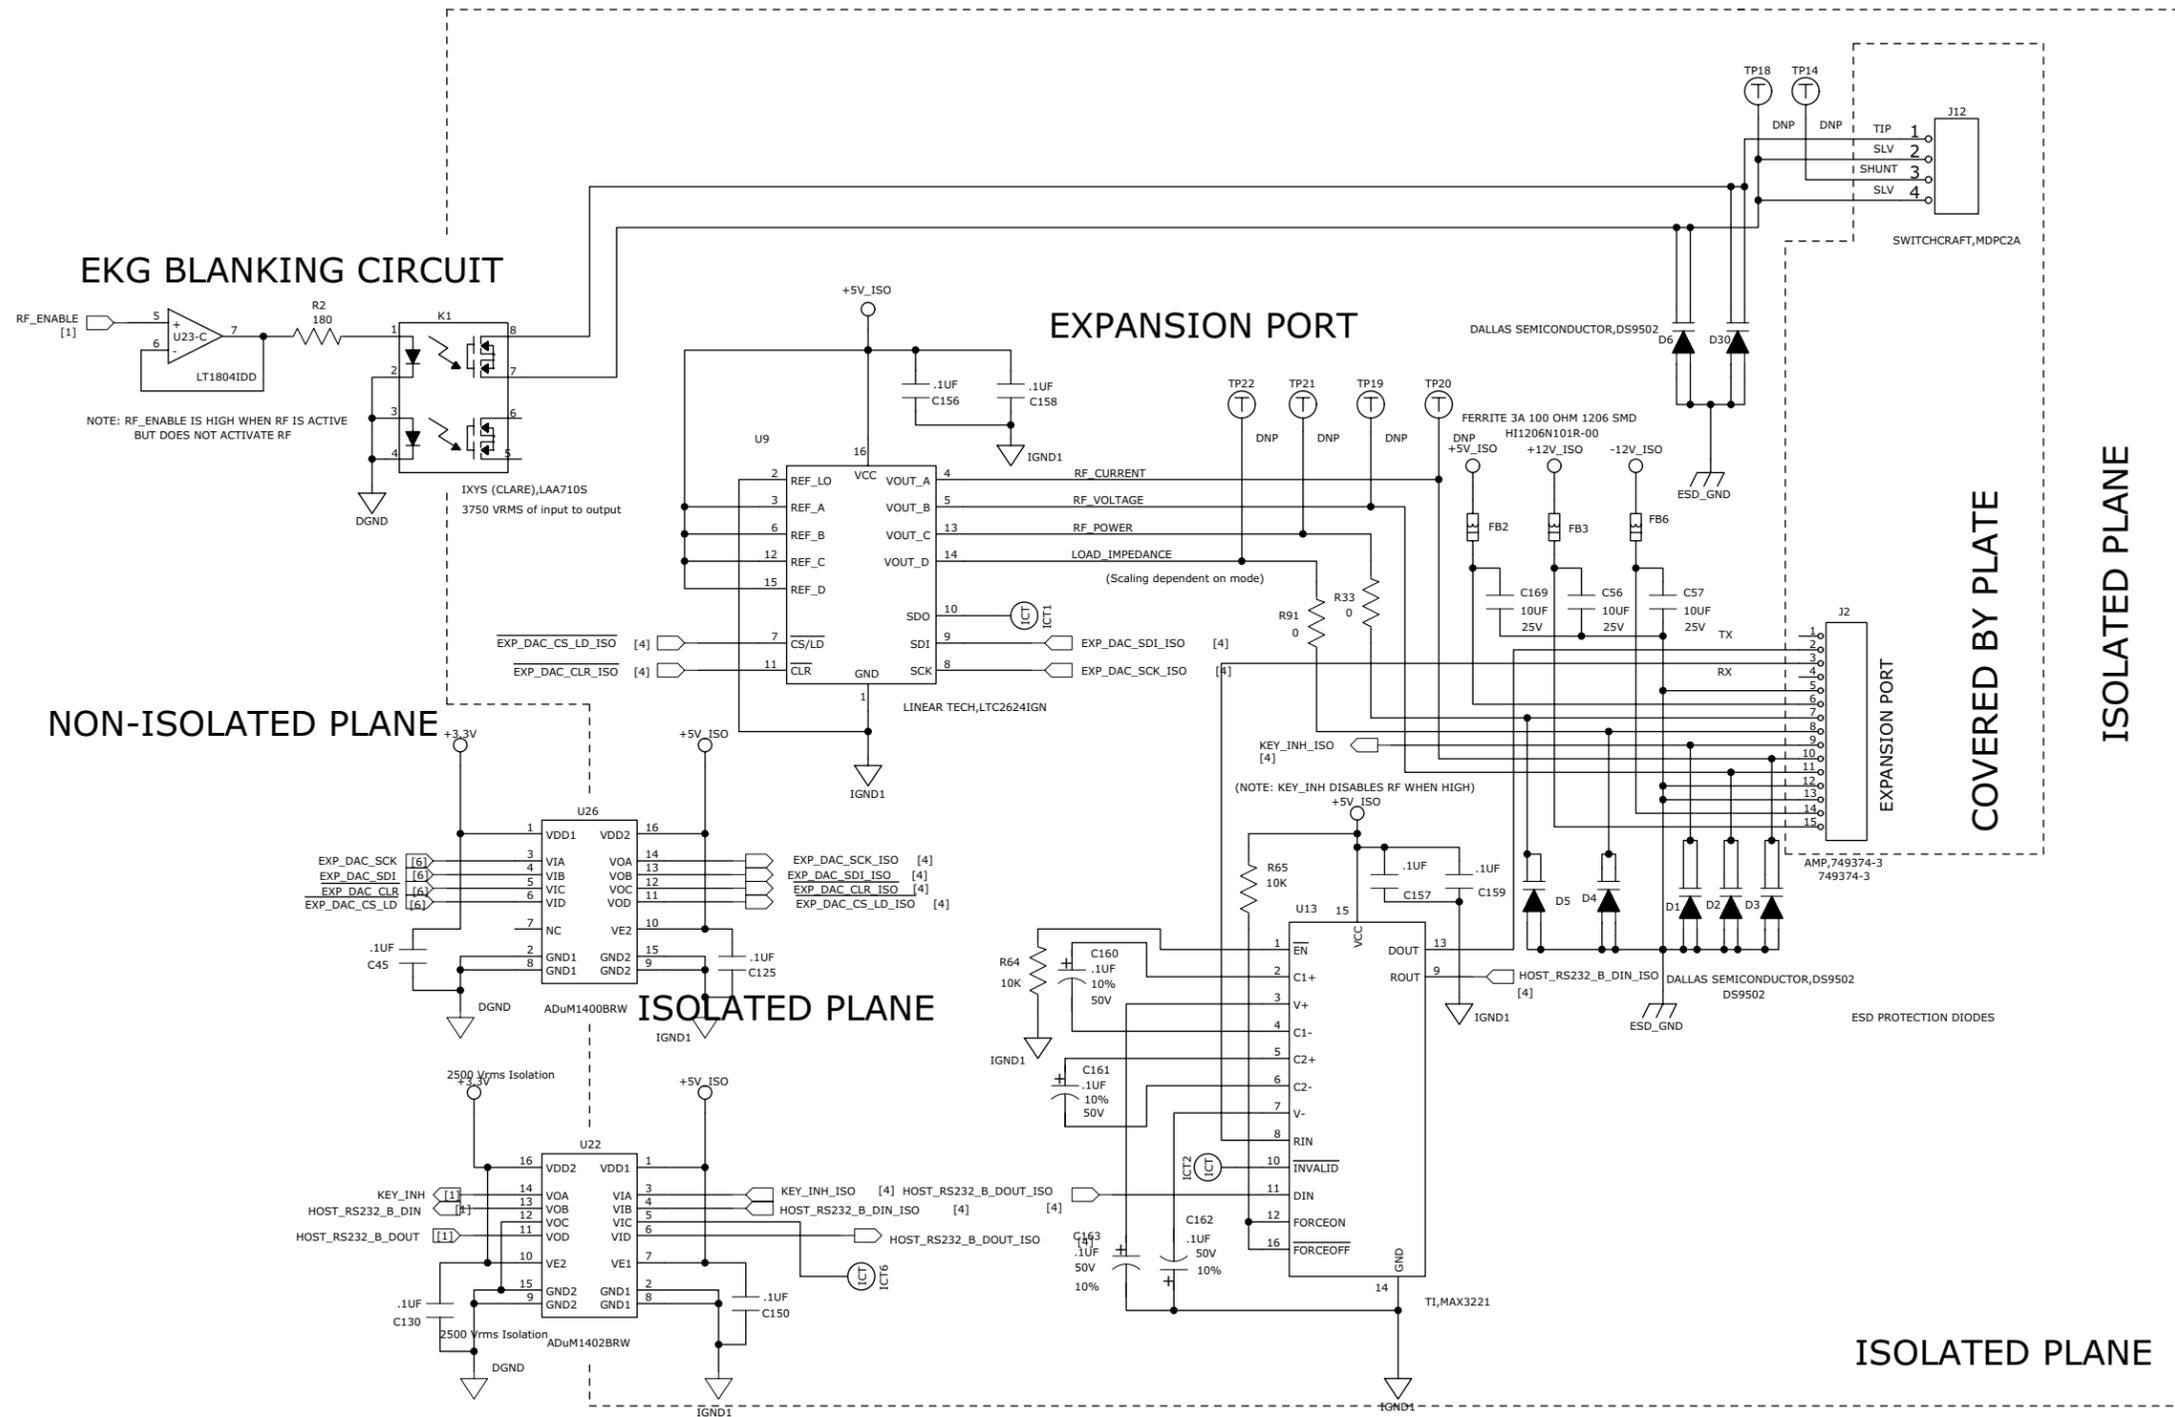


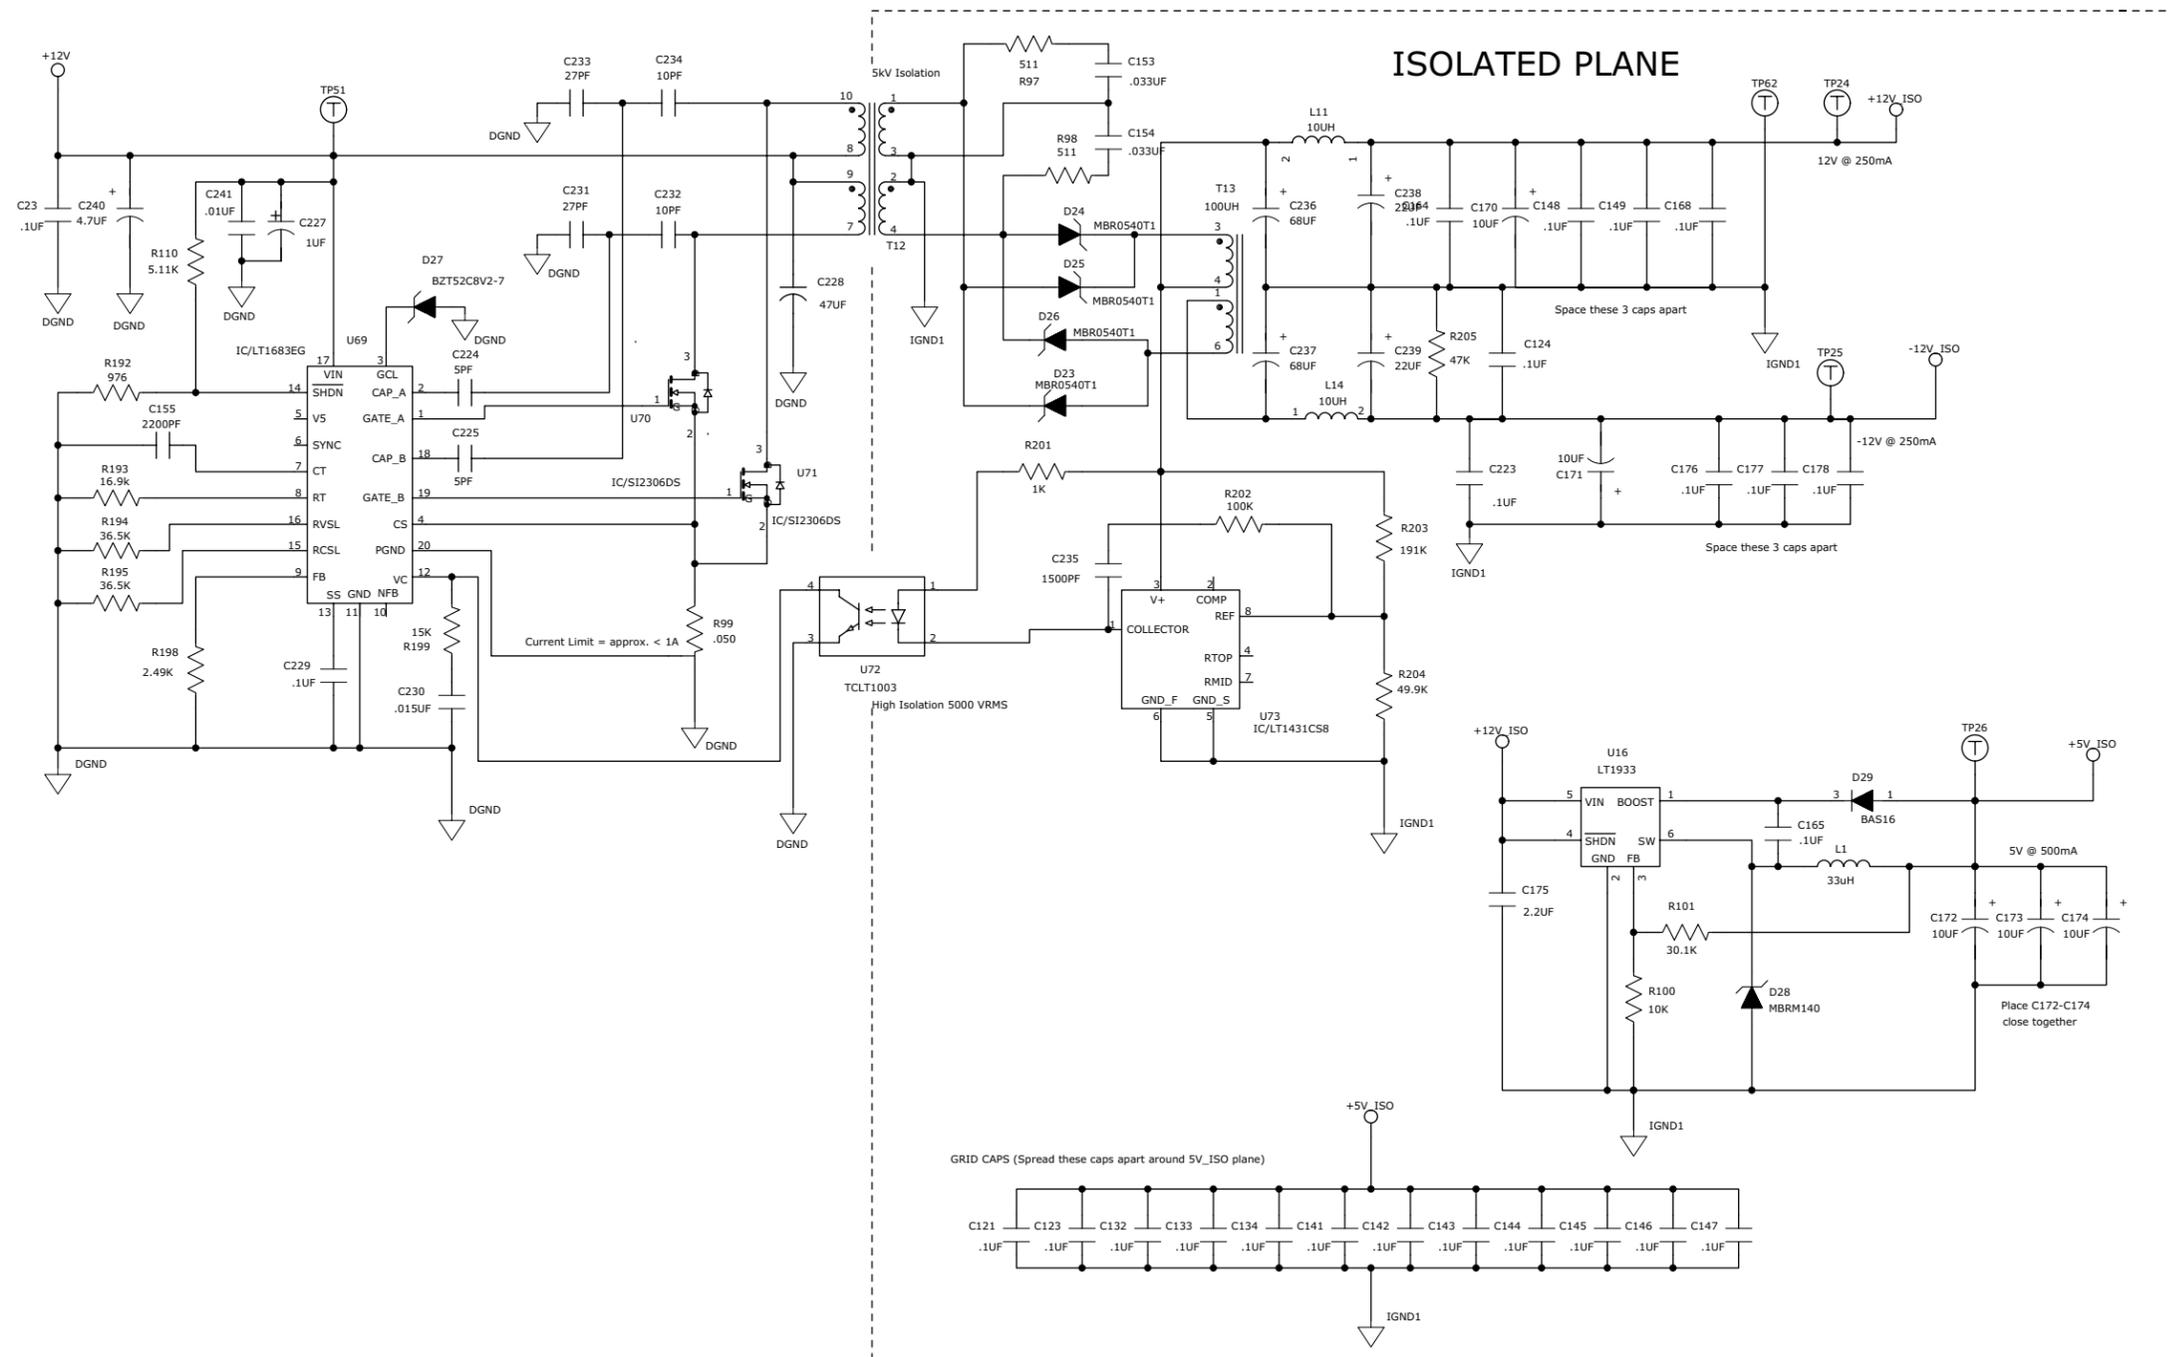


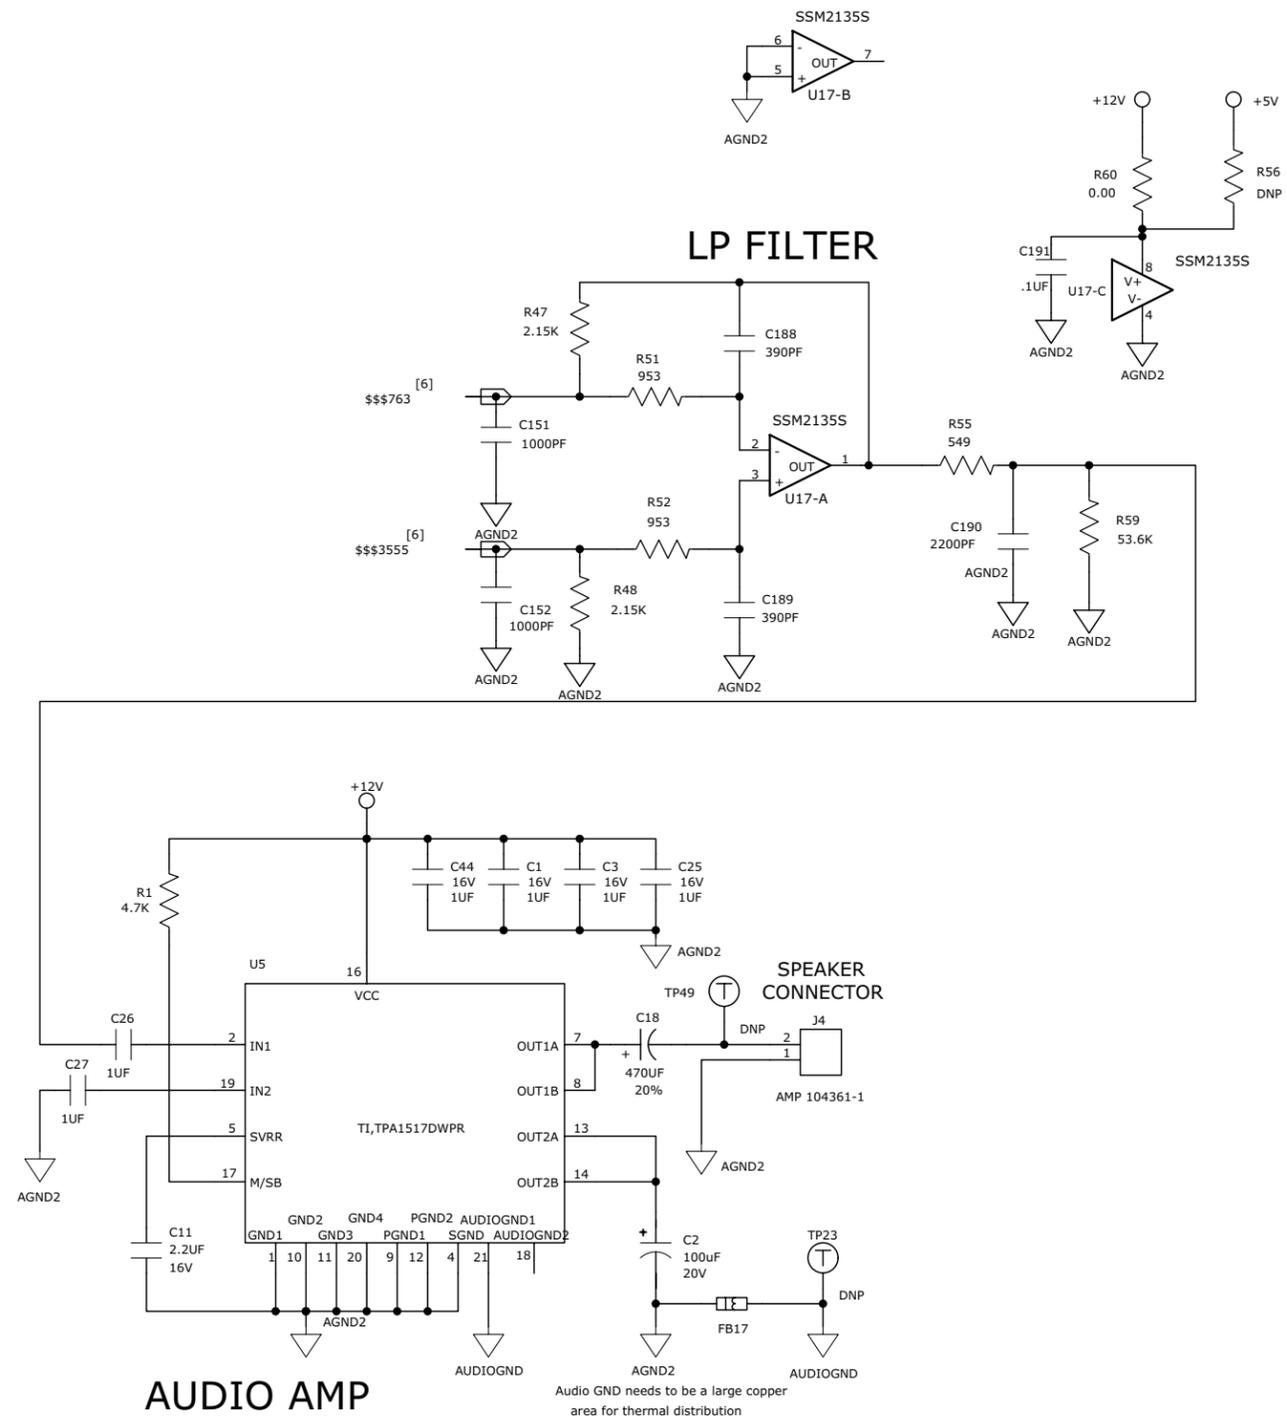




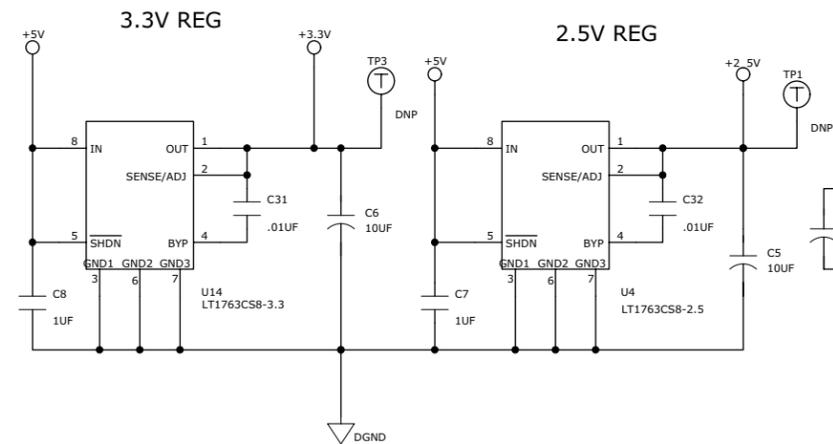
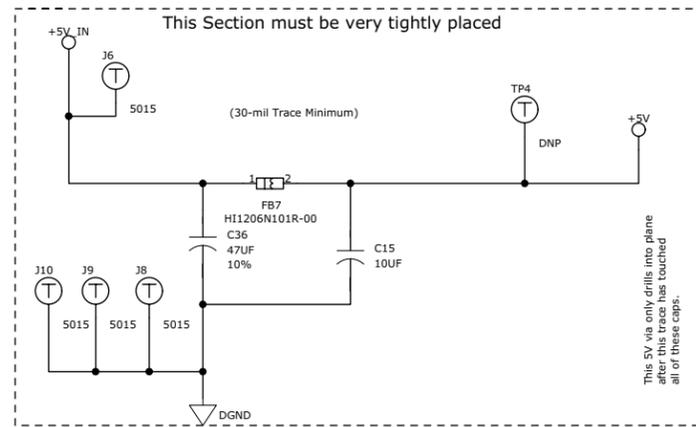




ALL VCCO and VCCint pins get a 0.1uF cap

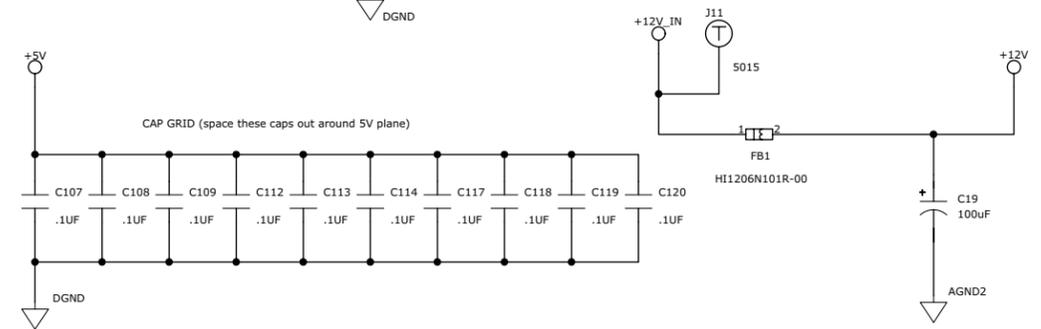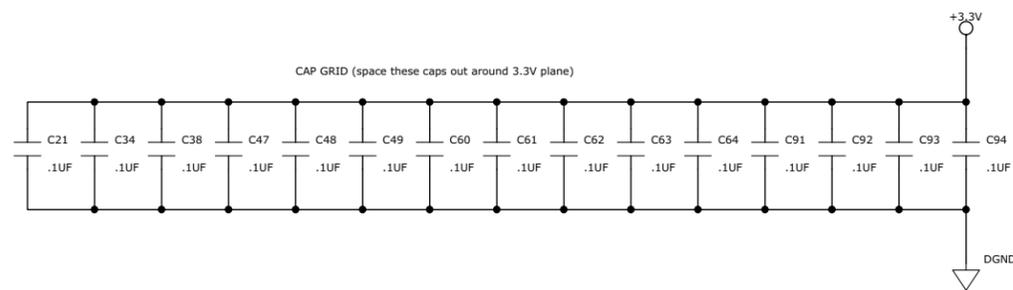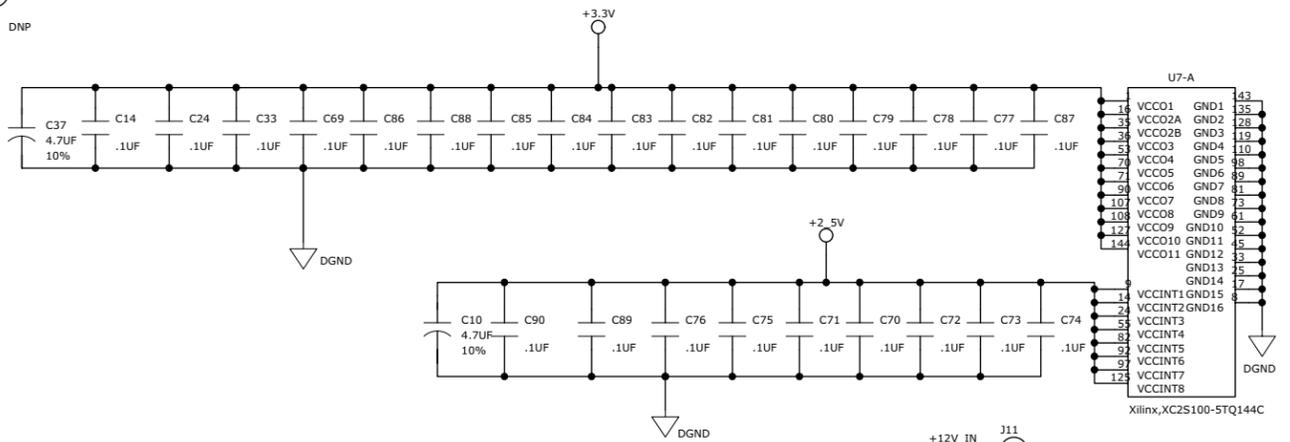


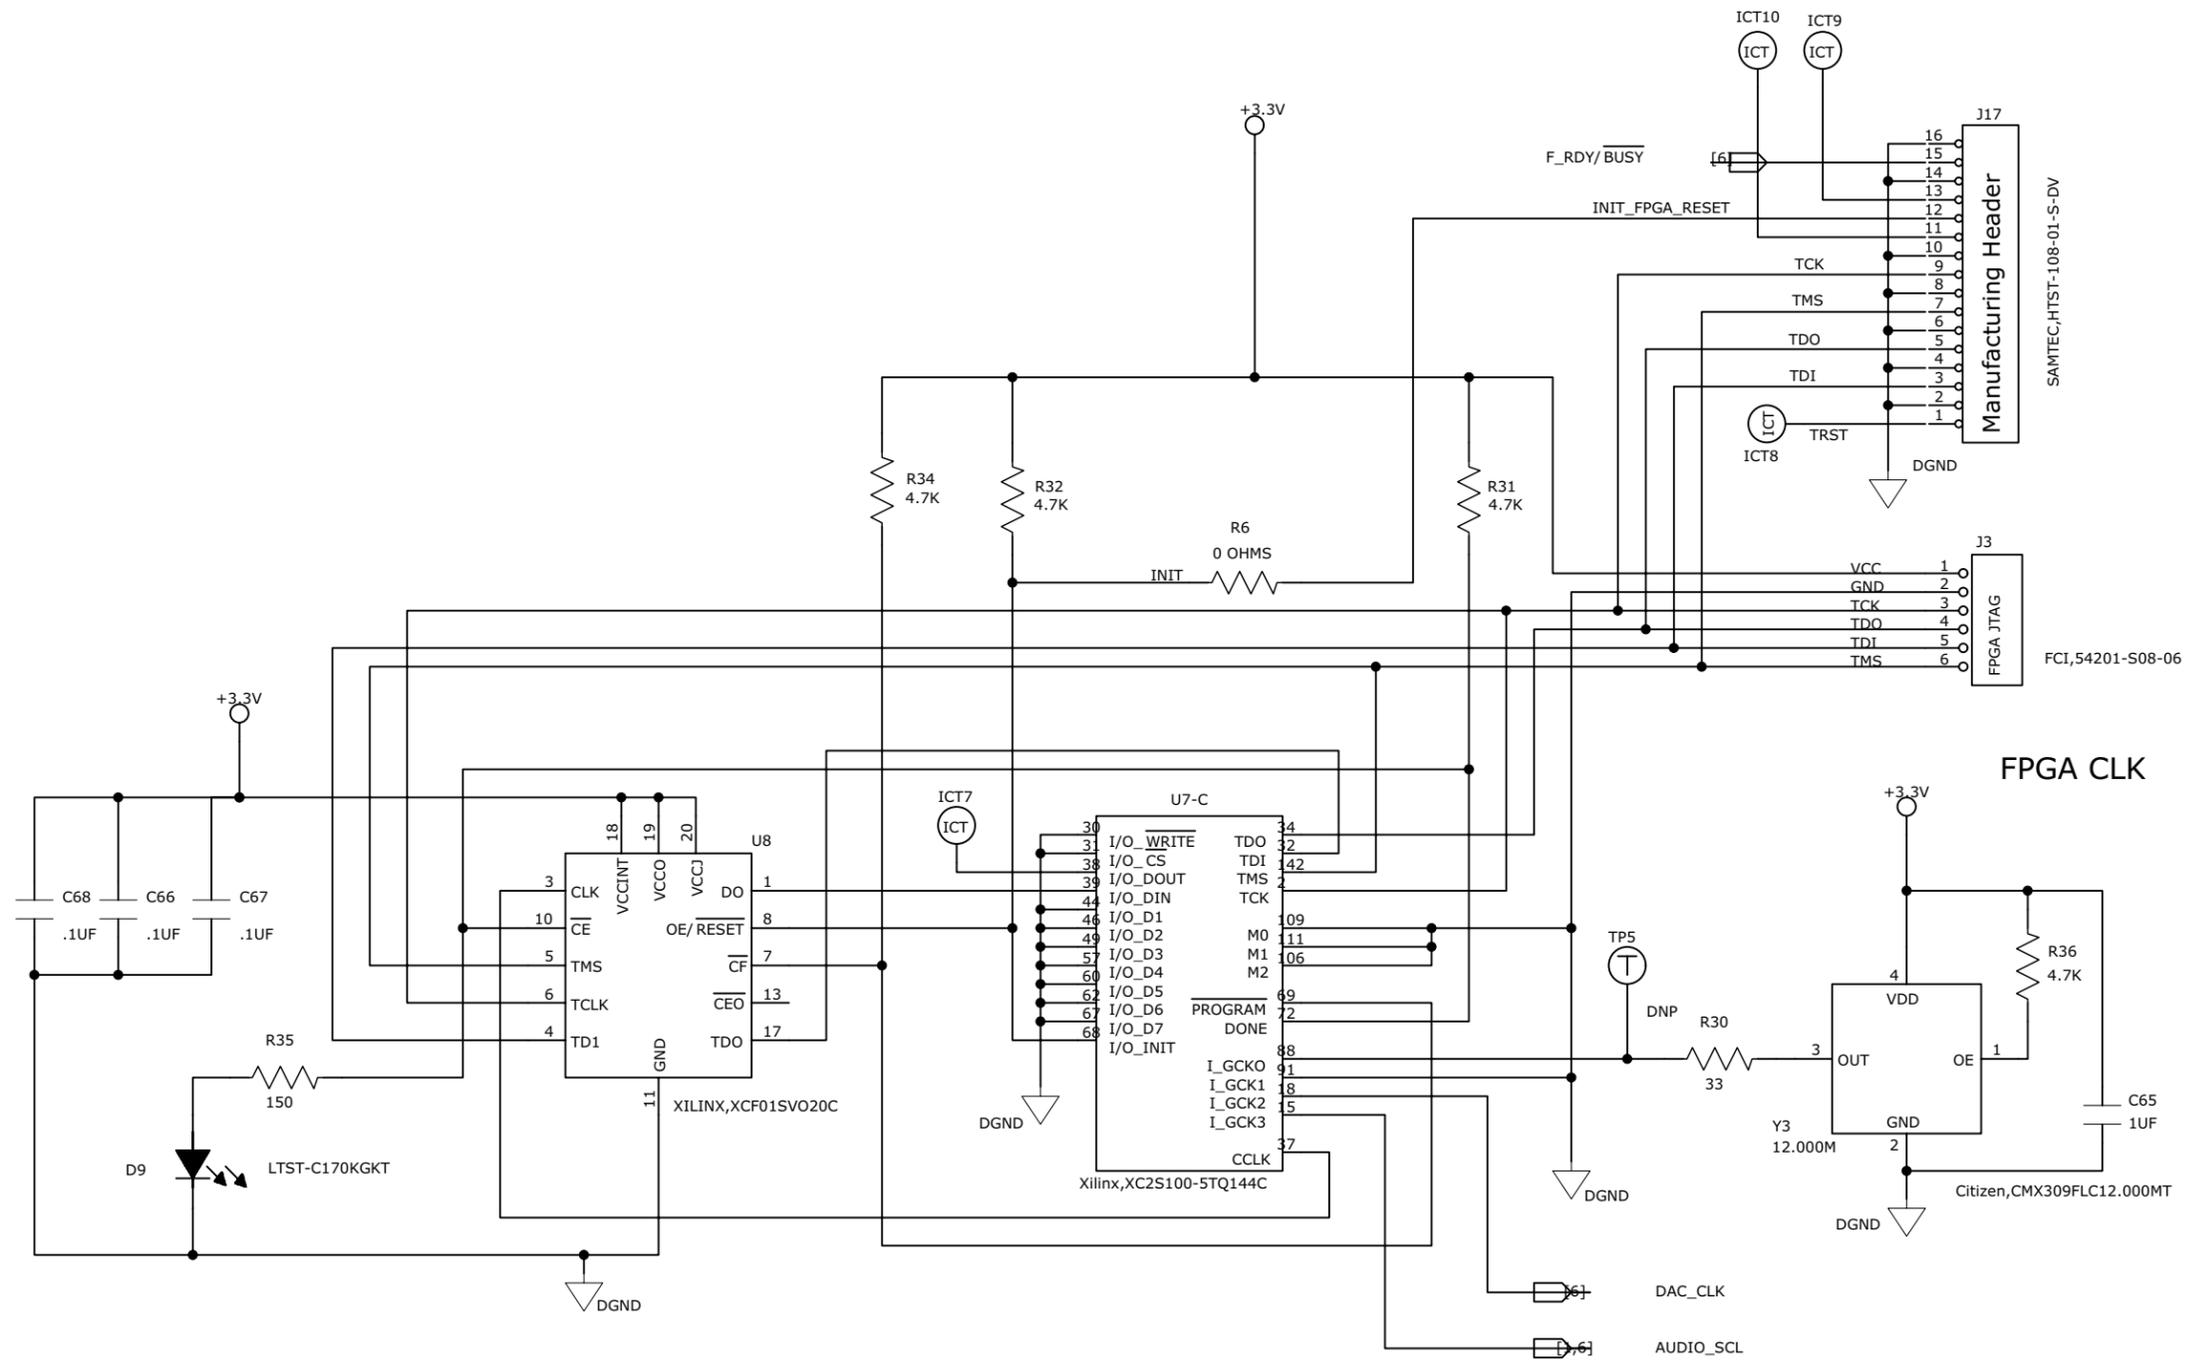





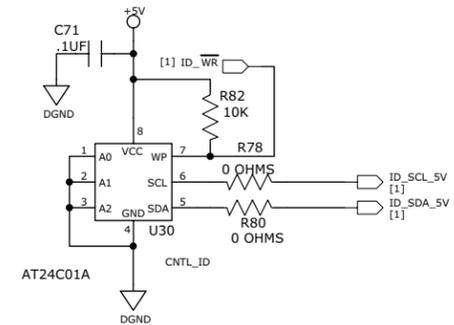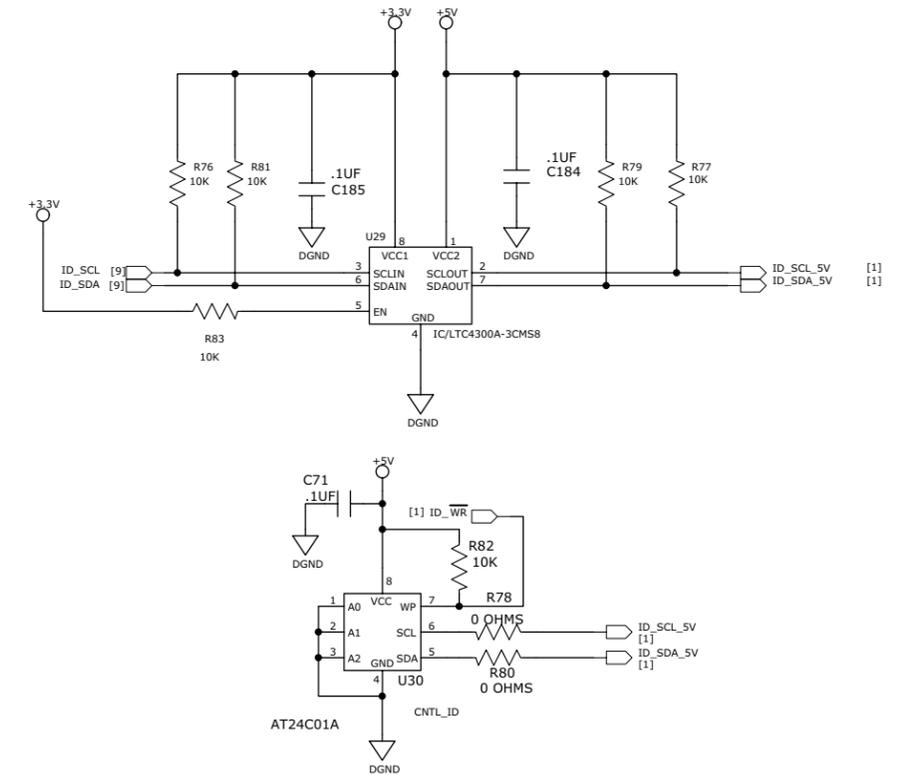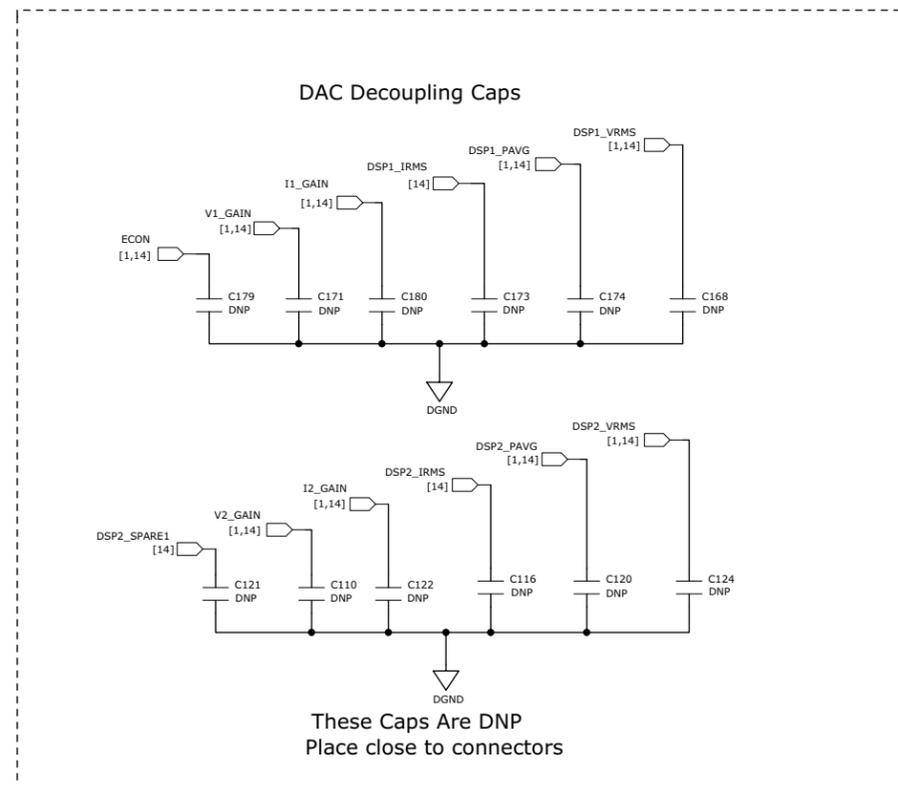
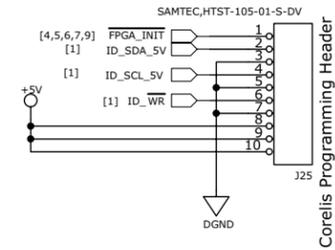
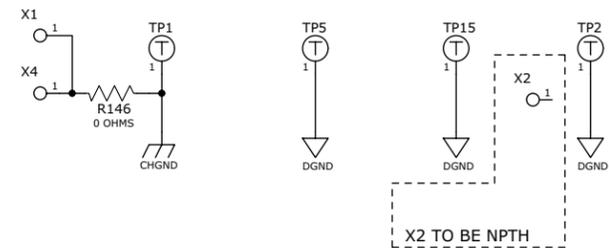


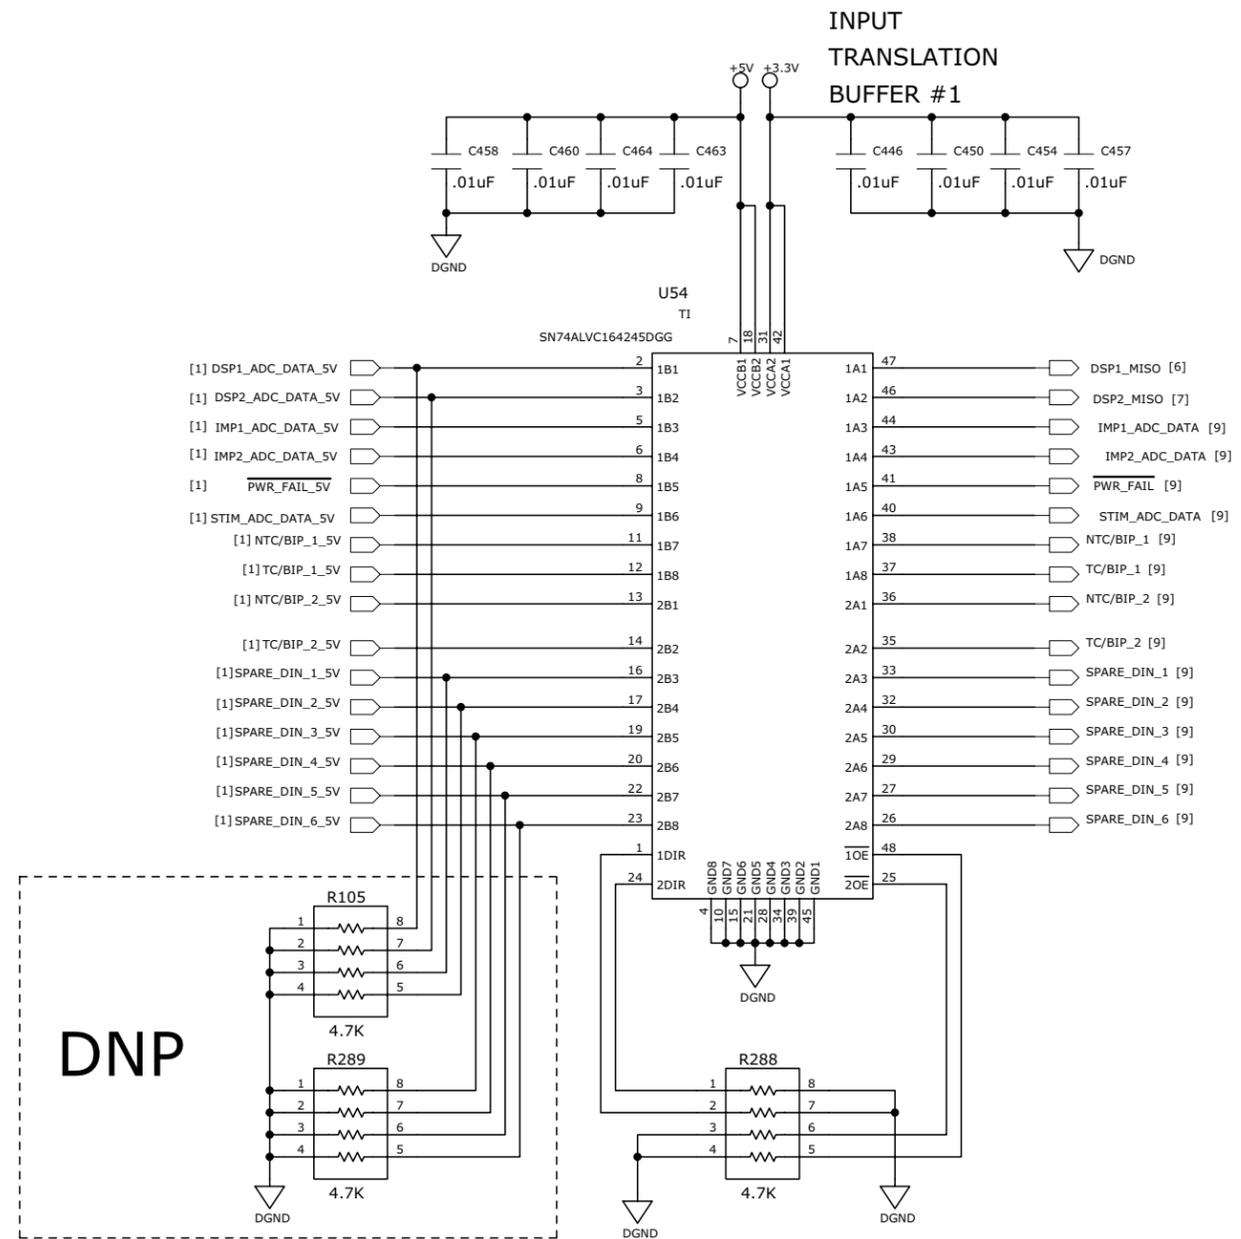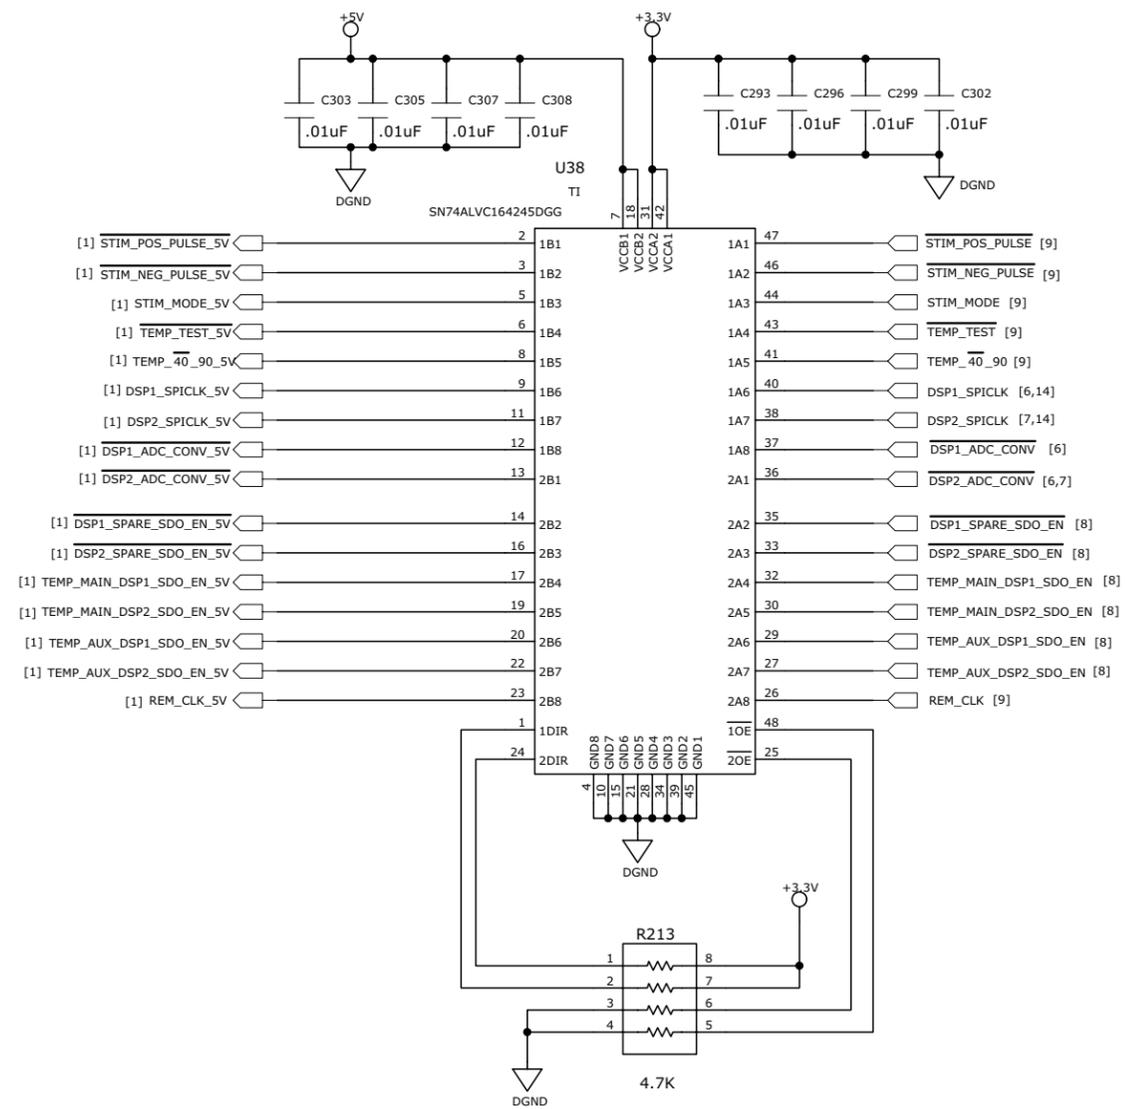

INPUT
TRANSLATION
BUFFER #2

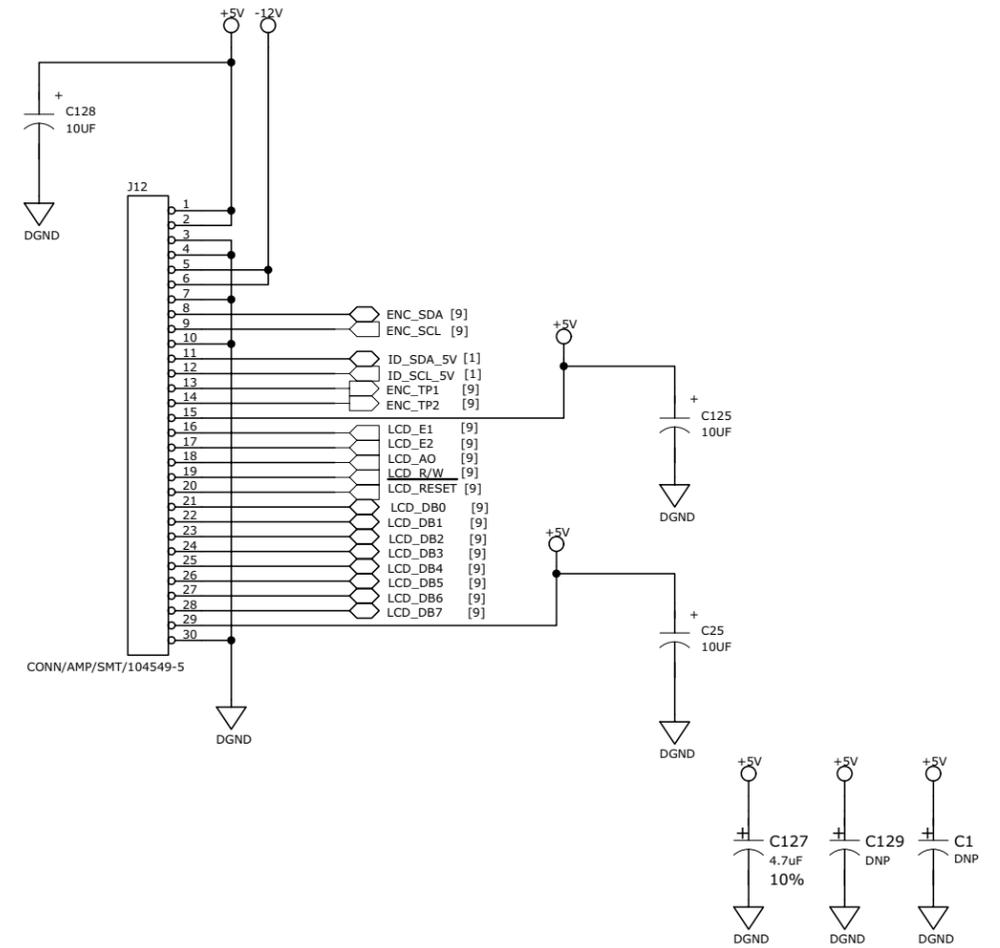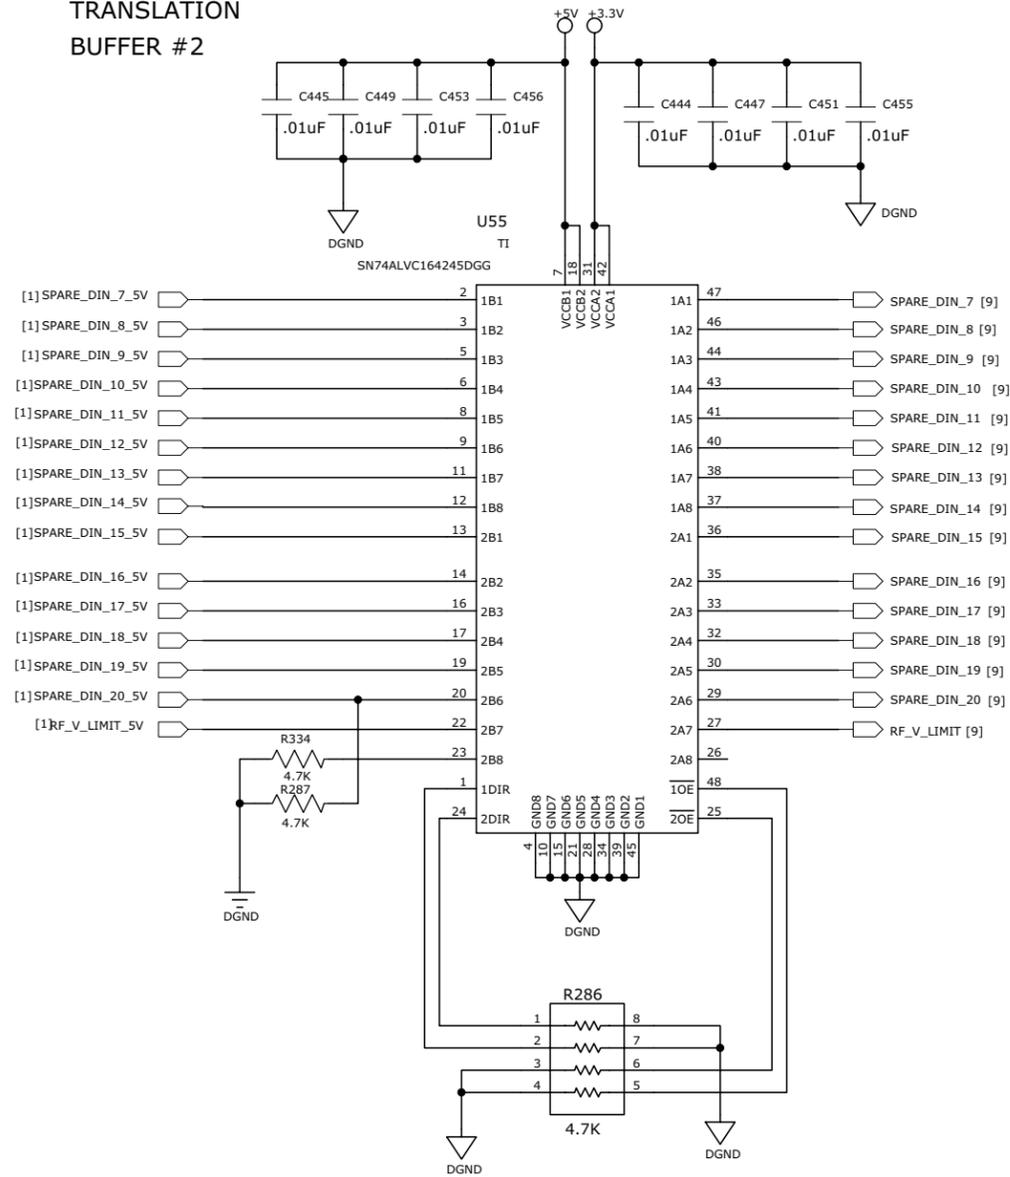


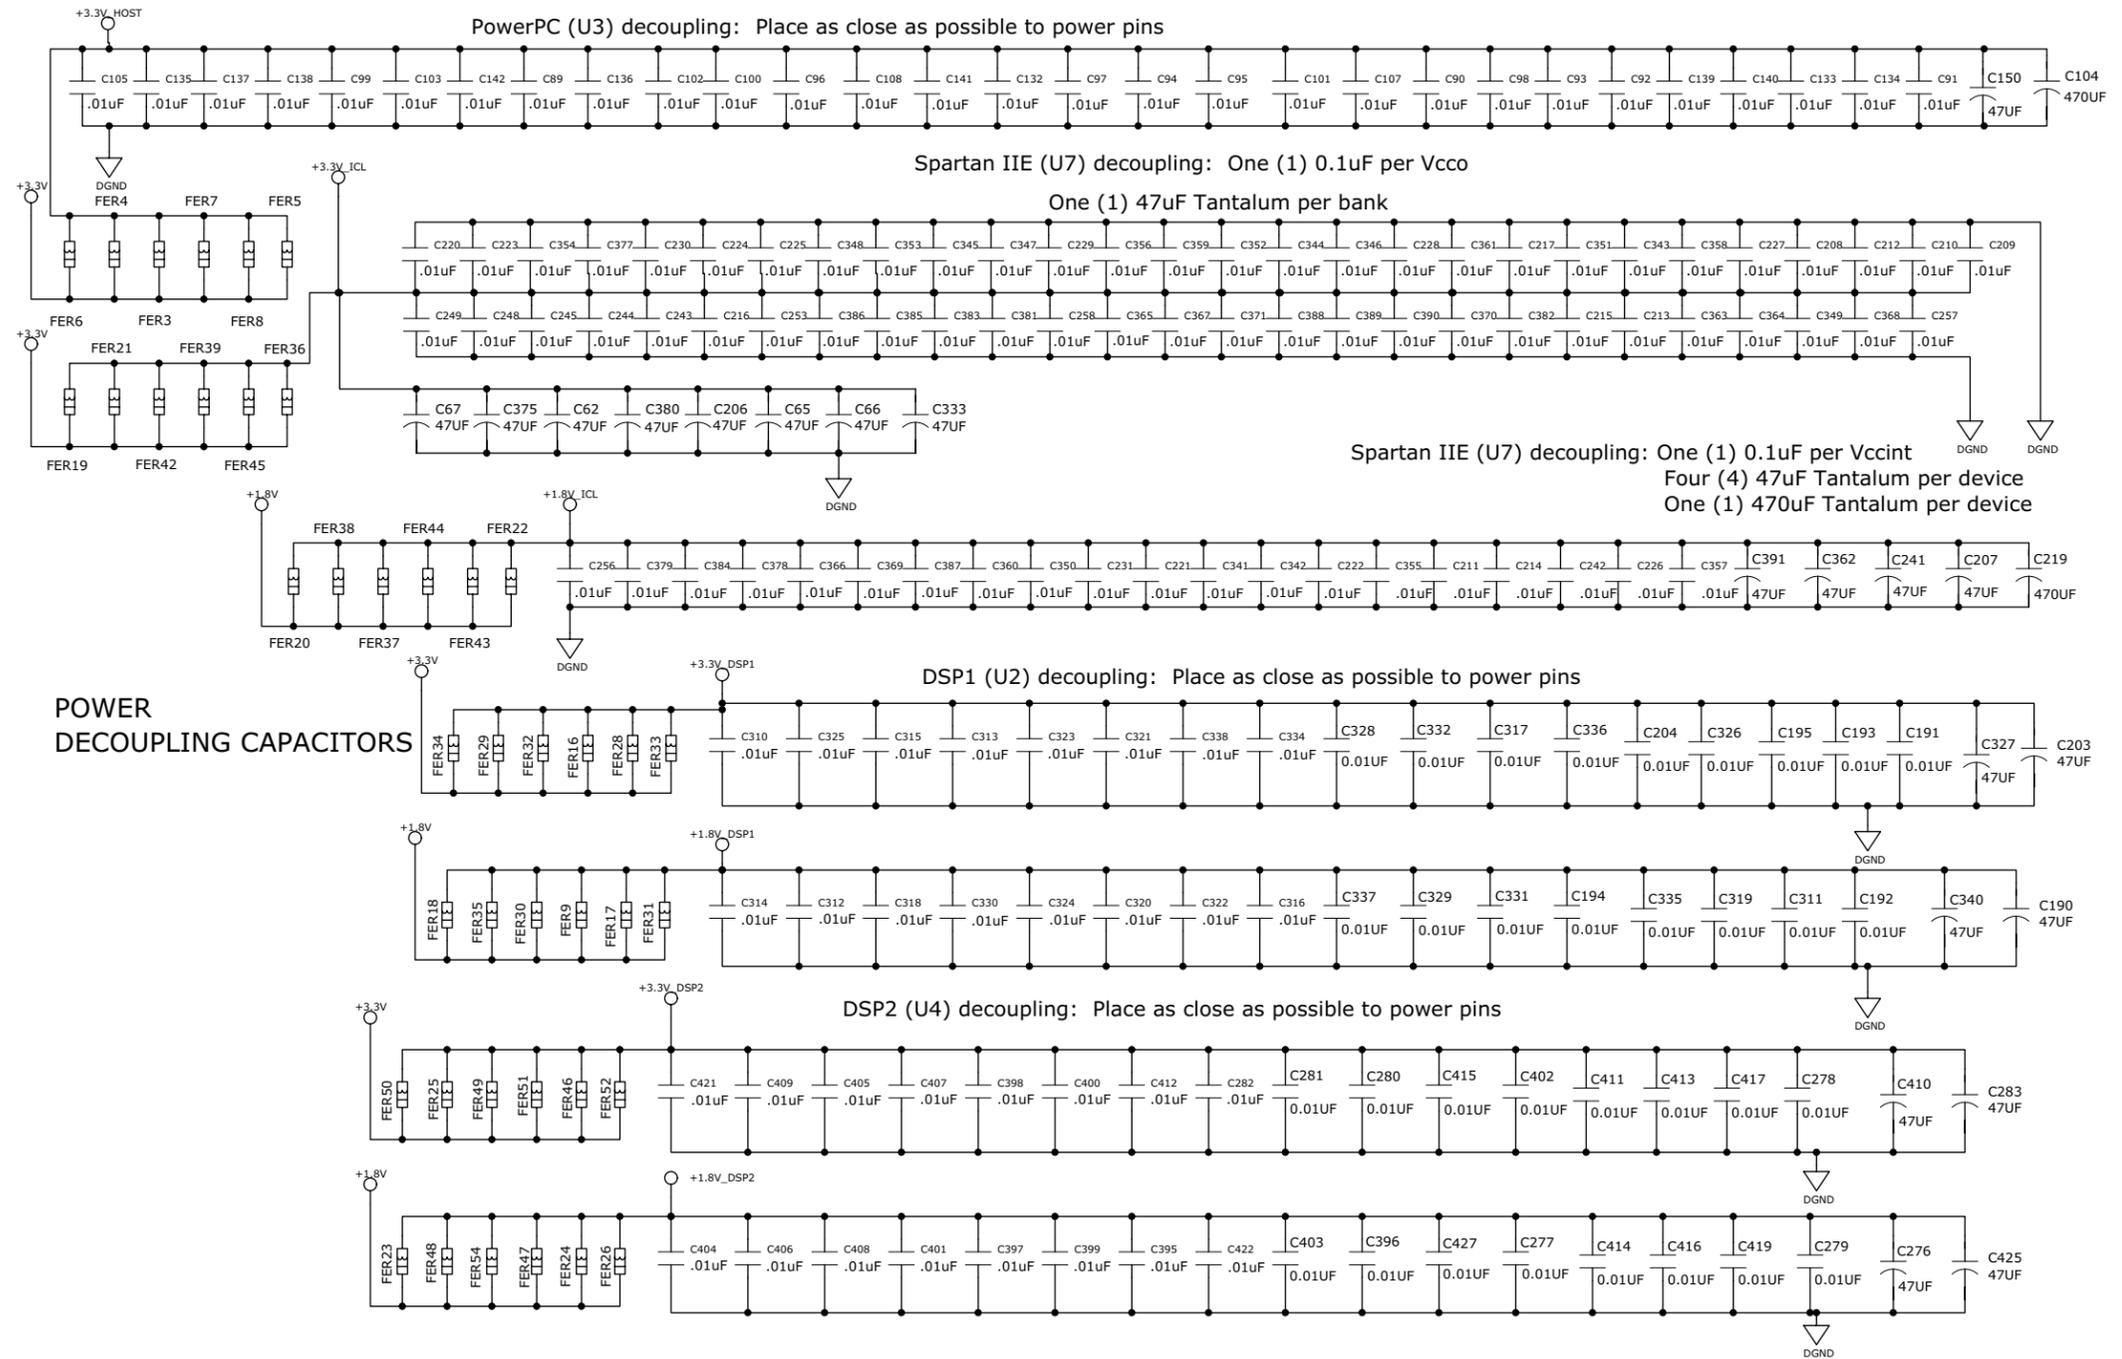

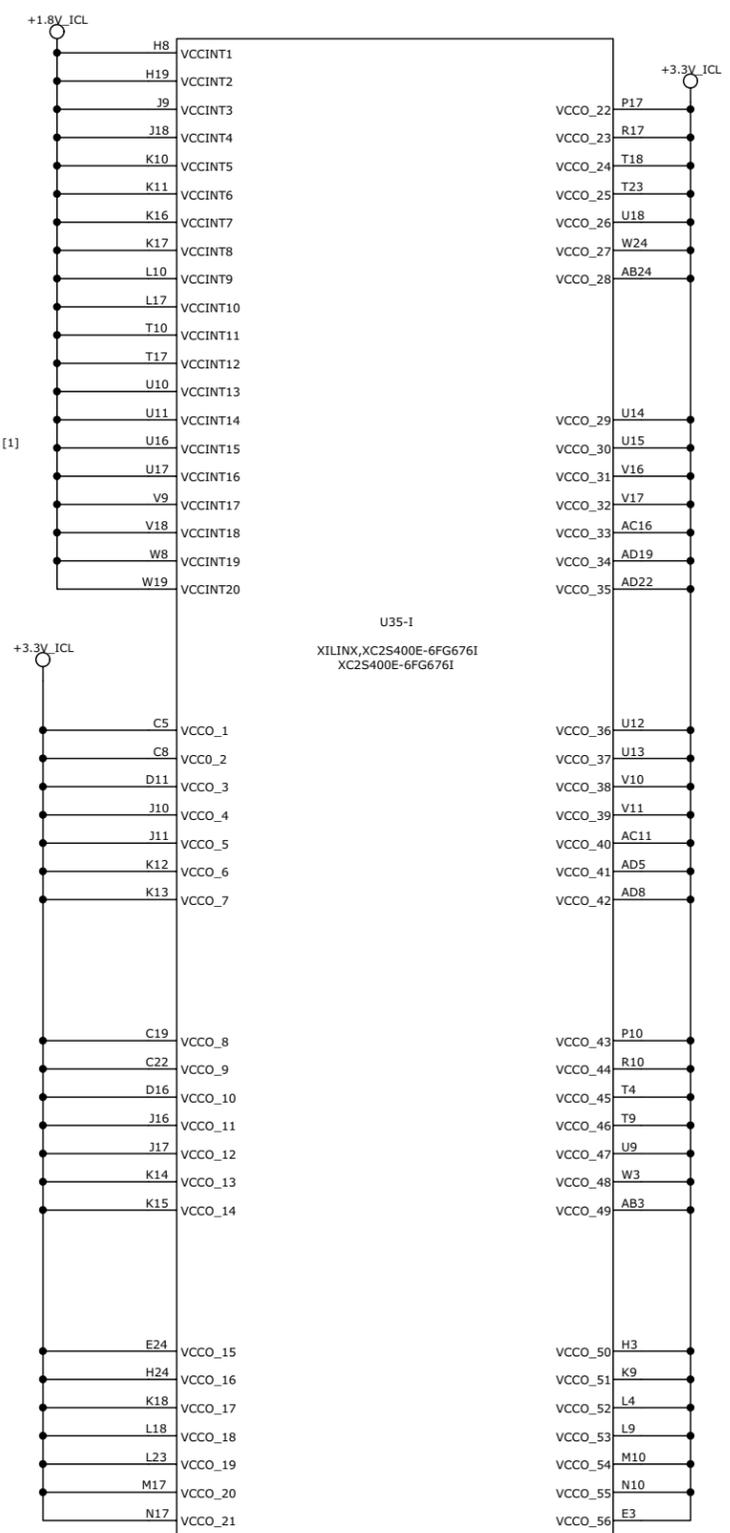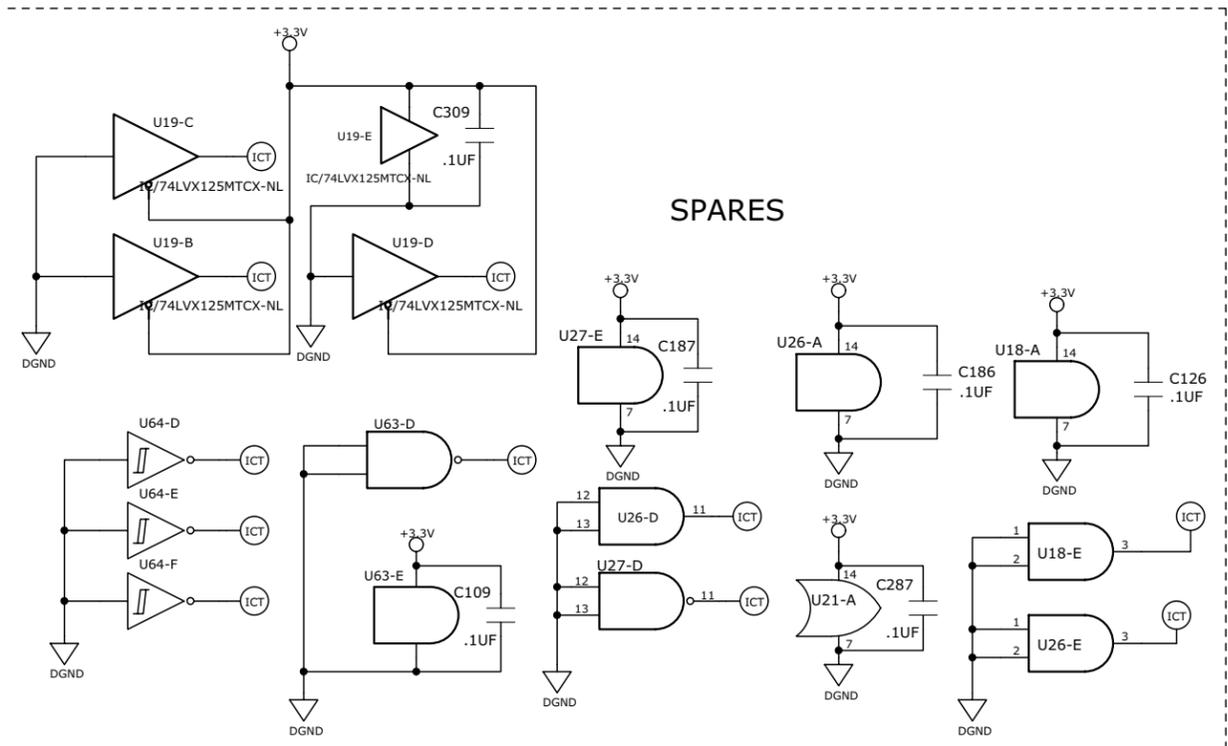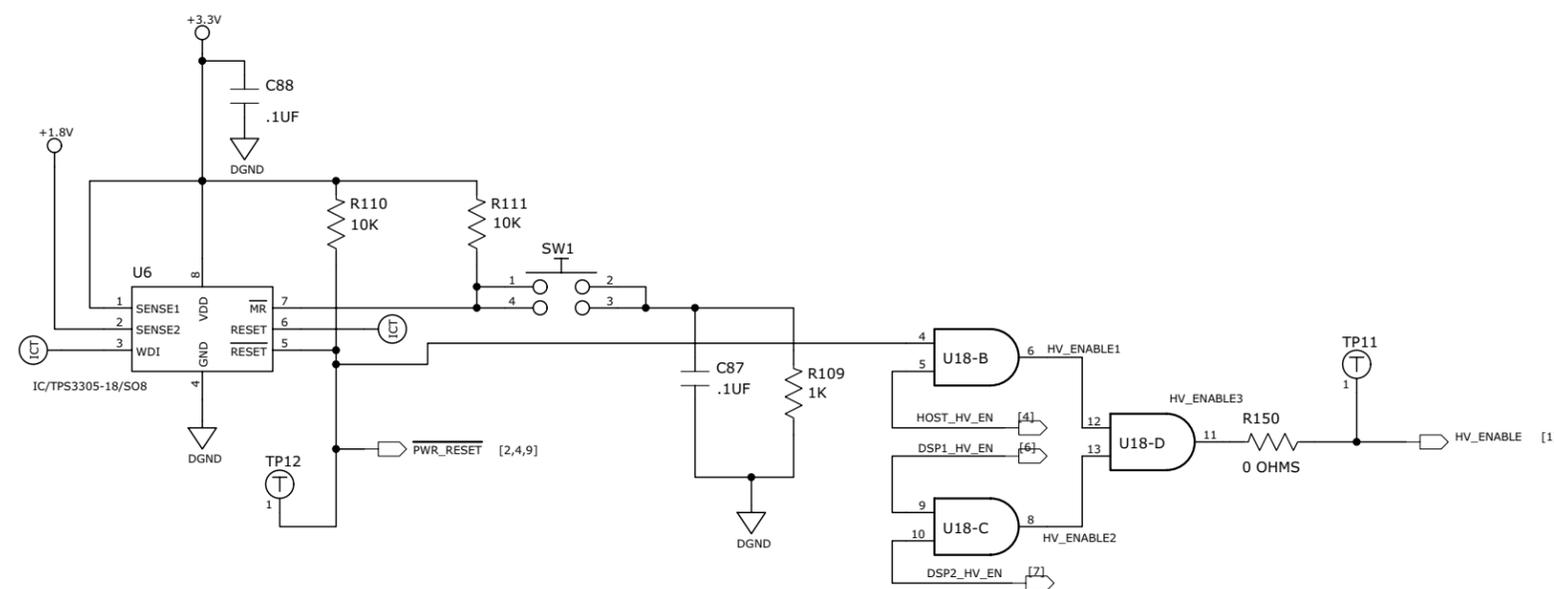


Controller PCBA Sheet 7 of 30


ZBT POWER/GROUND

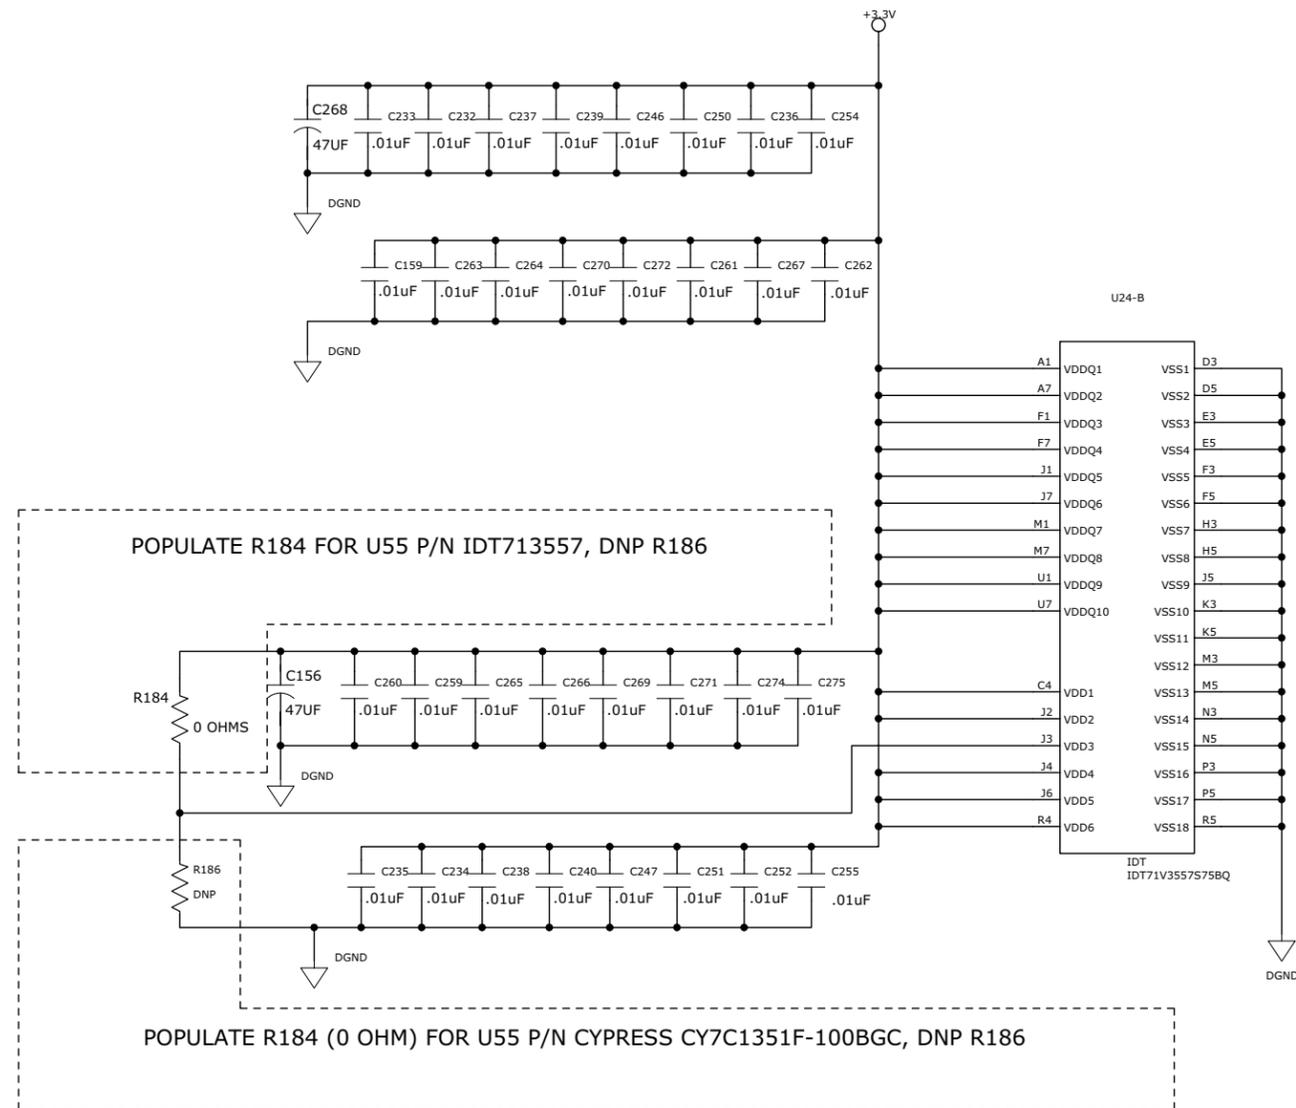


HOTLINK POWER/GROUND

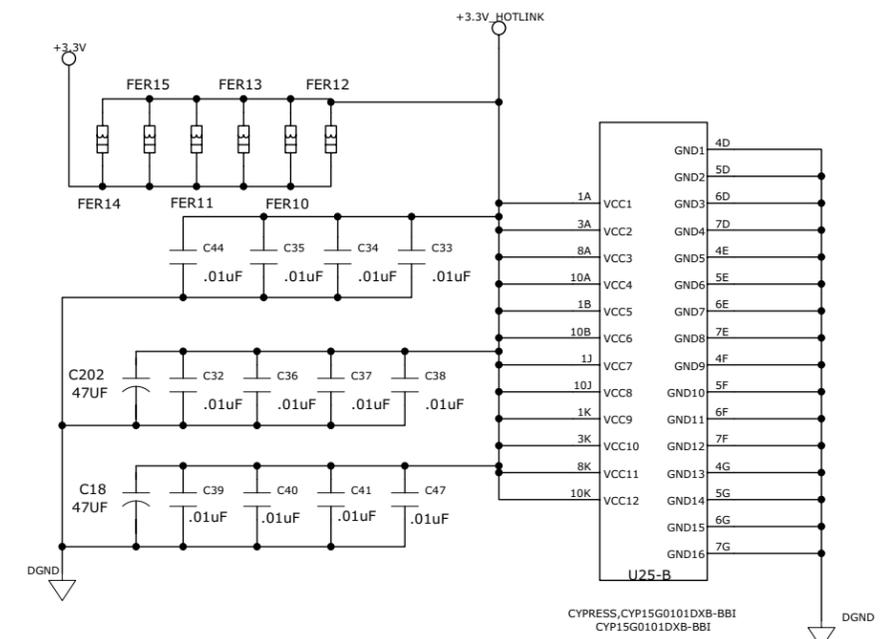


HOST PROCESSOR DATA BUS TERMINATION

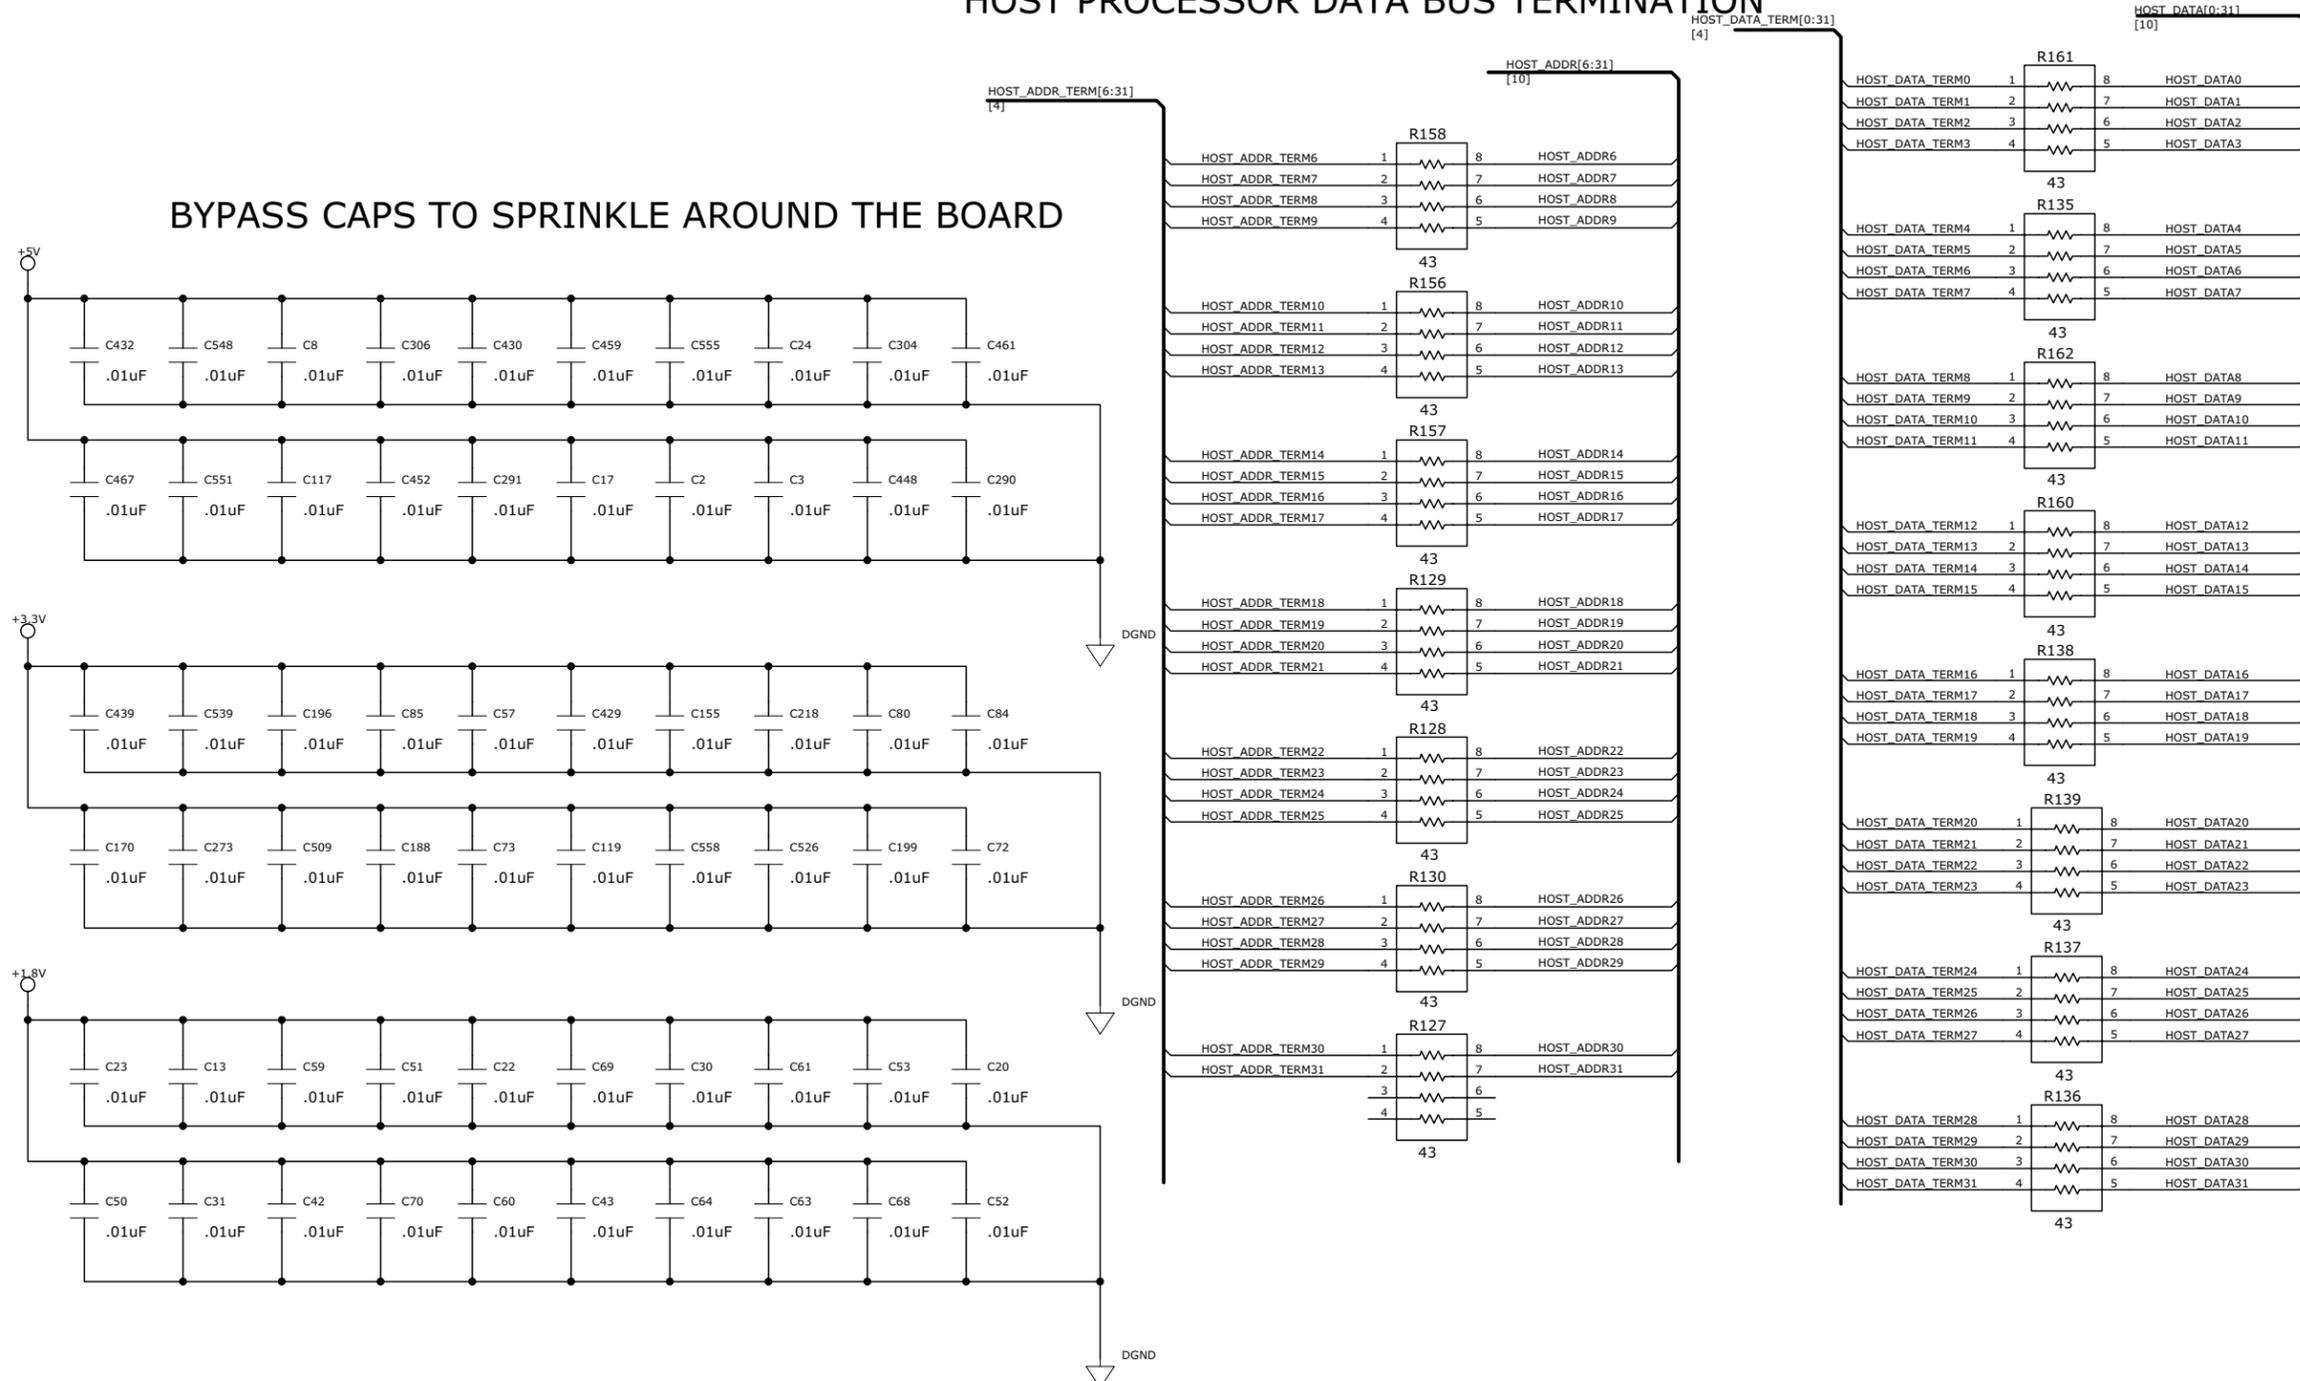



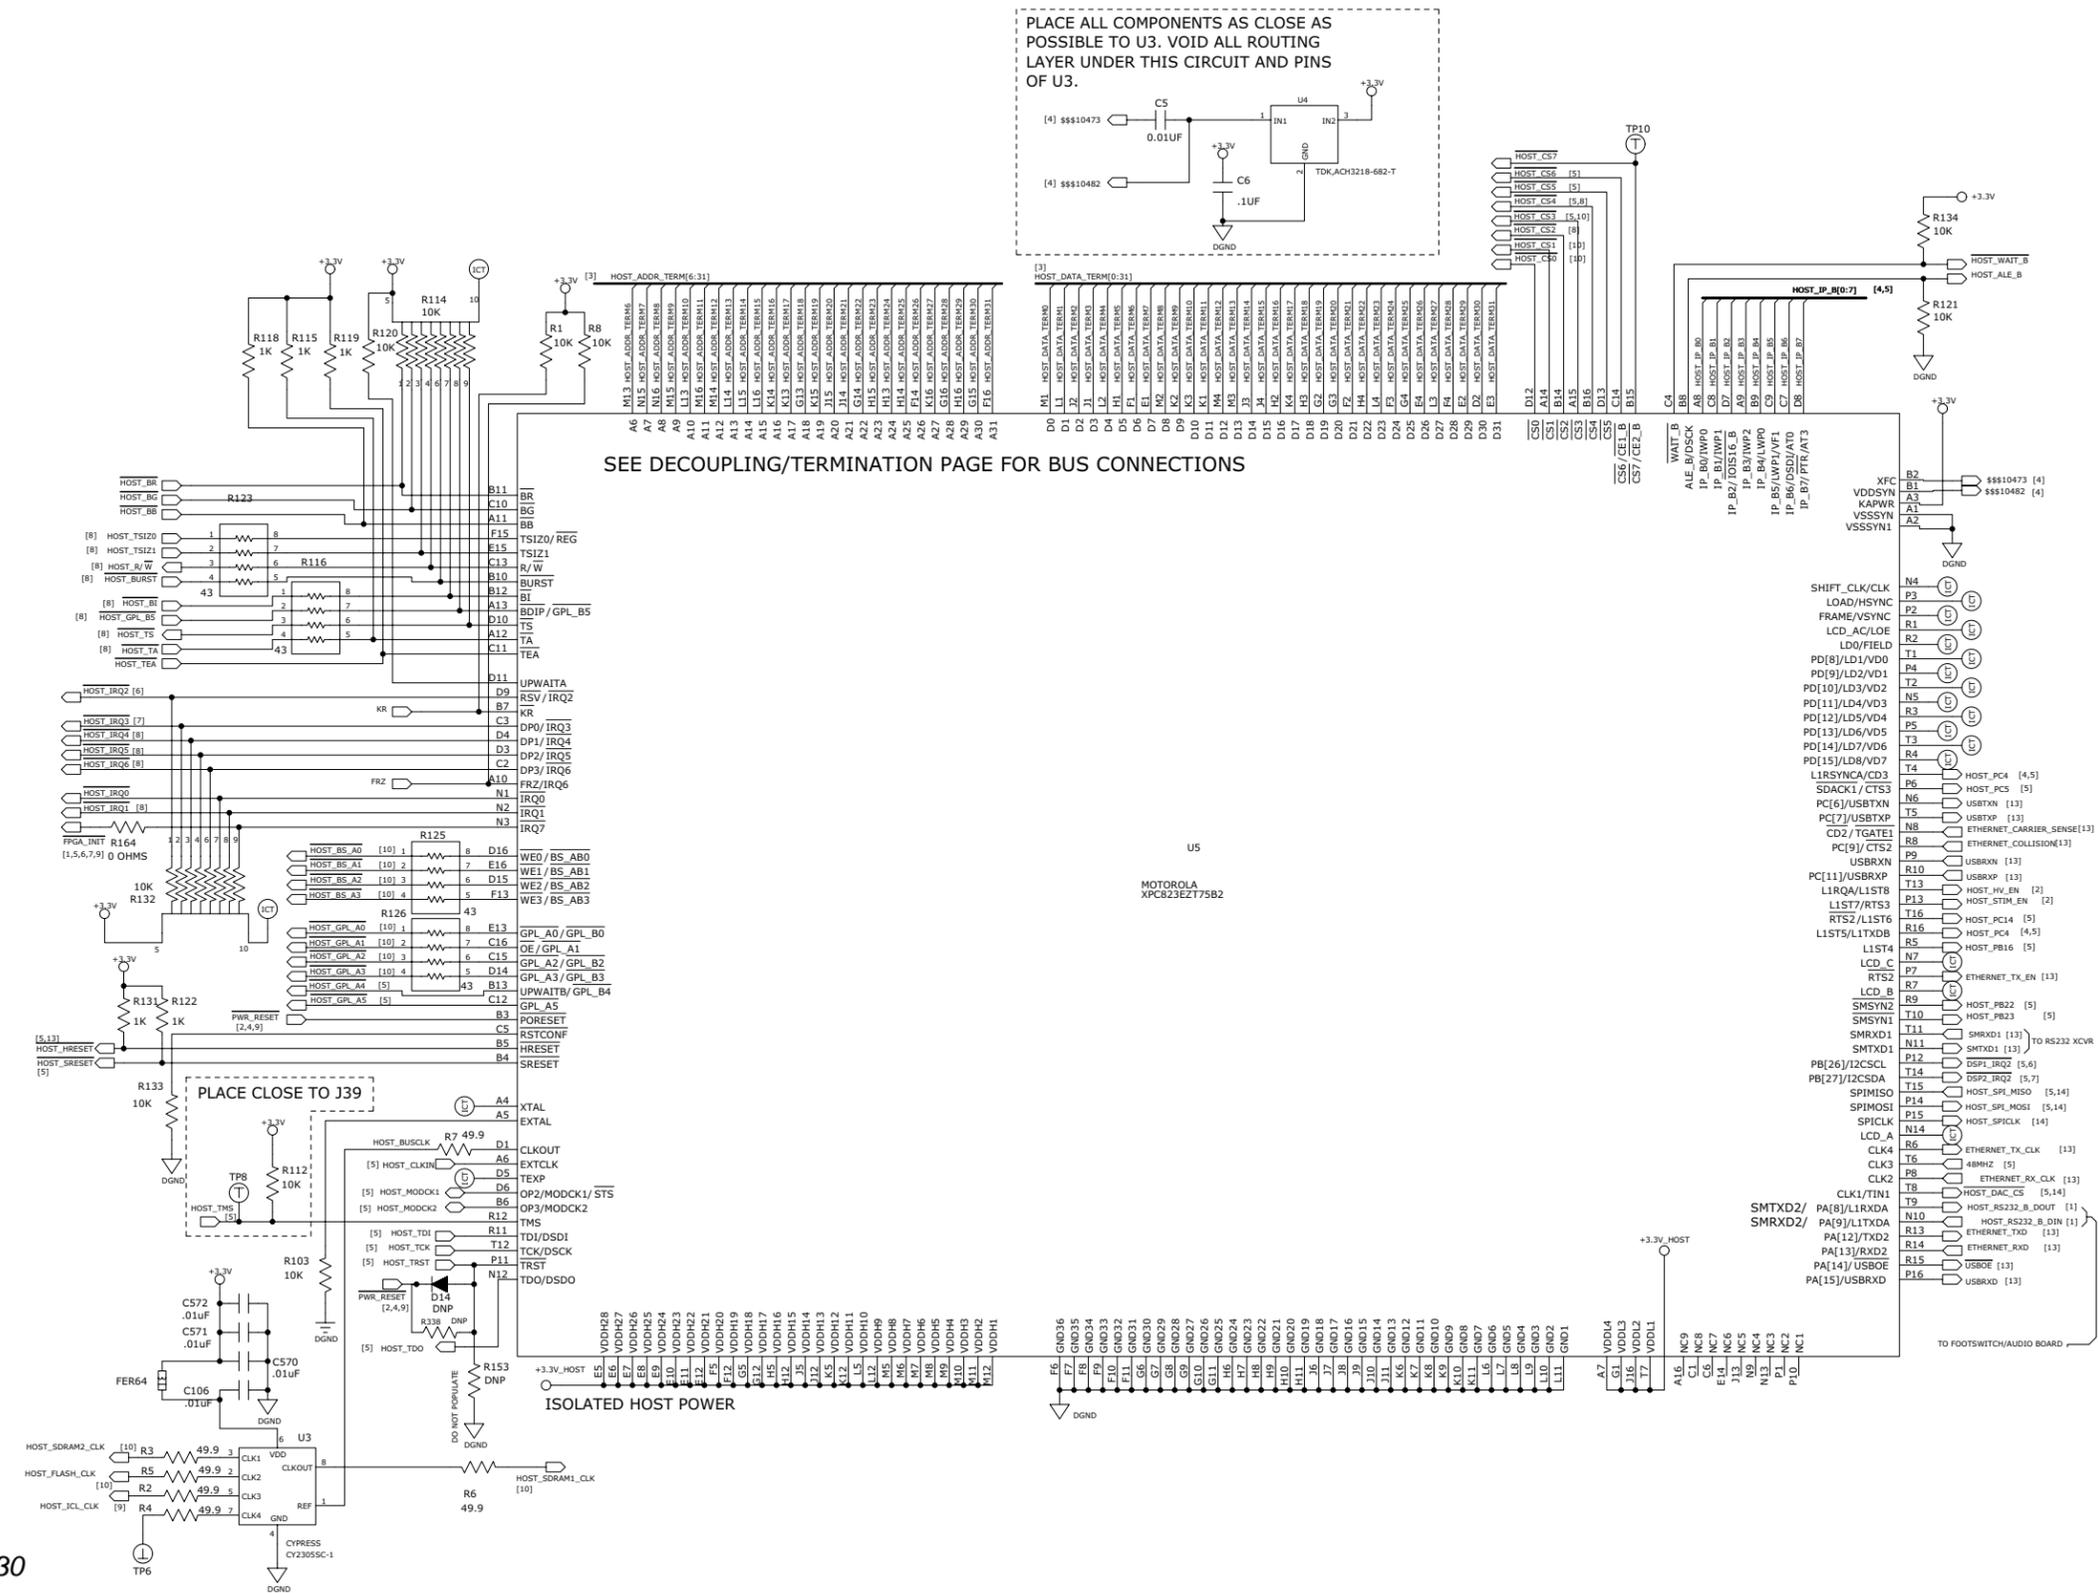


DSP1 EXPANSION CARD HEADER



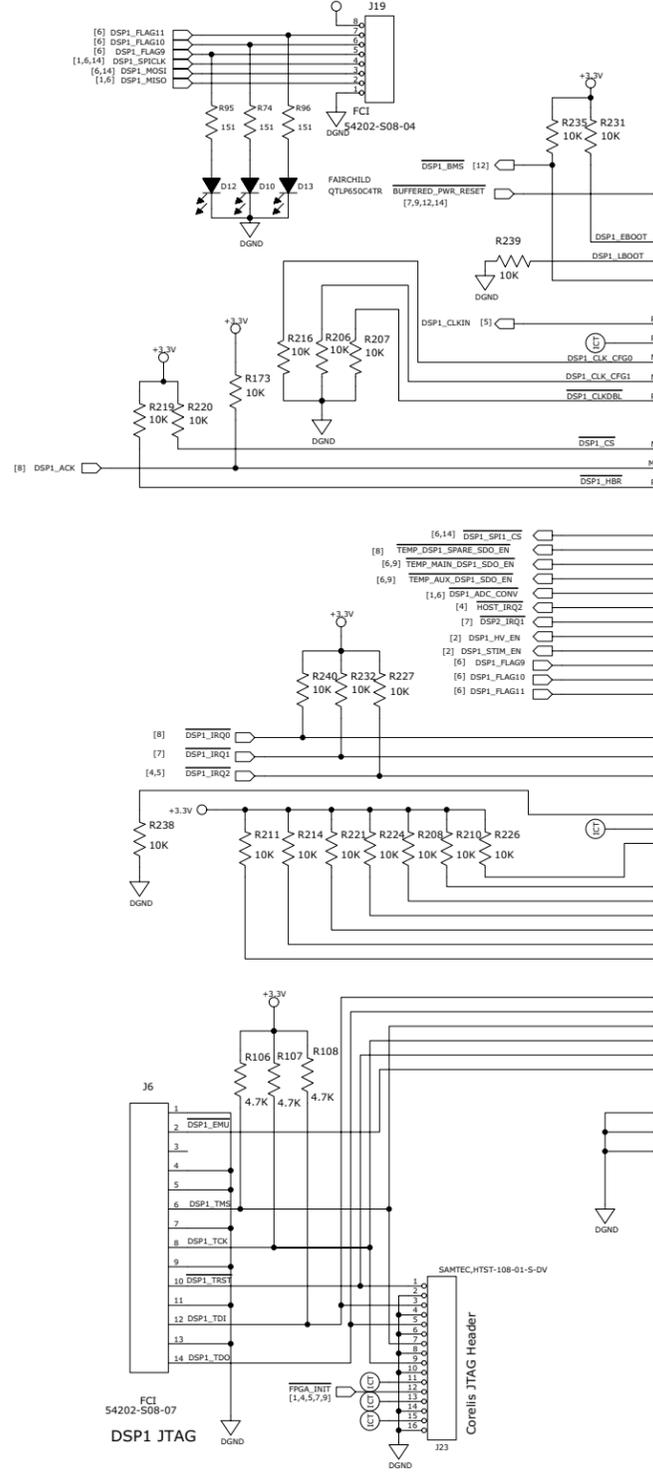


DSP TEST POINTS

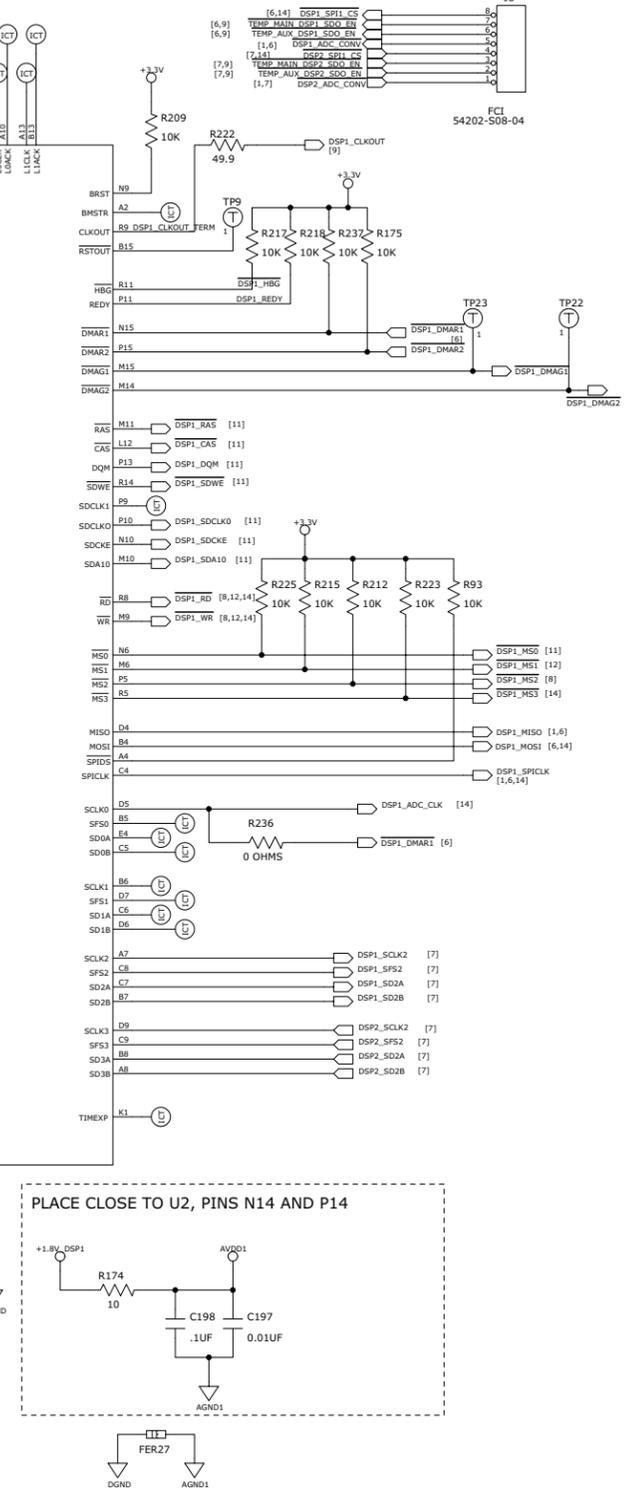


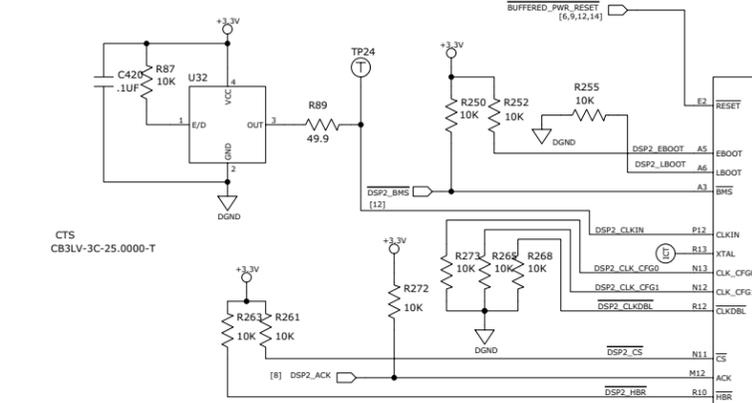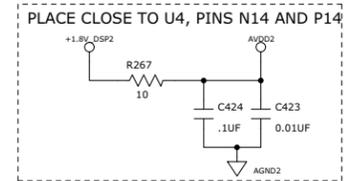

TO TEST POINTS ON DSP1 PAGE

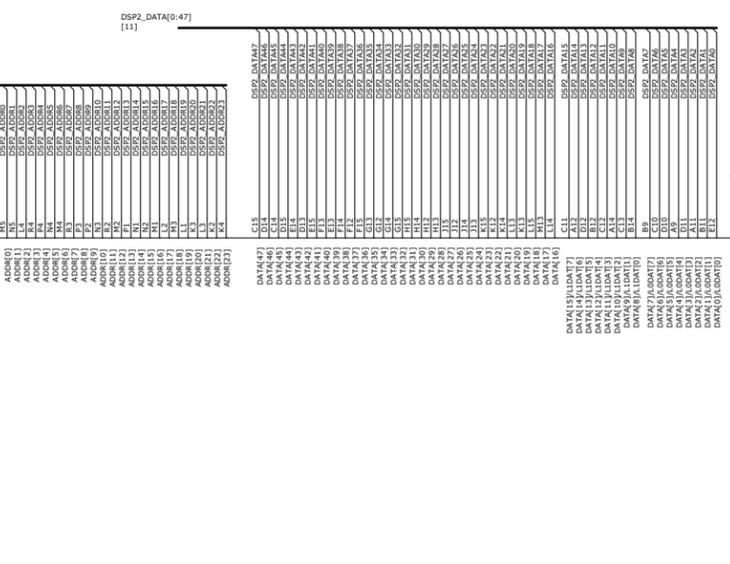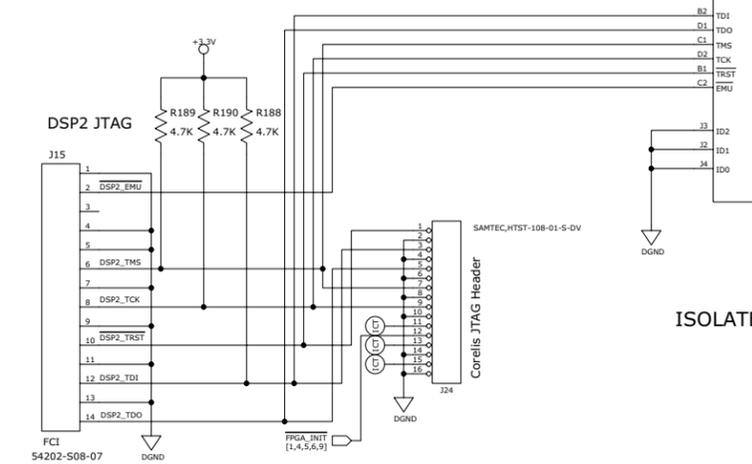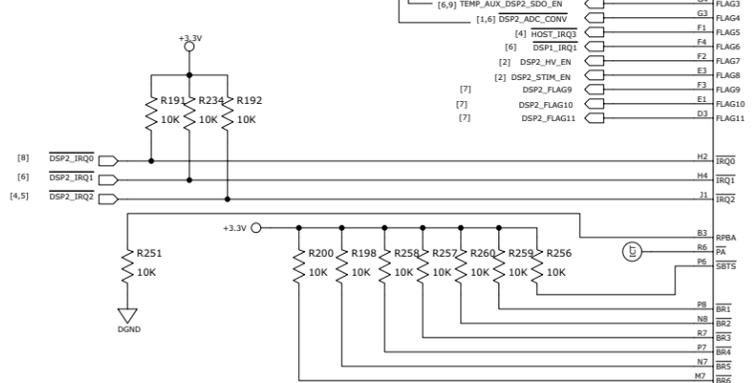


U34
ANALOG DEVICES, ADSP-2116INCCA-100 -40/105

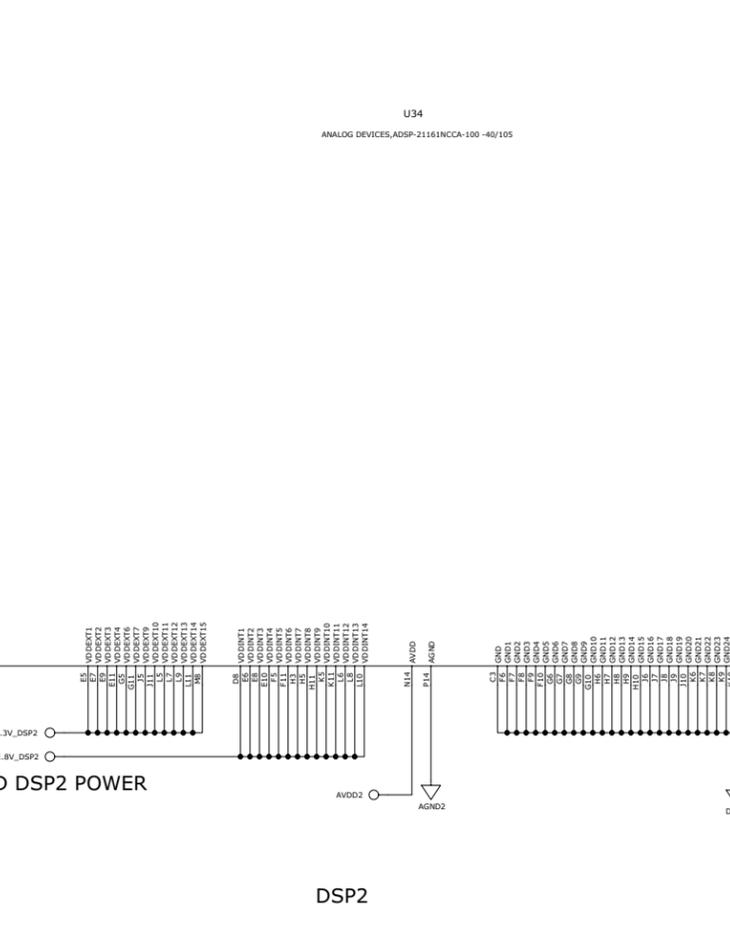

ISOLATED DSP2 POWER

DSP2

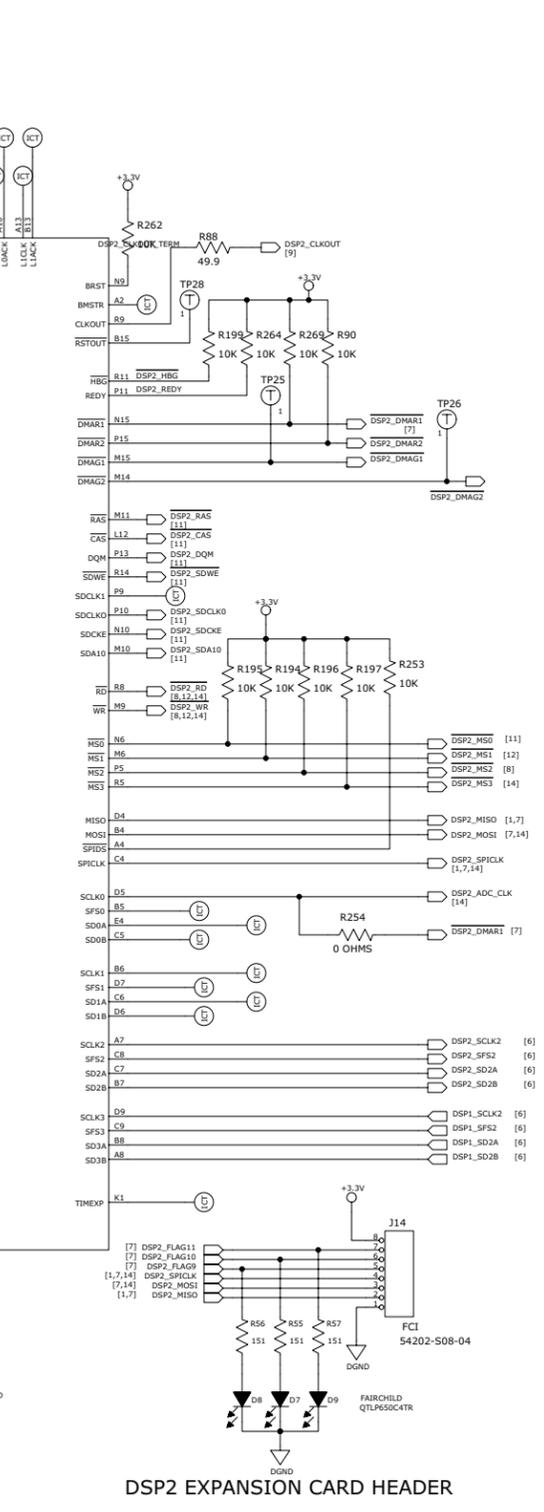


DSP2 EXPANSION CARD HEADER


Controller PCBA Sheet 13 of 30

INTERFACE CONTROL LOGIC FPGA

HOST INTERFACE

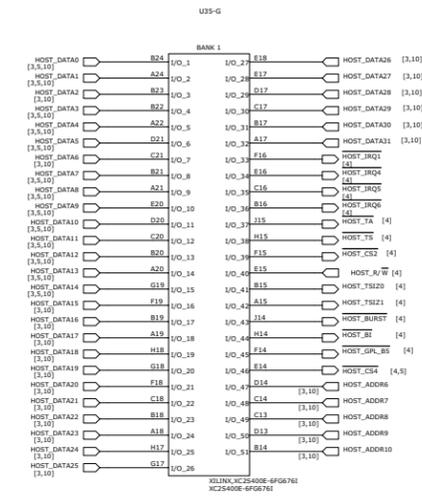


DSP2 INTERFACE

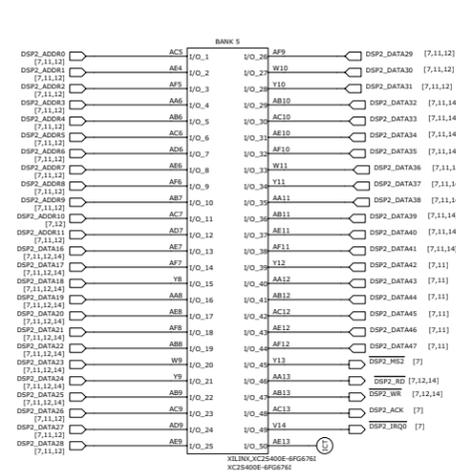


INTERFACE CONTROL LOGIC FPGA


U25-H

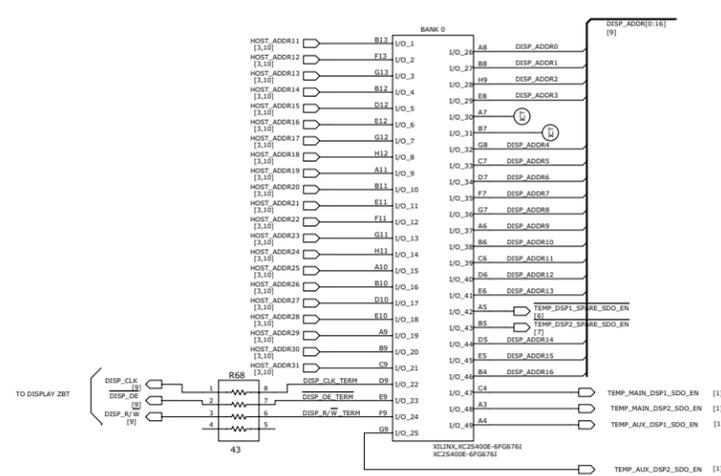

DSP1 INTERFACE

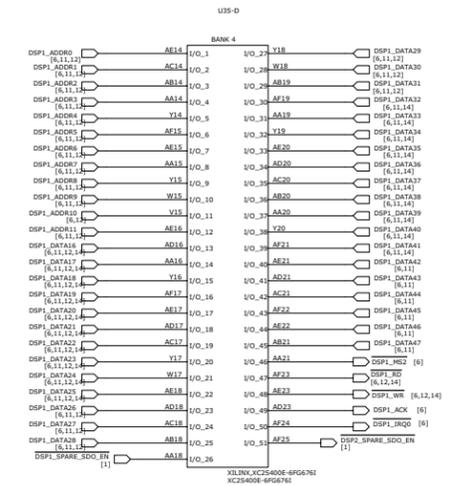


ZBT SRAM FOR DISPLAY BUFFER

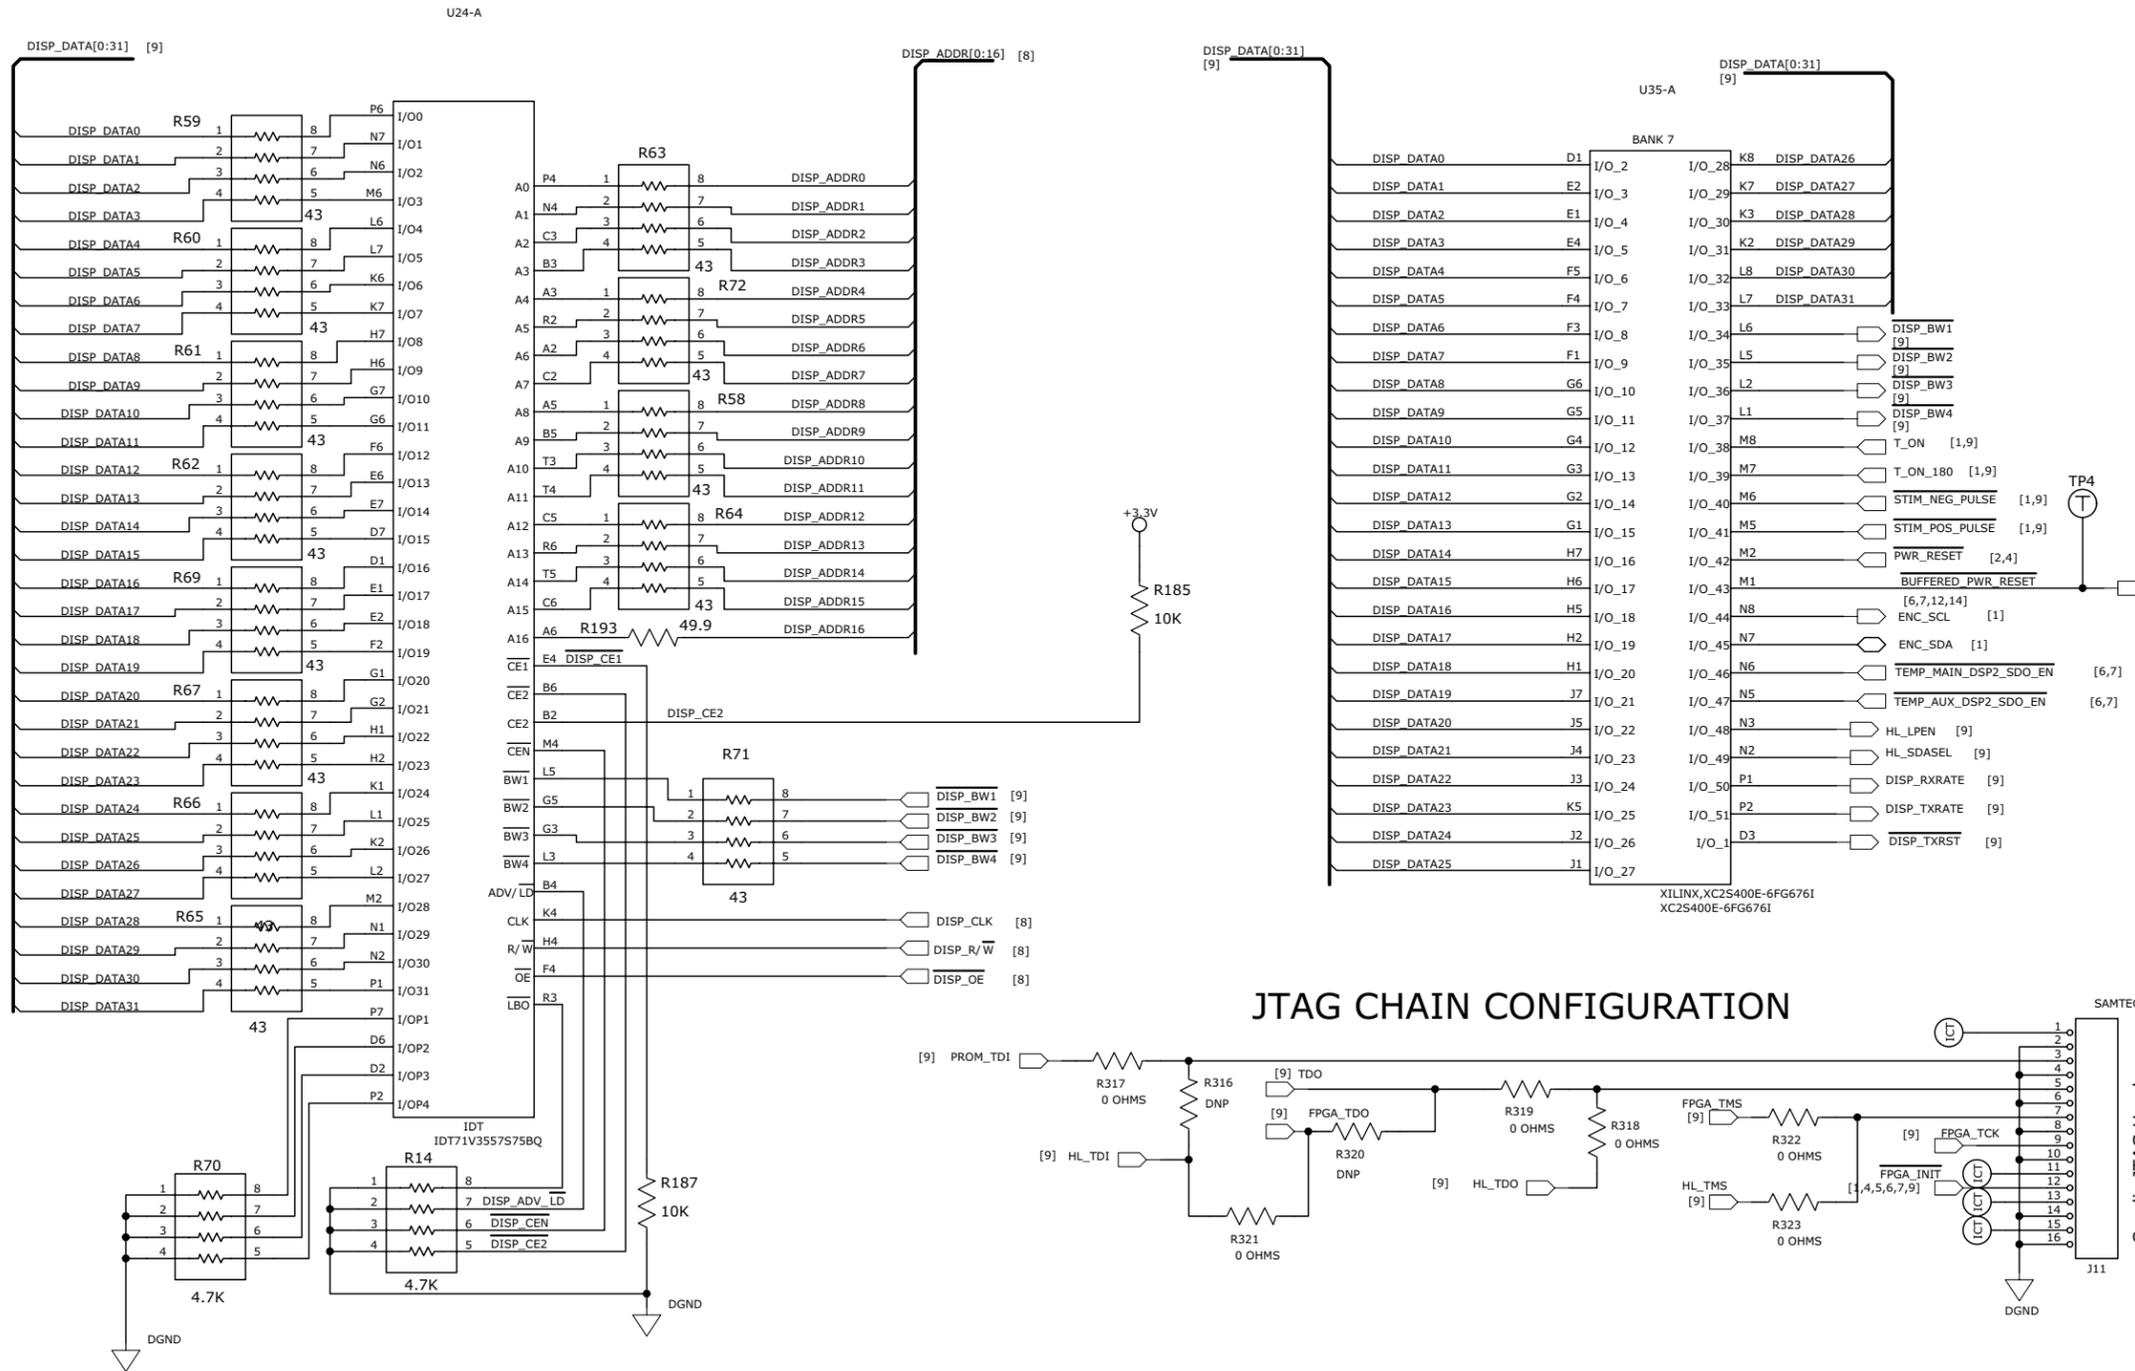


JTAG CHAIN CONFIGURATION

DISPLAY MEMORY & INTERFACE OFF-BOARD SIGNALS FPGA CONFIGURATION


5V OFF-BOARD SIGNALS

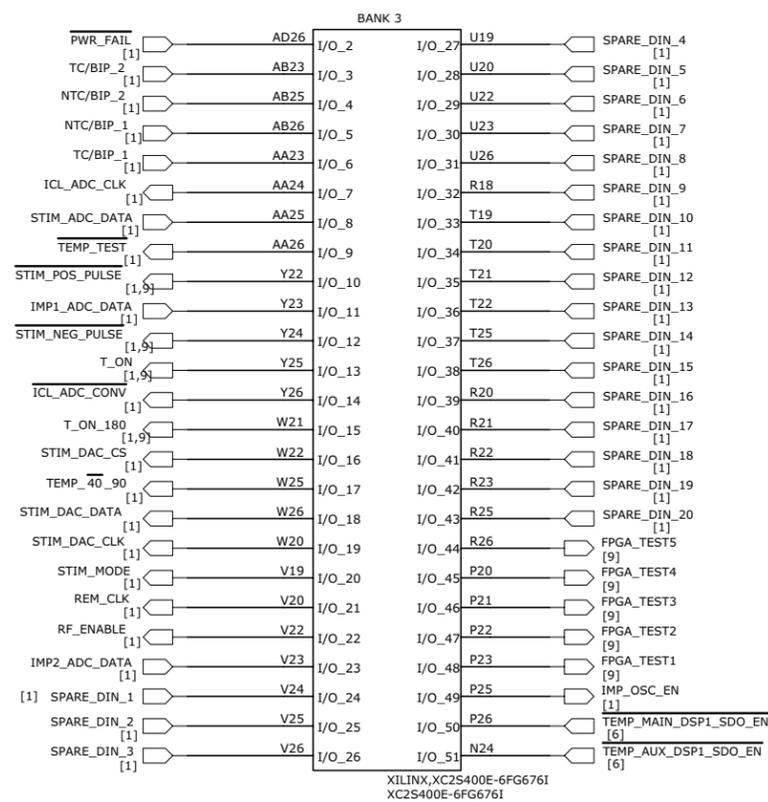


3.3V OFF-BOARD SIGNALS

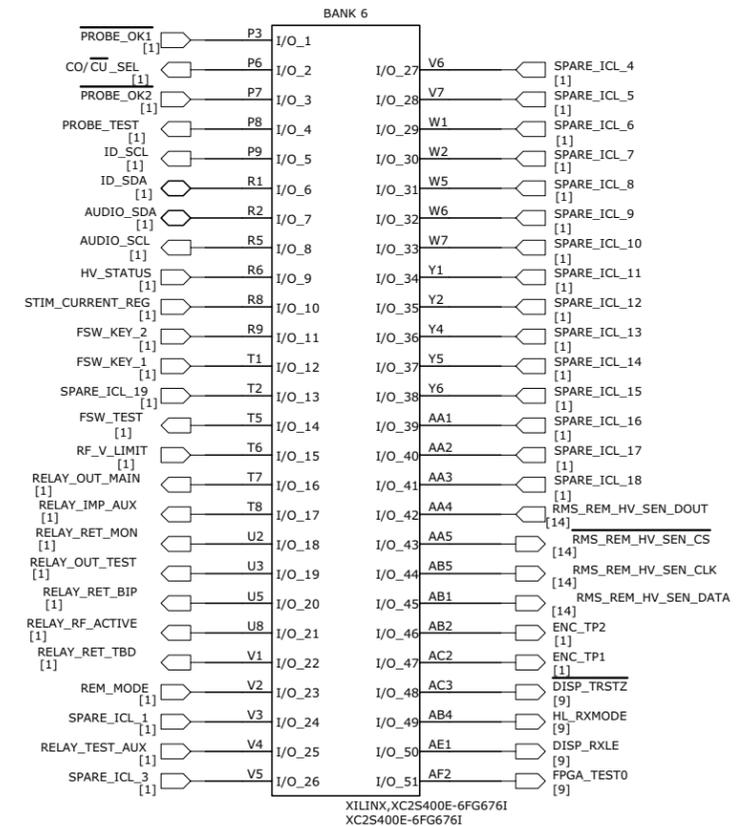


HOTLINK VIDEO XCVR

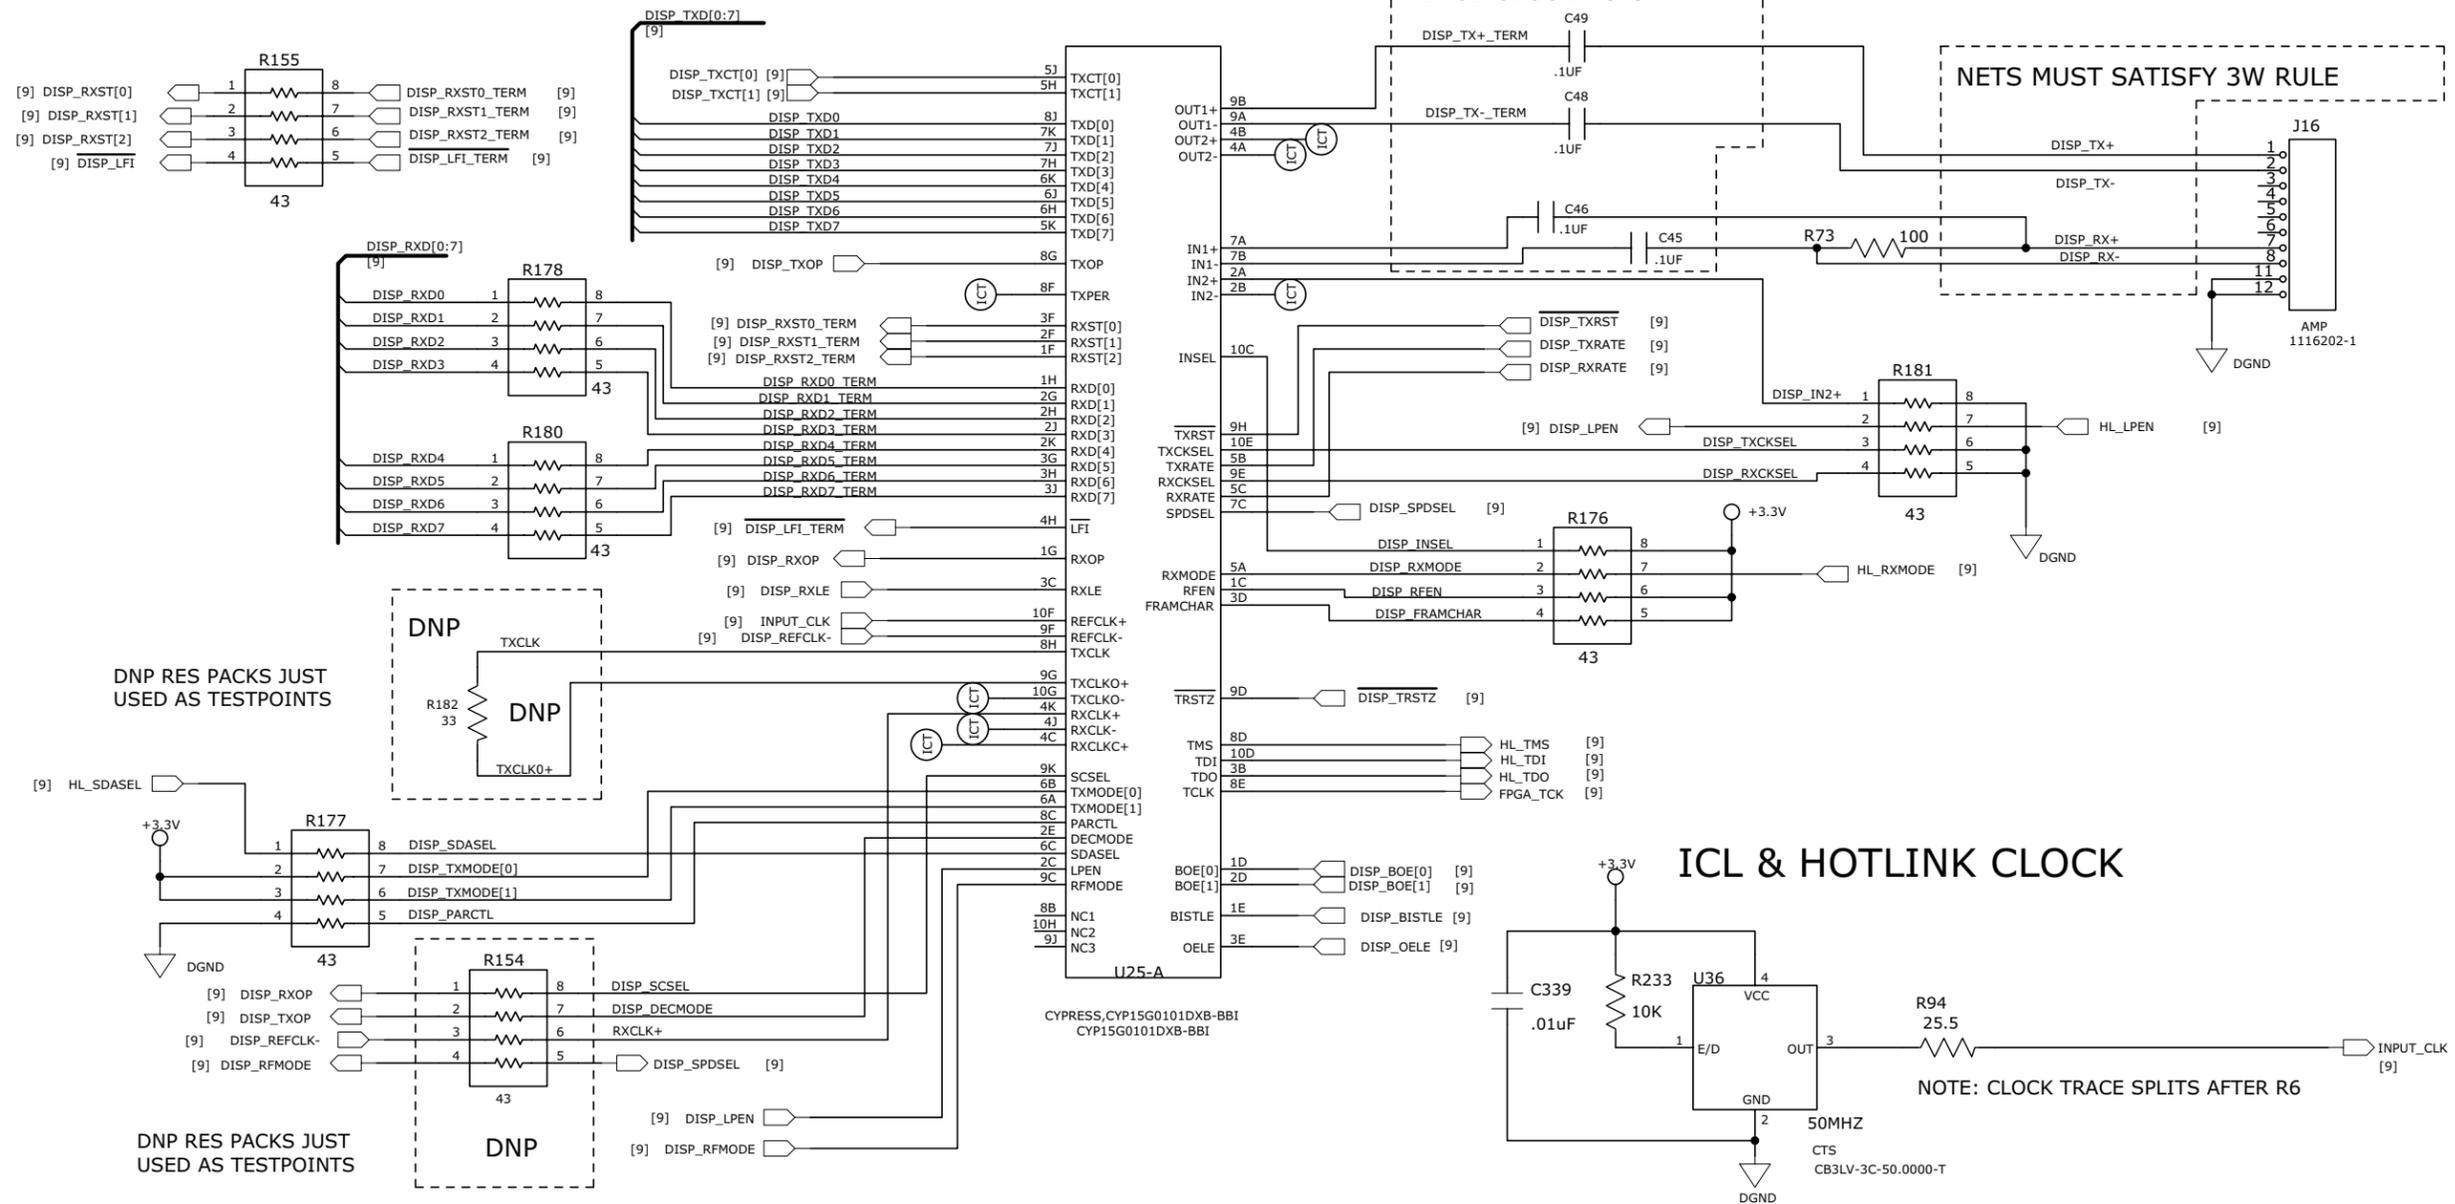


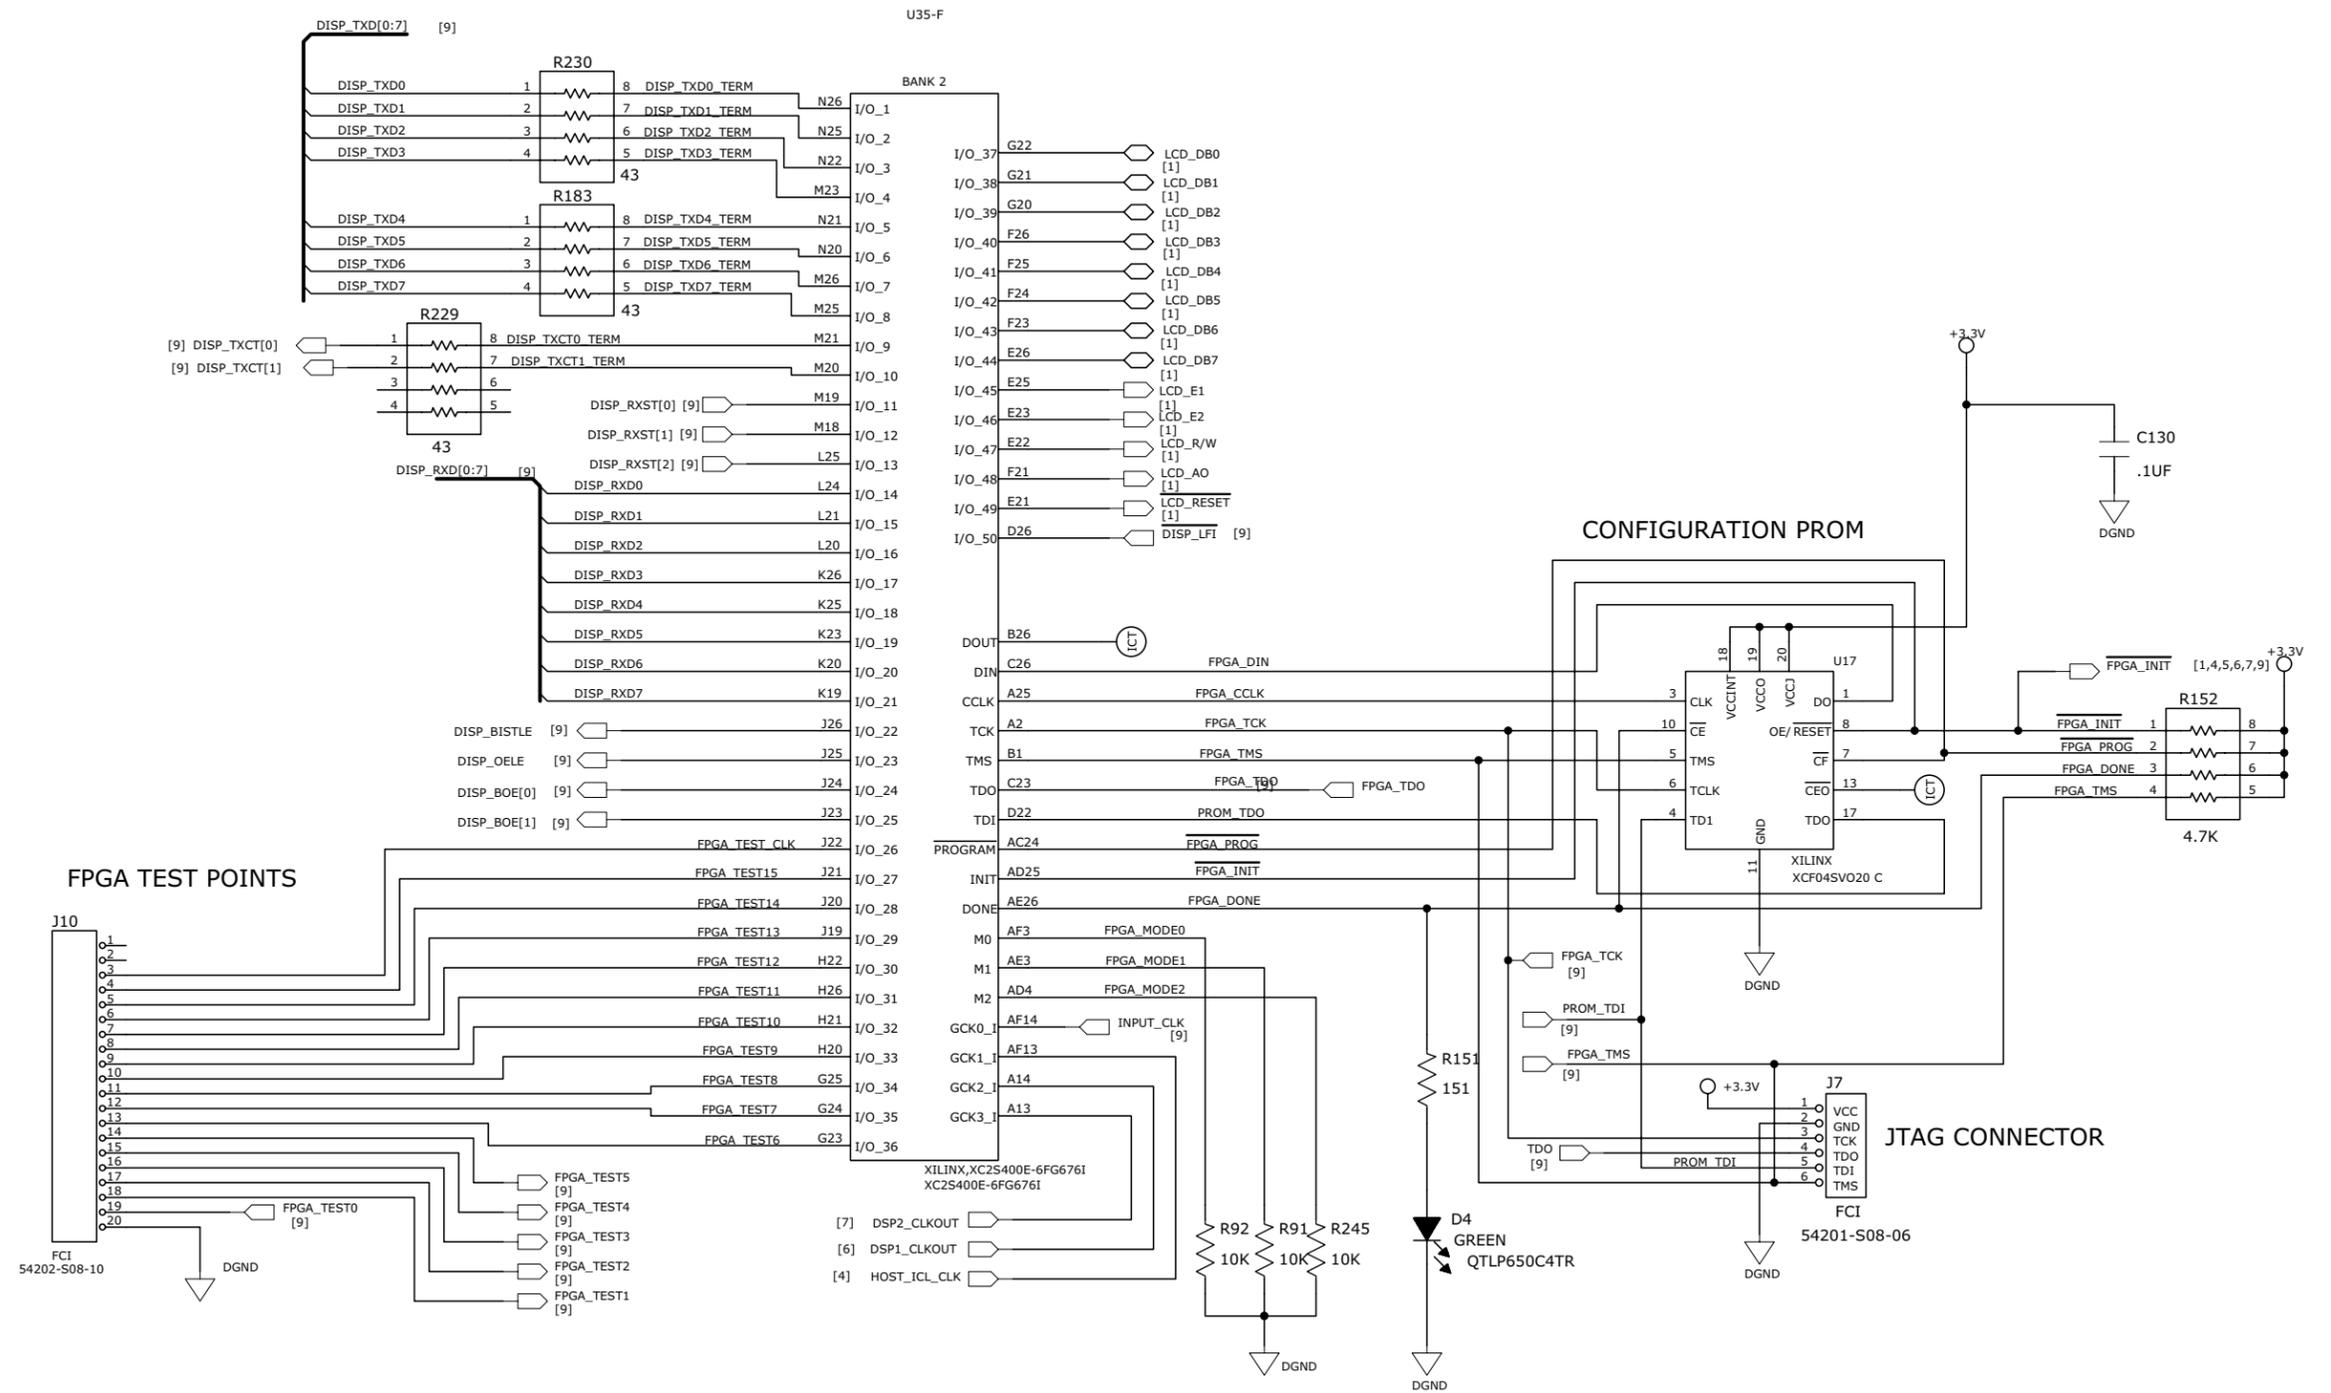


HOST SDRAM

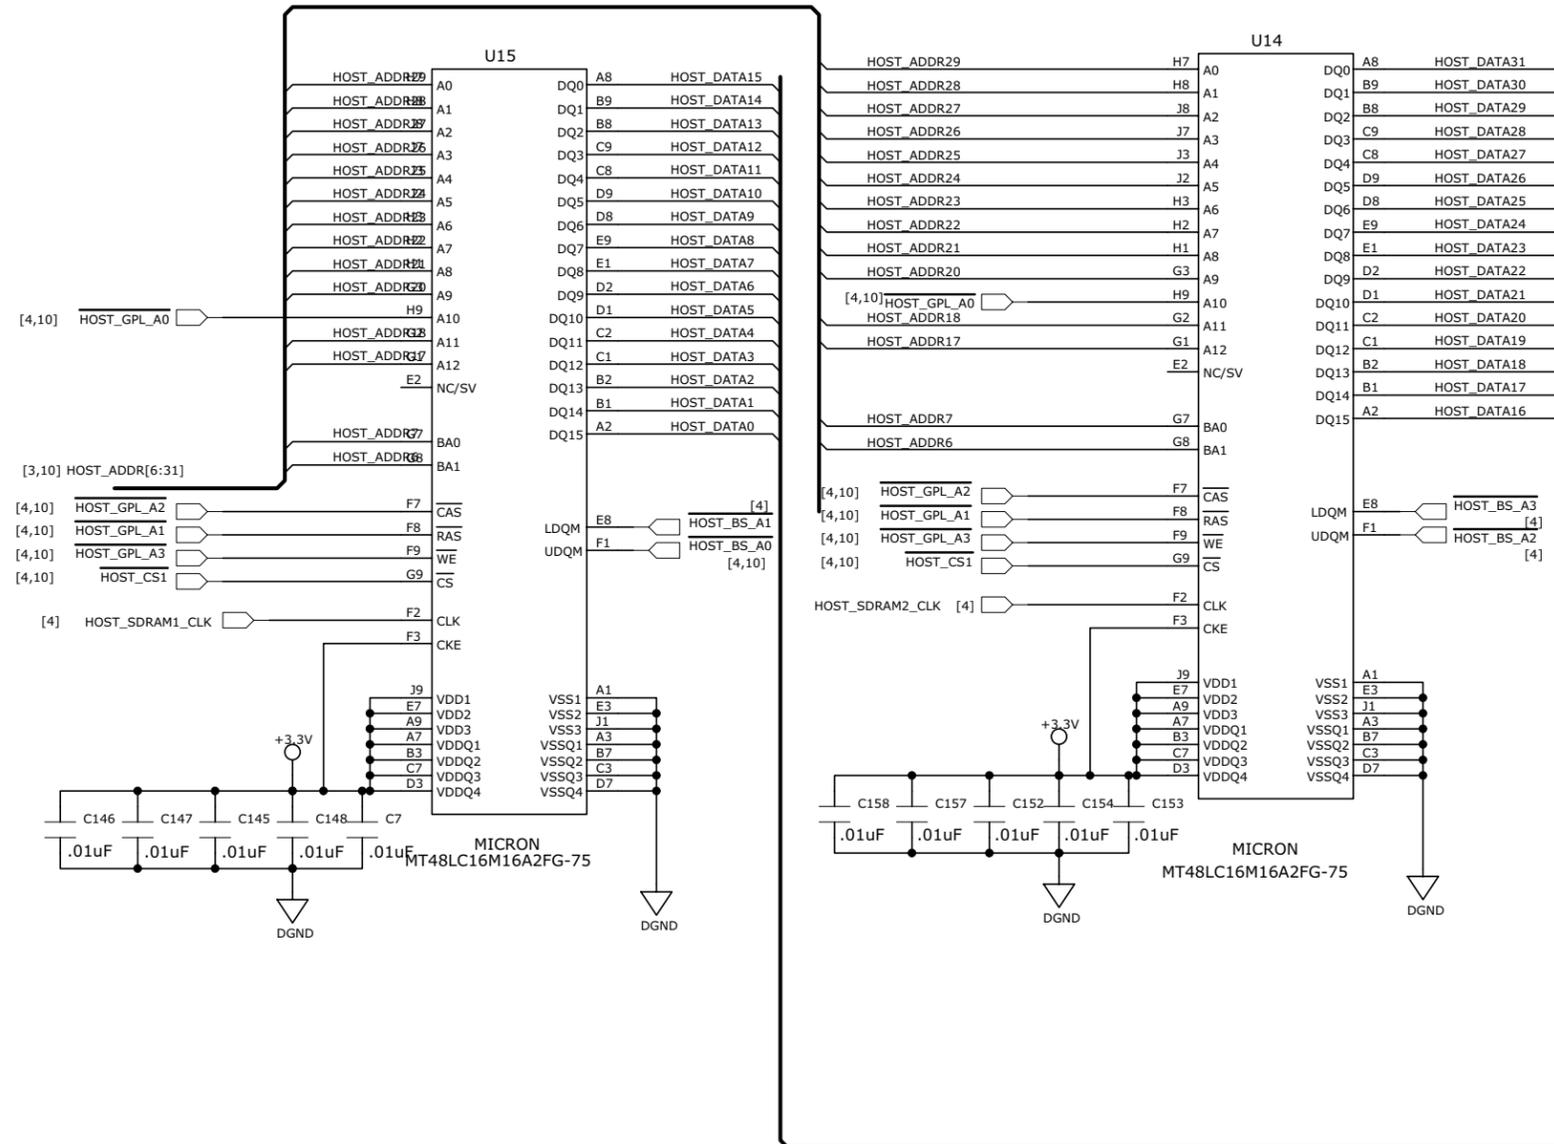


HOST NVRAM/REAL-TIME CLOCK

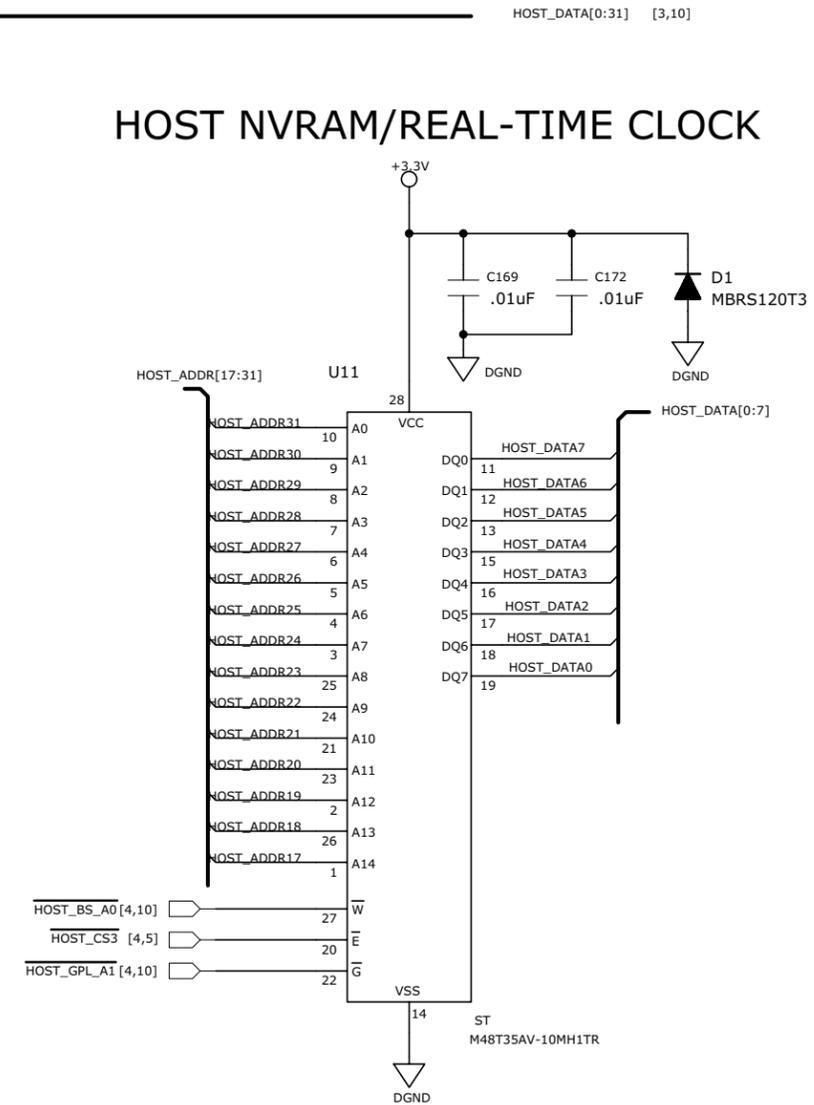


HOST FLASH

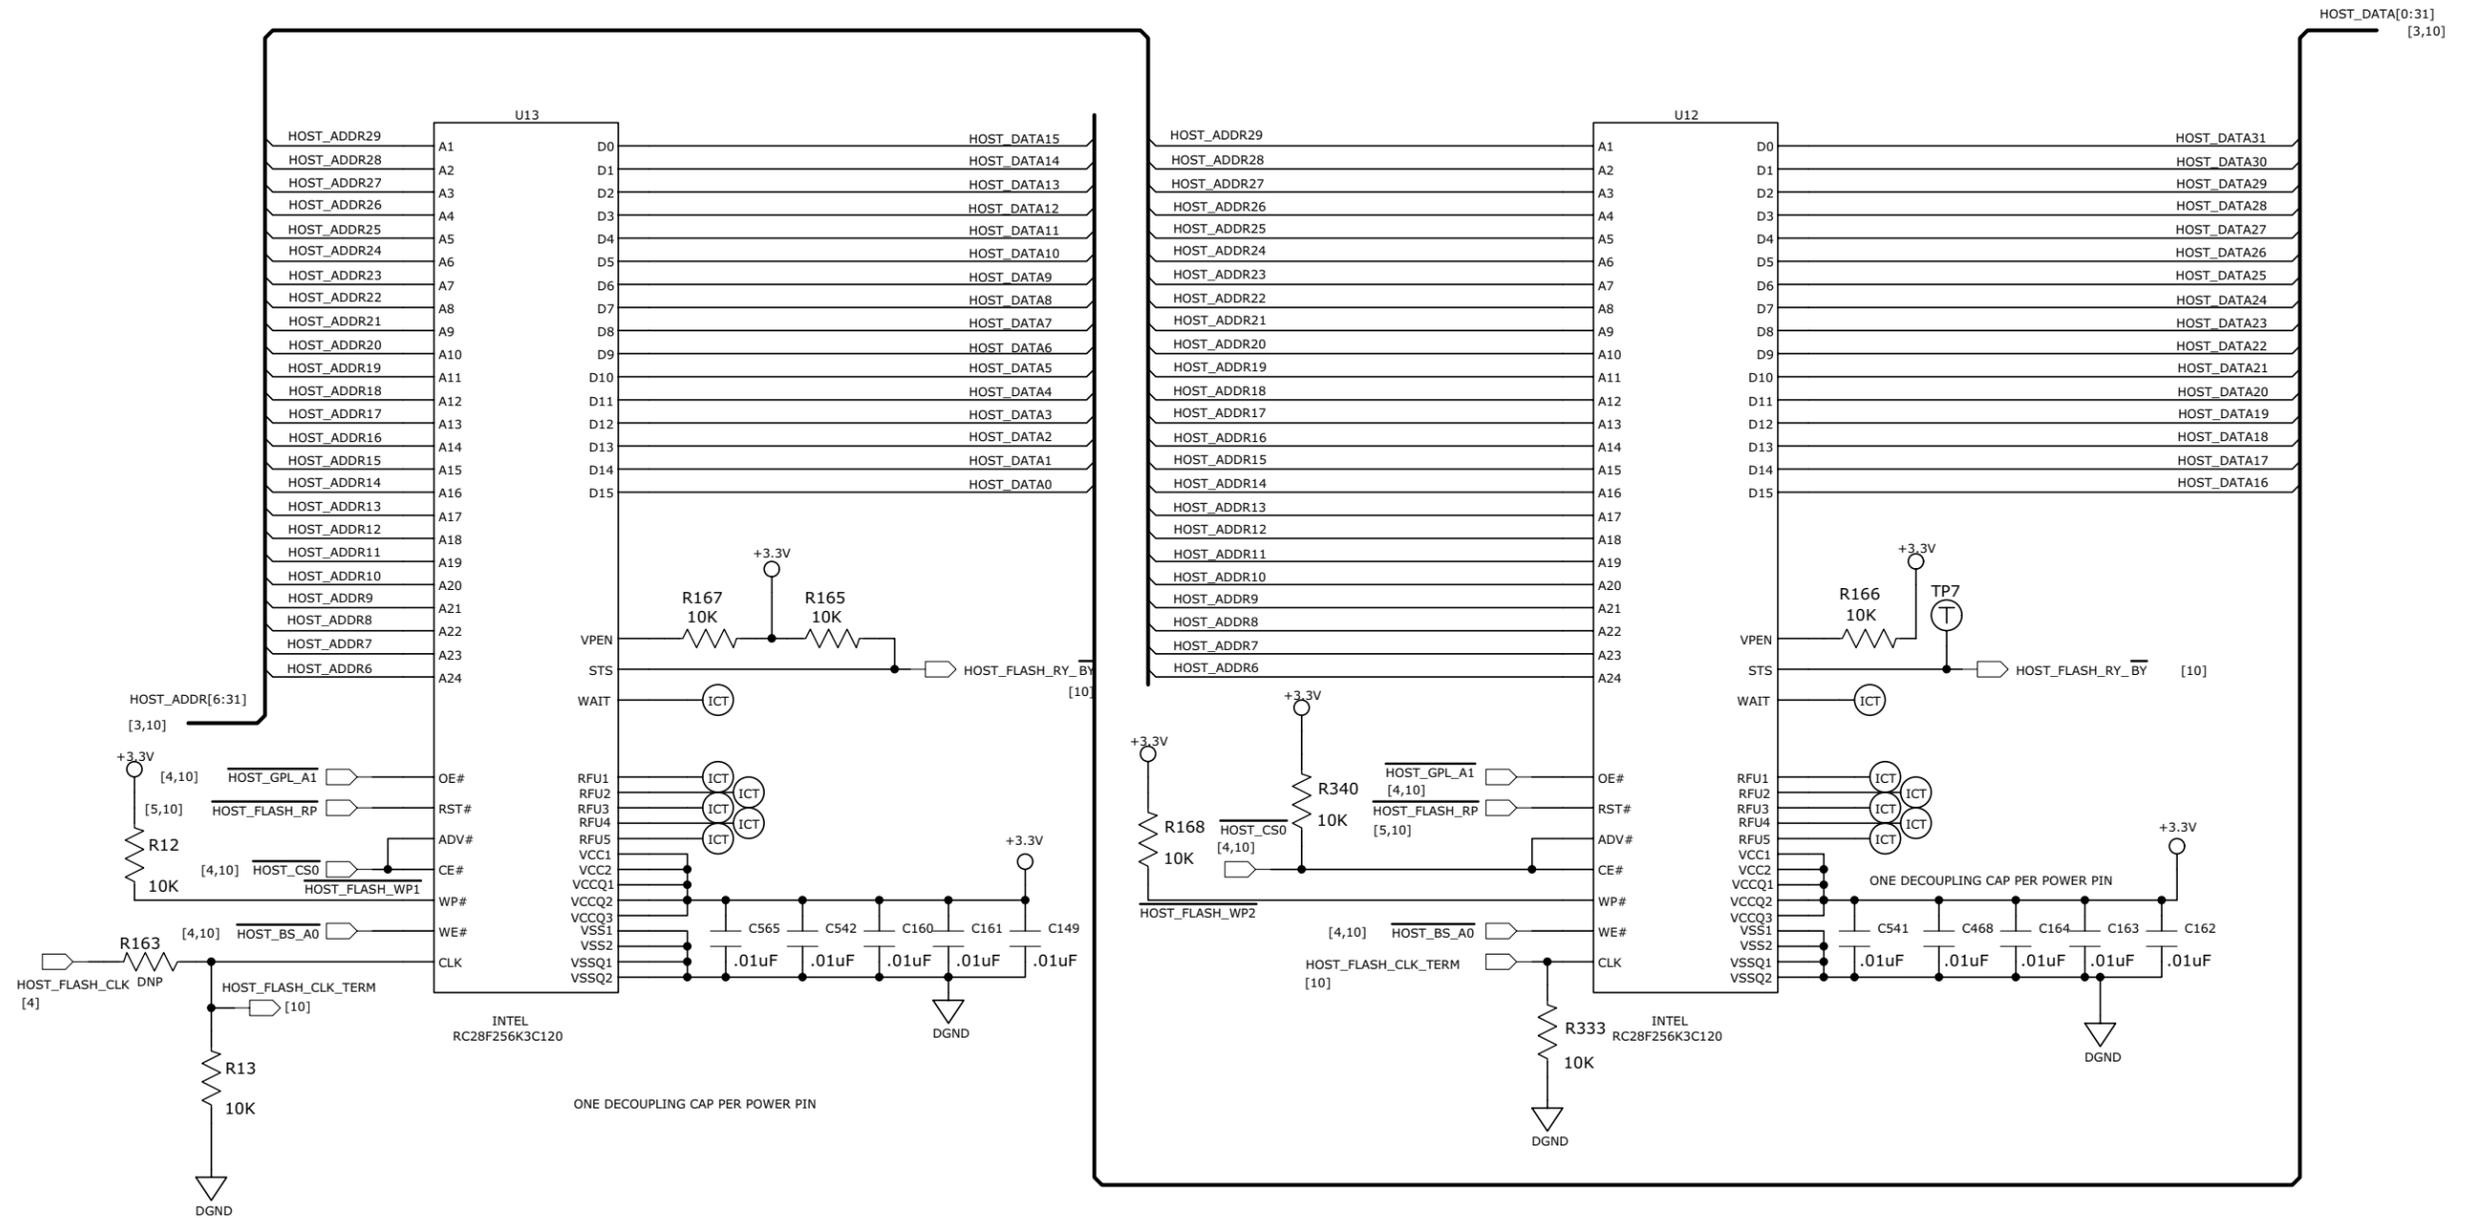


DSP SDRAM

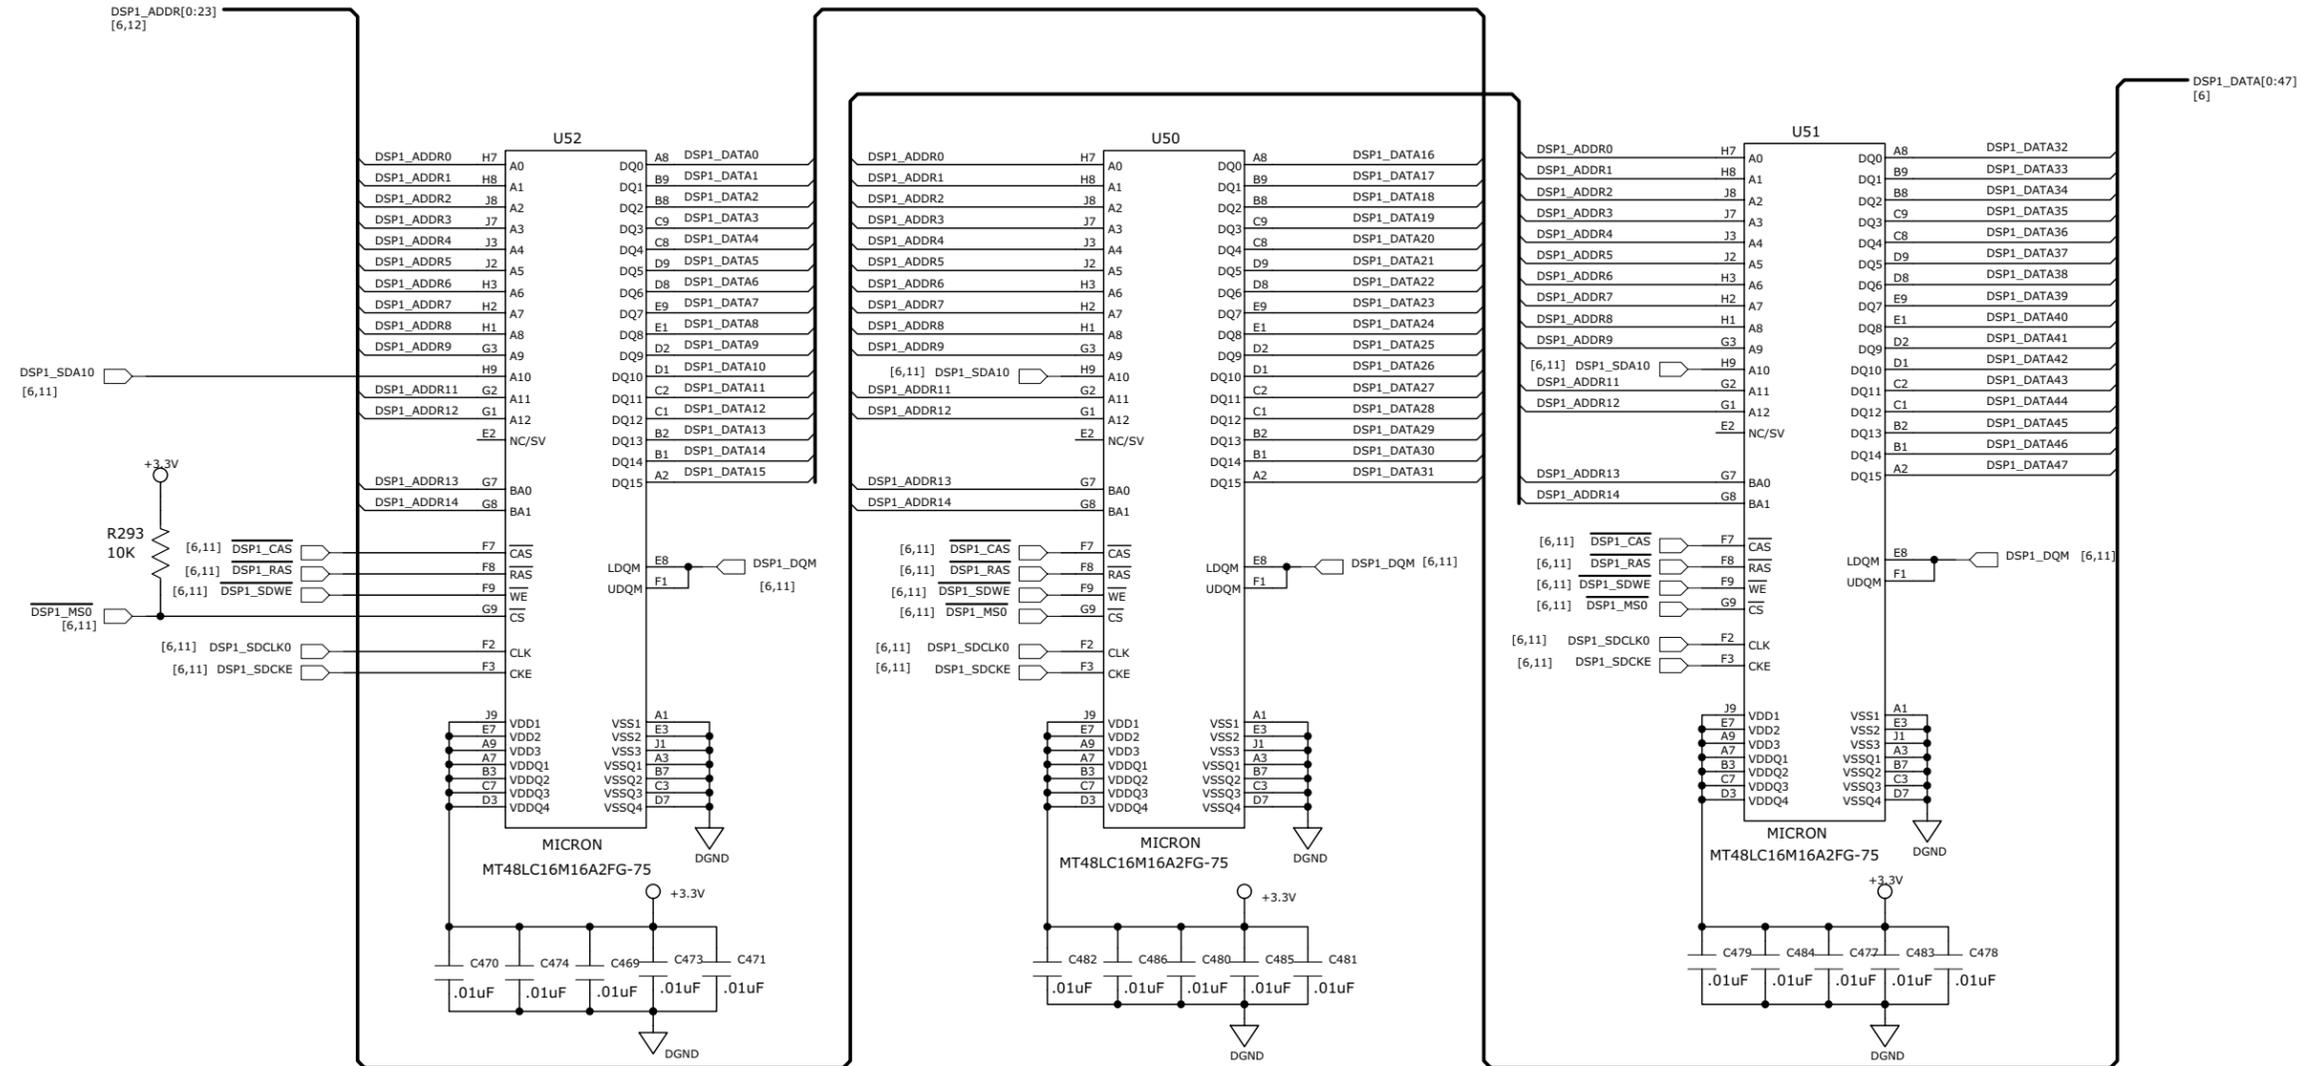

DSP SDRAM

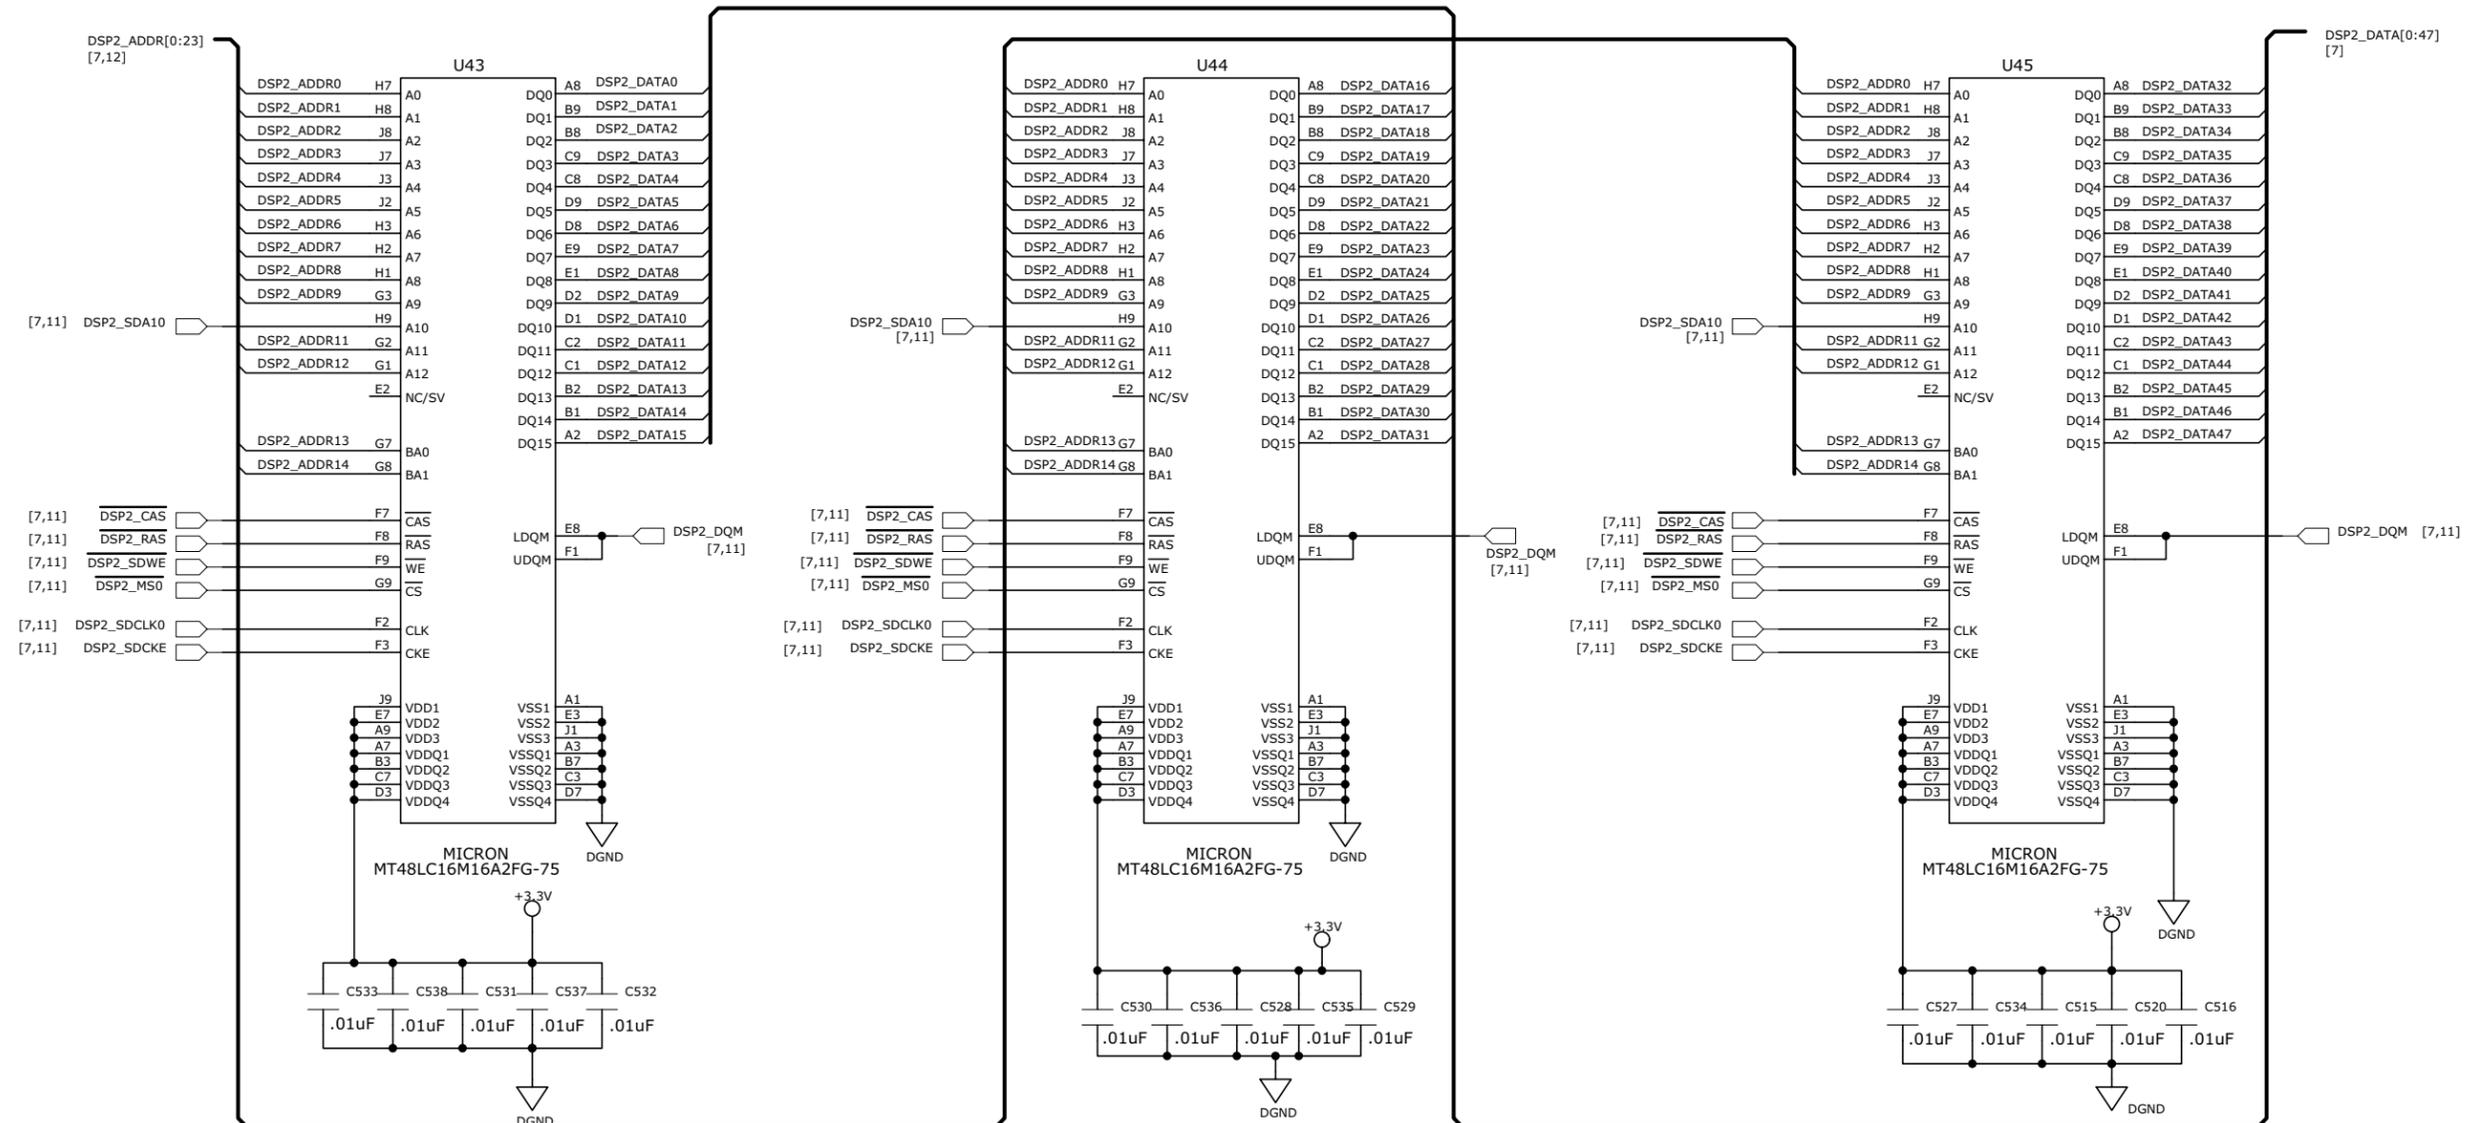



DSP FLASH

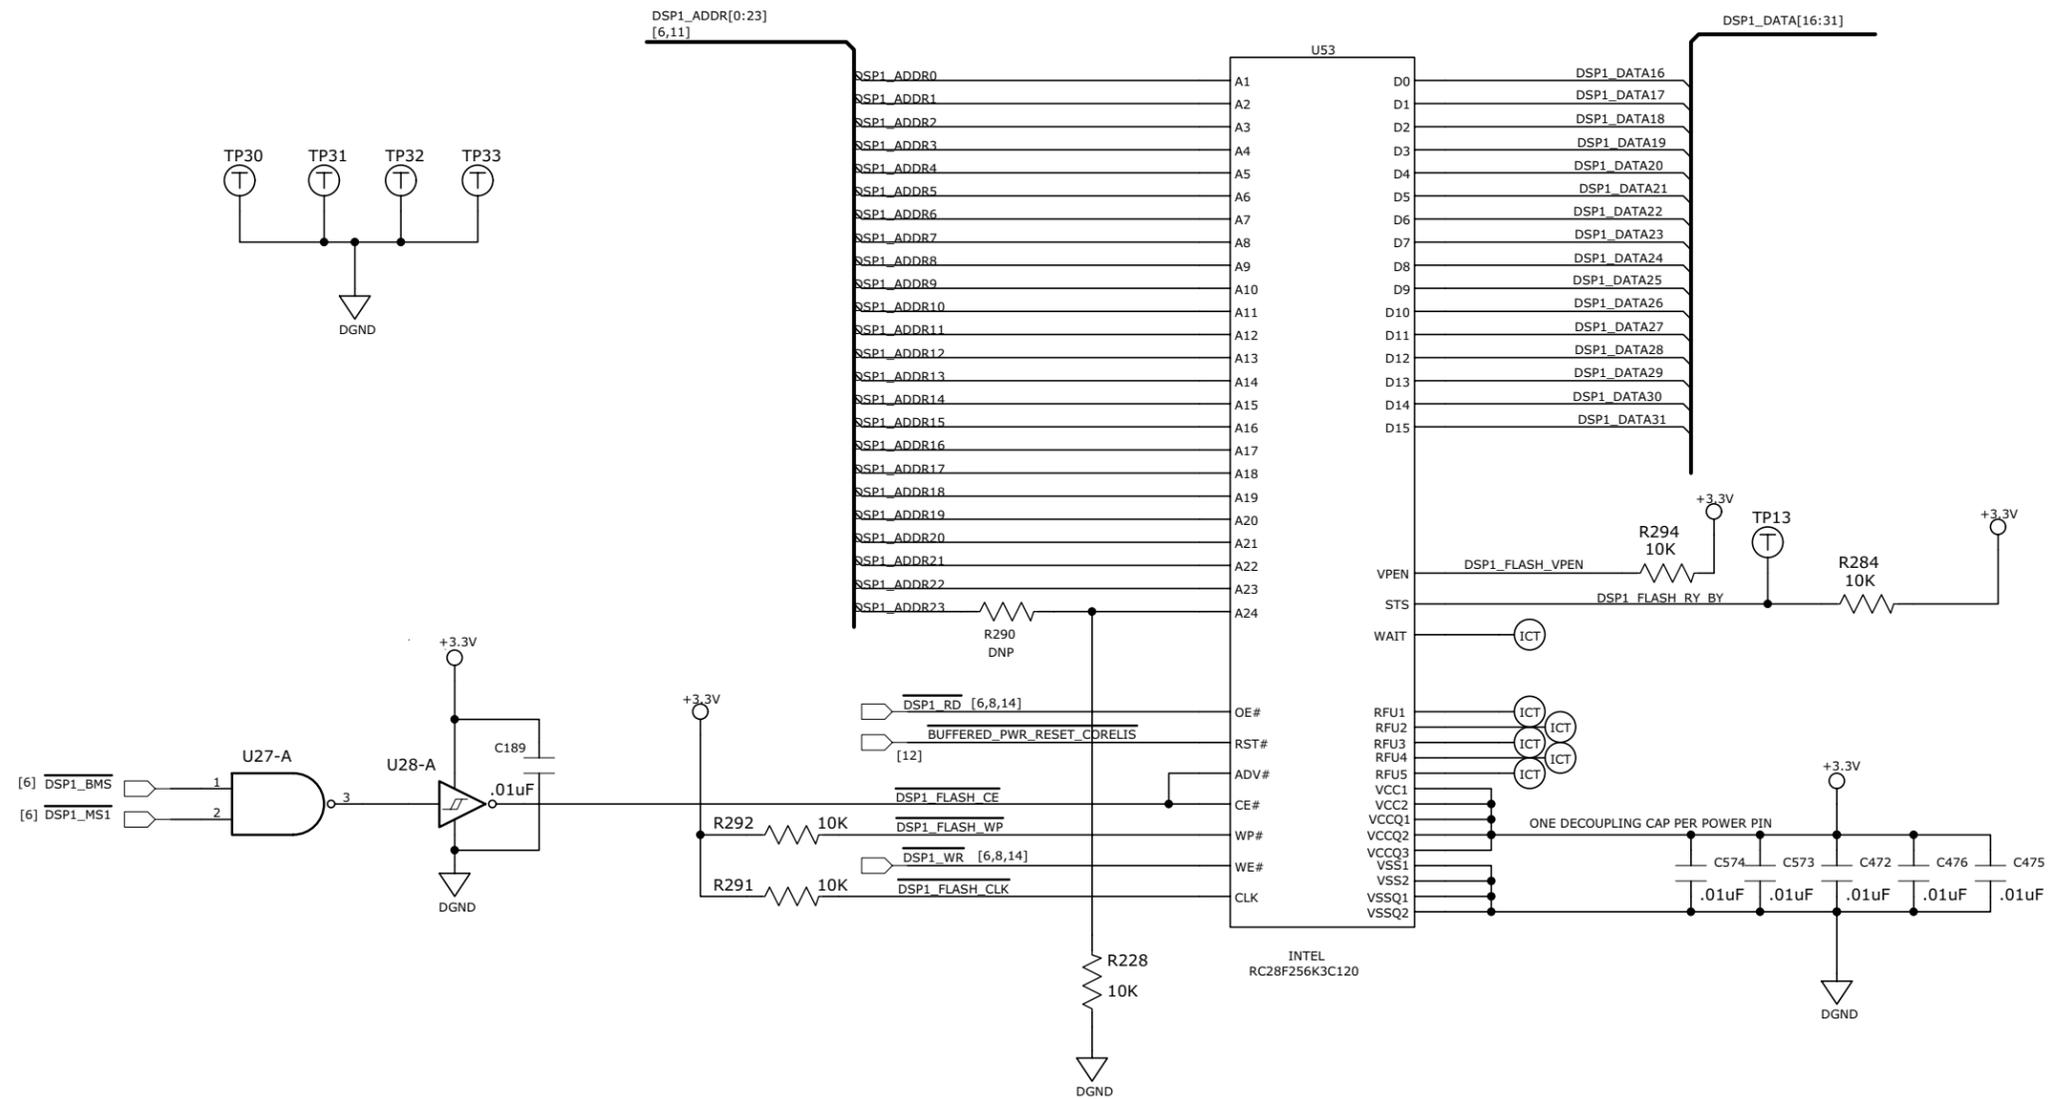

DSP FLASH


Corelis Configuration Logic

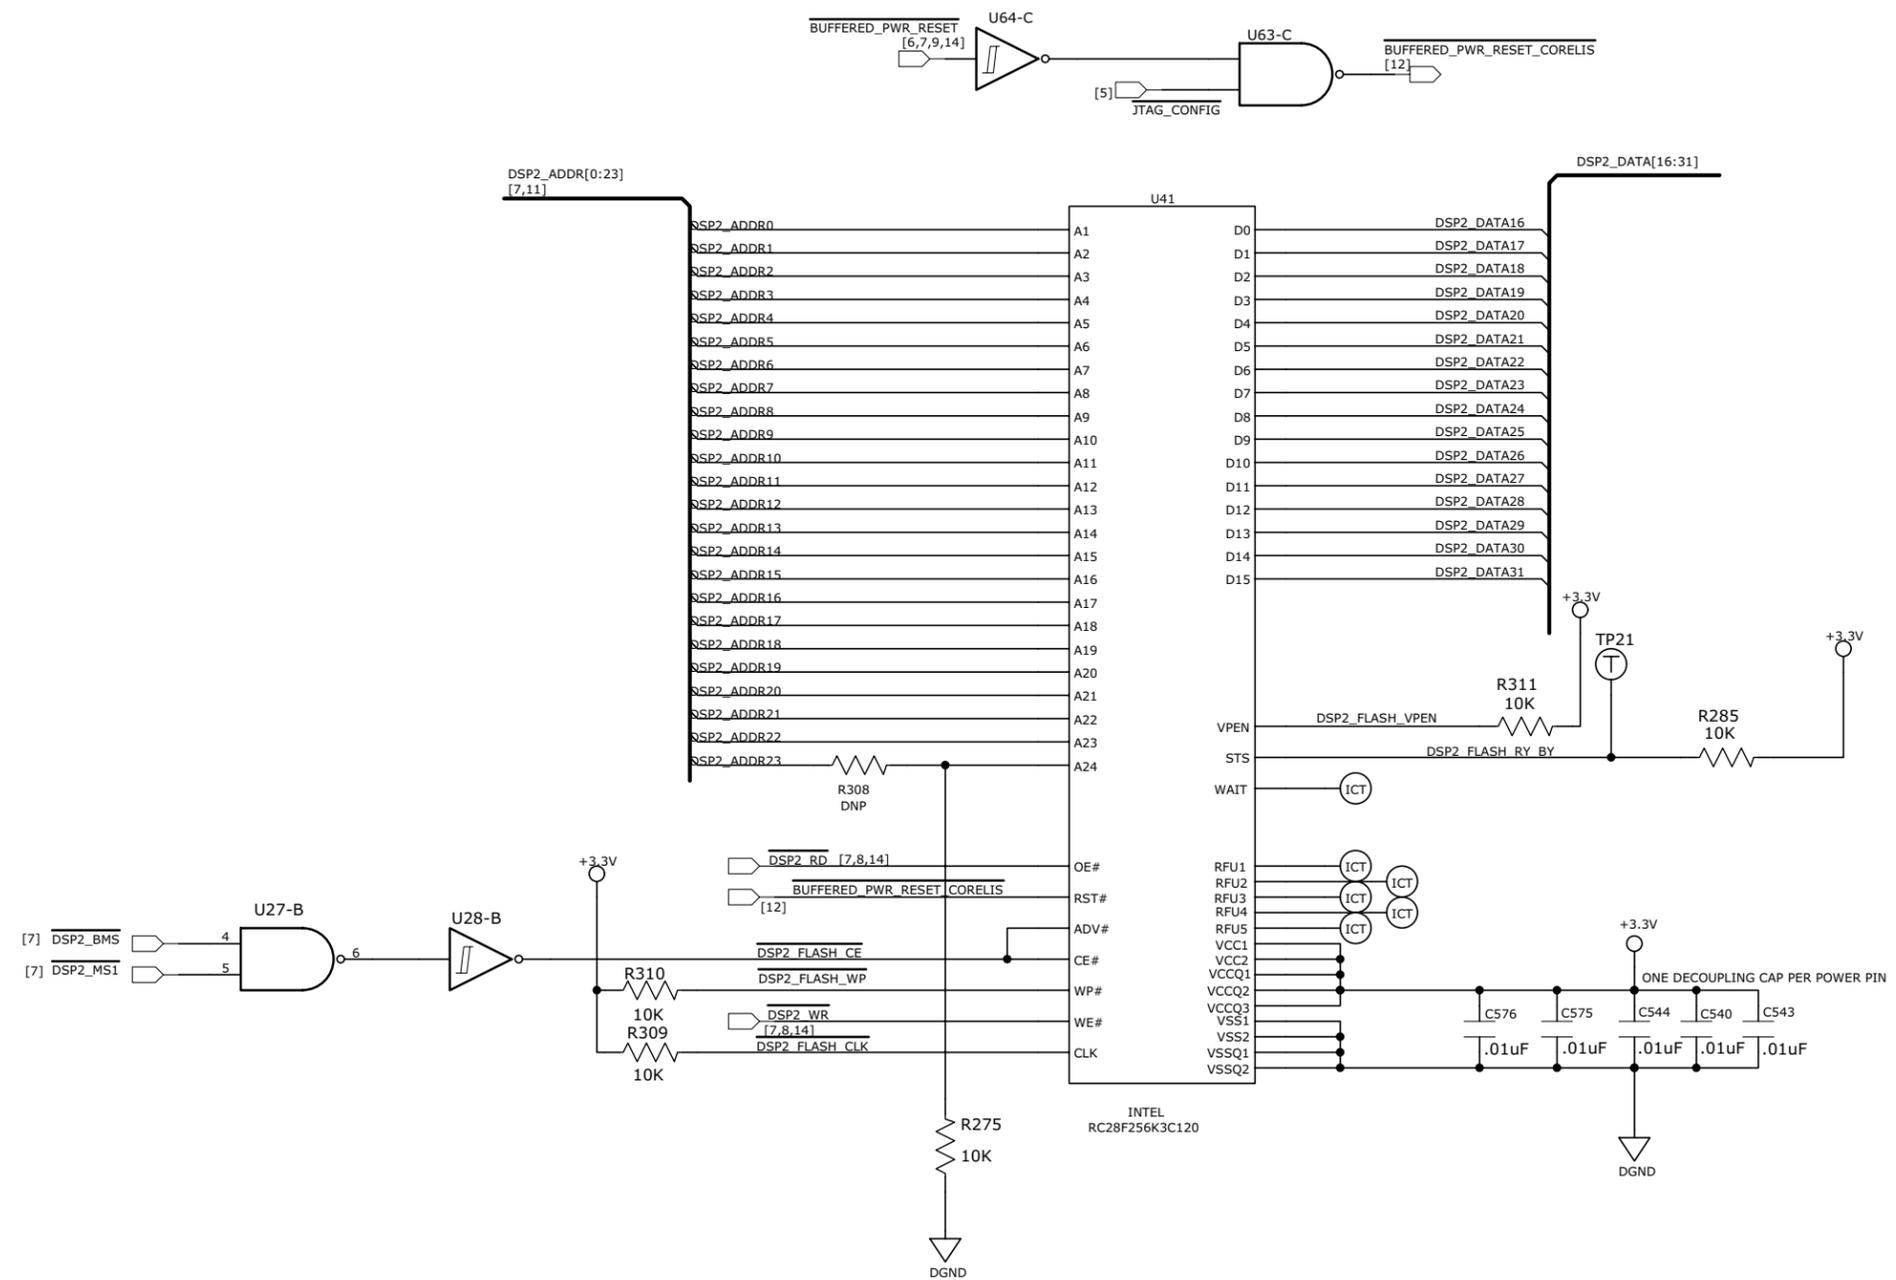

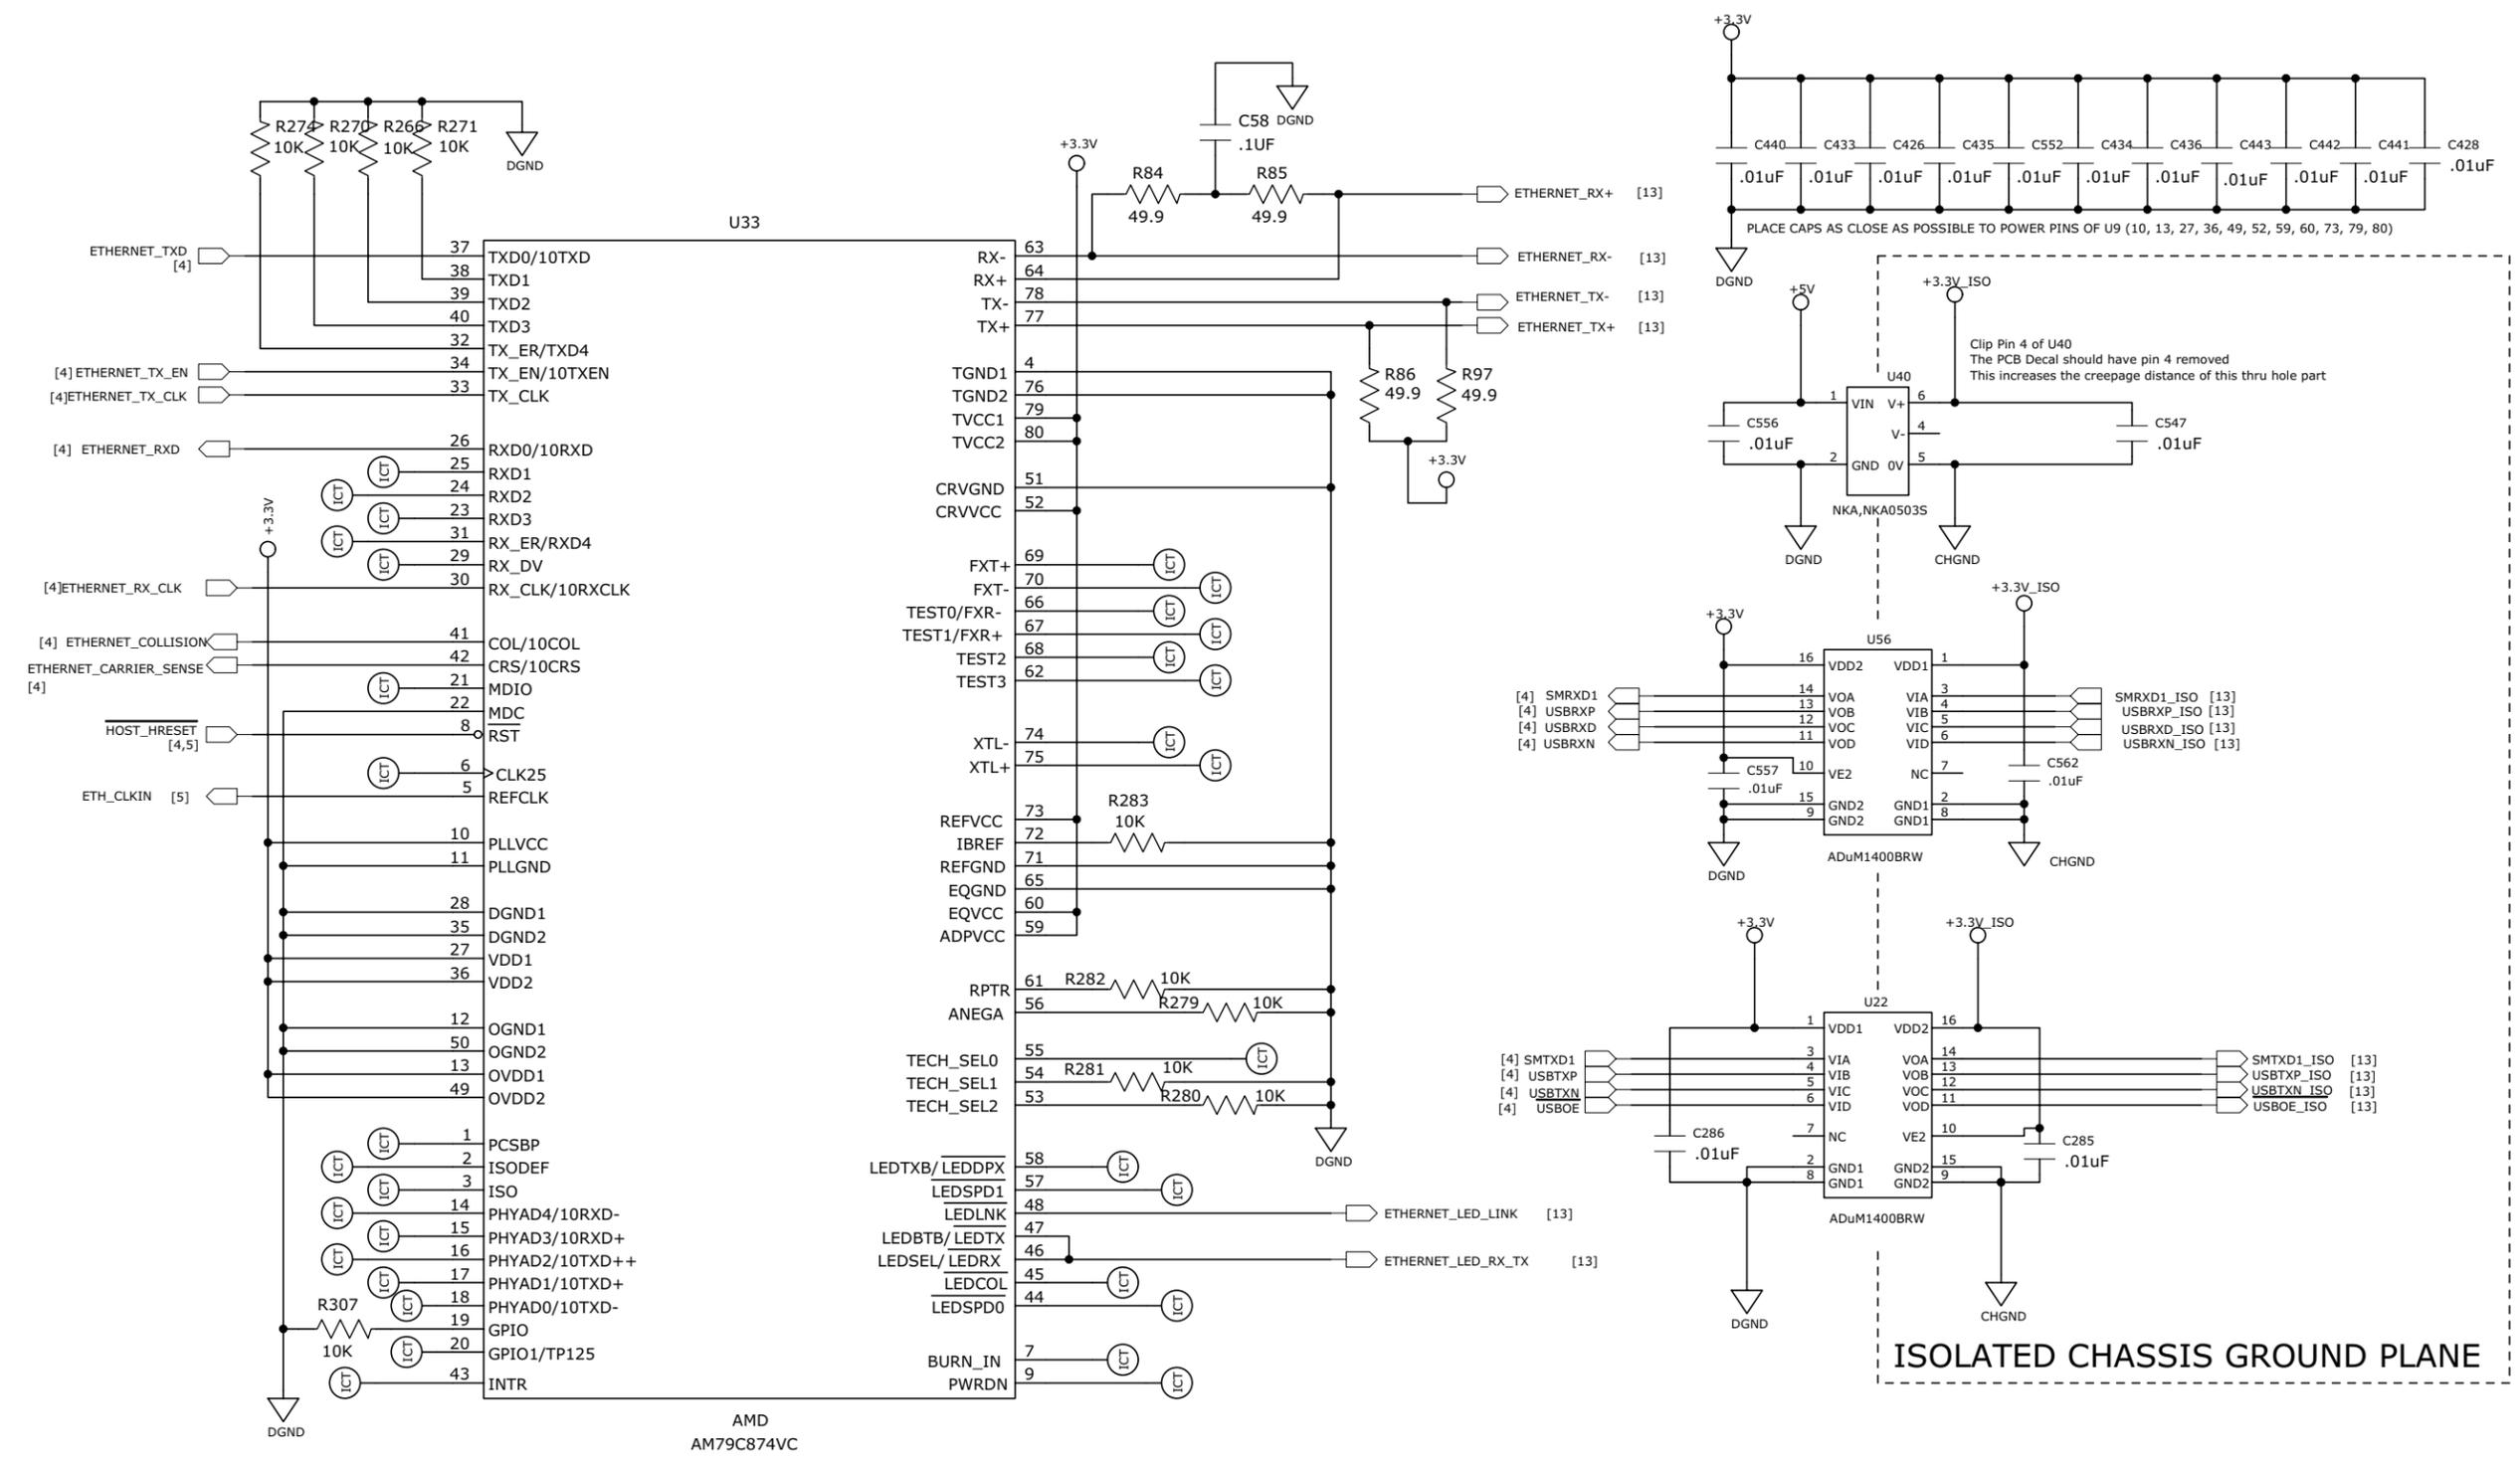



Controller PCBA Sheet 25 of 30

ISOLATED CHASSIS GROUND PLANE

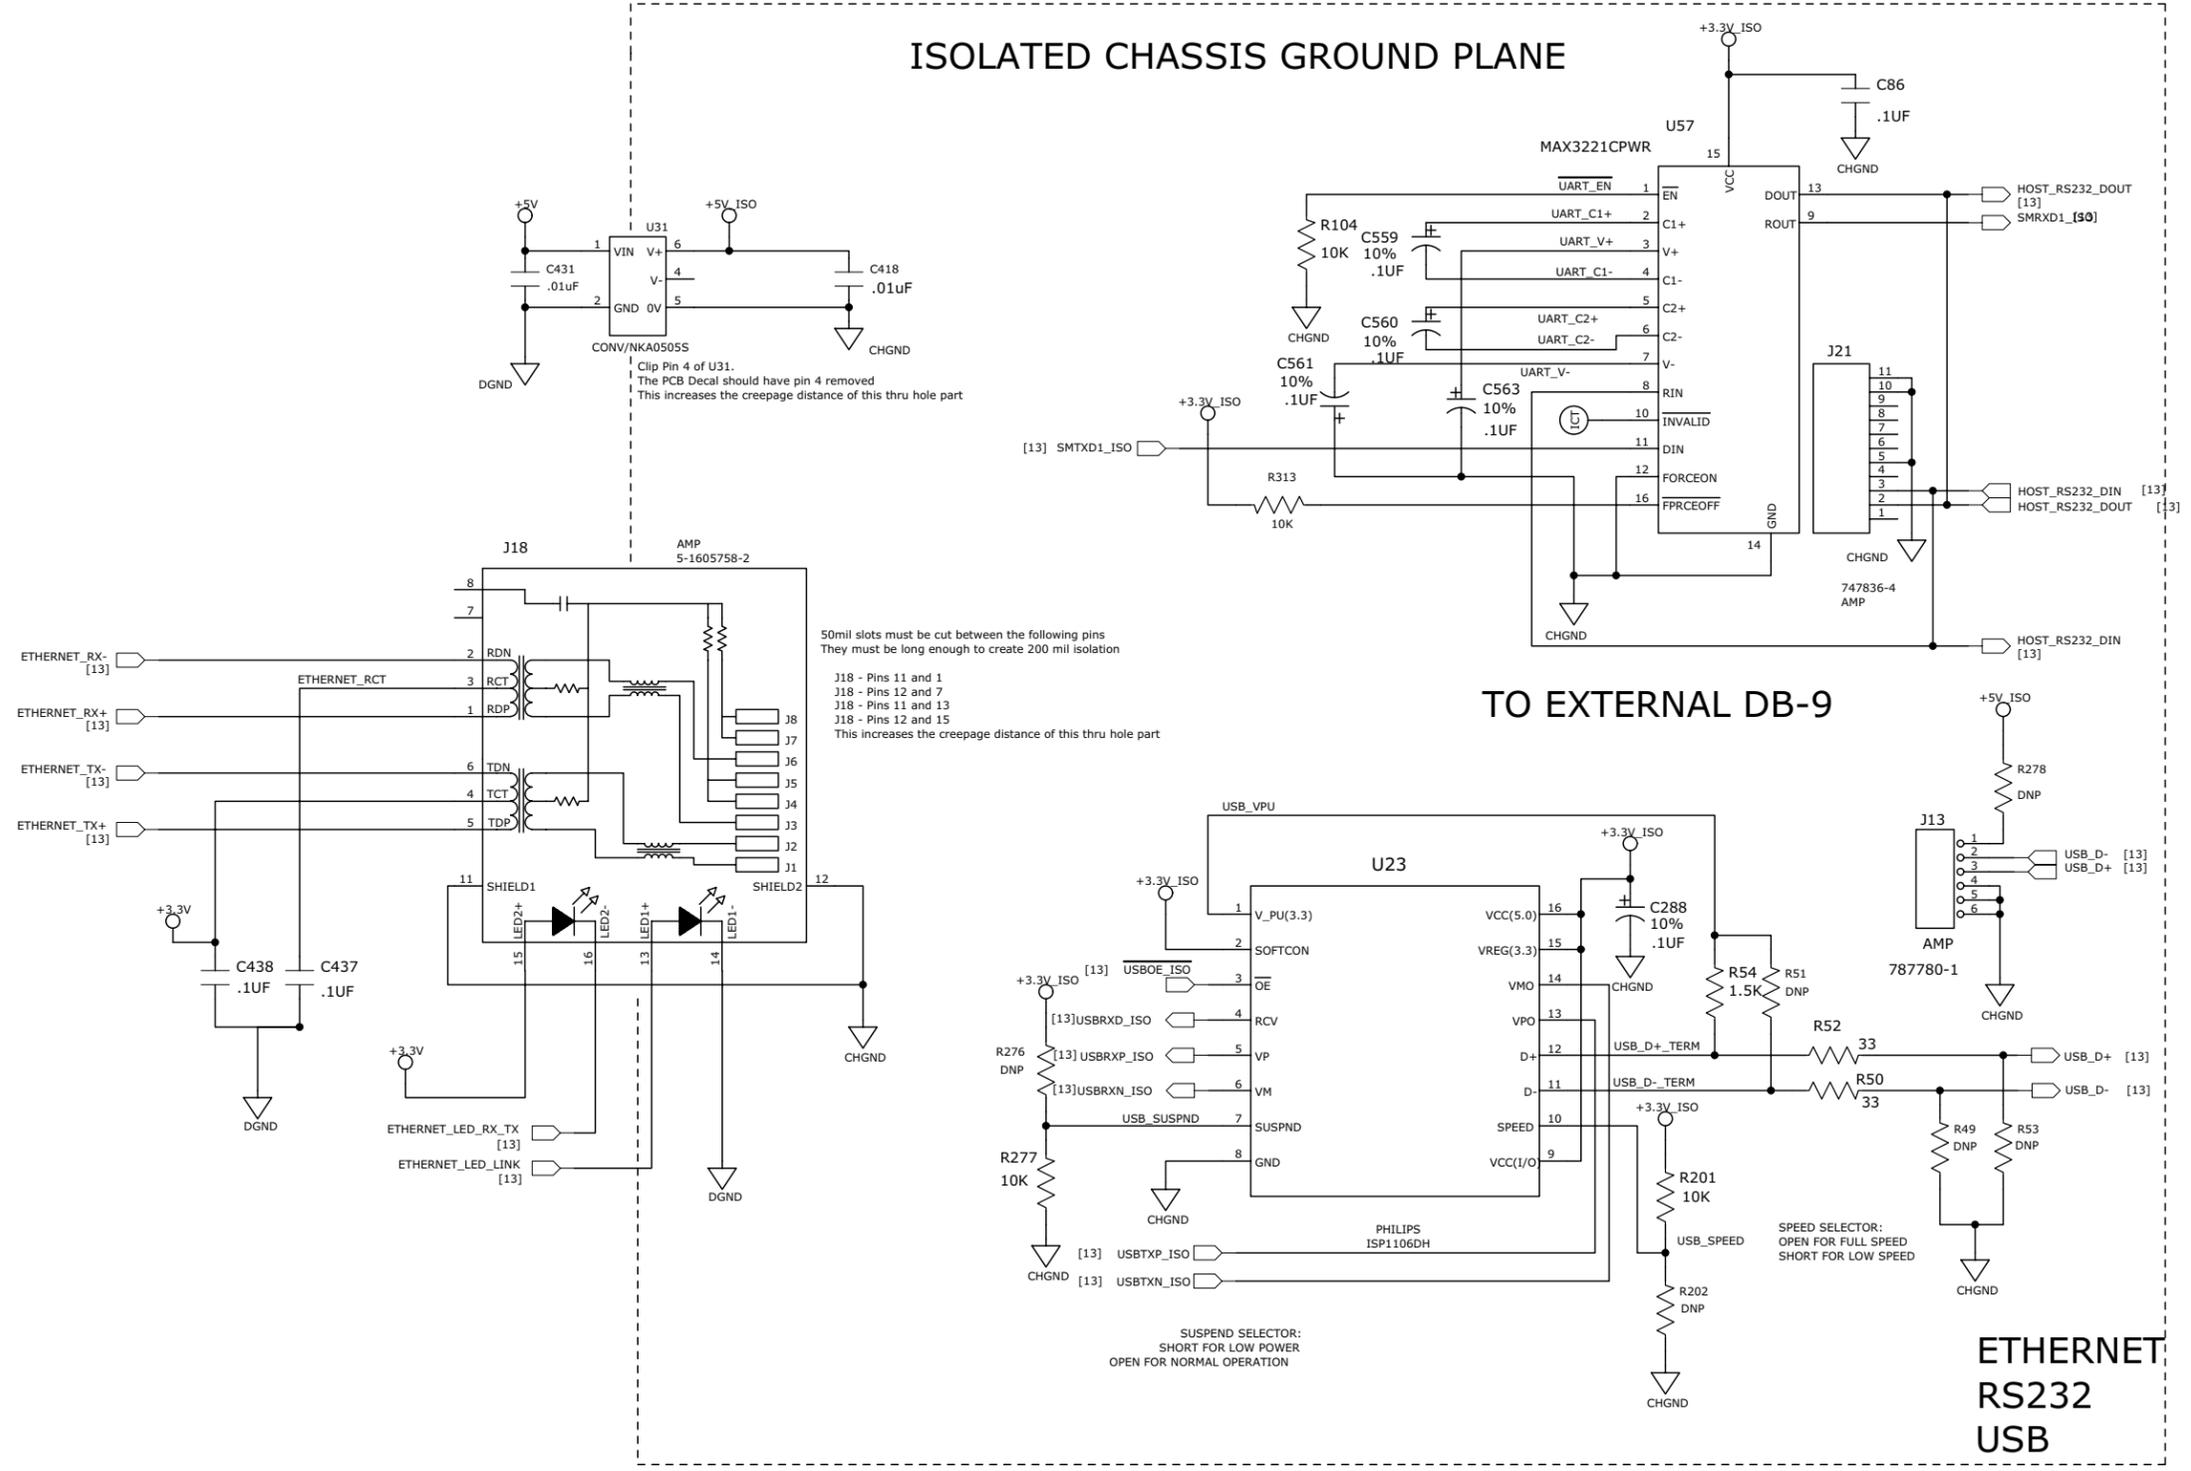


DATA CONVERTERS

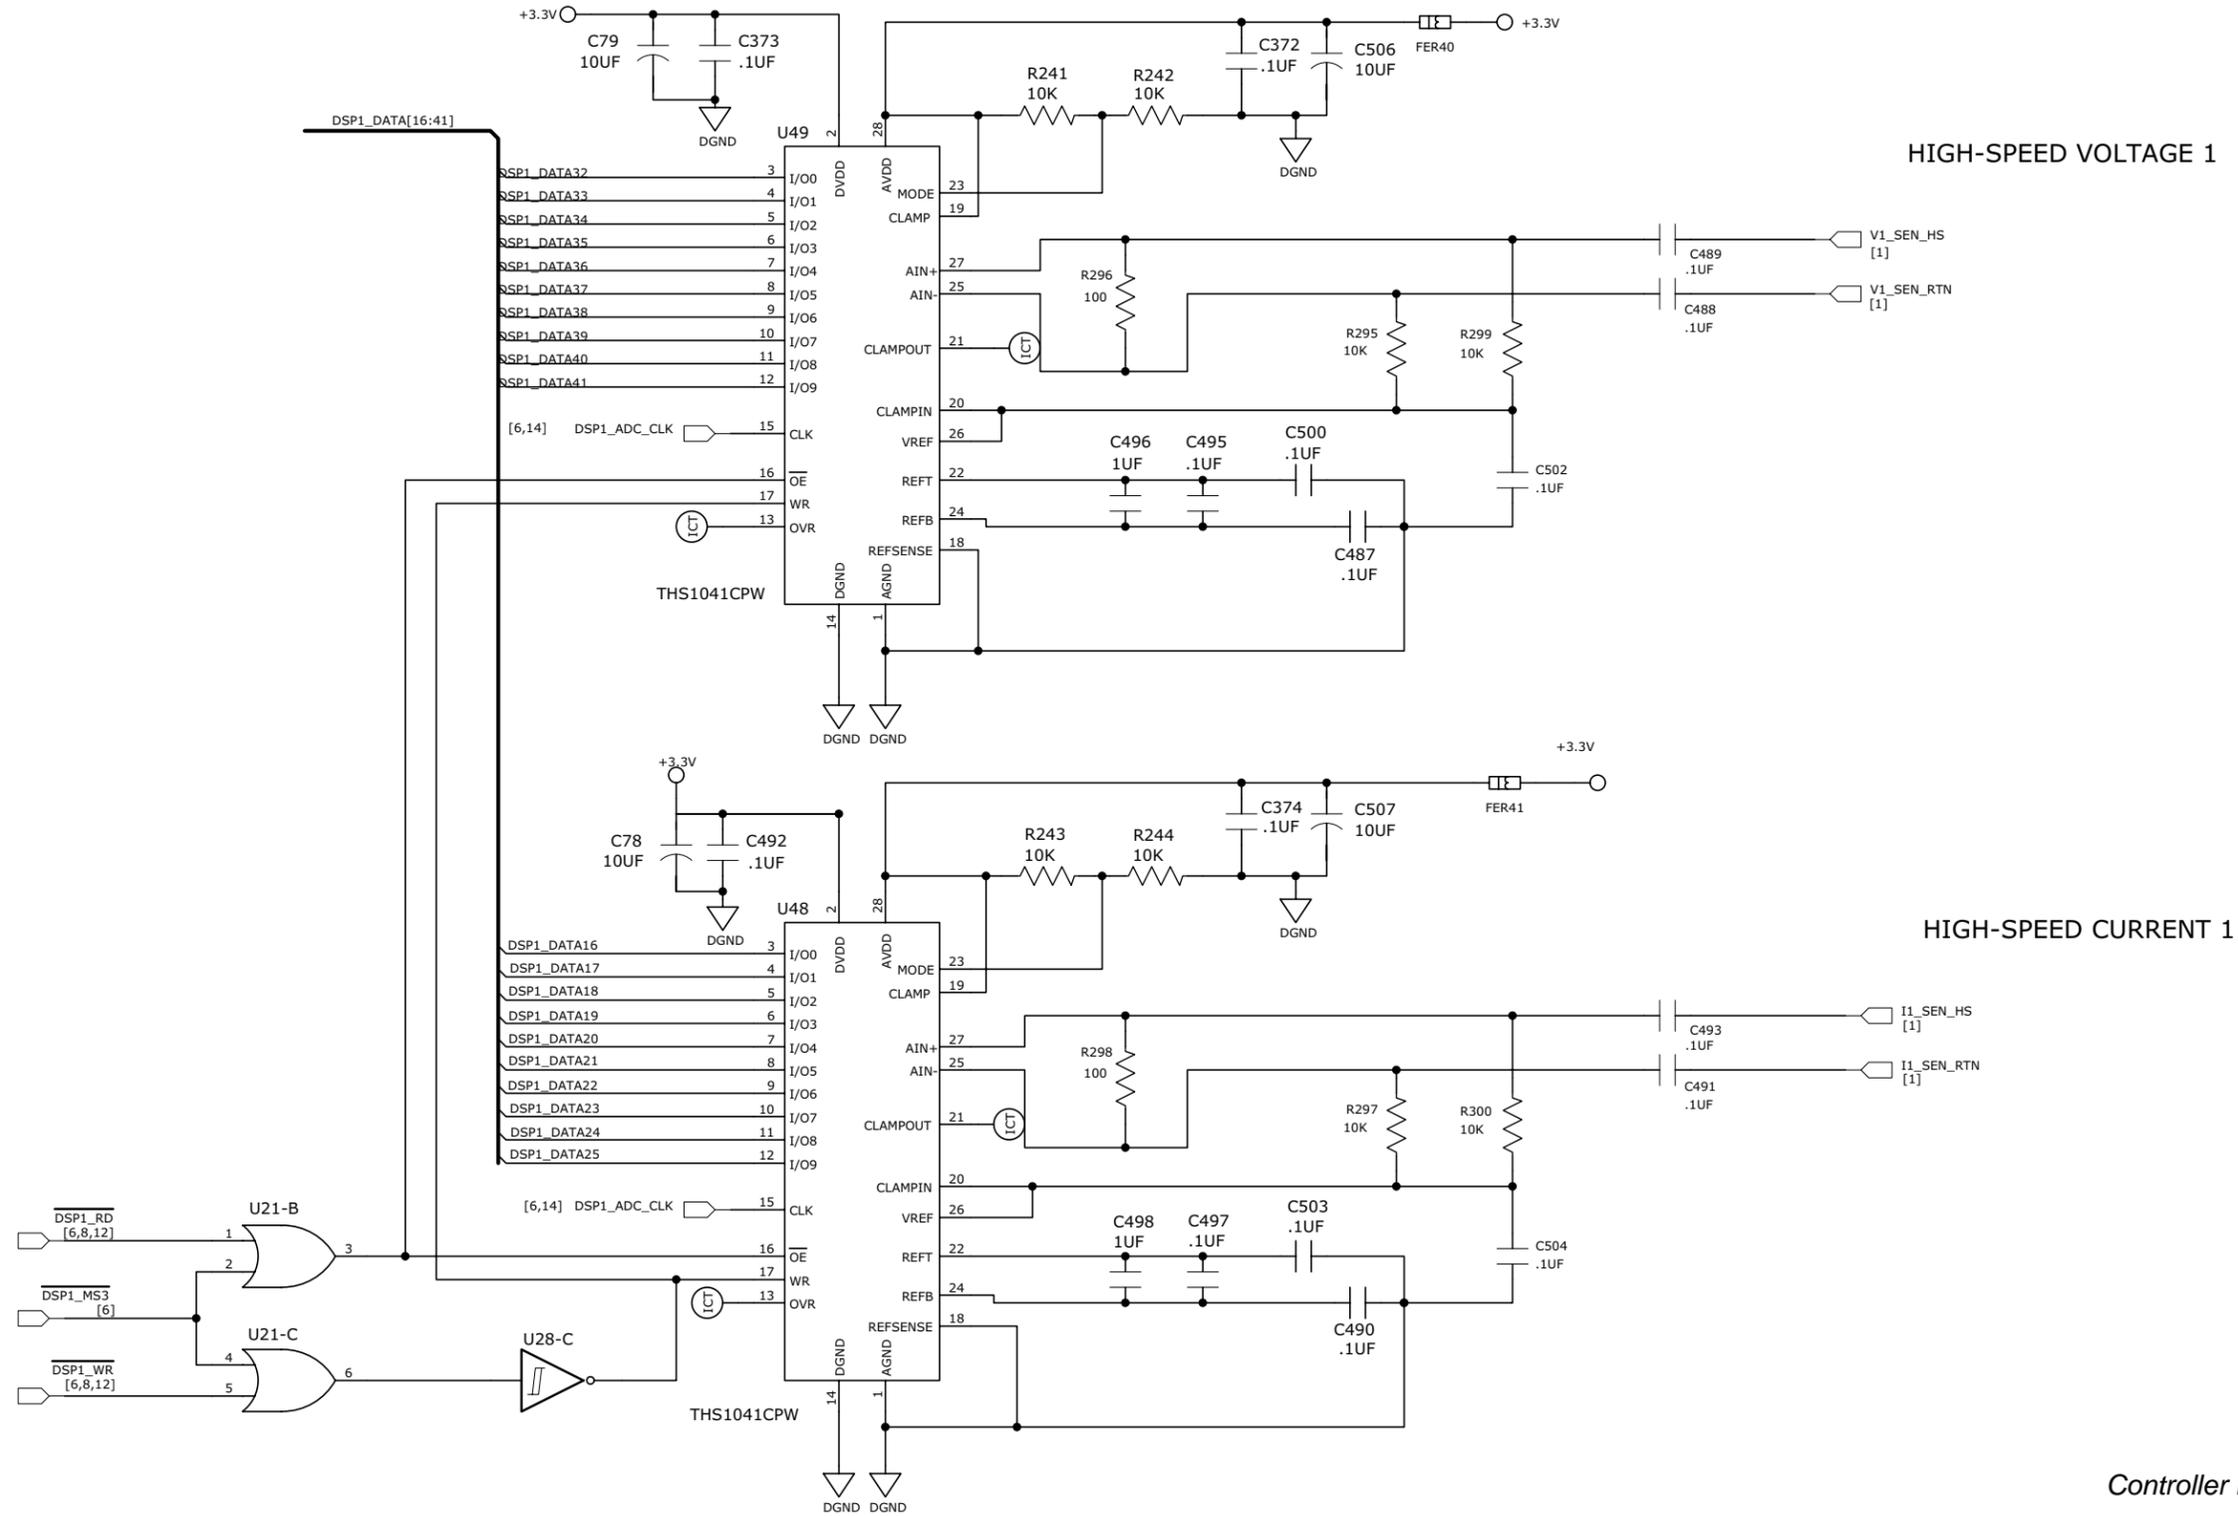


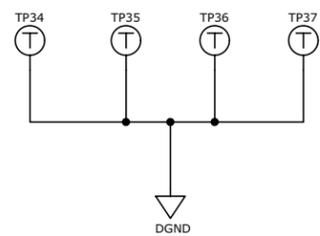


DATA CONVERTERS

LOW-SPEED A/D

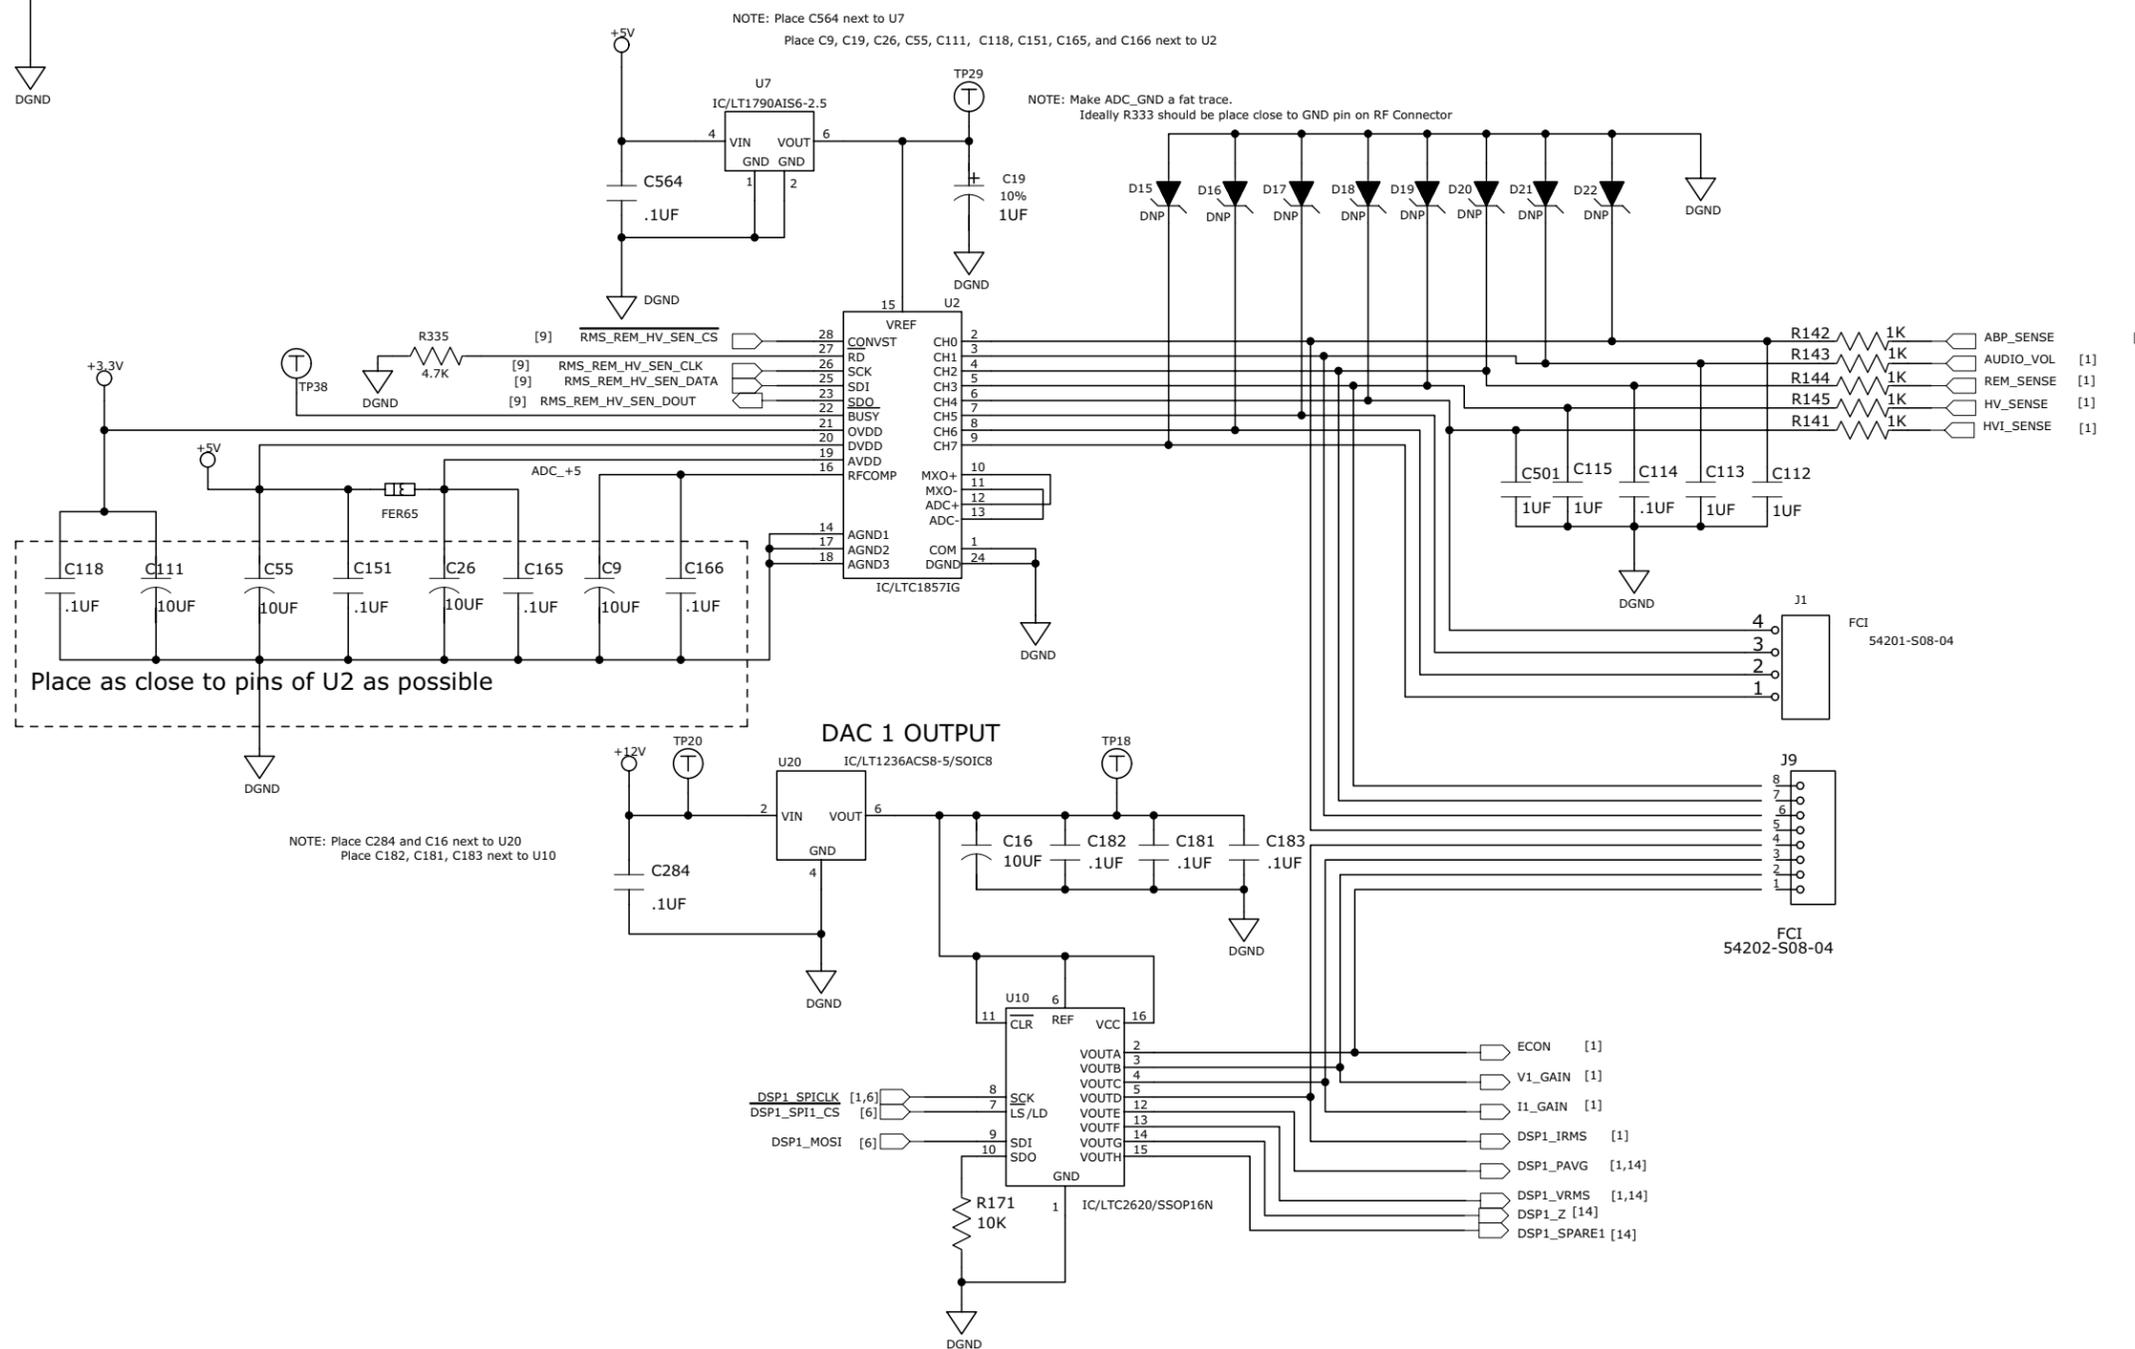

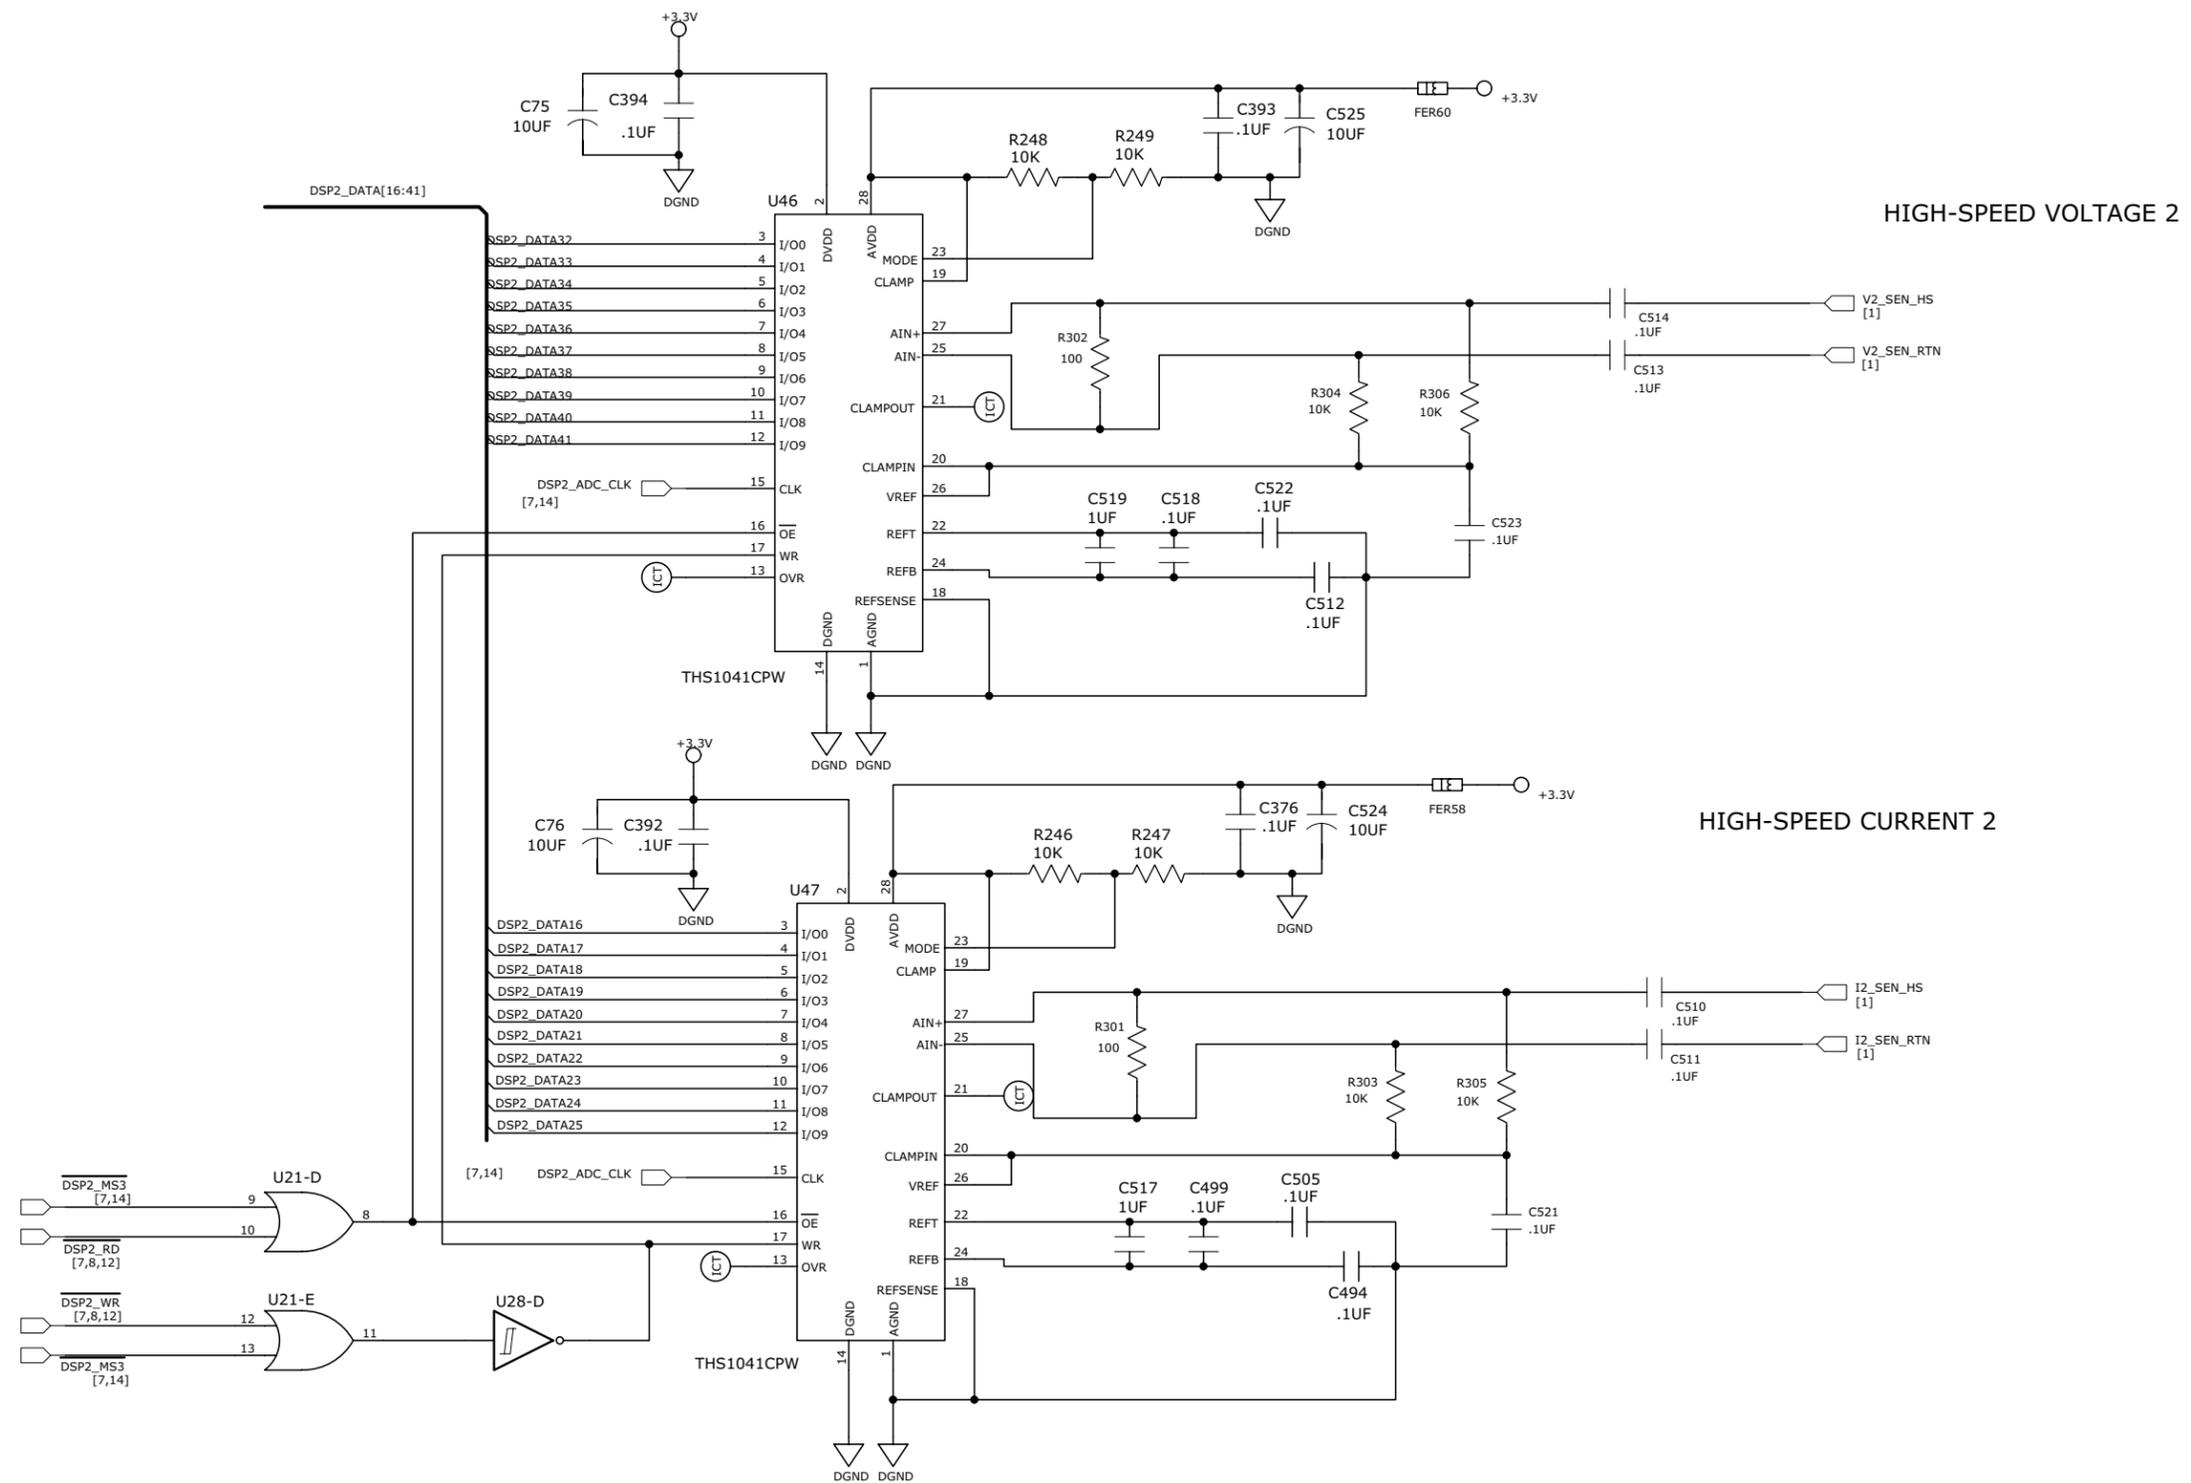

DATA CONVERTERS

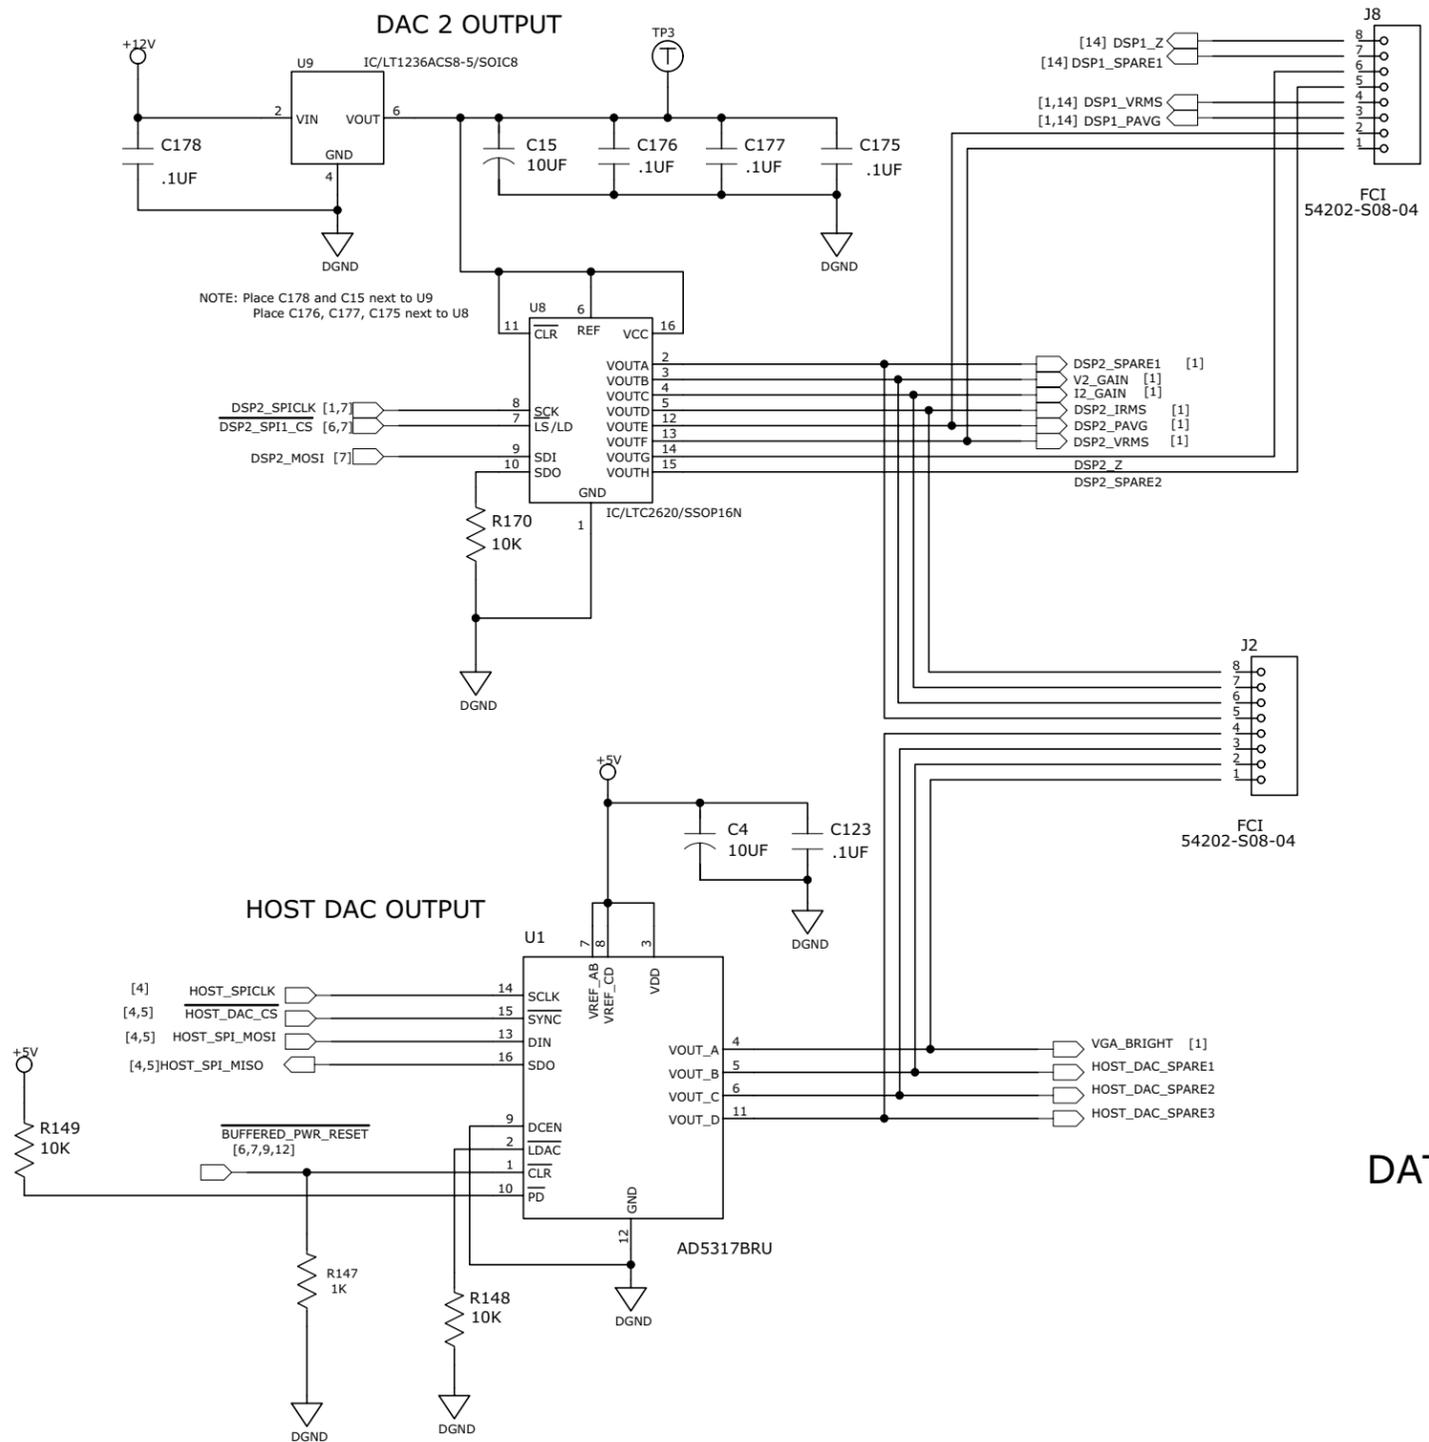

DATA CONVERTERS